

RECHARGEABLE PENDANT FITTING INSTRUCTIONS



CAUTION


- The manufacturer and distributor accept no liability for incorrect installation.
- This product is produced in conformity with all relevant safety regulations.
- If using a ladder read all advice and guidelines outlined by the Health and Safety Executive via www.hse.gov.uk.
- Ensure the installation position of this product is in a safe and accessible location and must be out of reach of children.
- If fitting is left in direct sunlight this could cause damage to the cord.
- Fixings are provided however, you may require different fixings for your surface type to ensure the fitting remains secured and flush to the surface.
- Take care when removing the Genesis to not put unnecessary tension on the cord or shade and this may damage the pendant.
- The maximum weight limit for this pendant is 2kg.

FITTING CLEANING INSTRUCTIONS


- Always switch off and remove Genesis before cleaning.
- Do not use abrasive cleaners to clean this lamp.
- Wipe surfaces with a soft dry cloth.

INSTRUCTIONS

1. Decide the positioning of your fitting. Before drilling ensure there are no hidden cables or pipes behind the surface area.
2. Loosen the upper cord grip and keep to one side.
3. Separate the ceiling mount from the ceiling rose by twisting the ceiling rose anti clockwise.
4. Secure the ceiling mount to your surface using suitable fixings for your surface type.
5. Secure the ceiling rose over the ceiling mount by twisting clockwise.
6. Feed the cord through the upper cord grip previously removed and double knot tightly and trim off any excess cord.
7. Screw the upper cord grip into the ceiling rose.
8. Loosen the lower cord grip, washers and magnet from the stem.
9. Feed the bottom end of the cord through the lower cord grip and cut to desired length. Double knot tightly and trim off any excess cord.
10. Secure the stem to the cord grip.
11. Follow the shade guide below to secure your chosen shade to the stem.
12. Secure the magnet into the stem.
13. Secure the Genesis.

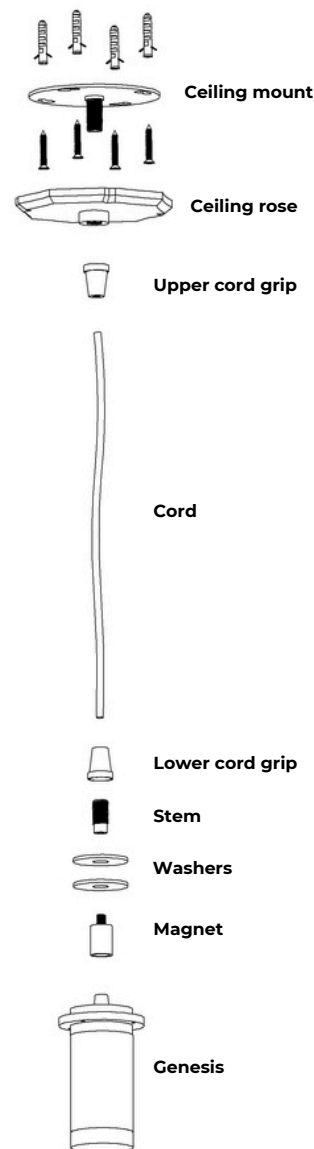

SHADE GUIDE

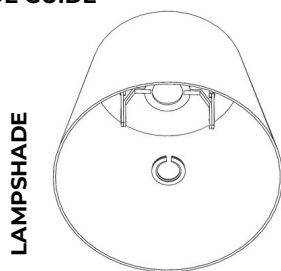


REMOVE SHADE RING

Inside your chosen shade may be a plastic ring reducer. If so, this will need to be removed. Simply pinch the ends together at the gap and pop it out.



ATTACH WASHER

Pick the appropriate sized washers for your shade. Secure one washer to the stem, then the shade, and finally the second washer.

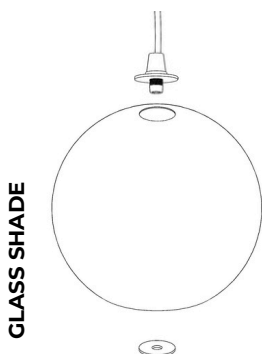

ATTACH WASHER

Pick the appropriate sized washers for your shade. Secure one washer to the stem, then the shade, and finally the second washer.