

RECHARGEABLE FITTING INSTRUCTIONS





CAUTION

- The manufacturer and distributor accept no liability for incorrect installation.
- This product is produced in conformity with all relevant safety regulations.
- If using a ladder read all advice and guidelines outlined by the Health and Safety Executive via www.hse.gov.uk.
- Ensure the installation position of this product is in a safe and accessible location and must be out of reach of children.
- Fixings are provided however, you may require different fixings for your surface type to ensure the fitting remains secured and flush to the surface. (Please note, continually removing the Genesis from the fitting for recharging may cause the fixings to loosen over time if fixings used are not appropriate for your surface).

INSTRUCTIONS

- This fitting is compatible with the Genesis from Pooky.
- Decide the positioning of your fitting.
- Before drilling ensure there are no hidden cables or pipes behind the surface area.
- Separate the backplate from the wall mount by twisting anti clockwise.
- Secure the wall mount to your surface using suitable fixings for your surface type.
- Secure the backplate over the wall mount by twisting clockwise.
- Secure the Genesis and your chosen shade to the fitting using the shade guide below.
- Take care when separating the Genesis and shade from the fitting for recharging, holding the the fitting is advised.

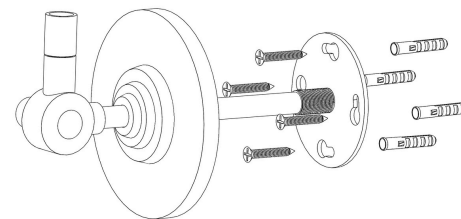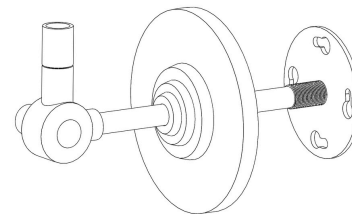


FITTING CLEANING INSTRUCTIONS

- Always switch off before cleaning.
- Do not use abrasive cleaners to clean this lamp.
- Wipe surfaces with a soft dry cloth.

SHADE GUIDE


REMOVE SHADE RING

Inside your chosen shade may be a plastic ring reducer. If so, this will need to be removed. Simply pinch the ends together at the gap and pop it out.

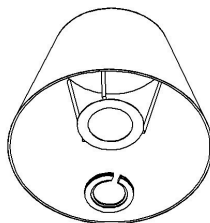


SECURE SHADE

Slot the shade over the Genesis until the shade sticks to the round magnets.

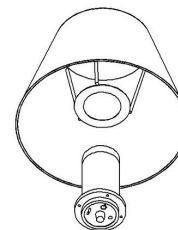

LAMP SHADE

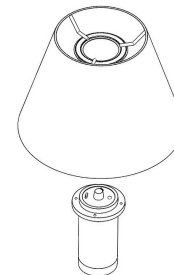

PENDANT SHADE