Artilody Multisport Endurance Trainer

User Manual

Power-based indoor cycling training for Windows, macOS, Linux and Raspberry Pi



Version 2.2.0 · November 2026

github.com/shenphenchoedron-hue/Artilody-Multisport-Endurance-Trainer

Free software, licensed under the GNU General Public License v3.0

Contents

1 Introduction . . . 6
1.1 What the app does . . . 6
1.2 Key concepts . . . 6
1.3 System requirements . . . 7

2 Installation . . . 8
2.1 Windows . . . 9
2.2 macOS . . . 9
2.3 Ubuntu 24.04 and Debian 12 . . . 9
2.4 Raspberry Pi OS . . . 9
2.5 Uninstalling . . . 10
2.6 First start . . . 10

3 The main window . . . 11
3.1 Sidebar . . . 12
3.2 Top bar . . . 12
3.3 Window size and scaling . . . 12

4 Setting up your profile . . . 13
4.1 Opening the profile . . . 13
4.2 Profile fields . . . 14
4.3 Training zones . . . 15
4.4 Multiple profiles . . . 15

5 Connecting devices . . . 16
5.1 Scanning . . . 16
5.2 Available devices and connecting . . . 17
5.3 Selected trainer and capabilities . . . 17
5.4 Controllers (Zwift Click) . . . 17
5.5 Virtual shifting (Zwift Click) . . . 17
5.6 Bike (advanced) . . . 19
5.7 Virtual devices . . . 20
5.8 Connection preferences . . . 21
5.9 Trainer status and rejected commands . . . 21
5.10 Gradient test . . . 22
5.11 Bluetooth diagnostics and connection log . . . 22
5.12 Trainer control (ERG) test . . . 22
5.13 Connection troubleshooting . . . 23

6 Choosing and riding a workout . . . 23
6.1 The workout library . . . 24

6.2 Sharing workouts: export and import . . . 24
6.3 Ride mode: ERG or Free Ride . . . 26
6.4 Starting: you press Start . . . 26
6.5 The Watt Training page in detail . . . 26
6.6 Pause, resume and stop . . . 28
6.7 Free ride without a workout . . . 28
6.8 What is recorded . . . 28

7 Workout Builder . . . 29
7.1 Creating and opening workouts . . . 29
7.2 Adding blocks . . . 30
7.3 Interval settings . . . 30
7.4 Timeline chart and block list . . . 30
7.5 Reordering and deleting blocks . . . 31
7.6 Summary, preview and saving . . . 31

8 FTP test . . . 32
8.1 The Ramp FTP Test protocol . . . 32
8.2 How to perform the test . . . 32
8.3 How the FTP is estimated . . . 32
8.4 The “FTP Test Complete” dialog . . . 33
8.5 Using an earlier test from History . . . 33

9 History & Analysis . . . 33
9.1 Period and totals . . . 34
9.2 Selected ride, ride list and charts . . . 34
9.3 Ride details . . . 34
9.4 Exporting rides . . . 35
9.5 FIT export: Strava, Garmin Connect, TrainingPeaks, intervals.icu . . . 36
9.6 Exporting CSV . . . 37
9.7 Deleting rides . . . 38

10 Workout calendar . . . 38
10.1 The month view . . . 38
10.2 Adding a workout . . . 39
10.3 Planning a Free Ride or a Video Ride . . . 39
10.4 Starting a planned workout . . . 39
10.5 Moving, completing and removing . . . 40
10.6 Side panel: selected day and Upcoming . . . 40
10.7 Training plans: export and import . . . 40

11 Rowing with a Concept2 PM5 . . . 42
11.1 Connecting the PM5 . . . 42
11.2 Rowing machine not found . . . 43

11.3 The Rowing page . . . 44
11.4 Modes . . . 44
11.5 Personal bests . . . 46
11.6 Starting, pausing and finishing . . . 47
11.7 Rowing FTP . . . 47
11.8 Rows in History and export . . . 47
11.9 Sport type: cycling, rowing and running workouts . . . 47

12 Free Ride & virtual shifting . . . 48
12.1 Modes . . . 49
12.2 The page . . . 49
12.3 Shifting and the grade . . . 49
12.4 ERG mode . . . 50
12.5 Starting, pausing and finishing . . . 50
12.6 Zwift Click and keyboard . . . 51

13 Real Life Video . . . 51
13.1 Route folders . . . 52
13.2 Choosing a route . . . 53
13.3 The page . . . 53
13.4 Resistance and difficulty . . . 53
13.5 Riding a workout during the video . . . 54
13.6 Starting, pausing and finishing . . . 55
13.7 Zwift Click and keyboard . . . 55
13.8 Video formats and Raspberry Pi . . . 55
13.9 GPX Ride: a GPX route in 3D . . . 56
13.10 Ghost and pacer: someone to ride against . . . 58

14 Treadmill Run . . . 59
14.1 Connecting a treadmill . . . 60
14.2 The page . . . 60
14.3 Anaerobic threshold (AnT) . . . 60
14.4 Running workouts . . . 61
14.5 Runs in History and export . . . 61
14.6 Loop route and the GPX library . . . 62

15 Music player . . . 62
15.1 The player card . . . 62
15.2 Music library and playlists . . . 62
15.3 Default playlist . . . 62

16 Training together: the network server . . . 63
16.1 On a station . . . 63

17 Settings & data . . . 64

17.1 Settings dialog . . . 64
17.2 Power smoothing (3 s average) . . . 64
17.3 Where your data is stored . . . 64
17.4 Backup and restore . . . 65
17.5 Offline and privacy . . . 65

18 Troubleshooting & FAQ . . . 66
18.1 Diagnostic log . . . 66
18.2 Frequently asked questions . . . 67

19 Glossary & keyboard shortcuts . . . 69
19.1 Glossary . . . 70
19.2 Keyboard shortcuts . . . 71

Appendix A Built-in workouts . . . 72

Appendix B Power zone reference . . . 72

Appendix C The .awt file format . . . 73

Appendix D License & credits . . . 74

1 Introduction

Artilody Multisport Endurance Trainer (formerly Artilody Watts Trainer) is a free, open-source desktop app for structured indoor cycling, rowing and treadmill running. It connects to your Bluetooth smart trainer, treadmill, heart-rate sensor and Concept2 PM5 rower, controls the trainer's resistance in ERG mode and records every ride, row and run locally on your computer.

1.1 What the app does

- **Rides structured workouts** – eight built-in workouts plus any number of your own, created in the visual Workout Builder.
- **Controls your smart trainer** – in ERG mode the app sends the target power of every interval to the trainer, which sets the resistance so that you produce exactly that power.
- **Shows live data** – power, cadence, heart rate, elapsed time, the workout profile and a timeline of all intervals.
- **Records and analyses** – every second of every ride is stored. History shows totals, charts, time in zones, distance, Effort Power, Intensity Ratio and Training Load. Rides can be exported as FIT files (for Strava, Garmin Connect, TrainingPeaks, intervals.icu …) or as CSV files.
- **Rides filmed routes** – Real Life Videos play at your speed while the trainer simulates the gradient of the road (Video Ride page).
- **Plans your training** – a month calendar for planned rides and rows; planned workouts are started with a double-click and ticked off automatically when you complete them.
- **Rows on a Concept2** – connects to a Concept2 PM5 for free rows over a distance, watt-plan rowing workouts and ghost races against your own personal best.
- **Runs on a treadmill** – reads speed and incline from a Bluetooth FTMS treadmill and lets you run GPX routes or a built-in 10 km loop in 3D, with running workouts in % of your anaerobic threshold (AnT) and a built-in AnT test (chapter 14).
- **Shares workouts** – export your workouts as Artilody `.awt` files or Zwift `.zwo` files, and import workouts that others have shared with you.
- **Estimates your FTP** – the built-in Ramp FTP Test (or your own 20-minute test) calculates your Functional Threshold Power and can update your profile and all training zones in one click.
- **Plays music** – a built-in player for your own audio files with playlists and favourites.
- **Works offline** – no account, no cloud, no tracking. All data is kept in a local SQLite database.
- **Trains together** – optionally, several computers share riders, routes, videos and training through your own server at home (chapter 16), with training analysis in the browser and live riding together on GPX routes.

1.2 Key concepts

Watts and FTP

Power, measured in **watts (W)**, is the most direct measure of how hard you are working on the bike. Unlike heart rate it responds instantly and is not affected by heat, fatigue or caffeine. **FTP (Functional Threshold Power)** is the highest power you can sustain for roughly one hour. All workouts in Artilody Multisport Endurance Trainer are stored as a percentage of FTP, so when your FTP changes, every workout target and every training zone is scaled automatically.

ERG mode and Free Ride

In **ERG mode** the app tells the trainer which power to hold. If you pedal faster, the trainer lowers the resistance; if you pedal slower, it increases the resistance – your power stays on target. In **Free Ride** the trainer does not follow the targets: it simulates riding on a flat road, and you control the effort with your gears and cadence. Targets are still shown, so you can follow them by feel. A ride without any workout is also called a Free Ride.

Power zones and RPE

Training intensity is divided into six power zones, each with a colour that is used consistently in charts, the timeline and the Watt Training page. Each zone also corresponds to a range on the RPE scale (Rating of Perceived Exertion, 1–10), which tells you how hard an effort should feel:

Zone	Name	Default range	RPE	Feels
Z1	Recovery	below 55 % FTP	1	Very easy
Z2	Endurance	55 – 75 % FTP	2 – 3	Easy
Z3	Tempo	75 – 87 % FTP	4 – 6	Moderate
Z4	Sweet Spot	87 – 94 % FTP	7 – 8	Vigorous
Z5	Threshold	94 – 105 % FTP	9	Very hard
Z6	VO_2 Max	above 105 % FTP	10	Max effort

The zone boundaries can be adjusted per profile (see chapter 4). Heart-rate zones are calculated separately with the Karvonen method.

1.3 System requirements

Platform	Requirement
Windows	Windows 10 or 11, 64-bit (x64). Bluetooth LE requires Windows 10 or newer.
macOS	macOS 12 Monterey or newer, Apple Silicon or Intel (universal app).
Linux	Ubuntu 24.04 LTS (amd64) or Debian 12 Bookworm (amd64). The app requires Qt 6.4 or newer, so Ubuntu 22.04 and older are not supported. Bluetooth requires the BlueZ service.
Raspberry Pi	Raspberry Pi OS (64-bit) Bookworm on a Raspberry Pi 3, 4, 5 or 400. The 32-bit edition is not supported. A Pi 4 or 5 is recommended for a smooth UI.
Display	Designed for 1584 × 992 pixels; the whole interface scales down uniformly on smaller windows. Minimum window size 800 × 480 (e.g. the official 7" Raspberry Pi display).
Bluetooth	A Bluetooth Low Energy (BLE, Bluetooth 4.0 or newer) adapter – built-in or USB.

Supported devices

- **Smart trainers** that implement the standard Bluetooth **Fitness Machine Service (FTMS)**. Most current trainers do, for example Tacx NEO, Wahoo KICKR, Saris H3, Elite (Suito, Direto, …) and Zwift Hub. ERG control requires a trainer that supports the FTMS *Set Target Power* command.
- **Heart-rate sensors** that use the standard Bluetooth **Heart Rate Service (HRS)**, for example Polar H10, Garmin HRM-Dual/HRM-Pro or Wahoo TICKR straps and armbands.
- **Rowers**: Concept2 rowing machines with a **PM5** monitor (Bluetooth LE). The PM5 has no ERG mode – watt targets are followed by feel (chapter 11).

> **Warning** **ANT+ is not supported** – only Bluetooth LE. Older trainers that offer only a proprietary Bluetooth protocol (no FTMS) cannot be controlled.

2 Installation

Download the file for your platform from the releases page: https://github.com/shenphenchoedron-hue/Artilody-Multisport-Endurance-Trainer/releases/latest. All packages contain the same version 2.2.0.

Platform	File
Windows 10/11 (64-bit), installer	`ArtilodyWattsTrainer-2.2.0-windows-x64-setup.exe`
Windows 10/11 (64-bit), portable ZIP	`ArtilodyWattsTrainer-2.2.0-windows-x64.zip`
macOS 12 or newer (Apple Silicon and Intel)	`ArtilodyWattsTrainer-2.2.0-macOS-universal.dmg`
Ubuntu 24.04 LTS (amd64)	`artilody-watts-trainer_2.2.0_ubuntu24.04_amd64.deb`
Debian 12 Bookworm (amd64)	`artilody-watts-trainer_2.2.0_debian12_amd64.deb`
Raspberry Pi OS 64-bit Bookworm (Pi 3/4/5/400)	`artilody-watts-trainer_2.2.0_raspberrypi-os-bookworm_arm64.deb`
User manual (this document)	`Artilody-Multisport-Endurance-Trainer-Manual.pdf`
Checksums	`SHA256SUMS.txt`

> **Tip** To check a download, compare its SHA-256 checksum with `SHA256SUMS.txt`: on Linux run `sha256sum -c SHA256SUMS.txt --ignore-missing` in the download folder, on macOS `shasum -a 256 <file>`, on Windows `Get-FileHash <file>` in PowerShell.

Upgrading from an earlier version: install the new version over the old one. Rides, workouts, profiles and settings are kept; the database is upgraded automatically on first start.

2.1 Windows

1. Download `ArtilodyWattsTrainer-2.2.0-windows-x64-setup.exe` and run it. The installer creates a Start menu entry and, if you choose, a desktop shortcut.
2. Prefer not to install anything? Extract the ZIP file instead and start `Artilody Multisport Endurance Trainer.exe` from the extracted folder.
3. **SmartScreen:** the app is not code-signed yet, so Windows may show *"Windows protected your PC"*. Click **More info** → **Run anyway**.
4. Turn on Bluetooth under **Settings** → **Bluetooth & devices**.

2.2 macOS

1. Open the DMG and drag **Artilody Multisport Endurance Trainer** onto the **Applications** folder.
2. **Gatekeeper:** the app is ad-hoc signed but not notarized by Apple. The first time you open it, right-click (or Control-click) the app and choose **Open**, then confirm with **Open**.
3. If macOS reports that the app is "damaged" or still refuses to open it, run this command once in Terminal:

```
xattr -cr "/Applications/Artilody Multisport Endurance Trainer.app"
```

Bluetooth permission: when macOS asks whether the app may use Bluetooth, click **Allow**. If you denied access by mistake, enable it again under **System Settings** → **Privacy & Security** → **Bluetooth**. Without this permission the app can only use the virtual devices; the connection log shows *"Bluetooth permission denied"*.

2.3 Ubuntu 24.04 and Debian 12

Download the matching .deb package and install it with apt, which also installs all required Qt 6 libraries:

```
sudo apt install ./artilody-watts-trainer_2.2.0_ubuntu24.04_amd64.deb   # Ubuntu 24.04
sudo apt install ./artilody-watts-trainer_2.2.0_debian12_amd64.deb      # Debian 12
```

Start **Artilody Multisport Endurance Trainer** from the application menu or run `artilody-watts-trainer` in a terminal. Bluetooth needs the BlueZ service to be running:

```
sudo systemctl enable --now bluetooth
```

2.4 Raspberry Pi OS

You need **Raspberry Pi OS (64-bit) Bookworm** with the desktop on a Raspberry Pi 4, 5 or 400 (a Pi 3 runs the app, but not the 3D views). The arm64 package is **self-contained**: Qt, GStreamer (music and video decoders) and every other library the app needs are inside it (in /opt/artilody-watts-trainer), so installing it downloads nothing – no internet connection needed. It only uses what Raspberry Pi OS already has (graphics driver, fonts, Bluetooth service). Install it (over an older version too):

```
sudo apt install ./artilody-watts-trainer_2.2.0_raspberrypi-os-bookworm_arm64.deb
```

The built-in Bluetooth of the Pi 3/4/5 works with smart trainers and heart-rate sensors. Make sure Bluetooth is switched on in the desktop panel.

Tip On small displays such as the official 7" touch screen (800 × 480), maximise the window. The interface is laid out for 1584 × 992 pixels and scales down uniformly, so every element stays in place – only smaller. A Pi 4 or 5 gives the smoothest charts and animations.

2.5 Uninstalling

- Windows: **Settings** → **Apps** → **Artilody Multisport Endurance Trainer** → **Uninstall**.
- macOS: move the app from Applications to the Trash.
- Linux and Raspberry Pi: `sudo apt remove artilody-watts-trainer`.

Note Your rides, profiles, workouts and settings are stored separately in your user folder (see section 16.3) and are kept when you uninstall the app.

2.6 First start

On the very first start the app creates its database and fills it with:

- one rider profile (weight 68 kg, FTP 250 W, max HR 175 BPM, resting HR 58 BPM, preferred cadence 85 RPM, default mode ERG) – open the profile and enter your own name and values;
- the eight built-in workouts (see Appendix A);
- a music playlist called *Workout Mix* with the sample tracks shipped with the app;
- a virtual trainer, a virtual heart-rate sensor and a virtual rower, so you can try everything without hardware.

A good order for getting started:

1. **Connect your devices** under **Devices** → **Scan for Devices** (chapter 5). Without hardware, connect **Virtual Trainer** and **Virtual HR Sensor**.
2. **Set up your profile** – weight, FTP and heart-rate values (chapter 4). If you don't know your FTP, ride the Ramp FTP Test first (chapter 8).
3. **Choose a workout** under **Workouts**, or build your own in **Builder**.
4. Choose **ERG Mode** or **Free Ride** and press **Load Workout**. The workout opens on **Watt Training**; clip in and press **Start** (or `Space`). Nothing starts by pedaling.
5. When you are done, press **Stop** and save the ride. Open **History** for the analysis.

3 The main window

The window consists of a navigation sidebar on the left, the current page in the middle and a small top bar in the upper-right corner.



Figure 1. The main window with the Watt Training page during a ride: sidebar (left), live metrics and charts (centre), devices, ERG switch, controls and music player (right).

3.1 Sidebar

Item	Purpose
Watt Training	(Bicycle icon; formerly Dashboard.) The cycling workout page – live metrics, charts and controls; press Start to begin.
Free Ride	Ride without a workout: a road with a grade (your gears or virtual gears) or ERG (chapter 12).
Video Ride	Ride a filmed route (Real Life Video): the video follows your speed (chapter 13).
GPX Ride	Ride any GPX route in 3D with the Video Ride's physics and controls (section 13, GPX Ride).
Rowing	Rowing with a Concept2 PM5: Free Row, Watt Plan and Ghost Race (chapter 11).
Workouts	The workout library: browse, search, preview and start cycling and rowing workouts.
Calendar	The training plan: plan, move and start workouts, Free Rides and Video Rides by day (chapter 10).
Builder	The Workout Builder for creating and editing workouts.
History	Recorded rides and rows, analysis, time in zones, FIT and CSV export.
Devices	Bluetooth scanning, connections, diagnostics and trainer test.
Profile	Opens the User Profile dialog for the current rider.

The four training pages – Watt Training (cycling workouts), Free Ride, Video Ride and Rowing – are at the top, followed by planning (Workouts, Calendar, Builder), History and Devices.

While a workout is running or paused, a status box appears at the bottom of the sidebar. It shows *Riding* or *Paused* together with the elapsed time and the current power (a workout that is only loaded, not started, is not shown). Click it to jump back to the Watt Training page from any page. A free ride shows *Free Ride 12:34 • 50×17 • 210 W* (time, gear or ERG, power) and leads to the Free Ride page; a video ride shows *Video 12:34 • 4.3 km • 210 W* (with a workout: *Video 12:34 / Sweet Spot 2/6 • 230 W*) and leads to the Video Ride page; a row leads to the Rowing page.

3.2 Top bar

- **Sun/moon icon** – switches between the dark and the light theme. The app always starts in the dark theme; the choice applies until you close the app.
- **Gear icon** – opens the Settings dialog (section 16.1).
- **Avatar and name** – opens the profile menu: a list of all profiles (name and FTP) to switch between, **Edit profile…** and **New profile…**. Switching and creating profiles is disabled while a ride is running or paused.

3.3 Window size and scaling

The interface is designed for 1584 × 992 pixels. The window opens at that size (or the available screen size, whichever is smaller). If you make it smaller, the entire interface is scaled down uniformly so the layout is always preserved; it is never scaled above 100 %. The minimum window size is 800 × 480 pixels.

Short messages (for example *“Ride saved – see History for the analysis”*) appear briefly as a notification at the bottom of the window.

4 Setting up your profile

Your profile tells the app how strong you are. FTP drives all power targets and power zones; maximum and resting heart rate drive the heart-rate zones.

4.1 Opening the profile

Click **Profile** in the sidebar, or click your avatar in the top bar and choose **Edit profile…**. The **User Profile** dialog opens.

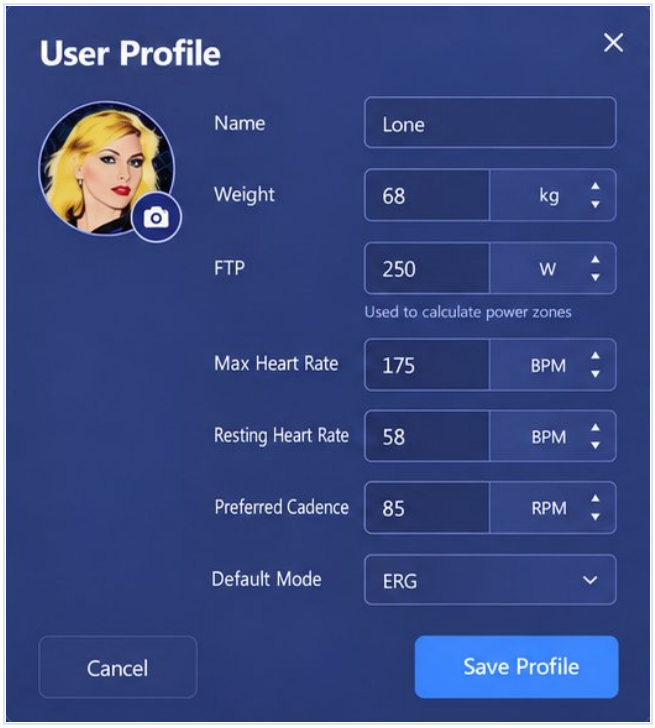


Figure 2. The User Profile dialog (design mockup – the dialog in the app looks very similar). In the app, a “Training zones ›” link below the fields expands the zone editor.

4.2 Profile fields

Field	Range in the dialog	Notes
Name	–	Must not be empty.
Weight	30 – 200 kg, steps of 0.5	Used for W/kg (shown under the FTP field) and the road model of virtual gears (mass and auto air drag).
Height	0 or 100 – 230 cm	Optional (0 = not set). Refines the auto air drag (CdA) of virtual gears.
FTP	50 – 600 W, steps of 5	Used to calculate power zones and all cycling workout targets.
Rowing FTP	50 – 600 W, steps of 5	Used for rowing workouts and rows (default 150 W, section 11.7).
Walk → Run	4 – 10 km/h, steps of 0.1	The speed where you change from walking to running (default 6.3 km/h). The 3D runner on the Treadmill Run page walks below it and runs above it (chapter 14). Stored per profile.
Max heart rate	100 – 230 BPM	Must be more than 20 BPM above the resting heart rate.
Resting heart rate	30 – 110 BPM	Used together with max HR for the Karvonen zones.
Preferred cadence	50 – 130 RPM	Default cadence target on the Watt Training page when an interval has no cadence of its own.
Default mode	ERG or Free Ride	Pre-selected ride mode in the workout preview.

Click **Save Profile** to store the changes. If a value is invalid, the dialog stays open and shows the reason in red (for example *“Max heart rate must be above resting heart rate”*). **Cancel** closes the dialog without saving.

Changes to FTP and zones take effect immediately for the workout library, the Builder and the Watt Training page. A ride that is already running keeps the profile values it started with.

Avatar

Click the round picture (camera icon) to choose a profile picture (PNG, JPG, JPEG, BMP or WebP). Without a picture the first letter of your name is shown. The app remembers the location of the image file rather than copying it, so keep the file where it is.

3D avatar

Click **3D avatar ›** (below **Training zones ›**) to open the 3D avatar panel on the right side of the dialog. It chooses the figures of the 3D views: the cyclist of GPX Ride, the runner of Treadmill Run and the rower of the Rowing page – switch between them with **Cyclist** / **Runner** / **Rower** at the top. The preview shows the figure as the 3D view draws it; drag it to turn it round.

- **Figure** – a male or a female figure wearing its own textured clothes.
- **Colours** – click a colour box to choose the colour of the jersey (runner and rower: the top), the shorts, the helmet (cyclists), the shoes (cyclists and runners) and the hair. The folds and shading of the clothes stay. **Reset** returns that part to the figure's own colour.
- **Bike** and **Boat** – the colour of the bike frame (any cyclist) and of the boat's hull (any rower; the ghost boat too).

The choices are saved with **Save Profile**, separately for each profile. A newly chosen figure loads in the background and appears by itself after a moment. If a figure's model file is missing, the list shows it as *not installed* and the other figure is drawn.

4.3 Training zones

Click **Training zones ›** to expand the zone editor on the right side of the dialog.

Power zones

Each of the zones Z1–Z5 has an editable upper boundary in percent of FTP (20–200 %); the next zone starts where the previous one ends, and Z6 covers everything above the Z5 boundary. Next to each zone the resulting watt range for the FTP in the dialog is shown. The boundaries must increase from zone to zone. **Reset** restores the default boundaries 55 / 75 / 87 / 94 / 105 %.

Zone	% of FTP (default)	Watts at FTP 250 W	RPE
Z1 Recovery	0 – 55 %	0 – 137 W	1 Very Easy
Z2 Endurance	55 – 75 %	138 – 187 W	2 – 3 Easy
Z3 Tempo	75 – 87 %	188 – 217 W	4 – 6 Moderate
Z4 Sweet Spot	87 – 94 %	218 – 234 W	7 – 8 Vigorous
Z5 Threshold	94 – 105 %	235 – 262 W	9 Very Hard
Z6 VO_2 Max	above 105 %	263 W and more	10 Max Effort

Heart-rate zones (Karvonen)

Heart-rate zones are calculated from your heart-rate reserve (max HR − resting HR) with the Karvonen formula: *zone limit = resting HR + percentage × (max HR − resting HR)*. They update live while you edit the heart-rate fields and cannot be edited directly.

Zone	% of heart-rate reserve	Example (max 175, rest 58)
Z1 Very Light	50 – 60 %	117 – 128 BPM
Z2 Light	60 – 70 %	128 – 140 BPM
Z3 Moderate	70 – 80 %	140 – 152 BPM
Z4 Hard	80 – 90 %	152 – 163 BPM
Z5 Maximum	90 – 100 %	163 – 175 BPM

A heart rate below 50 % of the reserve is shown as *“Below zone 1”* on the Watt Training page.

4.4 Multiple profiles

Several riders can share one installation. Every profile has its own values, zones and ride history; History always shows the rides of the current profile only.

- **Create** – avatar menu → **New profile…**. The dialog starts with an empty name and the values of the current profile; click **Create Profile**. The new profile becomes the current one.
- **Switch** – avatar menu → click a profile name.

- **Delete** – open the profile and click the trash button next to Save Profile. It is only shown when there is more than one profile and no ride is active. Deleting a profile also deletes all of its rides.

> **Note** You cannot switch, create or delete profiles while a ride is running or paused. Stop the ride first. Rides are always stored for the profile that was active when the ride started.

5 Connecting devices

The Devices page finds and connects Bluetooth LE smart trainers, heart-rate sensors and Concept2 PM5 rowers, and helps you diagnose connection problems.

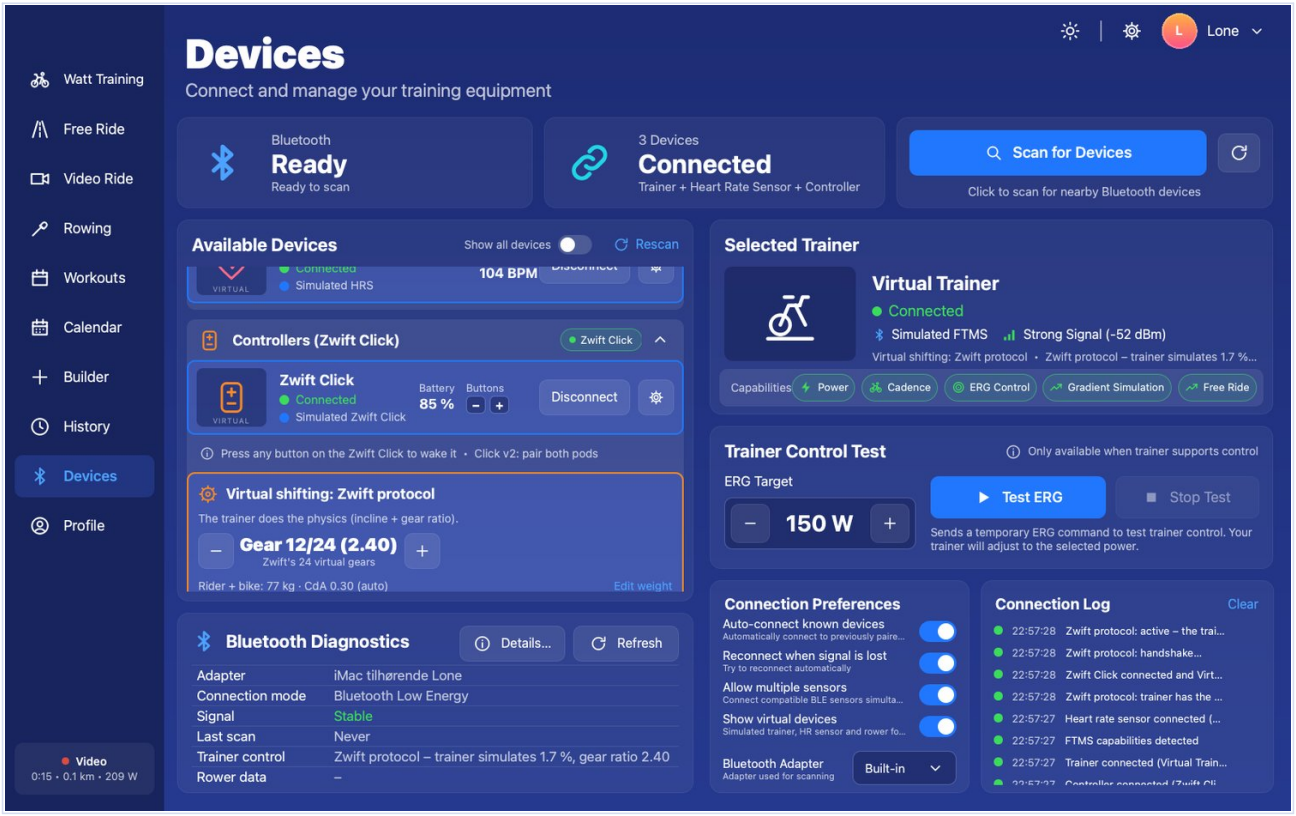


Figure 3. The Devices page with the virtual trainer and virtual heart-rate sensor connected.

5.1 Scanning

Press **Scan for Devices**. The app searches for Bluetooth LE devices for up to 12 seconds; press the button again (**Scanning…**) to stop early. The round arrow button next to it (**Refresh adapter**) and **Rescan** start a new scan. The two status cards at the top show the Bluetooth state (*Ready*, *Off* or *Unavailable*) and how many devices are connected.

Only relevant devices are listed. A device is shown as a **smart trainer** if it advertises the FTMS service, and as a **heart-rate sensor** if it advertises the Heart Rate Service. Devices that do not advertise these services are recognised by typical names (for example KICKR, NEO, Tacx, Saris, Elite, Direto, Suito, Zwift, Wahoo, Magene – or HRM, Polar, H10, TICKR, Coospo, Verity).

> **Tip** Wake your devices before scanning: pedal the trainer for a few turns and moisten/put on the heart-rate strap. Most sensors stop advertising when idle.

5.2 Available devices and connecting

Found devices appear under **Smart Trainers**, **Heart Rate Sensors** and **Rowers (Concept2 PM5)** (the sections can be collapsed; connecting a PM5 is described in section 11.1). Each row shows the name, connection state and protocol. Click **Connect** to connect; while connecting the button reads **Cancel**, and once connected **Disconnect**. Connected devices show live values: power and cadence for a trainer, heart rate for a sensor.

The gear button opens the device info: identifier (Bluetooth address), protocol, signal strength (*Strong* ≥ −60 dBm, *Good* ≥ −75 dBm, otherwise *Weak*), status and type.

- A connected device is remembered as your **known** trainer or heart-rate sensor, so it can be connected automatically next time.
- Pressing **Disconnect** forgets the device again, so it will not auto-connect until you connect it manually.
- Only one trainer, one heart-rate sensor and one rower can be connected at a time. Connecting another trainer replaces the current one.
- If no heart-rate sensor is connected but your trainer reports heart rate (some trainers pass on a paired strap), the trainer's heart rate is used.

The Watt Training page's **Devices** card summarises both connections (*Connected*, *Connecting*, *Offline* or *Not paired*); click it to open the Devices page.

5.3 Selected trainer and capabilities

The **Selected Trainer** card shows the connected trainer, its state, protocol, signal strength and the capabilities detected over FTMS: *Power*, *Cadence*, *ERG Control*, *Free Ride* and *Heart Rate*. If *ERG Control* is missing, the trainer only reports data and cannot be controlled by the app.

5.4 Controllers (Zwift Click)

A **Zwift Click** (v1 or v2) is listed under **Controllers (Zwift Click)** and shifts the virtual gears in **Free Ride** and **Video Ride** (section 5.5). Press any button on the Click to wake it, then scan and press **Connect**. A **Click v2** consists of two pods – connect both (the section header then shows *2 Zwift Click pods*). A connected Click shows its **battery** level and a live **button test**: the **−** / **+** indicators light up while a button is pressed.

> **Note** The Click connects without the Zwift app, in its unencrypted mode. Firmware that insists on Zwift's encrypted mode is not supported – the connection log says so; update the Click in Zwift Companion. The left pod of a Click v2 only sends buttons after Zwift has unlocked it (once per 24 hours); the right pod always works. Zwift Play and Zwift Ride controllers are not supported.

5.5 Virtual shifting (Zwift Click)

Virtual shifting is tied to the **Zwift Click**, not to the trainer, and there is nothing to set up. Shifting changes the gear, never the trainer difficulty.

	Trainer with the Zwift trainer service	Other FTMS trainer
Zwift Click connected	Zwift's 24 virtual gears via the **Zwift protocol** (the trainer does the physics) – *Virtual shifting: Zwift protocol*	Zwift's 24 virtual gears via a gear-adjusted **FTMS gradient** – *Virtual shifting: FTMS gradient*
No Zwift Click	Your bike's real gears, plain FTMS gradient simulation (route grade × difficulty) – *Shifting: your bike's gears*	Your bike's real gears, plain FTMS gradient simulation – *Shifting: your bike's gears*

The **Virtual shifting** card in the **Controllers (Zwift Click)** section shows this status line and why (e.g. *The trainer does the physics (incline + gear ratio)* or *Zwift protocol failed (no answer to the handshake) – using FTMS gradient*). While a Click is connected it also shows the current gear, e.g. *Gear 12/24 (2.40)*, with **−** / **+** to try the Click without riding. The same status line appears on the Selected Trainer card and on the Free Ride and Video Ride pages; on-screen shift buttons are only shown while a Click is connected. A trainer that supports the Zwift protocol is **not** switched to it without a Click – it may carry a normal cassette.

Zwift Click	Free Ride: Ride / Video Ride: Simulation	ERG	Other pages
+	Shift harder	Target +10 W	Shift harder
−	Shift easier	Target −10 W	Shift easier

Zwift's 24 gears. The Click always shifts Zwift's fixed gear table – the same ratios Zwift uses (also used by Incyclist and qdomyos-zwift): 0.75, 0.87, 0.99, 1.11, 1.23, 1.38, 1.53, 1.68, 1.86, 2.04, 2.22, **2.40** (gear 12, Zwift's start gear), 2.61, 2.82, 3.03, 3.24, 3.49, 3.74, 3.99, 4.24, 4.54, 4.84, 5.14, 5.49. A gear setup of earlier versions (chainrings, cassette) stays stored but is no longer used.

Start gear from your FTP. When the app starts and when you switch rider, the virtual gear is set to the hardest gear whose flat-road power at 85 rpm is at most 60 % of the profile's FTP – between gear 6 and gear 12, never harder than 12 (e.g. FTP 75 → gear 9, FTP 110 → gear 10, FTP of about 155 or more, or no FTP → gear 12). Once you shift, your gear carries over from ride to ride.

Zwift protocol (automatic). When the *connected* trainer exposes the Zwift trainer service (0xFC82 or 00000001-19CA-4651-86E5-FA29DCDD09D1 with the characteristics 0002, 0003 and 0004 – e.g. Zwift Hub, Jetblack Victory, Wahoo KICKR Core with Zwift Cog) and a Click is connected, the app performs the Zwift handshake (*RideOn*), starts the trainer's data stream and then sends the incline (route grade × difficulty, or the Free Ride grade), Zwift's fixed air drag (CWa 0.51) and rolling resistance (Crr 0.004), your weight, the bike weight and the ratio of the current gear – in Zwift's order: after every incline the gear ratio again, then a gear-ratio request (dataId 520). A shift goes out at once, the incline when it changes by 0.1 % or more and every 2.5 s. The trainer computes the resistance like in Zwift, so light gears are really light even on a single 14T cog. FTMS control is requested (as Incyclist does) and FTMS delivers the riding data, but while the Zwift protocol is in use (also during its handshake, at a pause and as the start state) no FTMS start, gradient, neutral or ERG command is sent – Zwift sends none either. Speed and video follow your measured power on the route (road physics with inertia). Only the Click changes the gear – never a stop or a pause.

Gears with the Zwift protocol (Devices → advanced). *Like Zwift* (default): the gear ratio goes to the trainer as it is, exactly as Zwift sends it, so the gears feel as in Zwift – on the big chainring heavier than on a real bike – and the trainer follows small changes such as gravel at once. *Adapted to the chainring*: the app measures the real chainring on the Cog and lightens the gears so they feel like a real bike's; on a big chainring some trainers (JetBlack Victory) then hardly follow small changes at low power. Either way a ride starts in a **light start gear**: the hardest gear whose flat-road power at 85 rpm is at most 60 % of your FTP and at most 1.2 W per kg of your weight, counting the real chainring (unknown: a 53-tooth ring is assumed). A complete beginner with the default FTP or a small rider therefore starts at about 40–75 W, and the first

pedal strokes still begin in a light gear that ramps up over 4 s.

FTMS gradient. On other trainers the app sends a gear-adjusted grade: with the bike in the reference gear the trainer's flywheel turns at v_{ref} = cadence × $R_{reference}$ × wheel circumference, the virtual bike rides at v_v = cadence × $R_{virtual}$ × wheel circumference, and the grade is chosen so that the brake delivers the road power for v_v on the route grade at v_{ref} (limited to −10 … +20 %). The reference gear defaults to 50 × 17; when the trainer's speed and cadence show a stable, different real gear, the card and the ride page ask *“Your trainer reports 44×14 (3.14) but the setting is 50×17 (2.94) — use the detected gear?”* with **Use detected gear** and **Keep 50×17**. Tip: a small real gear such as 34 × 17 makes the easy gears lighter. Some trainers clamp negative grades to 0 % – the Gradient test shows it.

Fallback. If the trainer does not answer the Zwift handshake (2 attempts of 3 s, then 4 s for the data stream) or stops sending, the app switches to FTMS gradient and shows it on the ride page. It never replaces the simulation with ERG; only a trainer without any gradient simulation is driven with ERG at the gear's watts.

Advanced overrides (Bluetooth Diagnostics → **Advanced…**, for troubleshooting only): **Zwift trainer protocol** *Automatic (default)* / *Off – FTMS gradient only*; **FTMS virtual shifting** *Gradient (default)* or the experimental *Auto* / *ERG* (only for the session, every start is Gradient again); and the bike (section 5.6).

The grade you feel. Video Ride uses the grade at your position looking slightly ahead (the smoothed elevation from 10 m behind to 20 m ahead), so a descent is felt within about 20 m of its start. If gears feel wrong, send the diagnostic log (see “Troubleshooting & FAQ”): its *VSHIFT* lines show the shifting decisions, the *ZHUB* lines every Zwift-protocol step in hex and decoded.

5.6 Bike (advanced)

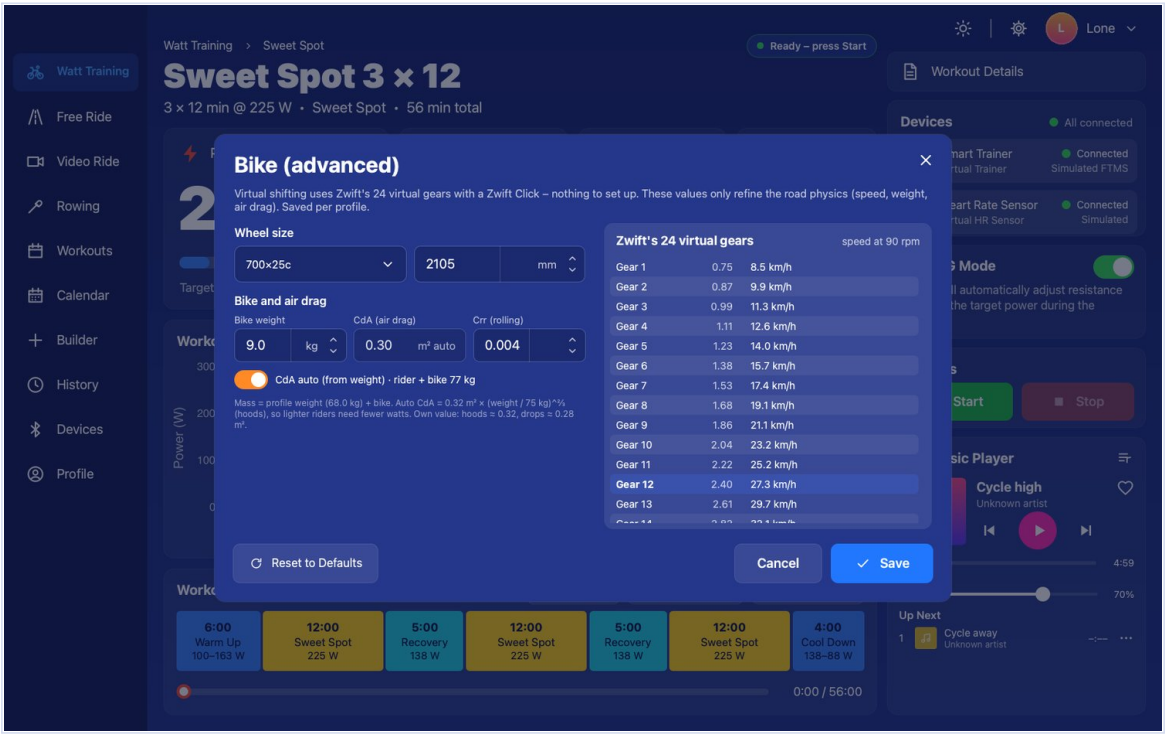


Figure 4. The advanced Bike dialog: wheel size, bike weight, air drag and Crr, with Zwift's 24 gears and their speed at 90 rpm.

Bluetooth Diagnostics → **Advanced…** → **Bike: wheel, weight, air drag…** refines the road physics behind the virtual gears; nothing here is needed for shifting. Saved per profile.

Field	Meaning
Wheel size	A tyre preset (700×23c … 29×2.2) or the circumference in millimetres (1000–3000): the virtual speed of each gear.
Bike and air drag	Bike weight (0–60 kg), air drag CdA – *CdA auto (from weight)* (default) or your own value (0.10–1.00 m²; hoods ≈ 0.32, drops ≈ 0.28) – and Crr (rolling resistance, 0.001–0.050; road tyres ≈ 0.004). Your own weight (and height) come from the profile.

Road model – your weight counts. Every virtual speed v needs the road power $P = (Crr \cdot m \cdot g \cdot \cos\theta + m \cdot g \cdot \sin\theta + ½ \cdot \rho \cdot CdA \cdot v^2) \cdot v / \eta$, with m = your profile weight + the bike weight (default 9 kg), θ the grade, Crr 0.004, air density ρ = 1.225 kg/m³ and drivetrain efficiency η = 0.97. Example: 40 km/h on the flat with 77 + 9 kg and CdA 0.32 needs about 310 W, in line with online power calculators. On a climb the mass dominates, on the flat the air drag – so the CdA follows your size too. *Auto* CdA = 0.32 m² × $(\text{weight} / 75\ \text{kg})^{2/3}$ on the hoods; with a height in your profile 0.32 m² × BSA(weight, height) / BSA(75 kg, 175 cm), where BSA is the body surface area after Du Bois ($0.007184 \cdot \text{kg}^{0.425} \cdot \text{cm}^{0.725}$) – the frontal area of a cyclist scales with it (Heil 2001). A lighter rider therefore needs fewer watts in the same gear at the same cadence: at 90 rpm in 50×14 (40.6 km/h) about 280 W on the flat and 670 W at 5 % for 60 kg, against 370 W and 940 W for 90 kg.

Gear at 90 rpm	Speed	60 kg flat	90 kg flat	60 kg 5 %	90 kg 5 %
34×34	11.4 km/h	20 W	20 W	124 W	178 W
34×24	16.1 km/h	28 W	38 W	184 W	262 W
50×21	27.1 km/h	95 W	127 W	357 W	503 W
50×17	33.4 km/h	165 W	220 W	489 W	684 W
50×14	40.6 km/h	281 W	372 W	674 W	936 W
50×11	51.7 km/h	555 W	732 W	1055 W	1449 W

The **Virtual shifting** card shows the values in use, e.g. *Rider + bike: 77 kg · CdA 0.30 (auto)*, with a link to **Edit weight** (the profile). The same constants are used everywhere: Free Ride, Video Ride, the gear-adjusted grade, the simulation parameters sent to the trainer (Crr and Cw = ρ·CdA, e.g. 0.37 kg/m for 68 kg; with the Zwift protocol also your weight and the bike weight) and the Virtual Trainer.

> **Note** FTMS has no weight field: a real trainer that simulates an FTMS gradient uses its own rider-weight setting (in the manufacturer's app). With the Zwift protocol the app sends your weight + bike itself.

5.7 Virtual devices

Virtual Trainer (Simulated FTMS) and **Virtual HR Sensor** (Simulated HRS) are built-in simulators marked with a *VIRTUAL* badge. They let you try every feature – workouts, ERG, History, the FTP dialog – without any hardware (developers: *WATT_SIM_TRAINER_ZWIFT=1* gives it the Zwift trainer protocol). With virtual gears on, the virtual rider leaves the bike in the reference gear and pedals ~88 rpm – no shifting of his own – so the watts follow your virtual gear and the road. He has your profile's FTP as his power (bursts up to 1.5 × FTP for about a minute): in a gear that is too hard his cadence drops (down to 40 rpm), in an easy gear he spins up to ~105 rpm. The virtual trainer simulates with your weight + bike; with virtual gears off he shifts his own bike towards the effort he wants. The virtual heart rate reacts to the simulated load and uses the resting and maximum heart rate of your profile. Hide them with **Show virtual devices** (Connection Preferences or Settings). Rides with virtual devices are recorded like any other ride.

5.8 Connection preferences

Option (default: on)	Effect
Auto-connect known devices	At start-up the app connects the remembered trainer and heart-rate sensor. For real devices it starts a scan automatically and connects them as soon as they are found.
Reconnect when signal is lost	If a connection drops, the app retries automatically – after 2 s, then 4 s, 6 s … up to every 30 s. After reconnecting, the last ERG target is sent again.
Allow multiple sensors	Trainer and heart-rate sensor can be connected at the same time. When switched off, only one device can be connected; connecting another device disconnects the first.
Show virtual devices	Lists the virtual trainer and heart-rate sensor.
Bluetooth Adapter	Chooses the adapter used for scanning and connecting: *Built-in* (system default) or a specific adapter if your computer has several (for example a USB dongle).

All preferences are saved in the database and kept between sessions.

5.9 Trainer status and rejected commands

The app shows what the trainer *actually* does, taken from its answers on the FTMS Control Point and its Fitness Machine Status – in **Selected Trainer**, in the row **Trainer control** of Bluetooth Diagnostics and, when something is wrong, as a yellow note on Video Ride and Free Ride:

Text	Meaning
Simulation – trainer accepted −2.00 %	the last gradient command was confirmed
ERG – trainer accepted 200 W	the trainer holds the watts
Trainer rejected the gradient command (Invalid parameter)	result code 0x03; also *(Operation failed)* 0x04, *(Control not permitted)* 0x05, *(Op Code not supported)* 0x02
Trainer did not answer the gradient command (no response within 2 s)	no indication within 2 s
Trainer stopped / paused	the trainer reported stop/pause – the app starts it again and re-sends the command
Trainer control lost – requesting it again	control permission lost (another app, a reset) – the app asks again and re-sends
Trainer doesn't report its gradient range	no Supported Inclination Range (0x2AD5), e.g. Jetblack Victory – grades are sent unclamped (−10 … 20 %)

Defined start state. When the trainer grants control and no ride has sent a command yet, the app sets a neutral state – a flat road (0 %, simulation with your rolling and air resistance), or a low resistance level on a trainer without gradient simulation – so an ERG target left over from another app does not linger. The first command of a ride replaces it at once. The log shows *neutral state sent*.

Rejected and unanswered commands are retried after 1, 2 and 4 s (at most three times); the next regular command is sent as usual. The app never shows “simulation” when the last gradient command was not accepted. Trainers without the optional Training Status (0x2AD3) or inclination range work without waiting for them.

5.10 Gradient test

Devices → **Bluetooth Diagnostics** → **Details…** → **Gradient test…** checks whether the trainer really simulates descents. Put the bike in any real gear and pedal steadily at about 90 rpm, then press **Start**. The app sends +2 %, 0 %, −2 % and −5 % as FTMS gradient simulation (never ERG), 20 s each, and measures power, speed and cadence after an 8 s settling time. The table shows the averages per step and whether the trainer confirmed each command; the verdict reads e.g. *“Power keeps falling on descents → the trainer simulates descents”* or *“Power stops falling below 0 % → the trainer clamps descents”*. **Stop** ends the test at any time; afterwards the previous trainer command is restored. The test also ends by itself when you leave the Devices page, a ride starts or a ride page sends a resistance command. Every step is written to the diagnostic log (lines *GTEST*). Not available during a workout.

5.11 Bluetooth diagnostics and connection log

Bluetooth Diagnostics shows the adapter name, the connection mode (Bluetooth Low Energy), the trainer signal (*Stable* at −75 dBm or better, otherwise *Weak*), the time of the last scan and the trainer control status. **Refresh** re-reads the Bluetooth adapter. **Details…** opens a full report – adapter, Qt version, every device seen with signal, service UUIDs and how the app classified it, all GATT services of the connected trainer with their characteristics and properties (FTMS, Zwift 0xFC82, vendor services), the trainer's actual mode and last rejection, scan errors, the live rower data (which source is active – Concept2 rowing service, the 0x0080 multiplexed channel or FTMS Rower Data –, packet counters and the last raw bytes of every subscribed characteristic, the last decoded stroke rate and whether the stroke rate comes from the monitor or is computed from the stroke timing) and the log – that you can **Copy** into a bug report. The row **Rower data** shows the active rower data source and stroke rate at a glance. With {UI('Show all devices')} (top of **Available Devices**) the list gets an extra section **Other Bluetooth devices** with every unrecognised Bluetooth LE device and a **Connect as rower** button (section 11.2). Scan problems (Bluetooth off, adapter error, missing permission) appear in red above the device list.

The **Connection Log** lists time-stamped events with a green (OK) or red (problem) dot – for example *Bluetooth ready*, *Found …*, *FTMS capabilities detected*, *Trainer control granted*, *Reconnecting to … in 4 s* or *Bluetooth permission denied*. **Clear** empties the log. The log is the first place to look when something does not work.

5.12 Trainer control (ERG) test

Use **Trainer Control Test** to check that the app can control your trainer before you start a workout. Set an **ERG Target** with − / + (steps of 10 W, 25–1500 W, default 150 W) and press **Test ERG**. While pedaling you should feel the resistance change; the button shows the measured power. Changing the target during the test sends the new value immediately. **Stop Test** ends the test and returns the trainer to the current workout target, or to free ride if nothing is riding. While the test runs the card shows *ERG test running – 150 W* in yellow.

The test never sticks. If you forget to press Stop Test, the ERG test ends by itself – and the trainer gets the ride's own command back – when you leave the Devices page, when a workout, Free Ride, Video Ride or row starts, when a ride page sends a resistance command, and at the latest after **5 minutes** (every new target restarts the 5 minutes). The connection log says why, e.g. *ERG test stopped automatically: left the Devices page*.

> **Note** The test is only available when a trainer is connected and supports control. If the log shows *Trainer control refused*, another app (Zwift, a phone app, a watch) is probably connected to the trainer – close it and try again.

5.13 Connection troubleshooting

- Trainer or sensor not listed: wake it up, move it closer, make sure it is not connected to another app or device (most BLE devices accept only one controlling connection), then scan again.
- Check that Bluetooth is turned on and, on macOS, that the app has Bluetooth permission.
- On Linux and Raspberry Pi check that BlueZ is running: `systemctl status bluetooth`.
- Values drop to 0 or "–": power and cadence are reset after 3 seconds without new data, heart rate after 6 seconds. This usually means a weak signal – reduce the distance or use a USB adapter with an extension cable.
- See chapter 18 for more solutions.

6 Choosing and riding a workout

Pick a workout in the library, choose ERG or Free Ride, load it and press Start – the Watt Training page guides you through every interval.

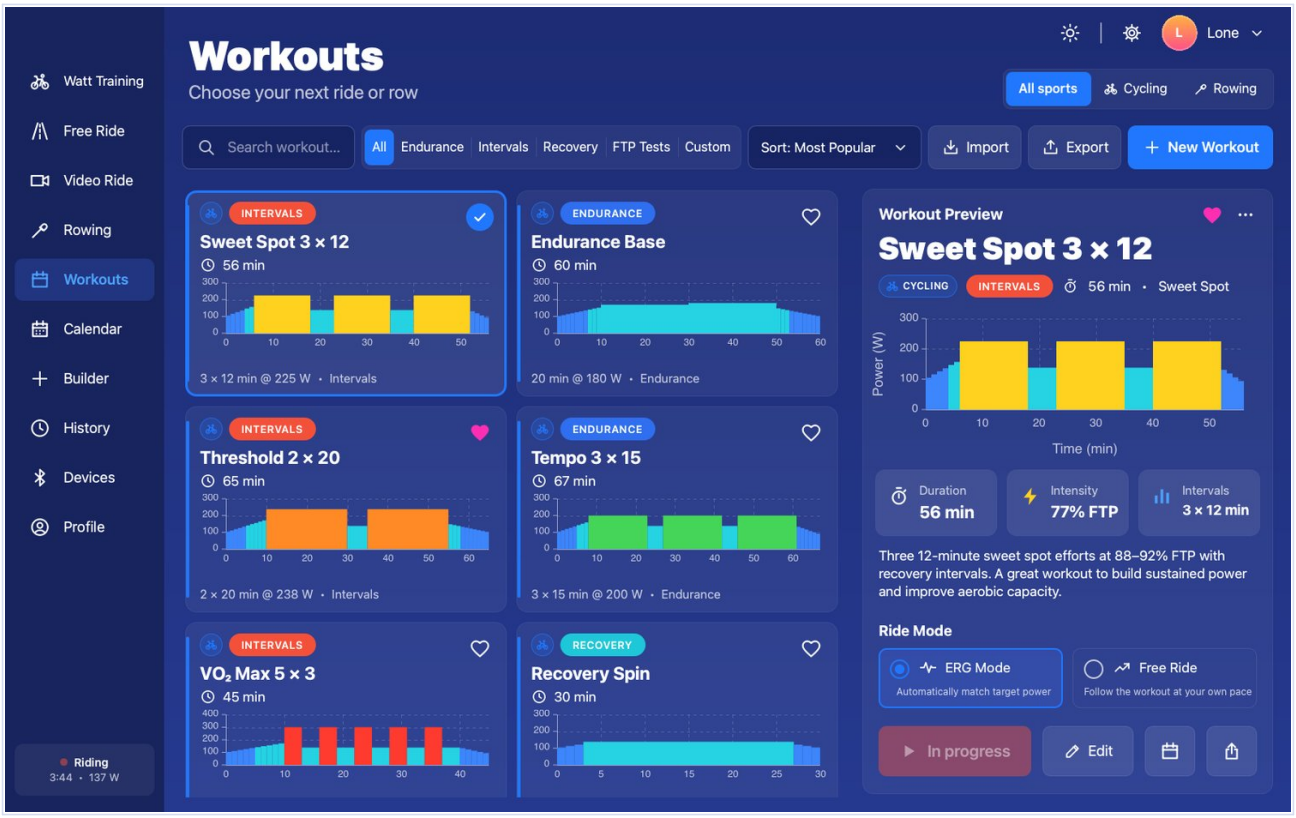


Figure 5. The Workouts library with the preview panel on the right.

6.1 The workout library

- **Search** – filters by name, focus and category as you type.
- **Sport** – *All sports*, *Cycling* or *Rowing* (section 11.9).
- **Category** – *All*, *Endurance*, *Intervals*, *Recovery*, *FTP Tests* or *Custom*. Custom shows all your own workouts, whatever their category.
- **Sort** – *Most Popular* (most often started first; default), *Name A–Z*, *Shortest*, *Longest*, *Favorites* (favourites first) or *Newest*.
- **Import** – imports shared workouts from `.awt` or Zwift `.zwo` files (section 6.2).
- **New Workout** – choose **New cycling workout** or **New rowing workout**; it opens in the Builder.

Each card shows the category (your own workouts are marked *CUSTOM*), name, duration, a mini profile chart and a summary such as *3 × 12 min @ 225 W • Intervals*. Watt values are always calculated from your current FTP. Click the heart to mark a favourite. Click a card to select it, double-click to open it in the Builder.

Selecting a workout while nothing is riding also loads it on the Watt Training page, so you can look at it there before starting.

Workout preview

The preview panel shows the name, category, duration and focus, a larger profile chart, and the tiles **Duration**, **Intensity** (average % of FTP) and **Intervals** (e.g. 3 × 12 min), followed by the description. Below it are **Load Workout**, **Edit** (opens the workout in the Builder) and a share button that exports the selected workout (section 6.2). The ••• (more) menu offers:

- **Export selected workout…** – saves the selected workout as an Artilody `.awt` file or a Zwift `.zwo` file to share it (section 6.2).
- **Export all my workouts…** – saves all your own (custom) workouts into one `.awt` file.
- **Add to calendar…** – plans the workout on a day of your choice (chapter 10).
- **Duplicate** – creates your own copy named "… (copy)" that you can edit freely.
- **Delete** – removes one of your own workouts after confirmation. Rides already recorded with it stay in History. Built-in workouts cannot be deleted; for the Ramp FTP Test the menu reads *Delete (required for FTP tests)*.

6.2 Sharing workouts: export and import

Workouts can be shared with other riders – also with riders who use other training apps. Because every target is stored as a **percentage of FTP**, a shared workout automatically scales to the FTP of the person who imports it: a block at 90 % FTP is 225 W for a rider with 250 W FTP and 180 W for a rider with 200 W FTP.

Format	Use it for	Contains
`.awt` (Artilody workout)	Sharing with other Artilody Multisport Endurance Trainer users, and backing up your own workouts. Recommended.	Everything: name, sport, category, focus, description and every block with type, name, duration, start/end intensity, cadence and RPE. One file can hold many workouts (Appendix C).
`.zwo` (Zwift workout)	Exchanging workouts with Zwift, TrainerRoad, Golden Cheetah, MyWhoosh and other apps that read Zwift workout files.	Name, description, category (as a tag) and the blocks with duration, intensity, cadence and block name. One workout per file.

Exporting a workout

1. Select the workout in the library (built-in workouts can be exported too).
2. Click **Export** in the filter bar of the Workouts page (next to **Import**) and choose **Export selected workout…**. You can also click the share button next to **Edit** at the bottom of the Workout Preview, or use the ••• menu of the preview.
3. Choose the file type in the save dialog – **Artilody workout (*.awt)** or **Zwift workout (*.zwo)** – and save. The file extension decides the format; the suggested file name is the workout name in your Documents folder.
4. Send the file to a friend (e-mail, chat, USB stick …) or keep it as a backup.

Export → Export all my workouts… writes all your own workouts (not the built-in ones) into a single `.awt` file, suggested name `My workouts.awt`. The entry is disabled until you have created or imported at least one workout of your own.

Importing workouts

1. Click **Import** in the filter bar of the Workouts page.
2. Select one or more `.awt`, `.json` or `.zwo` files (hold Ctrl/Cmd or Shift to select several) and click Open.
3. A message reports how many workouts were imported, how many duplicates were skipped and any warnings. The first imported workout is selected in the library.

- Imported workouts are **your own (custom) workouts**: they appear under *Custom*, can be edited in the Builder and can be deleted.
- **Duplicates are skipped:** a workout with the same name and exactly the same blocks as one already in your library is not imported again – so importing the same file twice does no harm.
- **Name clashes:** if a different workout with the same name already exists, the imported one is renamed to *Name (imported)*, *Name (imported 2)* and so on. Your existing workouts are never overwritten.
- Every file is **checked and cleaned** before import: durations are limited to 5 seconds – 6 hours per block and 12 hours per workout, intensities to 400 % FTP and cadence to 200 RPM; unknown categories are replaced by Endurance, Intervals or Recovery depending on the intensity. Adjustments are listed as warnings. Files larger than 2 MB, with more than 500 workouts or more than 2000 blocks per workout are rejected.

Zwift .zwo files – what is converted

In the .zwo file	In Artilody Multisport Endurance Trainer
`Warmup`, `Cooldown`, `Ramp`	Warm Up, Cool Down and Ramp blocks (start and end power).
`SteadyState`	A steady block; depending on its intensity it becomes a Recovery, Steady or Interval block.
`IntervalsT`	**Expanded** into individual blocks: e.g. 5 × (3 min on / 3 min off) becomes ten blocks (Interval, Recovery, Interval, …). Exporting it again writes the individual blocks.
`FreeRide`	A steady block at 60 % FTP (ERG cannot follow a free-ride section).
`MaxEffort`	An interval block at 150 % FTP.
`Cadence` attribute	Cadence target of the block.
`textevent` at the start of a block	Used as the block name (other on-screen messages are ignored).

> **Note** A .zwo file cannot store everything: **RPE settings** of a block are not exported (the RPE zone is derived from the intensity again after import), and Steady, Interval and Recovery blocks are all written as *SteadyState*. Use .awt when sharing with other Artilody Multisport Endurance Trainer users to keep every detail.

With a network server

When the app uses a network server (**Settings** › **Server** on, chapter 16), the same buttons work with the server instead of files – there are no extra buttons:

- **Import** opens the server's workouts (**Server workouts**). Every station adds the server's workouts to its library **by itself** when it finds the server, with a short message – a workout already in the library (for example a built-in one) is not added twice. **Add to Workouts** next to a workout adds it again, for example after you deleted it.
- **Export** (and the ••• menu of the preview) offers **Send selected workout to the server** and **Send all my workouts to the server**. The other stations then add it to their library.
- Workouts can also be uploaded in the browser on the server's **Media** page (`.awt`, `.json` or `.zwo`).
- With the server switched off, Import and Export work with files as described above.

6.3 Ride mode: ERG or Free Ride

Under **Ride Mode** choose **ERG Mode** (*automatically match target power*) or **Free Ride** (*follow the workout at your own pace*). The default comes from your profile. You can also switch ERG on or off during the ride on the Watt Training page.

6.4 Starting: you press Start

1. Press **Load Workout**. The app switches to the Watt Training page with the workout loaded; a *"Ready – press Start"* label is shown in the header. The trainer stays free, so you can clip in and spin your legs without anything starting.
2. Press **Start** in the Controls card (or `Space`). The clock, the recording and – in ERG mode – the target power start now.

> **Note** A session never starts by itself when you start pedaling (or rowing): pedaling a little while you clip in does not start the clock. This applies to the Watt Training, Free Ride, Video Ride and Rowing pages alike. There is no automatic pause either, and pedaling never resumes a paused session: press **Resume** (or `Space`) – the header then reads *"Paused – press Resume"*.

Until you press Start you can choose a different workout and press **Load Workout** again – it replaces the loaded one. A loaded workout never blocks the other training pages.

Ride without workout › (below the Load button) loads a Free Ride without any intervals in the same way.

6.5 The Watt Training page in detail

Header

The header shows a breadcrumb (*Watt Training › focus of the workout*), the workout name and a summary line such as *3 × 12 min @ 225 W • Sweet Spot • 56 min total*.

Metric cards

Card	Shows
Power	Current power in watts. The bar is coloured by your current power zone. Footer: the target power and your deviation from it (e.g. *+2 W*). The small **3 s avg** badge shows that the value is the rolling 3-second average (section 16.2); click it to switch to the raw trainer value (*Instant*) and back.
Cadence	Current cadence in RPM. Footer: the target range ±5 RPM around the interval's cadence, or around your preferred cadence if the interval has none.
Heart Rate	Current heart rate in BPM, or "–" without data. The bar is coloured by heart-rate zone; the footer shows the zone and its range, *Below zone 1* or *No sensor data*.
Elapsed Time	Workout time and the total duration (*of 56:00*).

Workout Profile chart

The chart shows the target power of every interval as bars coloured by RPE zone (legend: *RPE zones 1, 2–3, 4–6, 7–8, 9, 10*), your actual power as it is recorded, and your heart-rate curve in magenta on the right-hand axis. A vertical cursor marks your position, with a label showing your current power. In a Free Ride the time axis grows in 10-minute steps.

Workout Timeline

Below the chart, every interval is shown as a coloured block with its duration, name and target watts (a range for ramps); the current interval is highlighted. The header of the card contains:

- **− 100 % +** – the **intensity** control. Each click makes all targets 5 % easier or harder, from 50 % to 150 %. The adjustment applies immediately (also to the trainer in ERG mode), is recorded in the ride's target power and is reset when you start a new ride.
- **Skip** – jumps to the start of the next interval (only during a ride). The skipped time is not recorded. Skipping the last interval finishes and saves the workout.
- **Edit Workout** – opens the workout in the Builder.
- **Add Interval** – opens the Builder to add blocks (disabled during a ride).

A progress bar with elapsed and total time is shown at the bottom.

Right column

- **Workout Details** – opens a dialog with the description and a list of all intervals with their start time, duration and target.
- **Devices** – connection status of trainer and heart-rate sensor.
- **ERG Mode** switch – turns trainer control on or off at any time during a workout (disabled in a Free Ride). The text below explains the current mode.
- **Controls** – **Start** / **Pause** / **Resume** and **Stop**.
- **Music Player** – see chapter 15.

6.6 Pause, resume and stop

Pause stops the clock and the recording. **While paused, ERG is released** – the trainer returns to free ride so that it does not hold a high resistance while you stand still. **Resume** continues the workout and sends the current target to the trainer again.

Stop opens the *Finish workout?* dialog:

- **Save & Finish** – ends the ride and saves it to History.
- **Discard** – ends the ride without saving.
- **Cancel** – continue riding.

When you reach the end of a workout it is finished and **saved automatically** (*"Workout complete – ride saved to History"*). After a ride, the trainer is always returned to free ride.

> **Warning** Rides shorter than **30 seconds** of recorded time are not saved (*"Ride too short to save"*).

Keyboard shortcut

On the Watt Training page, **Space** works like the Start / Pause / Resume button: it starts the loaded workout, then pauses and resumes it. The shortcut is inactive on other pages and while the profile dialog or the FTP result dialog is open.

6.7 Free ride without a workout

> **Tip** For riding without a workout on a road with a grade (your gears or virtual gears) or a fixed ERG wattage, use the **Free Ride** page (chapter 12).

Choose **Ride without workout ›** on the Workouts page. The Watt Training page shows *Free Ride – ride at your own pace without structured intervals*; there are no targets, ERG is unavailable and the trainer simulates a flat road. Power, cadence and heart rate are still recorded, and the ride is saved under the name *Free Ride*. A free ride runs until you press Stop.

6.8 What is recorded

Once per second the app records your **power**, **cadence**, **heart rate** and the **target power** actually requested (including any intensity adjustment; 0 in a free ride). With the ride it stores the profile, workout name, start time, number of blocks, mode (ERG or Free Ride, as set at the end of the ride) and the FTP at the start. Statistics are calculated with the FTP and zones your profile had when the ride started.

7 Workout Builder

Create your own workouts from blocks, or adapt an existing one. Targets are stored as a percentage of FTP, so your workouts grow with you.

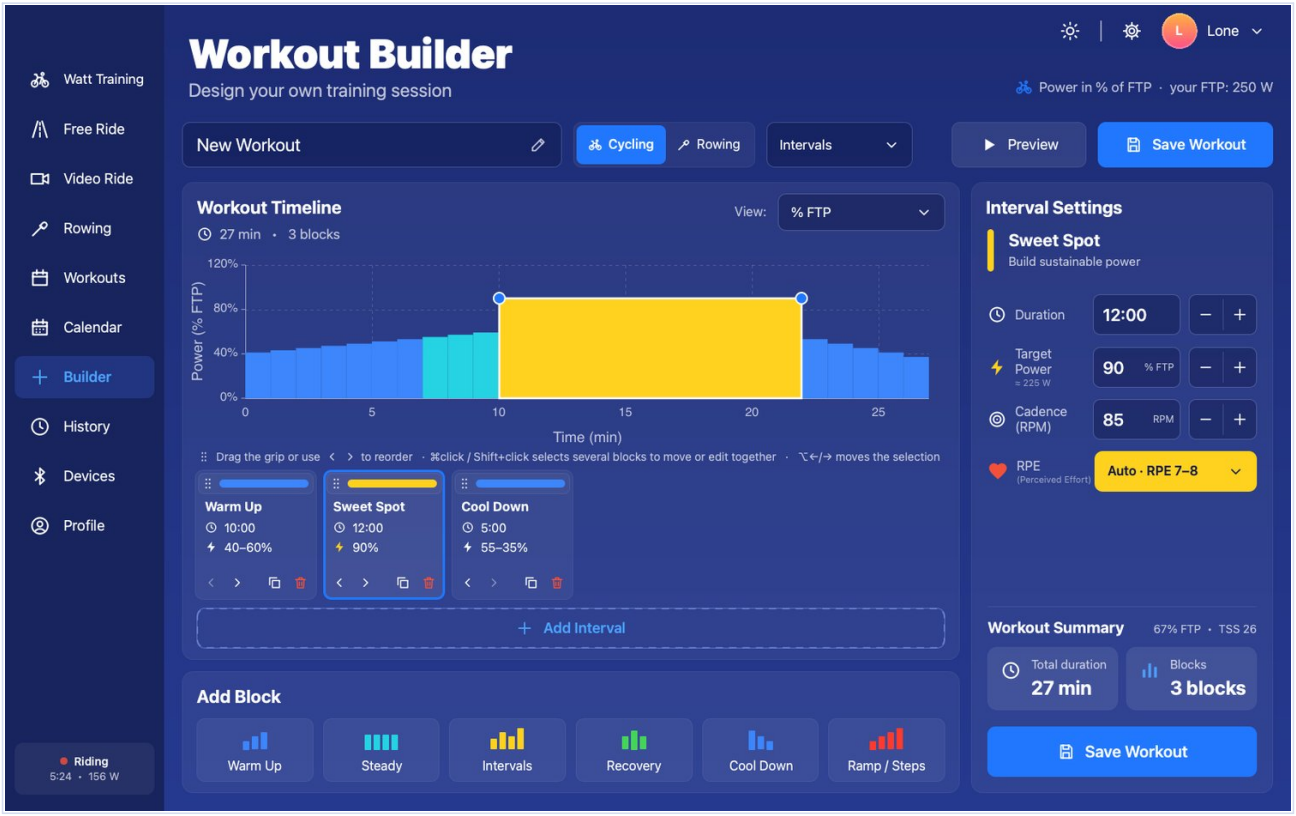


Figure 6. The Workout Builder: timeline chart and block list (left), interval settings and summary (right).

7.1 Creating and opening workouts

- **New workout: Workouts → New Workout**. It starts as *New Workout* (category Intervals) with three blocks: a 10-minute warm-up, a 12-minute sweet-spot interval and a 5-minute cool-down.
- **Edit a workout:** double-click it in the library, choose **Edit** in the preview, or **Edit Workout** on the Watt Training page.

At the top of the page you enter the **workout name** and choose the **category** (Endurance, Intervals, Recovery or FTP Tests). The **Cycling / Rowing** selector sets the sport; rowing workouts use your rowing FTP and stroke rate (SPM) instead of cadence (section 11.9).

> **Note** A workout in the *FTP Tests* category is treated as an FTP test: when you finish it, the app estimates your FTP (chapter 8).

7.2 Adding blocks

The **Add Block** panel offers six presets. **Add Interval** below the block list adds a Steady block.

Preset	Inserted	Default
Warm Up	always at the start	10:00, ramp 40 → 60 % FTP
Steady	after the selected block	10:00 at 70 % FTP, cadence = your preferred cadence
Intervals	after the selected block	a set of 3 × (5:00 *Interval* at 105 % FTP, cadence 95 + 3:00 *Recovery* at 55 %)
Recovery	after the selected block	5:00 at 55 % FTP
Cool Down	always at the end	5:00, ramp 55 → 35 % FTP
Ramp	after the selected block	10:00, ramp 50 → 100 % FTP

If no block is selected, new blocks are added at the end.

7.3 Interval settings

Select a block in the list or click it in the timeline chart. **Interval Settings** shows its name (click to rename) and these fields, each with − / + buttons and direct input:

Field	Description
Duration	Type *mm:ss* (e.g. 12:00) or *h:mm:ss*; a plain number means minutes. − / + change it by 15 s (up to 2 minutes) or 30 s. Range 5 seconds to 6 hours.
Target Power (W)	Target in watts (steps of 5 W). It is converted to % of your current FTP.
Start / End Power (W)	For ramps, warm-ups and cool-downs: the power at the start and at the end of the block. The target changes linearly between the two.
% FTP	The same target as a percentage of FTP (steps of 1 %, up to 400 %). Watts and % FTP are two views of one value.
Cadence (RPM)	Optional cadence target for the block ("–" = none; the Watt Training page then uses your preferred cadence).
RPE	*Auto (from power)* colours the block by the power zone of its target. Choose a fixed RPE (1 Very Easy … 10 Max Effort) to override the colour and zone shown.

> **Tip** A Steady, Recovery or Interval block becomes a ramp only if it is created as one. To build a progressive block, add a Ramp preset and set its start and end power.

7.4 Timeline chart and block list

The **Workout Timeline** chart shows the whole workout with total duration and number of blocks. Use **View:** to switch the vertical axis between **Power (Watts)** and **% FTP**. Click anywhere in the chart to select the block at that time.

Below the chart, the block list shows one card per block in workout order (left = start). Click a card to select and edit it. A hint line above the list summarises how to reorder and delete blocks.

7.5 Reordering and deleting blocks

Each block card has a **grip strip** at the top (the six-dot grip icon next to the coloured zone bar) and four small buttons at the bottom: ‹ and › on the left, copy and trash on the right. Hover over any of them to see a tooltip. There are four ways to change the order:

Method	How
Drag	Point at the grip strip (the cursor becomes an open hand), press and drag the card left or right. The card being moved is dimmed, a copy follows the pointer and a blue line with dots shows where it will land. Release to drop it there. Near the edge of the list it scrolls automatically.
‹ / ›	Moves the block one place earlier (left) or later (right). The buttons are greyed out on the first and last block.
Right-click menu	Right-click a card for **Move earlier**, **Move later**, **Move to start**, **Move to end**, **Duplicate** and **Delete interval**.
Keyboard	**Alt+**← / **Alt+**→ (on a Mac **Option+**← / **Option+**→; the up/down arrows work too) move the selected block earlier or later. This works when no text field has the keyboard focus.

A moved block stays selected, so you can keep pressing the arrows. To **delete** a block, click the red trash button on its card (or choose **Delete interval** in the right-click menu). The copy button duplicates a block and inserts the copy right after it.

> **Tip** Deleting has no undo. If you delete a block by mistake in a workout you saved earlier, open the workout again from the library without saving to get the saved version back; otherwise add the block again from the Add Block panel.

7.6 Summary, preview and saving

Workout Summary shows the average intensity (% FTP), the estimated Training Load, the total duration and the number of blocks. **Preview** opens a large chart of the workout with a **Save Workout** button.

Click **Save Workout** to store the workout (a dot – *Save Workout* • – indicates unsaved changes). A workout needs a name and at least one block. After saving, the workout is selected in the library.

> **Note** Built-in workouts are never overwritten. When you save changes to a built-in workout, the app saves them as a **new personal copy** and leaves the original untouched.

8 FTP test

The built-in Ramp FTP Test estimates your FTP in about 15–25 minutes. Repeat it every 4–8 weeks to keep your zones accurate.

8.1 The Ramp FTP Test protocol

Block	Duration	Target
Warm Up	5:00	40 → 45 % FTP
Ramp	20:00	50 → 150 % FTP, rising continuously by 5 % of FTP per minute

With an FTP of 250 W, the ramp starts at 125 W and would end at 375 W. Almost nobody reaches the end – the test is over when you can no longer hold the target.

8.2 How to perform the test

1. Be rested. Set up a fan, have water ready and make sure the trainer is calibrated if it requires it.
2. Select **Ramp FTP Test** (category *FTP Tests*). **ERG mode** is recommended: the trainer then raises the power for you.
3. Press **Load Workout**, clip in and press **Start** on the Watt Training page.
4. Ride the warm-up easily, then follow the ramp. Keep a steady cadence.
5. When you cannot keep the cadence or the target any longer, press **Stop** and choose **Save & Finish**. If you ride to the end, the ride is saved automatically.

> **Warning** An FTP test is a maximal effort. Do not perform it if you are ill or have health concerns, and consult a doctor if in doubt.

8.3 How the FTP is estimated

For a **ramp test** (the built-in Ramp FTP Test, any *FTP Tests* workout with “ramp” in its name, or one whose longest block is a rising ramp) the app finds your **best 1-minute average power** during the ride (rolling 60-second window) and calculates:

$$\text{FTP} = 0.75 \times \text{best 1-minute power}$$

rounded to whole watts

For a **20-minute test** (an *FTP Tests* workout of your own with a steady or interval block of at least 20 minutes) it uses your **best 20-minute average power**:

$$\text{FTP} = 0.95 \times \text{best 20-minute power}$$

rounded to whole watts

An *FTP Tests* workout that is neither a ramp nor contains a 20-minute block gives no FTP result.

The result is only offered when it is plausible:

- the ride was saved (at least 30 seconds) and contains at least **5 minutes** of recorded data;

- the estimate lies within the valid FTP range of **50–600 W**;
- the ride belongs to a workout in the *FTP Tests* category;
- the current profile is still the one that rode the test.

8.4 The “FTP Test Complete” dialog

After a successful test the *FTP Test Complete* dialog opens. It shows the **Estimated FTP** (“Based on 75 % of your best 1-minute power (… W)”, or 95 % of the best 20-minute power for a 20-minute test) and three tiles: **Current FTP**, **Change** (in watts and percent) and **New W/kg**.

- **Update FTP** – saves the new FTP to your profile. Power zones and all workout targets are recalculated immediately (*“FTP updated to … W – zones and workouts adjusted”*).
- **Keep current** – closes the dialog without changes.

Because zones are stored as percentages of FTP, you do not need to edit them after an update.

8.5 Using an earlier test from History

In **History**, select an FTP-test ride and click **View Details**. For FTP tests the details additionally show **Best 1 min** and **Estimated FTP**. Click **Use as FTP** to open the same dialog and apply that result to your profile.

9 History & Analysis

Every saved ride and row appears in History with a full analysis. Only rides of the current profile are shown.



Figure 7. The History & Analysis page.

9.1 Period and totals

Choose the period in the selector at the top: *Last 7 days*, *Last 30 days* (default), *Last 90 days*, *Last 12 months* or *All time*. Periods count whole days including today. The tiles show **Total Rides**, **Training Time**, **Avg Power** and **Total Energy** (kJ) for that period. The **All** / **Cycling** / **Rowing** selector limits the page to one sport (rows are described in section 11.8).

9.2 Selected ride, ride list and charts

- **Selected Workout** – a chart of the selected ride with *Target Power*, *Actual Power* and *Heart Rate*, and a line with date, duration, number of blocks and mode. After a ride, the new ride is selected automatically.
- **Recent Workouts** – date, workout, duration, distance and average power. Click a row to select the ride; **View All** / **Show Less** toggles between recent and all rides in the period.
- **Weekly Training Time** – hours ridden per weekday (Monday–Sunday) within the period.
- **Power Zones** – time and share of time spent in each power zone during the period.
- **Selected Workout Details** – average and maximum heart rate, Effort Power and average cadence of the selected ride, with its distance in the line above.

9.3 Ride details

View Details opens a dialog with date, start time, duration and distance, and these values:

Value	Meaning
Avg Power / Max Power	Mean and highest one-second power. Seconds without pedaling count as 0 W.

Value	Meaning
Effort Power	A weighted average power – see below.
Energy	Mechanical work in kilojoules (sum of watts per second ÷ 1000). Roughly equal to the food energy burned in kcal.
Intensity Ratio	Effort Power ÷ FTP.
SPM	Strokes per minute – the stroke rate when rowing.
Training Load	Load from duration and intensity – see below.
Avg / Max HR	Mean and highest heart rate (seconds without data are ignored).
Avg Cadence	Mean cadence while pedaling (zero cadence is ignored).
Best 1 min, Estimated FTP	Only for FTP-test rides (chapter 8).

A **Time in zones** bar shows how the ride was distributed across the six power zones. Buttons: **Delete ride**, **Use as FTP** (FTP tests only), **Export FIT**, **Export CSV** and **Close**.

Effort Power, Intensity Ratio and Training Load explained

- **Effort Power** estimates the power you could have held at a constant output for the same physiological cost. It is calculated from 30-second rolling averages of power, raised to the 4th power, averaged, and the 4th root taken. Rides shorter than 30 seconds use simple average power.
- **Intensity Ratio** = Effort Power ÷ FTP. 0.75 is an endurance ride, about 0.9 a hard interval session, 1.0 equals a one-hour all-out effort.
- **Training Load** = duration (s) × Effort Power × Intensity Ratio ÷ (FTP × 3600) × 100. One hour at FTP gives a Training Load of 100.

All three use the FTP stored with the ride (your FTP when the ride started). The Builder and the library show an *estimated* Training Load calculated from the workout targets.

Distance: Free Ride, Video Ride and GPX Ride record the distance of the virtual road you ride. A Watt Training workout rides a virtual flat road: the speed your power gives there (your weight and bike setup) is recorded, and its distance is saved with the ride. Rides saved before version 1.9.4 show – when no distance was recorded.

9.4 Exporting rides

Click **Export** at the top of the History page and choose:

Menu item	Result
Selected ride – FIT (Garmin, Strava, TrainingPeaks…)	One FIT activity file, suggested name `ride-YYYYMMDD-HHMM-<workout>.fit`
Selected ride – CSV (per second)	`ride-YYYYMMDD-HHMM-<workout>.csv` (section 9.6)
All rides in range – CSV summary	`watt-history-YYYY-MM-DD.csv`, one row per ride
All rides in range – FIT files…	One FIT file per ride of the selected period, in a folder you choose

The ride details dialog also has **Export FIT** and **Export CSV** buttons for the ride shown. The save dialogs open in your Documents folder.

9.5 FIT export: Strava, Garmin Connect, TrainingPeaks, intervals.icu

FIT is the activity file format used by Garmin devices and read by practically every training platform. Export a ride as FIT to keep your training log in one place or to share it with a coach.

Uploading the file

Upload the .fit file through the website of your platform (menu names may change over time):

Platform	How to upload
Strava	On strava.com click the **+** button at the top right → **Upload activity** → **File** and select one or more .fit files.
Garmin Connect	On connect.garmin.com click **+** (or the upload icon) → **Import Data** and drop the file(s) into the window.
TrainingPeaks	Drag the file onto the day in your calendar, or click the day → Upload.
intervals.icu	Drag the file(s) onto the calendar or the activities list, or use the upload button.

A ride appears as an **indoor cycling** activity, a row as an **indoor rowing** activity, with its original start time, duration and per-second power, heart-rate and cadence curves. Most platforms recognise a ride that was already uploaded and reject the second upload as a duplicate.

What the file contains

- Sport *cycling*, sub-sport *indoor cycling* (rows: sport *rowing*, sub-sport *indoor rowing*), start time and duration.
- For rows: the total distance and average speed, and a per-second distance estimated from the total (chapter 11).
- One record per second with **power**, **heart rate** and **cadence** (heart rate is left out for seconds without data).
- One lap covering the whole ride and a session summary: average and maximum power and heart rate, average cadence, Effort Power, Training Load, Intensity Ratio, the FTP (threshold power) used for the ride, total work and calories (estimated as 1 kcal per kJ of work).

Limitations

- **No GPS or map**: rides contain the speed and distance of the virtual road (Watt Training: a flat road at your power), rows their distance – but no GPS position.
- The workout's intervals are not written as separate laps; the whole ride is one lap.
- Pauses are not part of the file: it contains the recorded riding time only.
- Platforms often calculate these metrics again with the FTP stored in *your account there*, so their values can differ from the ones in the app.
- The target power of each second is not included (use the CSV export if you need it).

Exporting many rides at once

Choose **All rides in range – FIT files…**, then pick a folder. The app writes one file per ride of the period selected at the top of the page (**Last 30 days**, **All time** …), named `ride-YYYYMMDD-HHMM-<workout>.fit`; files with the same name in that folder are replaced. A message reports how many files were written. Most platforms accept several files in one upload.

> **Note** The FIT files are written by an independent encoder that is part of this app. FIT is a file format by Garmin; Artilody Multisport Endurance Trainer is not affiliated with or endorsed by Garmin, Strava, TrainingPeaks or intervals.icu.

9.6 Exporting CSV

CSV files can be opened in any spreadsheet program (Excel, Numbers, LibreOffice). They are UTF-8, comma-separated, with a header row.

Per-second file

Three comment lines (`# workout,…`, `# started,…` with ISO date/time, `# ftp,…`) are followed by one row per second:

Column	Content
`seconds`	Seconds since start (0, 1, 2, …)
`elapsed`	Elapsed time as hh:mm:ss
`power_w`	Power in watts
`target_w`	Requested target power in watts (0 in a free ride)
`cadence_rpm`	Cadence in RPM
`heart_rate_bpm`	Heart rate in BPM (0 = no data)

Summary file

One row per ride in the selected period:

Column	Content
`date`	Start date and time (ISO 8601)
`workout`	Workout name
`duration_s`	Recorded duration in seconds
`distance_km`	Distance in km (empty when none was recorded)
`mode`	ERG or Free Ride
`avg_power_w`, `max_power_w`, `effort_power_w`	Average, maximum and Effort Power
`avg_hr_bpm`, `max_hr_bpm`	Average and maximum heart rate
`avg_cadence_rpm`	Average cadence
`energy_kj`	Energy in kJ
`intensity_ratio`	Intensity Ratio (3 decimals)
`training_load`	Training Load
`ftp_w`	FTP used for the ride

9.7 Deleting rides

In the ride details, click **Delete ride** and confirm. The ride and all its recorded data are removed permanently. Deleting a workout from the library does *not* delete its rides.

10 Workout calendar

Plan your training weeks ahead: put cycling and rowing workouts, Free Rides and Video Rides on the days you want to do them, move them around when life happens, and start them straight from the calendar.

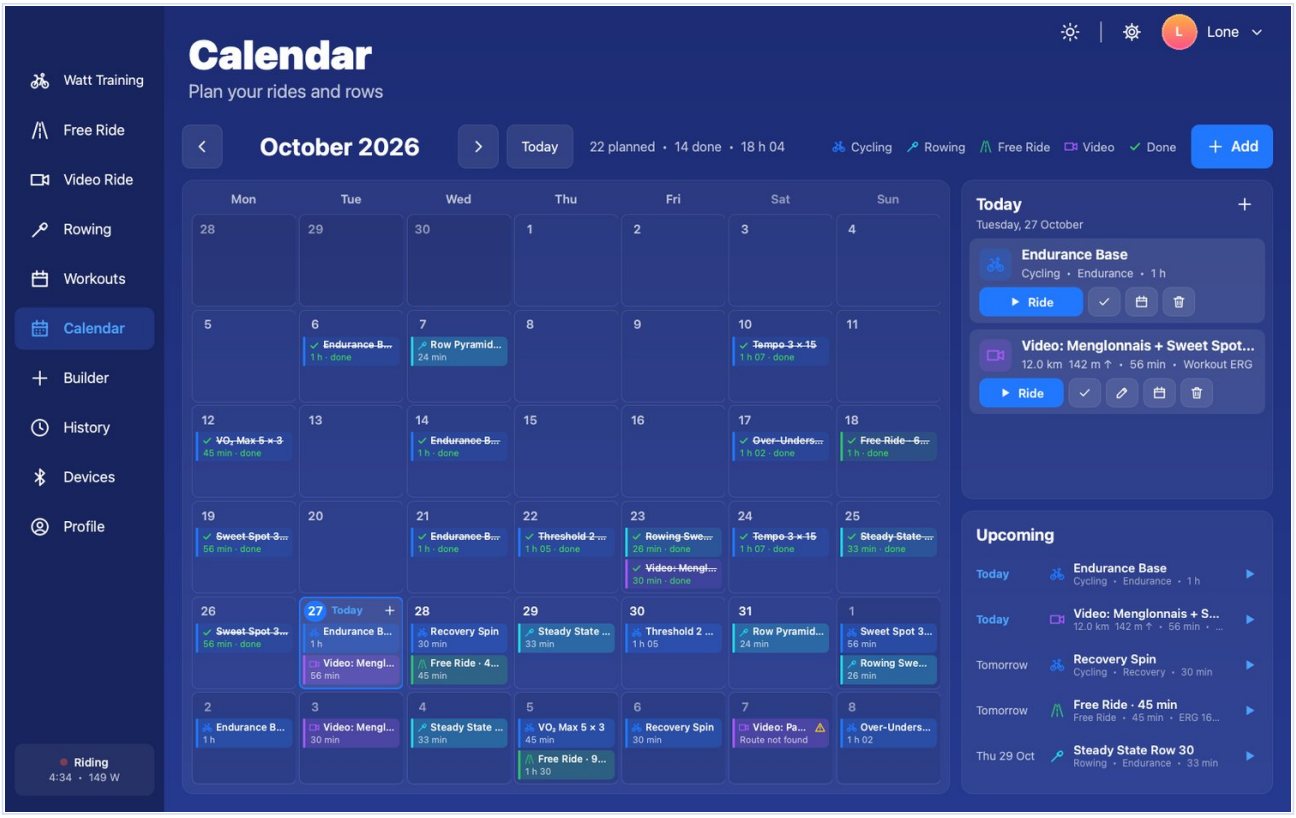


Figure 8. The Calendar page: month view with planned and completed workouts (left), the selected day and the upcoming workouts (right).

10.1 The month view

Click **Calendar** in the sidebar. The calendar shows one month as a grid of weeks (Monday to Sunday). Use the arrow buttons to go to the previous or next month and **Today** to jump back to the current month. Next to the month name a summary shows how many workouts are planned in the month, how many are done and the total planned time, for example *22 planned • 12 done • 17 h 48*.

- Every planned entry is shown as a small chip with an icon, its name and duration. Each kind has its own colour (see the legend at the top right): cycling workouts blue, rowing cyan, **Free Ride** green, **Video Ride** purple. A Video Ride whose route is no longer in the video library shows a warning sign and *Route not found*.
- Completed workouts are dimmed, crossed out and marked with a tick and *done*.

- Today has a filled circle around the date. If a day holds more workouts than fit, the last line reads *+N more* – select the day to see all of them in the side panel.
- Hold the pointer over a chip to see the details (duration; route distance and climbing, the workout and the resistance mode of a Video Ride) and what clicking does.

10.2 Adding a workout

1. Double-click a day, or click the **+** button that appears in the corner of a day when you point at it. **Add** at the top right and **+** in the side panel add to the selected day. A single click only selects the day.
2. The **Add to Calendar** dialog opens for that date on the **Workout** tab (the arrows next to the date change the day). Type in **Search workouts...** and use the **Cycling** / **Rowing** filter to find the workout.
3. Optionally enter **Notes** (for example *"Outdoor if dry"*).
4. Click **Add to Calendar**. Double-clicking a workout in the list adds it right away.

You can also plan from the Workouts page: choose **Add to calendar…** in the ••• menu of the Workout Preview (or the calendar button), then pick the date. The same workout can be planned on several days, and a day can hold several workouts.

10.3 Planning a Free Ride or a Video Ride

The tabs at the top of the **Add to Calendar** dialog switch between **Workout**, **Free Ride** and **Video Ride**:

- **Free Ride** – the planned **duration** (a value in minutes or one of the buttons 30 / 45 / 60 / 90 / 120 min; **Open** = no planned time) and the **resistance**: **Ride** (the road: virtual gears or a gradient, chapter 12) or **ERG** with the target watts. The duration is a target, not a limit – the Free Ride page shows *Planned 60 min • 23:10 left* in its Time tile and nothing stops when the time is up.
- **Video Ride** – a **route** from your video library (name, distance, climbing ↑, video length and country; if the list is empty, put route folders into the library folder shown there or add folders on the Video Ride page, then press **Rescan**), the resistance **Simulation** with a **difficulty** or **ERG** with the watts, and optionally **Ride a workout during the video**: one of your cycling workouts, with or without **Workout ERG** (chapter 13). Double-clicking a route adds it right away.

To change a planned Free Ride or Video Ride later, press the pencil in the side panel or choose **Edit…** in its menu: the same dialog opens with the entry's settings, notes and date (**Save**). Choosing another route replaces the entry by a new one on the same day.

10.4 Starting a planned workout

A single click on a chip selects it and its day. To start it, **double-click** the chip, press **Ride** or **Row** for the entry in the side panel (or the play button in **Upcoming**), or choose **Ride this workout** / **Row this workout** in its menu:

- a **cycling** workout is loaded on the **Watt Training** page – choose ERG or Free Ride and press **Start** as usual (chapter 6);
- a **rowing** workout is set up as a **Watt Plan** on the **Rowing** page (chapter 11) – press **Start** to begin;
- a **Free Ride** opens the **Free Ride** page with the planned mode, ERG watts and duration (chapter 12);
- a **Video Ride** opens the **Video Ride** page with the route, the resistance mode and the workout loaded (chapter 13). If the route is missing, a message says *Route not found*.

If a ride or a row is already running, the app shows a message and takes you to it instead. Finish it first.

> **Note** When you **complete** a workout you started from the calendar, exactly that plan entry is **marked as completed automatically** and linked to the ride – even if it was planned for another day. A completed workout started elsewhere (Workouts page, Watt Training) ticks off the first open entry of that workout on the same day. Rides you stop before the end of the workout, aborted rows, free rides and free rows do not change the calendar. If you delete the ride in History, its plan entry is opened again. A **Free Ride** entry started from the calendar is ticked off by a saved Free Ride of at least half the planned time (10 minutes without a planned time); a **Video Ride** entry by a saved ride on that route that reached the finish or 90 % of the route distance.

10.5 Moving, completing and removing

Right-click a chip (on touch screens: press and hold it) to open its menu:

Menu item	Effect
Ride this workout / **Row this workout** / **Start Free Ride** / **Start Video Ride**	Starts the entry, like double-clicking the chip.
Edit…	Free Ride / Video Ride: changes duration, mode, watts, route, workout and notes.
Mark as completed / **Mark as not completed**	Ticks the entry off by hand – for example after an outdoor ride – or opens it again.
Move to…	Opens a date picker; the entry moves to the chosen day.
Move to next day	Moves the entry one day forward.
Show day	Selects the day in the side panel.
Remove from calendar	Asks for confirmation, then deletes the plan entry. The workout itself and any recorded ride are not affected.

Drag and drop: press a chip and drag it to another day of the visible month – the target day is highlighted – and release it there.

10.6 Side panel: selected day and Upcoming

- The upper card shows the selected day (*Today* or the date) with every entry planned for it: name and details (sport, category and duration; for a Free Ride the planned time and mode; for a Video Ride distance, climbing, duration and workout), and buttons for **Ride**/**Row**, mark as completed, edit (Free Ride / Video Ride), move and remove. **+** adds another entry to the day.
- **Upcoming** lists the next open workouts from today onwards (*Today*, *Tomorrow*, then the date). Click a row to select its day, double-click it or press the play button to start it.

10.7 Training plans: export and import

A training plan is a number of weeks from your calendar in one file (`.awplan`) – for example a coach's eight-week build-up – that another rider (or you, on another computer) puts into their own calendar from any start date.

Exporting weeks as a plan

1. Click **Plans** at the top right of the Calendar page and choose **Export weeks as a plan…**.
2. Choose the first week (**From**, always a Monday), the number of **Weeks** (1–52), a name and optionally a description. The list shows every entry that goes into the plan.
3. Click **Export…** and save the file. Workouts and GPX routes are included; video rides keep only the route name (the importer chooses their own video); free rides, rows and runs keep their kind and duration.

Importing a plan

1. Click **Plans** › **Import a plan…**, or **Import plan…** in the **Add to Calendar** dialog of a day, and choose the plan file.
2. The import view shows the plan (weeks, entries, workouts, GPX routes). Set the day 1 date with the arrows and click **Import**.
3. Existing workouts are reused, the plan's other workouts are added to your library, GPX routes go into your GPX library, and video rides are linked to a video of the same name or wait for yours.

Plans on the network server

When the app uses a network server (**Settings** › **Server** on, chapter 16), the same buttons use the server instead of files:

- **Import plan…** and **Plans** › **Import a plan…** open the server's training plans. **Import…** next to a plan fetches it and opens the import view – day 1 on the day you chose.
- In **Export weeks as a plan…** the button is **Send to Server**: the plan goes to the server, and every station can import it from there.
- Plans can also be uploaded in the browser on the server's **Media** page (`.awplan`).
- With the server switched off, plans are exported and imported as files.

> **Tip** The plan belongs to the current profile, like the ride history. Each rider in a shared installation has a separate calendar.

11 Rowing with a Concept2 PM5

Connect a Concept2 rowing machine with a PM5 monitor over Bluetooth and row a distance, follow a watt plan, or race a ghost of your personal best. Rows are saved to History like rides.



Figure 9. The Rowing page during a 1000 m Ghost Race: live metrics, the power/pace/heart-rate chart over distance, the race course with your boat and the ghost, and the Session panel with your personal bests.

11.1 Connecting the PM5

1. Sit on the rower and wake the PM5 by pressing any button.
2. On the PM5 choose **More Options** → **Turn Wireless ON** → **Connect Device**. The monitor now advertises itself over Bluetooth LE (it shows a waiting screen).
3. In the app open **Devices** and press **Scan for Devices**. The PM5 appears in the section **Rowers (Concept2 PM5)** with a name such as *PM5 430012345 Row*.
4. Click **Connect**. Once connected the row shows live power, pace /500 m and stroke rate, and the PM5 display switches to the connected state.

The rower is remembered like a trainer and reconnected automatically next time (if **Auto-connect known devices** is on) – just turn wireless on at the PM5 again. A trainer, a heart-rate sensor and a rower can be connected at the same time. Heart rate comes from the connected heart-rate sensor (Devices → Heart Rate Sensors) if there is one – a dedicated strap always wins – otherwise from a strap paired with the PM5.

Virtual Rower (Simulated Concept2 PM5) in the same section lets you try every rowing feature without a rower. It rows by itself at around 175 W and follows the target in a Watt Plan.

> **Note** Only the **PM5** on a **rower** (RowErg and other Concept2 rowing machines) is supported. BikeErg and SkiErg are **not supported** – they advertise the same way, but the app only handles rowing data. PM3/PM4 monitors have no Bluetooth. The PM5 accepts one Bluetooth app at a time – disconnect ErgData or other apps first.

11.2 Rowing machine not found

- The PM5 only advertises while it shows the **Connect Device** screen. Open it (**More Options** → **Turn Wireless ON** → **Connect Device**), then press **Scan for Devices**. A scan runs for 60 seconds.
- The PM5 can be connected to **one app at a time**. Disconnect ErgData, the Concept2 app or any phone or watch that is connected to it (turning off Bluetooth on the phone is the quickest way).
- Current PM5 firmware advertises the standard Bluetooth fitness-machine service (FTMS, `0x1826`) with the machine type *Rower*. The app reads this advertisement and lists the PM5 under **Rowers**, even before its name arrives. Older app versions could list it under **Smart Trainers**. If a rowing machine is still listed there, press the rowing button next to it (**Connect as rower**). A device connected as trainer that turns out to offer rowing data is moved to the rowers automatically and remembered.
- If the PM5 does not offer the Concept2 rowing service, the app uses the standard FTMS rower data instead. Other FTMS rowing machines work the same way.
- Turn on **Show all devices** in **Available Devices**. The section **Other Bluetooth devices** lists every Bluetooth LE device the app did not recognise, with name, address and signal. If your PM5 is there, press **Connect as rower**. If the device has no Concept2 rowing service or FTMS rower data, a red message says so.
- Press **Details…** under **Bluetooth Diagnostics**. The report lists the adapter, the Qt version, every device seen (name, address, signal, service UUIDs, classification) and any scan errors. After a connection attempt it also lists the GATT services and characteristics the device offered. **Copy** puts it on the clipboard for a bug report. A PM5 shows the service `CE060000-43E5-11E4-916C-0800200C9A66` or an *FTMS advertisement* with type *Rower*.
- Scan errors (Bluetooth off, adapter error, missing permission) are shown in red at the top of the device list. If Bluetooth is off, the app tries to switch it on.
- Update the PM5 firmware with Concept2 Utility if the monitor is old.
- Stroke rate missing while power, pace and distance work: the stroke rate comes from the PM5's *Additional Status 1* (0x0032). Since 1.1.4 the app re-enables that channel or moves it to the multiplexed channel when it stays silent, and otherwise computes the stroke rate from the time between strokes (shown with a ≈ sign on the Devices page). The *[Rower data]* section of the diagnostics report shows the packet counters and raw bytes per characteristic – please include it in a bug report.

Raspberry Pi / Linux: check the Bluetooth stack in a terminal:

```
bluetoothctl show            # Powered: yes
bluetoothctl power on        # if it says no
sudo rfkill unblock bluetooth
bluetoothctl scan le         # lists "PM5 430..." (Ctrl+C stops)
groups                       # should include "bluetooth"
```

If `bluetoothctl scan le` does not list the PM5 either, the PM5 is not advertising (not on the Connect screen, or connected to another device). If it lists the PM5 but the app does not, start the app from a terminal and send the output together with the diagnostics report:

```
QT_LOGGING_RULES="qt.bluetooth*=true" artilody-watts-trainer 2>&1 | tee ~/artilody-bt.log
```

Lines starting with `artilody.ble:` show every device the app saw and how it was classified.

11.3 The Rowing page

Open **Rowing** in the sidebar. If no rower is connected, the Session panel shows *No rower connected* and an **Open Devices** button.

Card	Shows
Power	Current power in watts; below the average power (in a Watt Plan: the target).
Distance	Metres rowed – of the target distance with a progress bar, or with strokes and calories.
Pace	Current pace per 500 m; below the average pace (in a Ghost Race: the ghost's pace).
Stroke Rate	Strokes per minute (SPM) and the average.
Heart Rate	Current and average heart rate.
Elapsed	Rowing time; for a distance the estimated finish time at the current average pace, in a Watt Plan the time left.

The **Power, Pace & Heart Rate** chart plots your power as bars and pace and heart rate as curves – over distance in Free Row and Ghost Race, over time in a Watt Plan. The bottom card depends on the mode (below). The sidebar shows a small *Rowing* status box with time and heart rate while you row on other pages.

11.4 Modes

Choose the mode in the **Session** panel. The mode and its settings can be changed while no row is running.

Free Row

Row a distance at your own pace, without targets. Pick the **Workout Distance**: **Open (no distance)**, 500 m, 1000 m, 2000 m, 5000 m, 6000 m, 10 000 m or **Custom…** (100 – 42 195 m). The bottom card shows a course with your boat moving towards the finish line, the metres rowed, the metres to go and the number of strokes. A distance row ends automatically at the finish line; an open row runs until you press **Finish**.



Figure 10. Free Row over 1000 m: your boat on the course.

Watt Plan

Row a structured **rowing workout** from your library (choose it under **Rowing Workout**; **New Rowing Workout** opens the Builder). Targets are a percentage of your **rowing FTP**. The bottom card shows the interval blocks of the workout coloured by zone, with a rower marker moving along a line beneath them, and these values:

Value	Meaning
Target	Target power of the current second.
Current	Your power – green within ±10 % of the target, amber below, red above.
Interval left	Time left in the current interval.
Next target	Target of the next interval (*Finish* in the last one).
Interval avg	Your average power in the current interval.
Compliance	Share of the seconds with a target in which you were within ±10 % of it (green from 80 %, amber from 50 %).

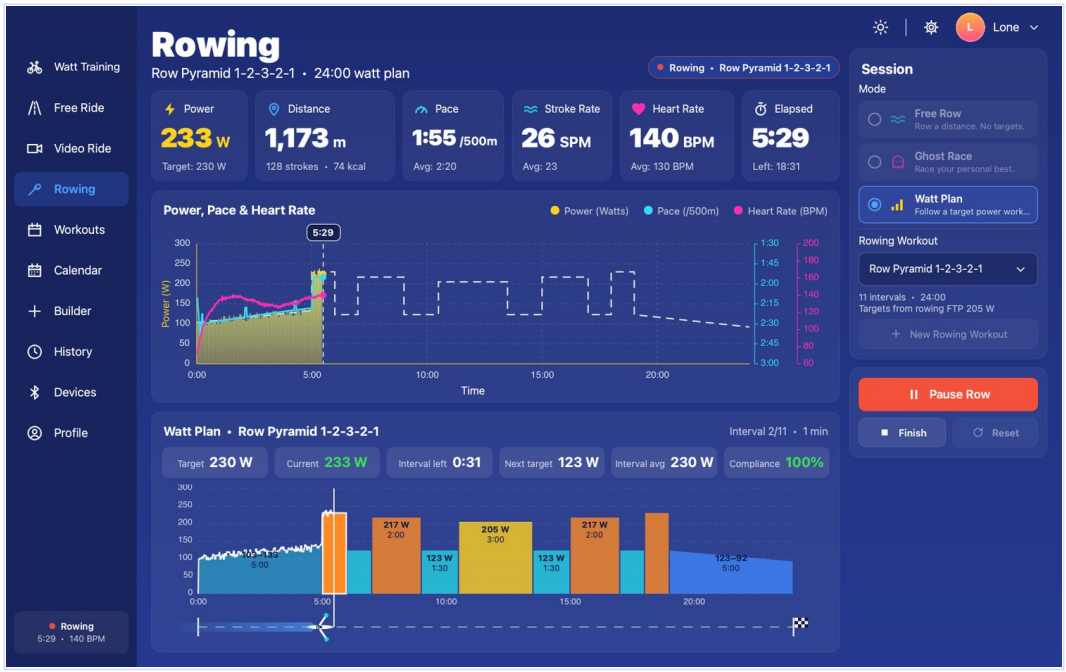


Figure 11. A rowing Watt Plan: interval blocks and target vs. actual power.

> **Warning** The PM5 has **no ERG mode**: the rower cannot set the resistance for you. You follow the target yourself by changing how hard and how fast you pull. The workout runs on time and finishes (and is saved) automatically at its end.

Ghost Race

Race against your own **personal best**. Choose the **Race Distance** – 500 m, 1000 m, 2000 m, 5000 m, 6000 m, 10 000 m or **Custom…**; the list shows your current best for each distance. A pink **ghost boat** replays your record row metre by metre next to your own boat. The header shows both distances and the gap, for example *+7 m ahead (+2.0 s)* in green or *−4 m behind* in red; the gap in seconds is how much earlier or later you reached your current distance than the ghost did.

Without a record for the distance there is no ghost yet (*No record yet – set your first time*) – row the distance once and that row becomes your ghost.

11.5 Personal bests

- A personal best is saved when you **complete** a distance in a **Ghost Race** or a **Free Row** with a set distance, and your time is faster than the previous best. The whole row (distance over time) is stored, so the next ghost rows exactly like you did.
- After the finish the summary shows your time and, for a new record, *New personal best!* with the improvement over the old record.
- The **Personal bests** table in the Ghost Race panel lists time and pace /500 m for the standard distances and every custom distance you have a record for.
- Open rows, Watt Plans and rows you finish early never change your records. A time is also not saved as a record if you **paused** during the piece or the time is **implausible** (faster than is physically possible, e.g. after a monitor glitch). Records belong to the current profile.

11.6 Starting, pausing and finishing

- Opening the Rowing page sets the row up (*Ready – press Start*). Strokes on the rower never start it – take a few warm-up strokes or get settled first.
- **Start** (or `Space` once a rower is connected) starts the row; without any setup it starts an open Free Row. Metres and strokes rowed before Start do not count.
- **Pause Row** / **Resume** (or `Space`) stops and continues the clock; distance rowed during a pause is not counted, and rowing on never resumes the row by itself (*Paused – press Resume*).
- **Finish** asks *Finish row?*: **Save & Finish** saves the row, **Discard** throws it away.
- **Reset** (when paused or finished) discards an unfinished row and prepares the same session again. After a row, **Row Again** starts the same session and **View in History** opens the saved row.

As with rides, rows shorter than 30 seconds are not saved. Values from the monitor are taken relative to the start of the session, so it does not matter what the PM5 showed before.

11.7 Rowing FTP

Every profile has a separate **Rowing FTP** (50 – 600 W, default 150 W) in the **User Profile** dialog, next to the cycling FTP. Rowing workouts, the Builder in rowing mode and the zones and Training Load of rows use it; cycling uses the normal FTP. Rowing power is usually much lower than cycling power for the same effort, which is why the two are kept apart.

> **Tip** No rowing FTP yet? A common estimate is 95 % of the average watts of an all-out 20-minute row, or the average watts of a hard but steady 30-minute row. Update it every few weeks.

11.8 Rows in History and export

Saved rows appear in **History** with a rowing icon, the sport *Rowing* and the distance rowed (e.g. *2,002 m rowed*); the cadence tile shows the stroke rate in SPM. Use the **All** / **Cycling** / **Rowing** filter at the top to show one sport only – the totals, charts and zones follow the filter. Free rows are named *Free Row* or *Row 2000 m*, ghost races *Ghost Race 1000 m*, Watt Plans after the workout.

Rows can be exported as FIT and CSV like rides (section 9.4).

> **Note** The FIT file of a row is marked as an **indoor rowing** activity (sport *rowing*, sub-sport *indoor rowing*) and contains the distance rowed, the average speed, power, heart rate and the stroke rate (as cadence, in strokes per minute). The PM5 reports only the total distance, so the distance curve inside the file is estimated: the total is spread over the seconds in proportion to the cube root of the power (on an air-braked rower the speed grows with the cube root of the power), and it ends exactly at the distance rowed.

11.9 Sport type: cycling, rowing and running workouts

Every workout has a sport – **Cycling**, **Rowing** or **Running** (running workouts: chapter 14):

- **Workouts page:** cards show a Cycling or Rowing badge, and the filter **All sports** / **Cycling** / **Rowing** at the top limits the library to one sport. For a rowing workout the preview shows **Row Workout** instead of Load Workout; it opens the workout as a Watt Plan on the Rowing page. **New Workout** asks for **New cycling workout** or **New rowing workout**. Watt values on rowing cards use your rowing FTP.

- **Builder:** the **Cycling** / **Rowing** selector at the top sets the sport. In rowing mode, watts and **% Rowing FTP** are based on your rowing FTP, and the cadence field becomes **Stroke Rate (SPM)**. Switching the sport keeps the blocks (all targets are percentages).
- **History:** the sport filter and the distance of rows (above).
- **Sharing:** `.awt` files keep the sport (Appendix C). Zwift `.zwo` files have no rowing type: workouts are always exported and imported as cycling workouts.

All rides and workouts from earlier versions are cycling. The database is upgraded automatically the first time version 1.1.0 starts; nothing is lost.

12 Free Ride & virtual shifting

Ride without a workout: a road with a grade that you climb like outdoors – shifting your bike or virtual gears – or a wattage that ERG holds for you.



Figure 12. The Free Ride page in Ride mode with a Zwift Click: live metrics, the current gear (12 / 24, ratio 2.40) with the shifting status line, small Easier / Harder buttons, the grade control and the power, speed and heart-rate chart.

12.1 Modes

Mode	What happens
Ride	A simulated road with the grade you set: climbs get harder like outdoors. Without a Zwift Click you shift **your bike's gears**: the trainer gets the grade (gradient simulation) and your speed follows your power. With a **Zwift Click** connected you shift Zwift's 24 virtual gears (Click, on-screen buttons or keys) – through the Zwift protocol or an FTMS gradient, automatically (section 5.5); a harder gear means more speed and more watts at the same cadence.
ERG	The trainer holds the target wattage regardless of cadence, as long as you like.

Choose the mode with the selector at the top right of the page – it is the only ERG switch: selecting ERG sends the target to the trainer at once – also before the ride is started, as long as the Free Ride page is open and a trainer is connected (the status pill then shows *ERG on*) – and selecting Ride releases it (with virtual gears, Ride gives the trainer the resistance of your virtual gear right away; the pill shows the gear, e.g. *Gear 12/24*). While paused the trainer stays free and ERG returns with Resume. You can change the mode at any time; switching to ERG continues at the power you are riding at that moment (3 s average), otherwise at the last target (the first time 60 % of your FTP).

> **Note** A trainer that cannot simulate a gradient cannot make a climb harder by itself. In Ride mode the app then uses virtual gears automatically (via ERG) and says so on the page.

12.2 The page

- **Metric tiles** – power (with the ERG target or the power the current gear needs; the **3 s** badge shows the rolling average and toggles it, section 16.2), speed (average), cadence (current gear), heart rate (% of max), time (average power; for a Free Ride started from the calendar with a planned duration: *Planned 60 min • 23:10 left (61 %)*, a target only) and distance (energy in kJ).
- **Road panel** (Ride) – the grade control on the right; on the left either the current virtual gear with **Easier** / **Harder** or, with your bike's gears, *Shift on your bike* with the grade sent to the trainer and **Virtual gears: connect a Zwift Click**. The header shows the status line (*Virtual shifting: Zwift protocol*, *Virtual shifting: FTMS gradient* or *Shifting: your bike's gears*). In ERG the panel holds the target (below).
- **Chart** – power (yellow area), speed (cyan) and heart rate (pink) over time; in ERG a dashed line marks the target.
- **Right column** – **Start**, **Pause Ride** / **Resume**, **Finish** and **Reset**; the **Shifting** card with the Zwift Click status, its buttons as you press them and a link to the Devices page. Without a trainer a *No trainer connected* card with **Open Devices** appears.

12.3 Shifting and the grade

With a Zwift Click connected the current gear is shown large – for example **12 / 24** with *Gear 12/24 (2.40)* – with a position bar and the shifting status line. **Easier** (−) and **Harder** (+), ↓ / ↑ or the Zwift Click shift one gear; hold a button to shift repeatedly; Shift + ↑ / ↓ jumps three gears. There is nothing to set up.

The **grade** control (−15 % to +20 %, **−** / **+** in 0.5 % steps, a slider and **Flat**) simulates a climb or descent: uphill you need more power for the same speed, so you shift easier – just like outdoors. With virtual gears the app shows the power the current gear needs at your cadence.

Soft start: when the ride starts (and after more than 5 s without cadence) the trainer gets 0 % until the flywheel turns – 40 rpm or 10 km/h for 2 s – and then the grade rises to the set value over 4 s. While you

stand or coast with virtual gears on the FTMS gradient path the trainer gets 0 %, not the road grade. ERG is never affected.

> **Tip** Ride at your usual cadence and use the gears like outdoors: shift harder to go faster, easier when the road gets steeper. Shifting never changes the grade or the difficulty.

12.4 ERG mode

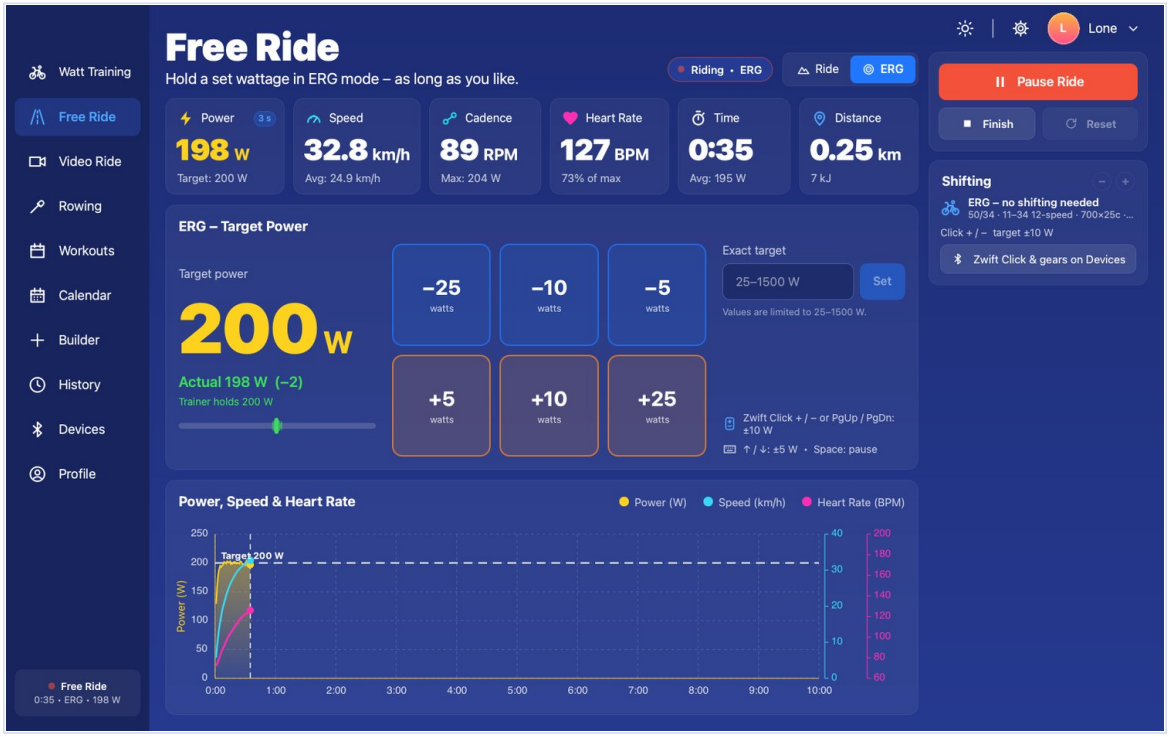


Figure 13. ERG mode: target 200 W with step buttons, exact entry and the target line in the chart.

- The **target** is shown large; below it the actual power and the difference (green within ±5 %), and a bar with the marker of your current power.
- Step buttons **−25 −10 −5 +5 +10 +25** (hold to repeat), or type a value under **Exact target** and press **Set** or Enter (25–1500 W).
- The Zwift Click changes the target by 10 W; the keyboard by 5 W (↑ / ↓) or 10 W (Page Up / Page Down).
- There is no separate ERG switch: ERG is on exactly while **ERG** is selected at the top of the page. Choose **Ride** to release the target, or **Pause Ride** to free-wheel for a moment.

12.5 Starting, pausing and finishing

- **Start** (or `Space`) starts the ride – the only way it starts: pedaling never starts it, so you can clip in and spin up calmly (the page says *Ready – press Start*). The resistance of the selected mode (ERG target, grade, virtual gear) already applies while the page is open.
- **Pause Ride** (or `Space`) stops the clock and releases the trainer; **Resume** (or Space) continues – pedaling on never resumes it.
- **Finish** asks *Finish free ride?* – **Save & Finish** saves the ride to History under the name *Free Ride*, **Discard** throws it away. A summary (time, distance, average and maximum power, average speed, energy) and **View in History** appear; **Ride Again** starts a new ride and **Reset** clears the page.

- Only one session runs at a time: a free ride cannot start while a workout, a video ride or a row is in progress (running, or paused) on another page. Start is then greyed out and a yellow card says why, with **Go to …**, **End & Save** and **Discard** (click twice to confirm). Prepared (not started) and finished sessions never block.

> **Warning** Rides shorter than **30 seconds** are not saved.

12.6 Zwift Click and keyboard

Input	Ride	ERG
Zwift Click +	Shift harder	Target +10 W
Zwift Click −	Shift easier	Target −10 W
↑ or + / ↓ or –	Shift harder / easier (virtual gears)	Target ±5 W
Shift + ↑ / ↓	Jump 3 gears harder / easier	–
Page Up / Page Down	Grade +0.5 % / −0.5 %	Target +10 W / −10 W
Space	Start / pause / resume	Start / pause / resume

Virtual gears are on exactly while a Zwift Click is connected. The keys work only on the Free Ride page and not while you type in a field or a dialog or menu is open; Enter , Esc or a click on the page background leaves a text field. Without virtual gears and outside ERG, the arrow keys do nothing.

13 Real Life Video

Ride filmed routes: the video plays at the speed you ride, the trainer makes the climbs harder like on the road, and the route's elevation profile shows where you are.

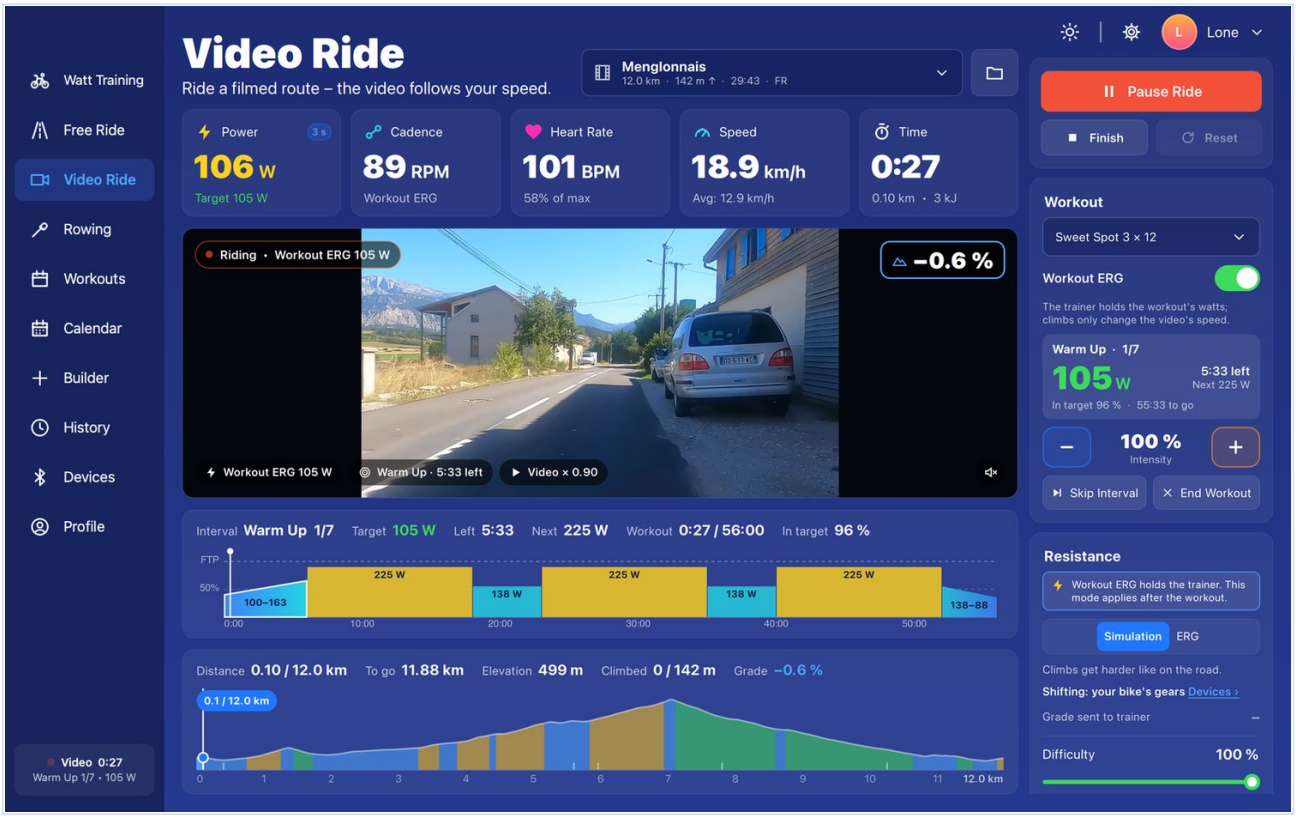


Figure 14. The Video Ride page with a workout (Sweet Spot 3 × 12, Workout ERG): live metrics at the top, the route video with the overlays in the middle, the workout's blocks with the elapsed-time cursor and below them the elevation profile with your position; the Workout card on the right. Video: cycling.vangestel.online, CC BY-NC-SA 4.0.

13.1 Route folders

A Real Life Video (RLV) route is a folder with three files that share a name:

File	Content
`.mp4`	The video, filmed from the bike. H.264 plays everywhere; see *Video formats* below.
`.gpx`	The GPS track with elevation – distance, gradient and the profile are computed from it.
`.xml`	Optional route file (common RLV format): title, country, the video's start and end frame and the on-screen texts at their distances (e.g. *Mount Glandasse in the background*).

Put route folders into your videos folder – by default `Documents/Artilody Videos` in your home folder – for example `Artilody Videos/FR_Le_petit_Menglonnais/FR_Le_petit_Menglonnais.mp4` (plus the `.gpx` and `.xml` next to it). The folder button next to the route list opens a menu: **Add Folder…** adds another folder (e.g. on an external drive; a folder can hold many route folders or be a route folder itself), **Choose Videos Folder…** replaces the videos folder, **Open Videos Folder** shows it in Finder / Explorer and **Rescan Library** looks for new routes. With an empty library the page explains the layout and offers the same buttons.

13.2 Choosing a route

The drop-down at the top of the page lists every route with its name in bold and below it the distance, the climbing, the length of the video and the country, e.g. *12.0 km · 142 m ↑ · 29:43 · FR*. Routes that cannot be loaded are shown greyed out with the reason. Choosing a route shows its first frame and its profile; the app remembers the last route. The route cannot be changed during a ride.

13.3 The page

- **Metric tiles** – power (3 s average; footer: the ERG target or the power the current virtual gear needs), cadence (gear or mode), heart rate (% of max), speed (average) and elapsed time (distance ridden and energy).
- **Video** – plays at your speed: the playback rate follows your riding speed relative to the speed of the camera (about 0.25× to 2.5×); it pauses when you stop or coast to a standstill, and a video that drifts from your position jumps back in sync. Overlays show the ride status, the gradient you ride (coloured; with the route's gradient below it when the difficulty is below 100 %), the resistance mode (gear or ERG target), the difficulty, the playback rate and the route's on-screen texts. The speaker button turns the sound on – RLV videos are usually silent, so it starts muted.
- **Distance line** – the elevation profile of the whole route, coloured by gradient (green descents, blue flat, yellow/orange climbs, red steep), the ridden part strong, your position with *4.3 / 12.0 km*, km marks and small ticks where the route has texts. Above it: distance, remaining distance, elevation, climbing done and gradient. Before the start, click the profile to start part-way along the route (hovering shows the distance and elevation).
- **Right column** – **Start**, **Pause Ride** / **Resume**, **Finish** and **Reset**; the **Resistance** card; the Zwift Click status. Without a trainer a *No trainer connected* card with **Open Devices** appears.

13.4 Resistance and difficulty

The **Resistance** card offers two modes; the choice and the ERG target are remembered.

Mode	What happens
Simulation	**Default – the classic RLV feel** (as in Tacx, Rouvy or Kinomap): *climbs get harder like on the road.* The status line shows how you shift (the link opens the Devices page, section 5.5): • *Shifting: your bike's gears* (no Zwift Click) – the app sends the route's gradient (× difficulty) to the trainer, which sets the resistance itself; the card shows the **Grade sent to trainer**. Your speed comes from your power on the gradient including the bike's momentum, so it rises and falls smoothly. • *Virtual shifting: Zwift protocol* / *FTMS gradient* (a Zwift Click is connected) – Zwift's 24 gears, **−** / **+** on the card (*Gear 12/24*), the keys or the Click. With the Zwift protocol the trainer does the physics and the video follows your power; with the FTMS gradient speed and video follow your gear and cadence.
ERG	*The trainer holds your watts. Climbs make the video slower, not the pedals heavier.* Set a target wattage on the card (big number, **−25** … **+25** steps, or an exact value with **Set**; 25–1500 W). Switching to ERG during a ride starts from your current 3 s power; otherwise the last target (first time: 60 % of your FTP).

How the gradient reaches the trainer. Simulation uses the FTMS command *Set Indoor Bike Simulation Parameters* with wind 0 m/s, the grade (0.01 % steps), rolling resistance Crr 0.004 and wind resistance Cw = ρ·CdA of your rider model (e.g. 0.37 kg/m for 68 kg; section 5.6) A new grade is sent when it changes by 0.1 % or more (at most once a second; otherwise refreshed every 3 seconds). The grade sent is limited to −10 … +20 %. With virtual gears see section 5.5 for how the gear reaches the trainer.

Soft start. At the start of a ride the trainer does not get the route's gradient at once: it gets 0 % until the flywheel turns (cadence of at least 40 rpm, or a trainer speed of at least 10 km/h, for 2 seconds; a trainer that reports neither: 50 W), then the gradient rises in a straight line to the real value over 4 seconds. After you stop (no cadence for more than 5 seconds) the soft start applies again when you ride on. Pausing and resuming also starts it again. This applies to the gradient (Simulation, virtual gears on the FTMS gradient path and the Zwift protocol's incline) – never to ERG.

> **Note** If the trainer cannot simulate a gradient (it does not report the feature, or it rejects the command), Simulation automatically uses virtual gears and the card shows *Your trainer can't simulate climbs – using virtual gears instead.* A trainer without cadence is left in its free-ride mode; the speed then follows your power.

Difficulty (0–100 %, Simulation) scales the gradients: at 100 % you ride the real road, at 50 % a 6 % climb feels like 3 %, at 0 % the route is flat (descents are scaled the same way). Change it with the slider on the **Resistance** card or `Page Up` / `Page Down` in 10 % steps – shifting never changes it. The setting is remembered. In ERG the difficulty does not apply.

13.5 Riding a workout during the video

The **Workout** card above **Resistance** lists your cycling workouts with their duration (**None** = just ride the route). Choose one before you start – during a ride the list is locked (a tooltip says so); a Video Ride planned with a workout in the calendar loads it for you. The workout's intervals run on the ride's clock: they start with the ride and pause when you pause.

- **Workout chart** – between the video and the elevation profile: one block per interval, its height in % of your FTP (dashed FTP line), coloured by your power zones, ramps as slopes, finished blocks faded, the current block outlined and a cursor at the elapsed time. Above it: the current interval (*Sweet Spot 2/7*), the target, the time left in the interval, the next target, the workout time and *In target* – the share of seconds within ±10 % of the target. In small windows (for example 800 × 480) the chart and the profile share the bottom card: **Route** | **Workout**.
- **Workout ERG** (on by default) – the trainer holds the workout's target watts, as on the Watt Training; the route only sets the speed of the video, so a climb makes it slower but not heavier. The Resistance card shows *Workout ERG holds the trainer. This mode applies after the workout.* Switch it off to use the targets as a guide: then Simulation or ERG from the Resistance card applies as usual.
- **Status and controls** – the card shows the interval, the big target (green within ±5 %, yellow within ±10 %, orange beyond), the time left, the next target and the time to go. **−** / **+** change the **intensity** by 5 % (50–150 %; all targets scale), **Skip Interval** jumps to the next interval and **End Workout** stops the workout while the ride goes on. The Power tile shows *Target 230 W* in the same colours, the sidebar *Video 12:34* / *Sweet Spot 2/6 • 230 W*.
- **Completion** – when the workout ends before the route, a message says *Workout complete – continuing the route in Simulation* (or ERG, whatever the Resistance card is set to) and you ride on to the finish. When the route ends first, the ride finishes and is saved as always. The saved ride records the workout's targets (History chart, FIT/CSV), and a calendar entry is ticked off by the route (finish or 90 % of the distance), not by the workout.

13.6 Starting, pausing and finishing

- **Start** (or `Space`) starts at the chosen start point. Pedaling never starts the ride; before Start the status pill reads *Ready – press Start*.
- **Pause Ride** (or `Space`) stops the clock and the video; **Resume** (or Space) continues – pedaling on never resumes it.
- **Finish** asks *Finish video ride?* – **Save & Finish** or **Discard**. Reaching the end of the route finishes and saves the ride by itself. Video rides appear in History with the route name and can be exported as FIT or CSV.
- Only one session runs at a time – a video ride cannot start while a workout, a free ride or a row is in progress (running or paused) on another page. Start is then greyed out and a yellow card under it says why – e.g. *A workout is paused on Watt Training* – with **Go to Watt Training**, **End & Save** and **Discard**. The route, workout, gears and difficulty stay usable. The ride never depends on the video: it can start even when the video cannot be played.

13.7 Zwift Click and keyboard

Input	Simulation	ERG	Workout ERG
Zwift Click + / −	Shift harder / easier	Target ±10 W	Intensity ±5 %
`↑` / `↓`	Shift harder / easier (virtual gears)	Target ±5 W	Intensity ±5 %
`Shift` + `↑` / `↓`	Jump 3 gears (virtual gears)	–	–
`Page Up` / `Page Down`	Difficulty ±10 %	Target ±10 W	Intensity ±5 %
`Space`	Start / pause / resume	Start / pause / resume	Start / pause / resume

Virtual gears are on exactly while a Zwift Click is connected. The keys work only on the Video Ride page and not while you type in a field or a dialog or menu is open; `Enter`, `Esc` or a click on the page background leaves a text field. The arrow keys never change the route in the route list.

13.8 Video formats and Raspberry Pi

- **H.264 MP4** (720p or 1080p) plays on every platform.
- **AV1** videos need AV1 hardware decoding (recent Apple Silicon Macs, recent PC graphics). Elsewhere the page shows *No picture* or *This video cannot be played* together with the conversion steps below (with buttons to open the HandBrake website, copy the steps and rescan the library); the ride still works without the picture.
- **Raspberry Pi**: prefer 720p H.264 (the decoders come with the app). 1080p and AV1 are too heavy for a Pi.

Convert a video to H.264 with HandBrake (free, handbrake.fr):

1. Open the video in HandBrake and choose the preset **General → Fast 720p30** (or **HQ 720p30 Surround**).
2. On the **Video** tab set **Video Encoder** to **H.264 (x264)**, **Framerate** to **Same as source** and select **Constant Framerate** – important, so the video stays in sync with the GPS route.

3. Save it as **.mp4** in the route folder with the **same file name** as the original, replacing it (keep the original somewhere else).
4. Click **Rescan Library** (on the page, or in the folder menu next to the route drop-down).

Or with ffmpeg: `ffmpeg -i video.mp4 -c:v libx264 -crf 21 -an video-h264.mp4`, then give the new file the original name.

> **Tip** Free route videos with GPX tracks are available from several RLV communities; respect the licence of each video (many are non-commercial only).

13.9 GPX Ride: a GPX route in 3D

The **GPX Ride** page (sidebar, under **Video Ride**) rides any GPX route – from a bike computer, Strava, Komoot or a route planner – without a video. The route is drawn as a road through a generated 3D landscape with hills, fields, houses, trees, sky and a rider on a bike, seen from just behind the rider.



Figure 15. The GPX Ride page during a 7.5 % climb: live metrics at the top, the 3D view with the gradient and the resistance mode, the elevation profile with your position, and the Resistance card with the grade sent to the trainer.

- **Routes**: every `.gpx` file in the GPX folder and its subfolders is a route – by default `Documents/Artilody GPX Routes` in your home folder. The drop-down lists each route with its distance and climbing; the folder button next to it adds folders, changes or opens the GPX folder, rescans the library, and **Open GPX File…** rides a single file. The track needs elevation for gradients.
- **The same ride as a Video Ride**: the same physics, trainer control, Resistance card (Simulation or ERG), Difficulty, Workout card with Workout ERG, virtual gears and Zwift Click, keys and Start / Pause / Finish / Reset as described in this chapter. The 3D view follows your position and speed, so the gradient you feel, the elevation profile and the picture agree. GPX Ride remembers its own mode, difficulty and last route, separately from Video Ride.

- **START and FINISH**: a green inflatable START arch stands just ahead of where you start (also when you start part-way along the route) and a red FINISH arch at the end. The START arch is shown until you have ridden through it, then the FINISH arch – on a loop, where both stand at the same place, you start under green and finish under red.
- **The rider is you**: a 3D cyclist in a blue jersey, black bib shorts and a red helmet. His feet follow the pedals at your real cadence (the value in the Cadence tile) and stand still when you stop pedaling, have no cadence or pause, while the wheels roll on with your speed. He rocks gently from side to side with the pedal stroke – a little more on climbs steeper than 6 %.
- **After the finish**: on a point-to-point route the road runs on about 50 m past the FINISH arch (drawn only – the ride ends at the arch).
- **GPX Workshop** (sidebar, under the Builder): open a GPX route, see its elevation profile and place your own sprints, KOMs and gravel sections on it. Choose *Sprint* and click where it starts (its length is set next to it), or choose *KOM* or *Gravel* and click twice: where it starts and where it ends (Esc cancels). Name and edit them in the list, then *Save to GPX file* – they are written into the GPX file as an extension (other apps ignore it; the track is not changed, so your times are kept). *Longest climb* suggests a KOM. GPX Ride uses exactly what is saved; a route without any has none. Sprints and KOMs may not overlap each other; gravel may lie over sprints and KOMs but not over other gravel.
- **Gravel**: on a gravel section the road is drawn as a gravel road – packed wheel tracks, loose stones, no painted lines – the elevation profile shows the section in gravel colour, and the grade badge shows what it costs right now (*gravel +29 W*). Fine gravel rolls harder than asphalt (rolling resistance Crr about 0.009 instead of 0.004). Because rolling resistance and climbing both grow with your weight, the app rides that difference as **+0.5 % more gradient**: the extra watts then follow from your weight and speed – for a 77 kg rider about 20 W at 20 km/h and 30 W at 30 km/h. It builds up over the first 30 m of the section and fades over its last 30 m, so there is no sudden jump in watts at the edge. In the same gear and cadence your watts rise; at the same power you ride slower. The gradient shown stays the road's. **Tacx NEO road feel**: on a NEO the trainer also vibrates like gravel on the section (NEO Road Feel, at a moderate 30 %; the NEO scales it with your speed). The app finds Tacx's FE-C over Bluetooth service on the trainer by itself – the Bluetooth Diagnostics report shows *Road feel: yes*. Other trainers only get the extra resistance. The rumble stops while paused. **Not in ERG** (the trainer holds the watts) and **not while riding a workout** – then the badge only says *gravel*. Gravel is not timed.
- **Road sound**: while you ride you hear the tyres rolling on the road – on asphalt, and the crunch of gravel on a gravel section (cross-faded at its edge). It gets louder with your speed and is silent when you pause or stand still. The speaker button at the bottom right of the 3D view switches it off and on (remembered).
- **Place signs**: choose *Place sign* in the GPX Workshop, click the profile where the sign should stand; its row appears in the list with the name field ready – type the name and save the file. In GPX Ride a lit town sign – black letters on white with a black rim – stands on the verge there – on the right by default, or on the left (the side is chosen in the list) – so you can see where on the real route you are even though the 3D landscape is not the real one. At most 20 per route; they are saved in the GPX file with the other segments and are not timed.
- **Sprint**: a sprint placed in the GPX Workshop. 200 m before it the road says *SPRINT IN 200 m* behind a thin green line; the sprint starts at a thick green line with *SPRINT* on the road and a green sign on the verge, and ends at a red line with a *SPRINT FINISH* sign. A panel shows the distance to the sprint, the running time and, at the finish, your time and the difference to your best on this route.
- **KOM**: a climb placed in the GPX Workshop (*Longest climb* suggests the route's longest climb averaging at least 2.5 %) – a white arch with red polka dots at the foot of the climb and a red *KOM FINISH* arch at the top. The panel shows the climb's length, average grade and height gain before it, the running time and the distance to the top on the way up, and your time against your best at the top.

- **Times are saved**: every sprint and KOM you ride all the way is saved for your profile and the route (recognised by its track, so a renamed or moved GPX file keeps its times) and linked to the saved ride. Paused time never counts; pausing during a sprint or KOM voids that attempt, and a discarded ride's times are deleted with it.
- **The world**: lakes beside the road (some with a jetty and a rowing boat, reeds along the shore), coastline with beaches, wild flowers, rocks, fenced pastures with cows, sheep and horses, hay bales, tractors, wind turbines with turning blades, benches, a white kilometre post at every kilometre and a display bike by the START arch. Where an out-and-back route or a loop comes back along a road already ridden, the 3D view draws one road.
- **Landscapes**: the 3D world matches where the route is on the earth and how high it goes: *Nordic* (green fields, spruce and broadleaf woods – the world of earlier versions), *Tropical* (palms, lush green, turquoise water), *Australian* (red earth, gum trees and acacias), *Desert* (sand, cacti, rare oases), *Icy* (snow, frozen lakes, snowy spruce) and *Mountain* (routes high up or climbing more than 25 m per km: snow above the snow line, the trees thinning out below it). Sky, light, houses, animals and farm life follow the landscape. It is chosen automatically – nothing to set.
- **Birds**: flocks wheel over the fields beside the road, a bird of prey circles above it (a white-tailed sea eagle in the Nordic countryside, a wedge-tailed eagle in Australia, a golden eagle in the mountains, a vulture over the desert) and little birds fly from tree to tree, often across the road in front of you. Each landscape has its own birds.
- **Loop route**: switch it on before the start to ride the route lap after lap until you press *Finish*. A round trip (start and end within 60 m) goes round and round – the road runs on smoothly over the finish line; any other route goes out and back, turning in a roundabout at each end (no U-turn). Every lap ends on a finish line; a *LAPS* board after it shows the laps done, the yellow kilometre posts count on lap after lap, sprints and KOMs are timed every lap. A *Lap times* panel on the 3D view shows the lap being ridden and every finished lap (the fastest in gold).
- **History**: rides are saved as *GPX: route name* and can be exported as FIT or CSV. A looped ride keeps its lap times: shown in the ride's details, one lap per lap in the FIT file (Garmin Connect, Strava ...), a lap column and lap lines in the CSV.
- **Limits**: the 3D view shows routes up to 200 km with track points at most 2 km apart. Otherwise the page says why the 3D view is not available – the route can still be ridden with the profile.
- **Graphics**: the 3D view needs OpenGL 3.1 (OpenGL ES 3.0 on a Raspberry Pi; a Pi 4 or 5 is recommended). The app draws with OpenGL on all platforms when it is available.

> **Note** GPX Rides cannot be planned in the calendar yet; only one ride (workout, row, Free Ride, Video Ride or GPX Ride) runs at a time.

13.10 Ghost and pacer: someone to ride against

On a GPX Ride you can race a **ghost** – an earlier ride on the same route – or a **pacer** – a rider who holds a fixed number of watts per kilogram all the way. Only one of the two rides with you at a time: switching on the pacer switches the ghost off, and choosing a ghost switches the pacer off.

The ghost

- The **Ghost** list in the right-hand panel offers **Off**, **Best** (your fastest completed ride on this route; on a loop the highest average speed), **Latest** and each of your earlier rides by date, time and distance. With a network server (chapter 16) it also lists the other riders' rides on the route, marked with their name – *Best* and *Latest* stay your own.

- The ghost starts with you and rides exactly as that ride did. It is drawn as your own figure, pale and see-through, in its own lane just inside yours, and appears as a dot on the elevation profile.
- A badge on the 3D view (in full screen at the left under the ride numbers) shows how far it is ahead (red) or behind (green).
- A ghost needs the same route and the same start point. Every GPX Ride and every Treadmill Run on a GPX route is recorded for the ghost automatically; the Treadmill Run has the same ghost list.

The pacer

- Switch on **Pacer** in the right-hand panel and set its W/kg with − and + (0.5 – 8.0 W/kg in steps of 0.1). It is simulated with your weight and the ride's own physics – slower on the climbs, faster downhill, the difficulty and gravel included.
- It rides in orange in the lane across the centre line, with its own badge and an orange dot on the profile.
- You can change its W/kg during the ride, also in full screen with − / + on its badge: it speeds up or slows down from where it is.

14 Treadmill Run

Run on your treadmill through the same 3D world as the GPX Ride – a GPX route or the built-in Artilody Lakeside 10K – with running workouts based on your anaerobic threshold (AnT).



Figure 16. The Treadmill Run page during a threshold workout on the Lakeside 10K: speed, pace, incline, heart rate and time at the top, the 3D view with the runner, the workout's targets and the route, and on the right the treadmill, your AnT and the running workouts.

14.1 Connecting a treadmill

Treadmills appear on the Devices page under **Treadmills**. Any treadmill that sends the standard Bluetooth **FTMS Treadmill Data** works – most current connected treadmills and many walking pads. The **Virtual Treadmill** lets you try everything without one; its speed follows the workout.

Speed correction: when the treadmill or foot pod is connected, its row shows a **Speed correction** tile. Compare the speed with your watch or foot pod and press **−** / **+** until they agree – 0.1 km/h per press, up to ±3 km/h. Example: if your watch shows 0.1 km/h less than the app, press − once. The corrected speed is used everywhere (Treadmill Run, distance, pace, the AnT test, History and FIT) and remembered per device; a standing belt stays 0.

> **Note** The app only **reads** the treadmill (speed, incline, distance). It never changes the belt speed or the incline – you always set them on the treadmill itself. Workout targets are suggestions.

14.2 The page

- **Route**: with **GPX** switched off you run the built-in *Artilody Lakeside 10K*, a 10 km loop with 11 corners, lap after lap. Switch GPX on to run any route from your GPX folder (the same library as the GPX Ride).
- **Metrics**: speed (km/h), pace (/km), incline, heart rate and time, plus distance, laps and energy. The 3D road follows the treadmill's speed; the route's own gradient is shown next to the treadmill's incline.
- **The runner**: a 3D figure that walks below your walk → run speed and runs above it (Profile → **Walk** → **Run**), with contact shadows under the feet.
- **Start / Pause / Finish**: you press **Start**; the belt alone never starts a run. Finished runs are saved to History.

14.3 Anaerobic threshold (AnT)

Running workouts are based on your **AnT** – the fastest speed you can hold for about an hour. Until you have a value, 12.0 km/h is used. The running zones are:

Zone	% of AnT
Z1 Recovery	below 78 %
Z2 Endurance	78 – 88 %
Z3 Tempo	88 – 95 %
Z4 Threshold	95 – 100 %
Z5 VO2 max	100 – 106 %
Z6 Anaerobic	above 106 %

Run AnT Test loads the built-in test: 10 min warm-up, 30 min at the fastest *even* pace you can hold, 5 min cool-down. Your new AnT is the average speed (and heart rate) of the last 20 minutes of the test; the result dialog lets you save it. **Zones & History** shows all tests, lets you enter an AnT by hand and sets how often the app reminds you to test again (2 – 26 weeks).

14.4 Running workouts



Figure 17. A running workout in the Workout Builder: speeds in % of AnT (or km/h) with a suggested incline per block.

- **Workouts page**: the **Running** filter shows the running workouts (eight built-in plus the AnT test and your own). **Run Workout** opens the selected one on the Treadmill Run page.
- **Builder**: **New running workout** or the **Running** sport selector. Targets are % of AnT – typing a value below 30 (or with a decimal point) enters km/h instead. Every block has a suggested **Incline** instead of a cadence; the chart shows km/h or % AnT.
- **Calendar**: plan running workouts like any other; *Run* opens them on the treadmill page and a completed run ticks the entry off.
- **Sharing**: `.awt` files keep the sport and the incline; Zwift `.zwo` files are written and read as *run* workouts (% of threshold pace; no incline).
- **During the run**: the strip under the 3D view shows the current block, the target speed and incline and the belt's difference to the target.

14.5 Runs in History and export

Runs show speed, pace, incline, distance and heart rate in History. FIT export writes them as *running* activities with the sub-sport *treadmill*; the cadence is written as strides per minute. CSV export works as for rides.

14.6 Loop route and the GPX library

- **Loop route** (right-hand panel, before the start): a closed GPX track is run round and round, any other track out and back again, until you press Finish – as in GPX Ride. The lap and "the way back" are shown under the switch. Off, the run ends at the route's end. The standard route always loops.
- The folder button next to the route opens the GPX library menu, the same as in GPX Ride: **Open GPX File…**, **Add Folder…**, **Choose GPX Folder…**, **Open GPX Folder**, **Rescan Library** and, with a network server, **Server Library…** and **Send to Server**.

15 Music player

Play your own music while you ride – from the Watt Training page, without leaving the app.

15.1 The player card

The **Music Player** card on the Watt Training page shows the album art (when the file contains it), title and artist, a heart button, previous / play-pause / next, a position bar, a mute button and a volume slider (default 70 %, remembered). **Up Next** lists the next up to three songs; click one to play it. When the card is small, the list stays inside the card and scrolls. The playlist icon in the card header opens the music library.

Title and artist are read from the file's tags. Without tags, a file name of the form `Artist - Title.mp3` is split into artist and title; otherwise the file name is used.

15.2 Music library and playlists

- The left column lists your playlists with the number of songs; click one to open it. Long lists get a scrollbar, and long names are shortened with “…”.
- Type a name in **New playlist name** and click **Create**. The trash button deletes the current playlist.
- **Add Files** adds selected audio files; **Add Folder** adds all supported files in a folder and its sub-folders (sorted by name).
- **Shuffle** plays the playlist in random order; **Repeat playlist** (default on) starts again after the last song.
- For each song: play, move up, move down and remove from the playlist.

Favourites: the heart button on the player card adds the current song to a playlist called *Favorites* (created automatically) or removes it again.

Supported formats: MP3, M4A, AAC, FLAC, WAV, OGG, Opus and WMA. Playback uses the operating system's media framework, so whether a format actually plays can depend on the platform (WMA, for example, is typically only available on Windows).

15.3 Default playlist

On first start the app creates the playlist *Workout Mix* and fills it with up to 200 supported files from the first folder that contains music: the sample music shipped with the app (two tracks) or, if none is found, your system Music folder. If you delete the last playlist, an empty *Workout Mix* is created again.

> **Note** Playlists store links to your files – the files are not copied. If you move or delete a file, the player reports *"File not found"*; remove it and add it again from its new location.

16 Training together: the network server

Several training computers in one home or club can share one server: riders, GPX routes, videos, workouts, training plans and training are then the same everywhere, the server shows every rider's training in the browser, and riders on the same GPX route see each other live.

Everything about setting up the server – on Windows, macOS, Debian, Ubuntu or a Raspberry Pi – is in the separate **Artilody Network Server Manual** (PDF), on the release page next to this manual: https://github.com/shenphenchoedron-hue/Artilody-Multisport-Endurance-Trainer/releases/latest. It is written step by step for readers who have never set up a server.

16.1 On a station

1. Open **Settings** and switch on **Server**.
2. Type the server's address (from its setup), for example 192.168.1.20 or 192.168.1.20/artilody.
3. A green dot and *Connected to Artilody server* appear. **Check now** asks again at once.

- **Riders** are shared: a change on one station reaches the others within a minute.
- **GPX routes** on the server arrive by themselves; **videos** are fetched in GPX Ride / Video Ride › folder button › **Server Library…** › **Download**. **Send to Server** in the same menu puts the chosen route on the server.
- **Workouts** on the server are added to every station's workout library by themselves; **training plans** are imported when you want them. With the server on, **Import** / **Export** on the Workouts page and **Import plan…** / **Export weeks as a plan…** in the Calendar use the server instead of files (chapters 6 and 10).
- **Training** is sent after every ride; rides from other stations appear in History (*on <station>*), and the ghost can race them.
- **Riding together**: everyone on the same GPX route sees the others in the 3D view, each in its own lane, in that rider's own figure and colours, and the panel **Riding with** shows the gaps (and laps on a loop) and watts. Riders and runners mix: a runner on the treadmill and a cyclist on the same GPX file see each other – best on a short loop, where the cyclist laps the runner again and again. A triangle in each rider's jersey colour shows them on the elevation profile; a name sign floats above each one's head.
- Without the server – switched off, or the server computer asleep – every station works on its own and catches up the next time the server is there. Nothing is fetched or sent during a ride.

> **Note** On a Mac, macOS asks once whether Artilody may find devices on the local network – click Allow (System Settings › Privacy & Security › Local Network).

17 Settings & data

17.1 Settings dialog

Click the gear icon in the top bar. The Settings dialog contains:

- **Dark theme** – same as the sun/moon button.
- **Show virtual devices** and **Auto-connect known devices** – same as in Connection Preferences on the Devices page.
- **Smooth power** – shows cycling watts as a rolling average (on by default, 3 s) and the length of the average: 1, 3, 5 or 10 s (section 16.2).
- **Diagnostic log** (on by default) – writes a trace log file automatically: the logs folder (selectable text), an scp command to fetch the logs from a Raspberry Pi, **Open logs folder** and **Export logs…** (copies all log files to a folder you choose, e.g. a USB stick). See “Diagnostic log” in chapter “Troubleshooting & FAQ”.
- The full path of the database file (*“All data is stored locally (offline) in SQLite”*).
- The app version. **Done** closes the dialog.

17.2 Power smoothing (3 s average)

Nobody pedals exactly evenly with both legs, so the power a trainer reports changes with every pedal stroke and the raw number jumps up and down. With **Smooth power** on (the default) the app shows the **average over the last 3 seconds** instead – like most training apps and bike computers. The average is time-based: every reading counts for as long as it was current, so it works the same with trainers that send 1, 2 or 4 readings a second. When the trainer stops sending, the value drops to 0 after 3 seconds.

- Used for the displayed watts on the Watt Training page power card (including the deviation from the target and the zone colour of its bar), the Free Ride power tile and ERG panel (*Actual … W*), the sidebar status box and the live trainer values on the Devices page (*Power 3s*).
- **Not** used for recording: rides keep the raw per-second power, so averages, Effort Power, Intensity Ratio, Training Load, zones, FIT/CSV export, the FTP test (best 1-minute power), ERG control and virtual gearing are unchanged.
- Rowing is not affected – the PM5 already reports power per stroke.
- Change it in the Settings dialog (**Smooth power**: switch plus 1 / 3 / 5 / 10 s) or click the **3 s avg** badge on the power card; the setting is stored in the database and kept after a restart.

17.3 Where your data is stored

Everything – profiles, workouts, rides and rows with per-second data, the training plan, rowing records, playlists and settings – is stored in a single SQLite file named `watt-trainer.sqlite` in the standard application-data folder of your user account (organisation *Artilody*, application *Watt Trainer*):

System	Default location
Windows	`%APPDATA%\Artilody\Watt Trainer\watt-trainer.sqlite` (usually `C:\Users\<name>\AppData\Roaming\…`)

System	Default location
macOS	`~/Library/Application Support/Artilody/Watt Trainer/watt-trainer.sqlite`
Linux / Raspberry Pi	`~/.local/share/Artilody/Watt Trainer/watt-trainer.sqlite`

The exact path on your computer is always shown in the Settings dialog.

Using a different database file

Set the environment variable `WATT_DB_PATH` to the full path of a database file before starting the app; it will then use (or create) that file instead. Example for macOS/Linux:

```
WATT_DB_PATH="$HOME/watt-test.sqlite" artilody-watts-trainer
```

17.4 Backup and restore

1. Close the app.
2. Copy `watt-trainer.sqlite` from the folder shown in Settings to a safe place (USB drive, cloud folder, another computer).
3. To restore, close the app and copy the backup back to the same folder under the same name.

> **Tip** To back up only your own workouts, use **Export → Export all my workouts…** on the Workouts page (section 6.2).

> **Tip** You can move your complete training history to a new computer the same way. Music files and avatar pictures are referenced by path and must be copied separately.

17.5 Offline and privacy

Artilody Multisport Endurance Trainer runs fully offline: no account, no cloud, no telemetry or analytics. The app only talks to your Bluetooth devices. Your data leaves your computer only when you export a ride (FIT or CSV) or a workout, or copy the database yourself – the app never uploads anything.

18 Troubleshooting & FAQ

18.1 Diagnostic log

The app writes a plain-text trace log by itself – no terminal needed. It is on by default (Settings → **Diagnostic log**). One file per app start, named `artilody-YYYYMMDD-HHMMSS.log`; the newest 20 files (at most 50 MB) are kept. Lines are written to disk every half second, so the log survives switching a Raspberry Pi off.

System	Logs folder
Raspberry Pi / Linux	`~/.local/share/Artilody/Watt Trainer/logs`
macOS	`~/Library/Application Support/Artilody/Watt Trainer/logs`
Windows	`%APPDATA%\Artilody\Watt Trainer\logs`

Fetch the logs from a Raspberry Pi – in Terminal on the Mac, with your Pi's user and host name (the Settings dialog shows the exact command):

```
scp 'pi@raspberrypi.local:.local/share/Artilody/Watt?Trainer/logs/*.log' .
```

Without a network: Settings → **Export logs…** copies all log files to a folder you choose, e.g. a USB stick. **Open logs folder** opens the folder; the Bluetooth diagnostics dialog on the Devices page also shows the current log file with an Open folder button.

What to send: the log file of the ride (newest file, or the one with the ride's date) and a short note with the time and what you felt, e.g. *“20:14, start of the descent, lightest gear, about 200 W”*. The log contains:

- app, Qt and OS version and the Raspberry Pi model;
- the shifting settings: Zwift Click, shifting mode (Zwift protocol / FTMS gradient / your bike's gears), Zwift-protocol override, gear, reference and detected real gear, difficulty, rider + bike mass, CdA, Crr;
- the virtual shifting decisions (lines *VSHIFT*: Click connected or gone, which path and why) and the Zwift trainer protocol (lines *ZHUB*): detection on the connected trainer, every handshake step, every write and notification in hex and decoded (incline, gear ratio, weights, riding data), the trainer's settings echo, keep-alive, timeouts and the fallback to FTMS gradient;
- every command to the trainer (FTMS Control Point, hex and decoded: grade, Crr, Cw, wind, ERG watts) and the trainer's answer (result code), its status notifications (Fitness Machine Status, Training Status), its features and supported inclination / resistance / power ranges;
- the trainer's speed, cadence and power once per second;
- per second during a ride: mode, resistance path, gear and ratio, cadence, virtual speed, route and effective grade, grade or ERG target sent, assumed trainer speed, demanded and measured power, coasting;
- Zwift Click presses with the resulting gear, connections, ride start / pause / finish and warnings.

Only your profile name and weight are personal data in the log. Turning the switch off stops writing; delete old files in the logs folder at any time.

18.2 Frequently asked questions

“Start” is greyed out.

Another session is still in progress on another page – usually a workout started or paused on the Watt Training page, or a paused free ride (the sidebar chip shows *Paused*). The yellow card under Start says which one and offers **Go to …**, **End & Save** and **Discard** (click twice). A workout, route or row that is only prepared (not started) and finished rides never block. If Start stays grey without a card, start the app from a terminal with *WATT_DEBUG_RLVUI=1* and send the *RLVUI* lines with your report.

My trainer is not found.

Make sure it is an FTMS (Bluetooth LE) trainer – ANT+-only and proprietary-protocol trainers are not supported. Wake it by pedaling, disconnect it from other apps and devices (Zwift, phone apps, bike computers), check that Bluetooth is on (and, on macOS, that the app has Bluetooth permission), then press Scan for Devices. Look at the Connection Log for errors.

ERG does not change the resistance.

Check that the ERG Mode switch on the Watt Training page is on and that the ride is running (ERG is released before Start, while paused and in Free Ride). Check that the trainer lists *ERG Control* under Capabilities, and try the Trainer Control Test. A log entry *Trainer control refused* means another app holds control of the trainer. Some trainers react with a delay of a few seconds.

Heart rate shows “–”.

No heart-rate data has arrived for 6 seconds. Moisten the strap electrodes, make sure the strap is connected on the Devices page, and that it is not paired exclusively to a watch or phone. Replace the battery if the sensor connects but drops out.

Power or cadence drop to 0 for a moment.

Values are reset after 3 seconds without data, typically because of a weak Bluetooth signal. Reduce the distance, avoid metal obstacles and 2.4 GHz interference, or use a USB Bluetooth adapter with an extension cable and select it under Bluetooth Adapter.

The workout does not start when I pedal.

That is intended: sessions only start when you press Start (or Space) on the Watt Training, Free Ride, Video Ride or Rowing page, so pedaling while you clip in never starts the clock. Load the workout, get on the bike, then press Start. Pedaling (or rowing) also never resumes a paused session – press Resume.

My ride was not saved.

Rides with less than 30 seconds of recorded time are not saved, and Discard deletes the ride. Rides are saved for the profile that was active when the ride started.

The FTP dialog did not appear after my test.

The estimate is only offered for workouts in the FTP Tests category, with at least 5 minutes of data and a result between 50 and 600 W. You can still open the ride in History → View Details → Use as FTP.

macOS says the app cannot be opened or is damaged.

Right-click the app → Open → Open. If that does not help, run `xattr -cr "/Applications/Artilody Multisport Endurance Trainer.app"` in Terminal (section 2.2).

Windows shows “Windows protected your PC”.

The app is not code-signed yet. Click More info → Run anyway.

Raspberry Pi: the UI is slow or too small.

Use a Pi 4 or 5 and the 64-bit OS. Maximise the window – the UI scales down to fit and needs at least 800 × 480 pixels. Close other programs while riding.

Music does not play.

Check the volume and mute button on the player card. If a song reports *File not found*, it was moved or deleted; *Cannot play this file* means the format is not supported by your system's media framework – convert it to MP3, M4A or FLAC.

How do I reset all data?

Close the app and delete (or rename, to keep a backup) `watt-trainer.sqlite` in the folder shown in Settings. The next start creates a fresh database with the default profile and the built-in workouts.

How do I get my rides into Strava, Garmin Connect or TrainingPeaks?

Export them as FIT files in History (Export → Selected ride – FIT, or All rides in range – FIT files…) and upload the files on the platform's website (section 9.5). The app does not upload anything by itself.

An imported workout is called “… (imported)”.

Your library already contained a different workout with the same name. Rename it in the Builder if you like. If nothing was imported at all, the workout was already in your library.

My Concept2 PM5 is not found.

On the PM5 choose More Options → Turn Wireless ON → Connect Device and scan again while the monitor shows the Connect screen. Close ErgData and other apps that may be connected to the PM5 (it accepts one app at a time), and keep the computer within a few metres. Turn on Show all devices and use Connect as rower if the PM5 is listed under Other Bluetooth devices or under Smart Trainers, and check Bluetooth Diagnostics → Details… (see “Rowing machine not found” in chapter 11, including the Raspberry Pi commands).

The rower does not follow the watt plan targets.

That is expected: the PM5 has no ERG mode. Follow the target power by pulling harder or easier; the Current value turns green within ±10 % of the target.

My ghost race did not save a new record.

Records are only saved when the full distance is completed in a Ghost Race or a distance Free Row, and the time is faster than the existing best. Rows finished early do not count.

A planned workout was not ticked off.

Entries are completed automatically only by a saved ride or row of the same workout on the same day. Use Mark as completed in the chip menu for anything else.

Do I need an internet connection?

No. The app works fully offline.

19 Glossary & keyboard shortcuts

19.1 Glossary

Term	Explanation
.awt	Artilody workout file – the app's own JSON format for sharing workouts (Appendix C).
BLE	Bluetooth Low Energy – the wireless standard used for trainers and sensors.
Cadence	Pedaling rate in revolutions per minute (RPM).
Compliance	In a rowing Watt Plan: share of seconds within ±10 % of the target power.
ERG mode	The trainer automatically sets the resistance so you produce the target power, regardless of cadence.
Free Ride	The trainer does not follow power targets; it simulates a flat road and you control the effort. Also a ride without a workout.
FIT	Flexible and Interoperable Data Transfer – the binary activity file format by Garmin, read by Strava, Garmin Connect, TrainingPeaks, intervals.icu and most other platforms.
FTMS	Fitness Machine Service – the standard Bluetooth profile for smart trainers (data and control).
FTP	Functional Threshold Power – the highest power you can sustain for about one hour. Kept separately for cycling and rowing (Rowing FTP).
Effort Power	A weighted average power that reflects the physiological cost of a variable ride (30 s rolling average, 4th-power mean).
Gear ratio	Chainring teeth ÷ cog teeth; a higher ratio means more distance per pedal stroke.
Ghost	A replay of your personal best row that you race against.
HRS	Heart Rate Service – the standard Bluetooth profile for heart-rate sensors.
Intensity Ratio	Effort Power ÷ FTP.
Karvonen	Method for heart-rate zones based on the heart-rate reserve (max HR − resting HR).
kJ	Kilojoules of mechanical work; roughly equal to kcal of food energy burned.
Pace	Rowing speed as time per 500 m (e.g. 2:04 /500m).
PM5	Performance Monitor 5 – the Bluetooth display of Concept2 rowing machines.
RLV	Real Life Video – a filmed route (video + GPS track) that plays at your riding speed (Video Ride page).
RPE	Rating of Perceived Exertion – how hard an effort feels on a scale of 1 to 10.
Training Load	Load from duration and intensity; one hour at FTP = 100.
Virtual gears	Gears simulated by the app: speed from cadence and gear, trainer power from the speed on the virtual road (Free Ride and Video Ride pages).
W/kg	Watts per kilogram of body weight – power relative to weight.
Zone	An intensity range defined as a percentage of FTP (power) or heart-rate reserve (HR).
Zwift Click	A small Bluetooth handlebar controller with + / − buttons, used for virtual shifting.
ZWO	Zwift workout file (.zwo) – an XML format for structured workouts, also read by TrainerRoad, Golden Cheetah, MyWhoosh and others.

19.2 Keyboard shortcuts

Key	Where	Action
`Space`	Watt Training	Start the loaded workout / pause / resume (like the Start button).
`Space`	Rowing	Start a set-up row (rower connected) / pause / resume.
`Space`	Free Ride	Start / pause / resume the free ride.
`↑` `+` / `↓` `−`	Free Ride	Shift harder / easier (Ride with virtual gears); target ±5 W (ERG). Inactive otherwise.
`Shift` + `↑` / `↓`	Free Ride / Video Ride	Bigger / smaller chainring; sequential: jump 3 gears.
`Page Up` / `Page Down`	Free Ride	Grade ±0.5 % (Ride); target ±10 W (ERG).
`Space`	Video Ride	Start / pause / resume the video ride.
`↑` `+` / `↓` `−`	Video Ride	Shift harder / easier (Simulation with virtual gears); target ±5 W (ERG).
`Page Up` / `Page Down`	Video Ride	Difficulty ±10 %; target ±10 W (ERG); intensity ±5 % (Workout ERG).
`Alt` + `←` / `→` or `↑` / `↓`	Builder	Move the selected block earlier / later (Option on a Mac).
`Enter` / `Esc`	Text fields on the ride pages	Leave the field (Enter also applies an exact ERG target), so the ride keys work again. A click on the page background does the same.
`Esc`	Dialogs	Close the dialog (where it can be closed).
`Enter`	New playlist name	Create the playlist.

Appendix A Built-in workouts

These workouts are installed on first start. Watt values depend on your FTP; the examples assume 250 W. Built-in workouts cannot be deleted; edits are saved as a personal copy.

Workout	Category	Duration	Focus / structure
Sweet Spot 3 × 12	Intervals	56 min	Sweet Spot. 6 min warm-up, 3 × 12 min at 90 % FTP (cadence 90) with 5 min recovery at 55 %, 4 min cool-down.
Endurance Base	Endurance	60 min	Build your base. 10 min warm-up, 20 min at 68 % and 20 min at 72 % FTP, 10 min cool-down.
VO_2 Max 5 × 3	Intervals	45 min	VO_2 Max. 10 min warm-up, 5 × 3 min at 120 % FTP (cadence 100) with 3 min recovery, 5 min cool-down.
Recovery Spin	Recovery	30 min	Active recovery. 3 min easy start, 24 min at 55 % FTP, 3 min cool-down.
Threshold 2 × 20	Intervals	65 min	Threshold. 10 min warm-up, 2 × 20 min at 95 % FTP with 5 min recovery, 10 min cool-down.
Ramp FTP Test	FTP Tests	25 min	Progressive ramp to test your FTP. 5 min warm-up, 20 min ramp from 50 to 150 % FTP. Protected – always present.
Tempo 3 × 15	Endurance	67 min	Muscular endurance. 8 min warm-up, 3 × 15 min at 80 % FTP with 4 min recovery, 6 min cool-down.
Over-Unders 4 × 8	Intervals	62 min	Lactate clearance. 10 min warm-up, 4 sets of 8 min alternating 2 min at 92 % and 1 min at 108 % FTP, 4 min recovery between sets, 8 min cool-down.

Appendix B Power zone reference

Zone	Default % FTP	RPE	Typical use
Z1 Recovery	< 55 %	1	Warm-up, cool-down, recovery between intervals and recovery rides.
Z2 Endurance	55 – 75 %	2 – 3	Long aerobic rides; builds the aerobic base.
Z3 Tempo	75 – 87 %	4 – 6	Steady, moderately hard efforts; muscular endurance.
Z4 Sweet Spot	87 – 94 %	7 – 8	Efficient threshold development with manageable fatigue.
Z5 Threshold	94 – 105 %	9	Efforts around FTP, 8–20+ minutes.
Z6 VO_2 Max	> 105 %	10	Short, very hard intervals of 1–5 minutes.

The zone colours are used everywhere in the app: Watt Training power bar, workout charts, timeline blocks, Builder and History. Zone boundaries can be changed per profile (section 4.3).

Appendix C The .awt file format

Artilody workout files (.awt) are plain UTF-8 JSON text, so they can be read, written or generated by other programs and scripts. This appendix describes version 1 of the format.

```
{
  "format": "artilody-watts-trainer/workout",
  "version": 1,
  "exportedAt": "2026-10-23T12:00:00Z",
  "app": "Artilody Multisport Endurance Trainer 1.9.7",
  "workouts": [
    {
      "name": "Sweet Spot 3 x 12",
      "sport": "cycling",
      "category": "Intervals",
      "focus": "Sweet Spot",
      "description": "Three 12-minute sweet spot efforts ...",
      "intervals": [
        { "name": "Warm Up", "type": "warmup", "duration": 360,
          "start": 0.40, "end": 0.65 },
        { "name": "Sweet Spot", "type": "interval", "duration": 720,
          "start": 0.90, "end": 0.90, "cadence": 90 },
        { "name": "Recovery", "type": "recovery", "duration": 300,
          "start": 0.55, "end": 0.55, "rpe": 0 }
      ]
    }
  ]
}
```

Field	Meaning
`format`	Always `artilody-watts-trainer/workout`.
`version`	Format version, currently 1.
`exportedAt`, `app`	Time of export (ISO 8601, UTC) and the exporting app – informational only.
`workouts`	List of workouts (at most 500 per file).
`name`	Workout name (required).
`sport`	`cycling` or `rowing` (optional, default `cycling`). Rowing targets are fractions of the rowing FTP.
`category`	Endurance, Intervals, Recovery or FTP Tests. Other values are replaced on import.
`focus`, `description`	Short focus text and description (optional).
`intervals`	The blocks in order (at least one, at most 2000).
`type`	`warmup`, `steady`, `interval`, `recovery`, `cooldown` or `ramp`.
`duration`	Block length in seconds (5 – 21600).
`start`, `end`	Target at the start and end of the block as a **fraction of FTP** (0.90 = 90 % FTP; maximum 4.0). Equal values give a steady block, different values a ramp.
`cadence`	Optional cadence target in RPM (omitted = no target).

Field	Meaning
`rpe`	Optional RPE zone 0 – 5 (Z1 – Z6); omitted = derived from the intensity.

Because intensities are fractions of FTP, the same file produces the right watts for every rider. Files with the extension `.json` are accepted as well, and a file may also contain a single workout object or a plain list of workouts.

Appendix D License & credits

Artilody Multisport Endurance Trainer is free software: you can redistribute it and/or modify it under the terms of the **GNU General Public License version 3** (GPL-3.0) as published by the Free Software Foundation. It is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the `LICENSE` file for details.

- Built with the Qt framework (Qt Quick, Qt Bluetooth, Qt Multimedia, Qt SQL), used under the LGPL/GPL.
- Data storage by SQLite.
- Uses the Bluetooth SIG's open Fitness Machine and Heart Rate service specifications and Concept2's public PM5 Bluetooth Smart Interface Definition. Concept2, PM5 and RowErg are trademarks of Concept2, Inc.; this project is not affiliated with Concept2.
- Effort Power, Intensity Ratio and Training Load are the app's own names; they are calculated with the widely published 4th-power-mean method for weighted average power.

Source code, releases and issue tracker:
https://github.com/shenphenchoedron-hue/Artilody-Multisport-Endurance-Trainer

Found a bug or have an idea? Please open an issue:
https://github.com/shenphenchoedron-hue/Artilody-Multisport-Endurance-Trainer/issues

This manual describes Artilody Multisport Endurance Trainer version 2.2.0 (November 2026). Screenshots show the app with the virtual trainer, heart-rate sensor and rower and demo data; the profile dialog illustration is a design mockup.