



PROPANE TORCH USER MANUAL

SMT-920



We are confident in the quality of the product. In the process of daily use, if the product has quality problems or have any questions about the product, please feel free to contact us, we are always there. Made in China

SATISFACTION GUARANTEED



CONTACT US AT: cs@sakerplus.com

FACEBOOK: <https://www.facebook.com/Sakerplusbrand>



PROPANE TORCH USER MANUAL


SMT-920



CAUTION: Please read the instructions carefully before use.
CAUTION: Prohibited for minors.

正面

PRODUCT STRUCTURE DIAGRAM

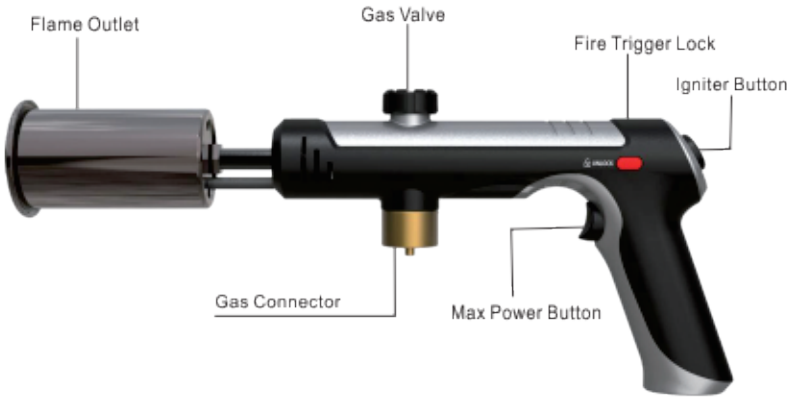

HOW TO USE

1. Read all warning labels, guidelines & instructions on propane bottles before attaching them to the torch.
2. Turn off the torch (clockwise to tighten & counterclockwise to loosen).
3. Attach the torch to the propane cylinder using the hand-tighten method only and ensure proper sealing.
4. Slightly loosen the gas valve on top & push the igniter until the torch lights.
5. Adjust the gas valve to control the amount of flame needed.
6. For Instant Max Fire: Engage the fire trigger lock, then press/hold the max power button. Warning: Never use max power for ignition-use the ignition button instead to avoid hazards.
7. Always monitor your torch & never use it in excess as the item could overheat & cause damage.
8. Ambient air temperature could affect the burn time on the torch & must be monitored.
9. Never leave the torch unattended or use it in a confined area.
10. Never use indoors and always have a fire extinguisher nearby.

AFTER USE


1. Ensure the cooking torch is out & unit is fully shut off.
2. Let the torch cool down after use before storing.
3. Never leave the torch attached to the propane tank.
4. Never store the unit outside or leave it in the elements.
5. Inspect the torch before & after every use.

CAUTION

1. Burntime: Never burn more than 2 minutes at any one time to avoid damaging your unit.
2. Lighting: Elevate the nozzle to 45° and slightly turn the knob counterclockwise, then click igniter 1-2 times. If ignition does not happen slowly increase fuel and retry until ignition occurs. Restart process if attempts fail
3. Note: Very little fuel is needed to light the torch.

ATTENTION

Please see the instructions below

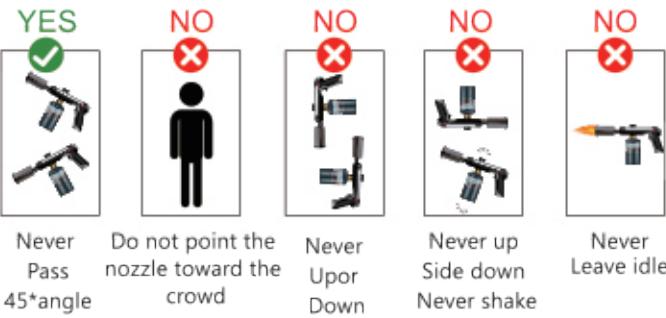

FIRE/EXPLOSION HAZARD & CARBON MONOXIDE HAZARD

DANGER: Extremely flammable gas. Keep out of reach of children at all times.
Never alter the torch in any way. The user assumes all risk.

反面