EIS FAILURES - SWITCHING

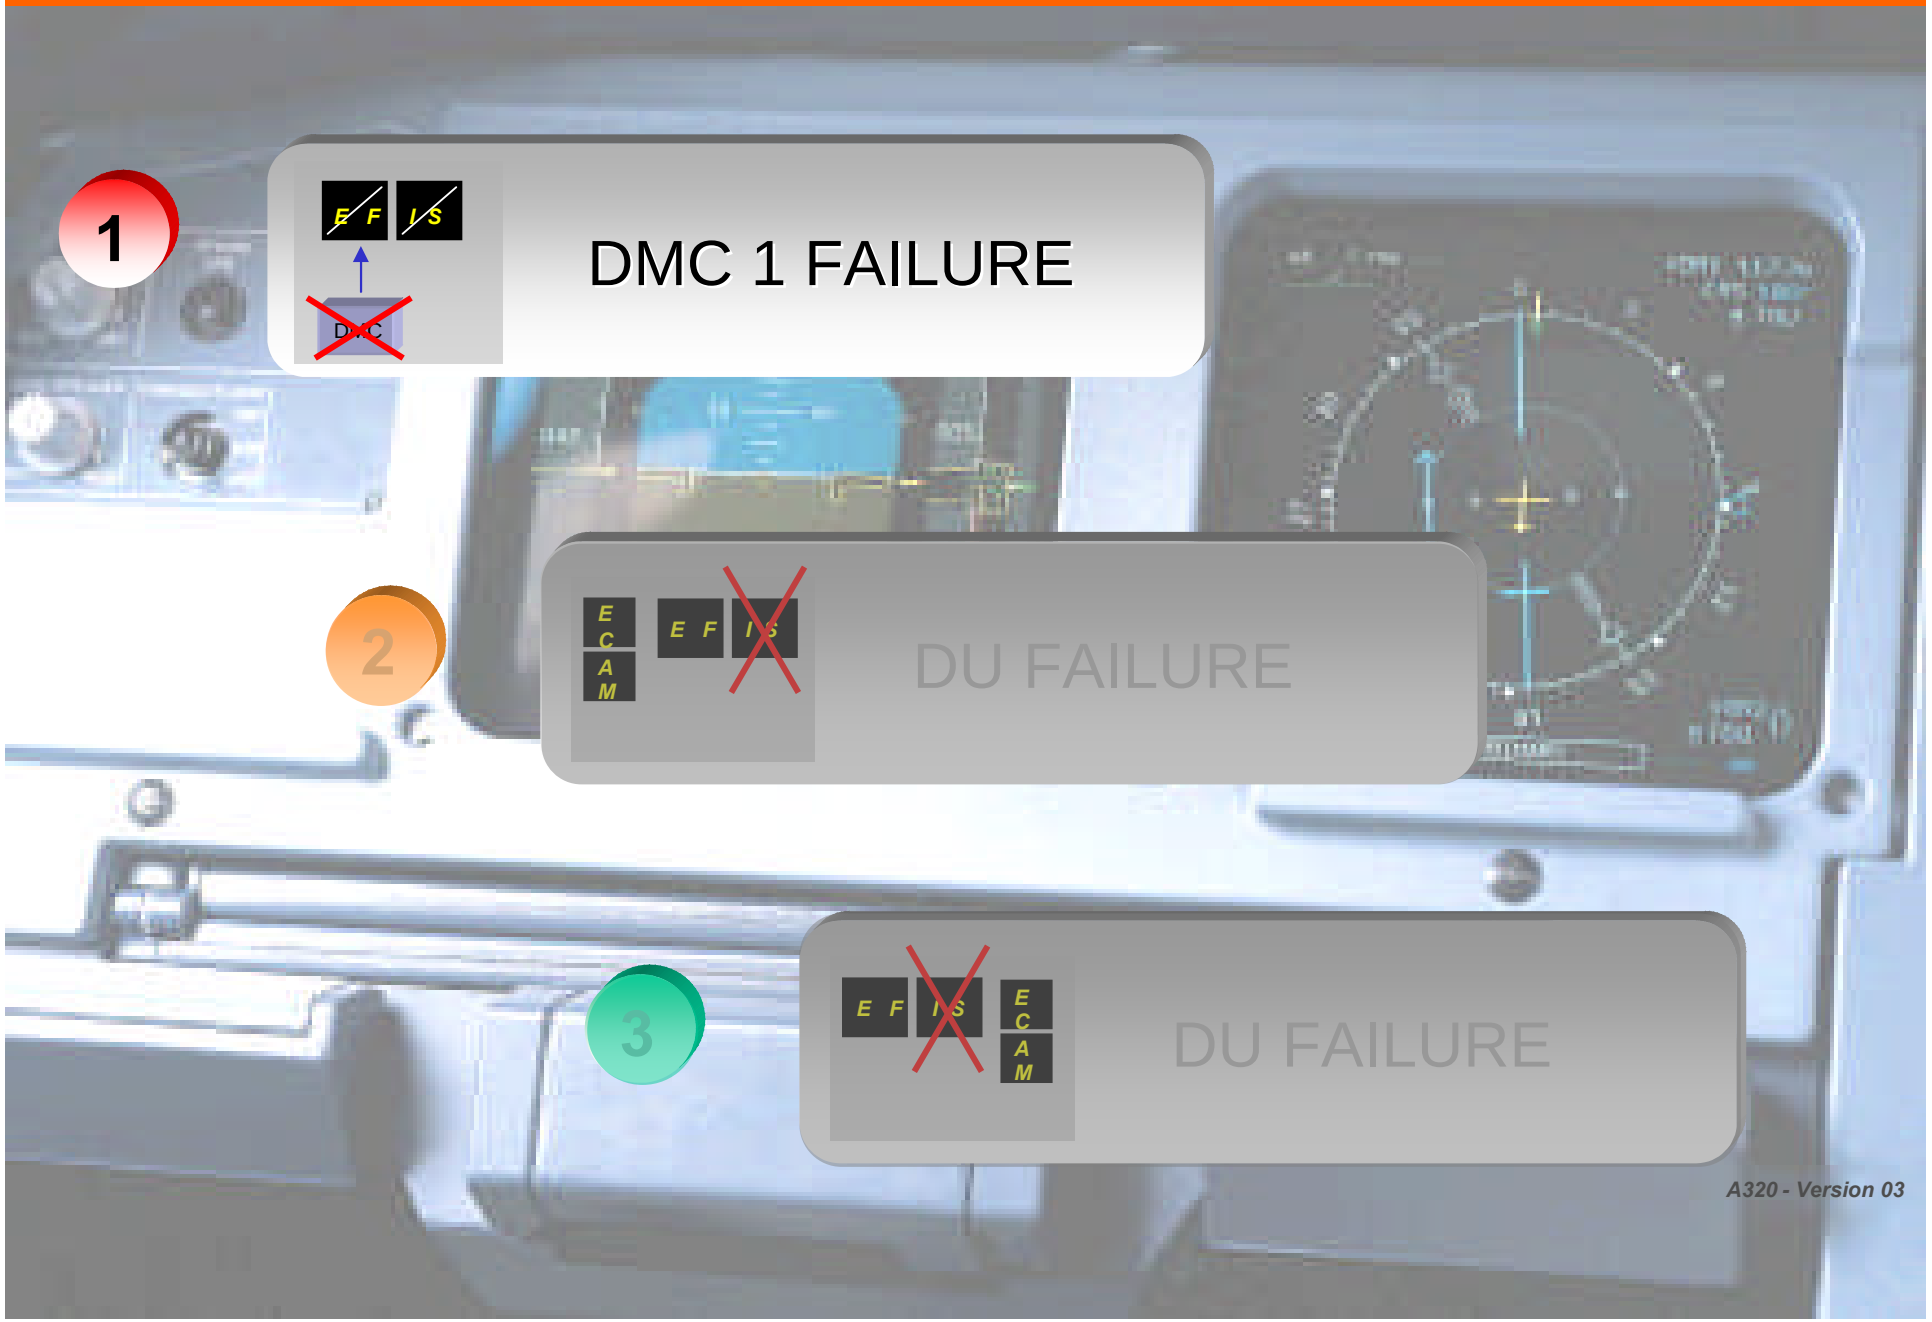

PF

PNF

1.EIS EFIS DMC 1 FAULT

DETECTION

CM2 ⇒ PF

FLIES THE AIRCRAFT

NAVIGATES

CONSIDER AUTOMATION USE

ECAM ACTIONS

ECAM PROCEDURES

SYSTEM DISPLAY

STATUS

RETURN TO NORMAL TASK SHARING

COMMUNICATES

EIS FAILURES - SWITCHING

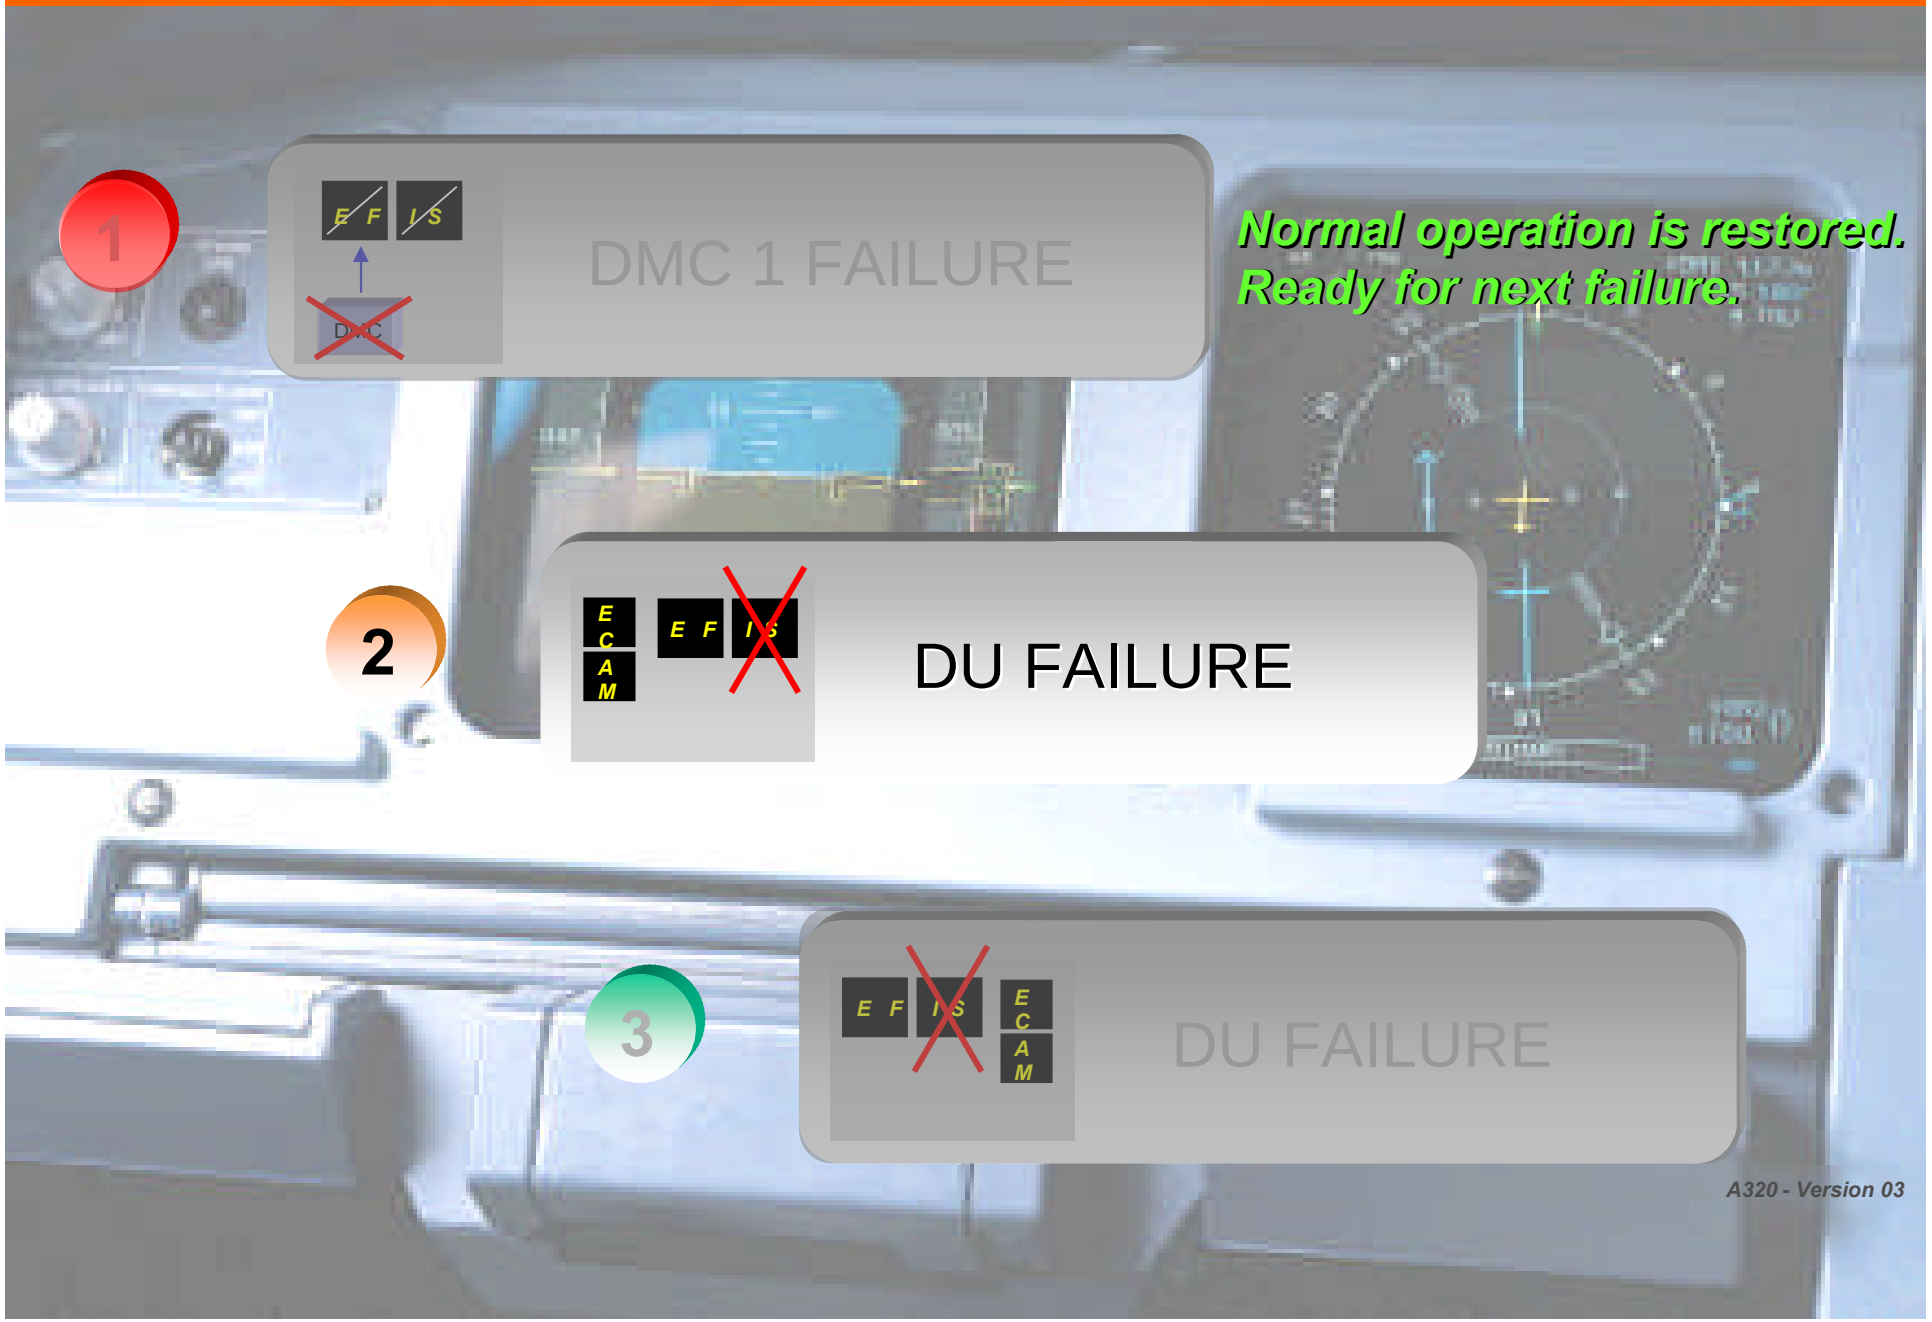

PF

PNF

2. PFD UNIT 2 FAILURE

CM2

DISPLAY UNIT FAILURE PROC……APPLY

PFD AUTO SWITCHING

(PFD has priority over ND)

EIS FAILURES - SWITCHING

PF

PNF

3. ND UNIT 1 FAILURE

CM1

DISPLAY UNIT FAILURE PROC.....APPLY

NO AUTO SWITCHING

ND 1 Unit Blank
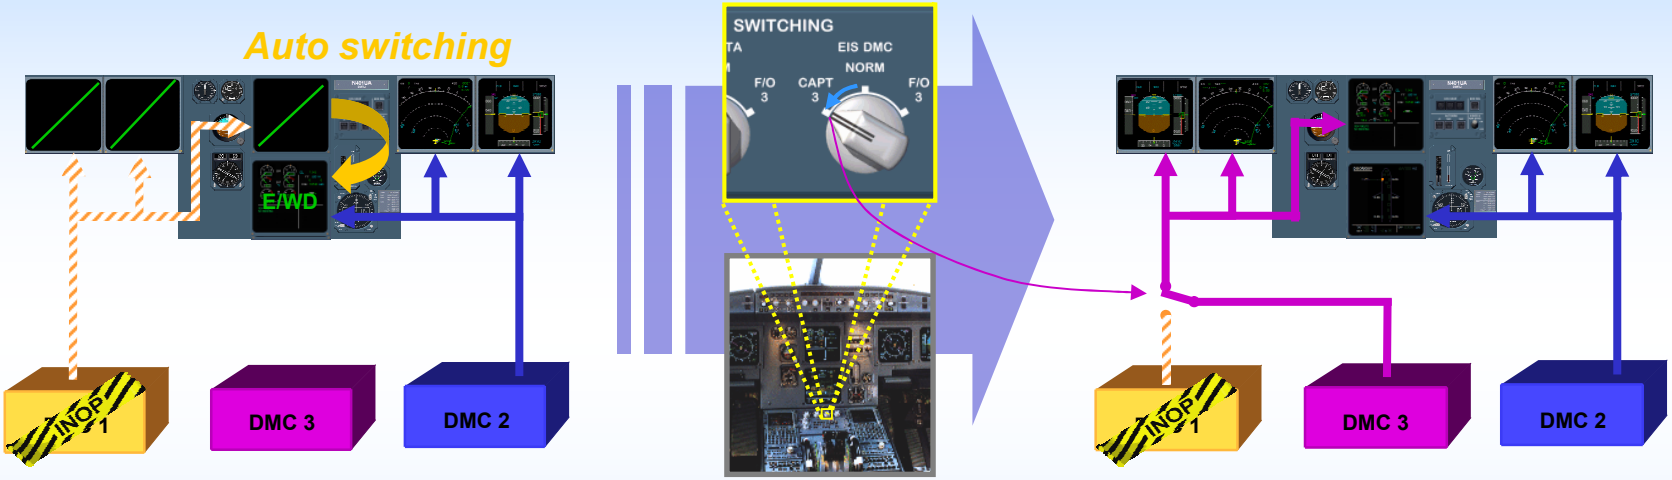
ECAM PROCEDURE