MODE REVERSIONS

WHY MODE REVERSIONS ?

Mode reversions are inherent to the integration of the Autopilot and Auto thrust.

The necessary design of automation behavior i vario s ar i al circ sta ces

MODES

LATERAL

VERTICAL

LATERAL

NAV to HDG discontinuity

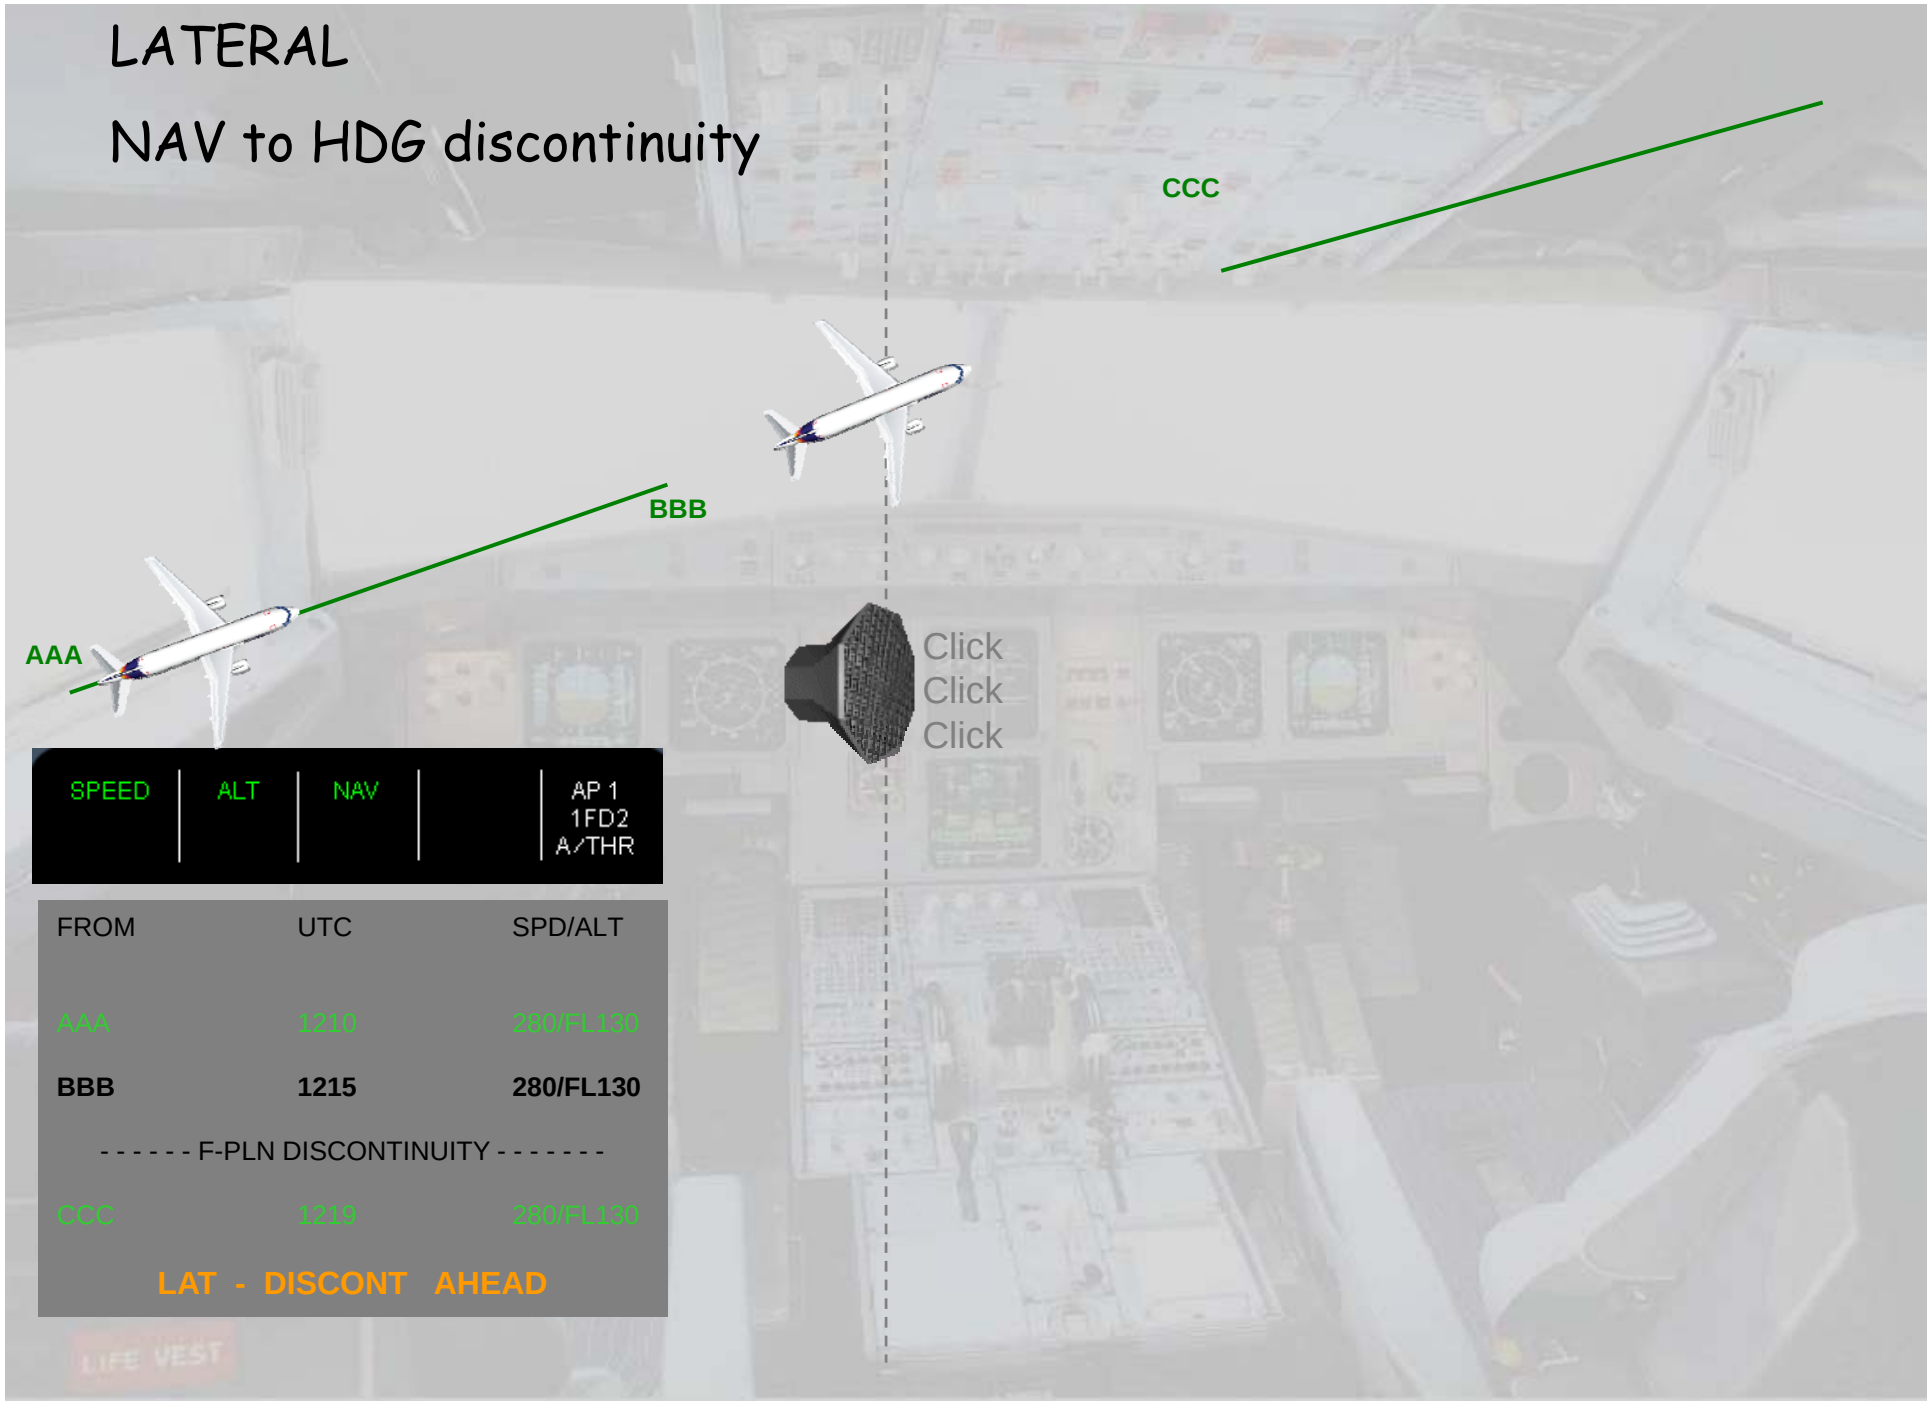

LATERAL

NAV to HDG discontinuity

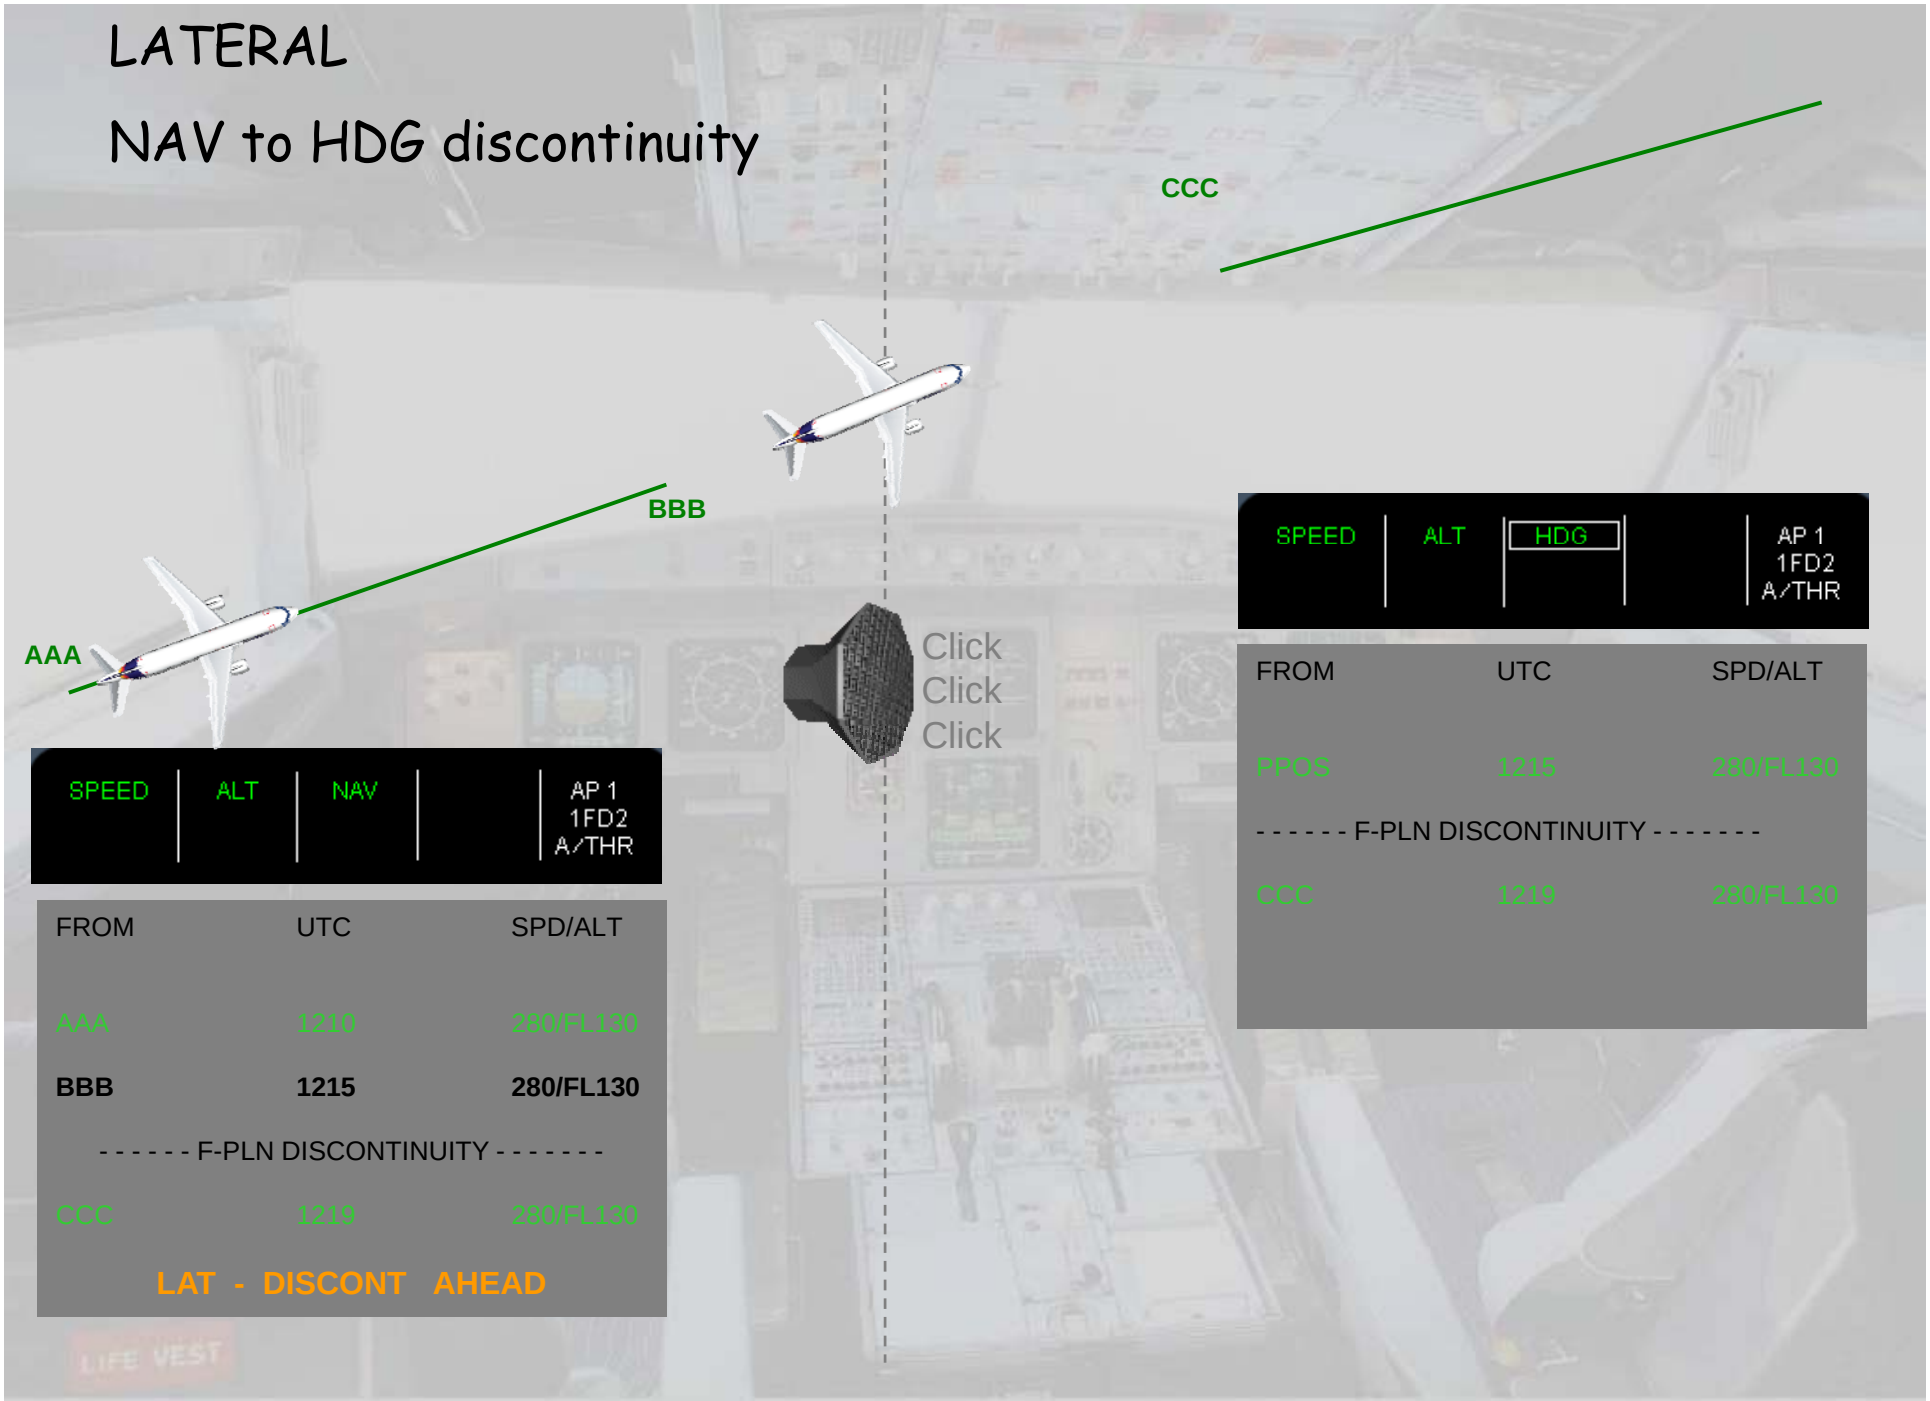

VERTICAL

- ALT*
- Altitude Target Change
- Auto Disengagement of Vertical
- V/S excessive
- FD orders not followed

VERTICAL

- ALT*

VERTICAL

- ALT*

Click
Click
Click

Triple clicks come 5" later if no pilot action on ALT or V/S Knobs

V/S boxed white for 10 more seconds

V/S engaged on current A/C V/S

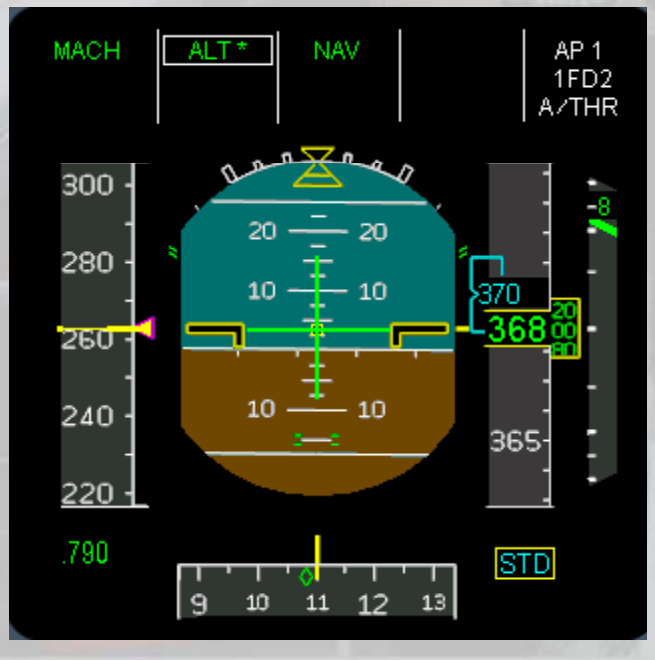

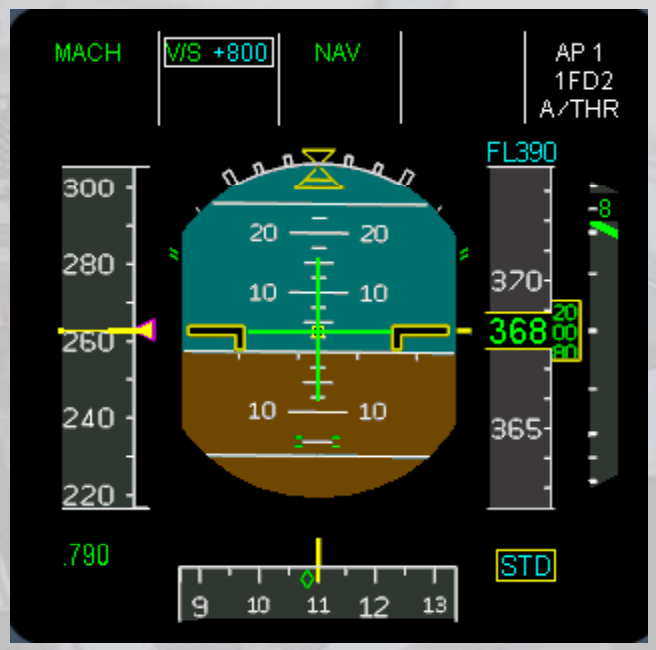

VERTICAL

- ALT set below current altitude

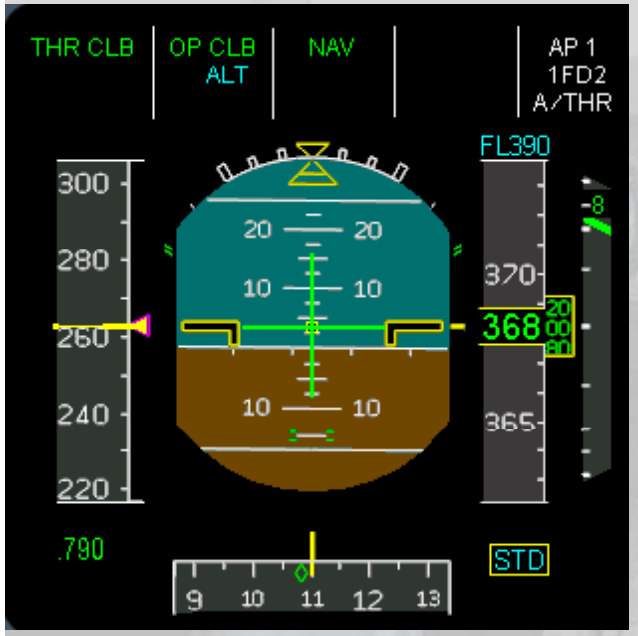

VERTICAL

- ALT set below current altitude

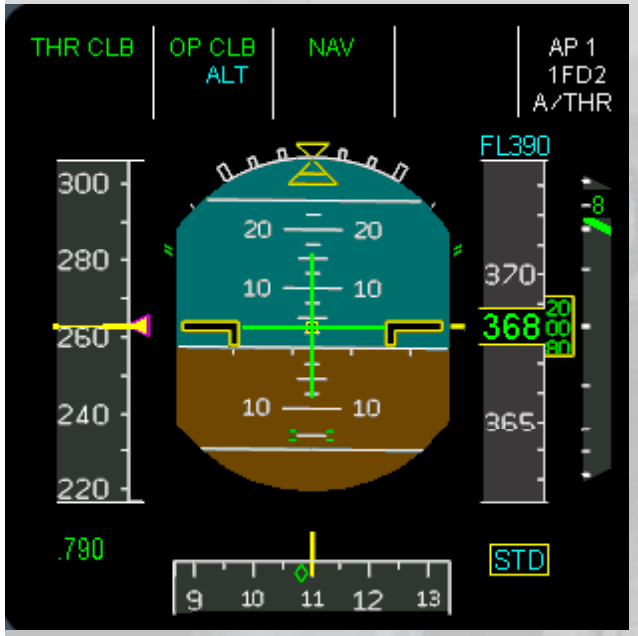

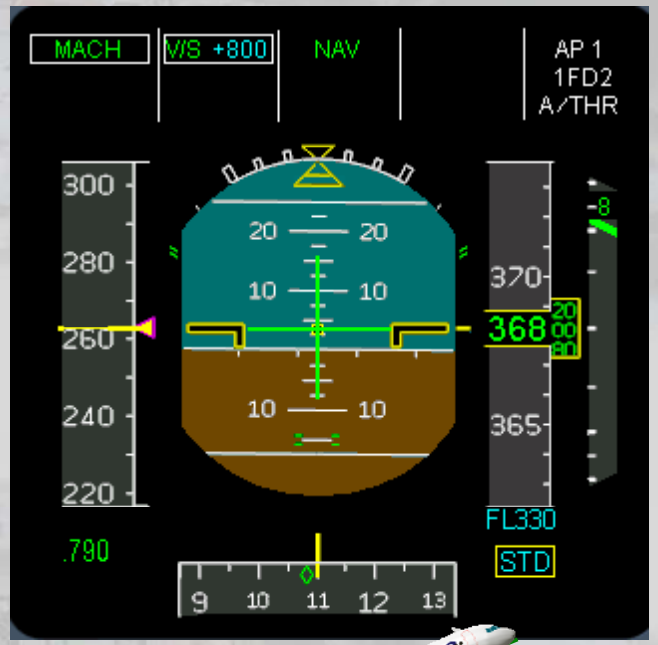

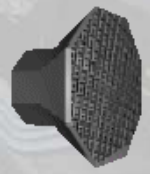

Click
Click
Click

Triple clicks come 5" later if no pilot action on ALT or V/S Knobs

V/S boxed white for 10 more seconds

VERTICAL

- Auto disengagement of vertical

VERTICAL

- Auto disengagement of vertical

VERTICAL

- Auto disengagement of vertical

VERTICAL

- Excessive V/S in climb

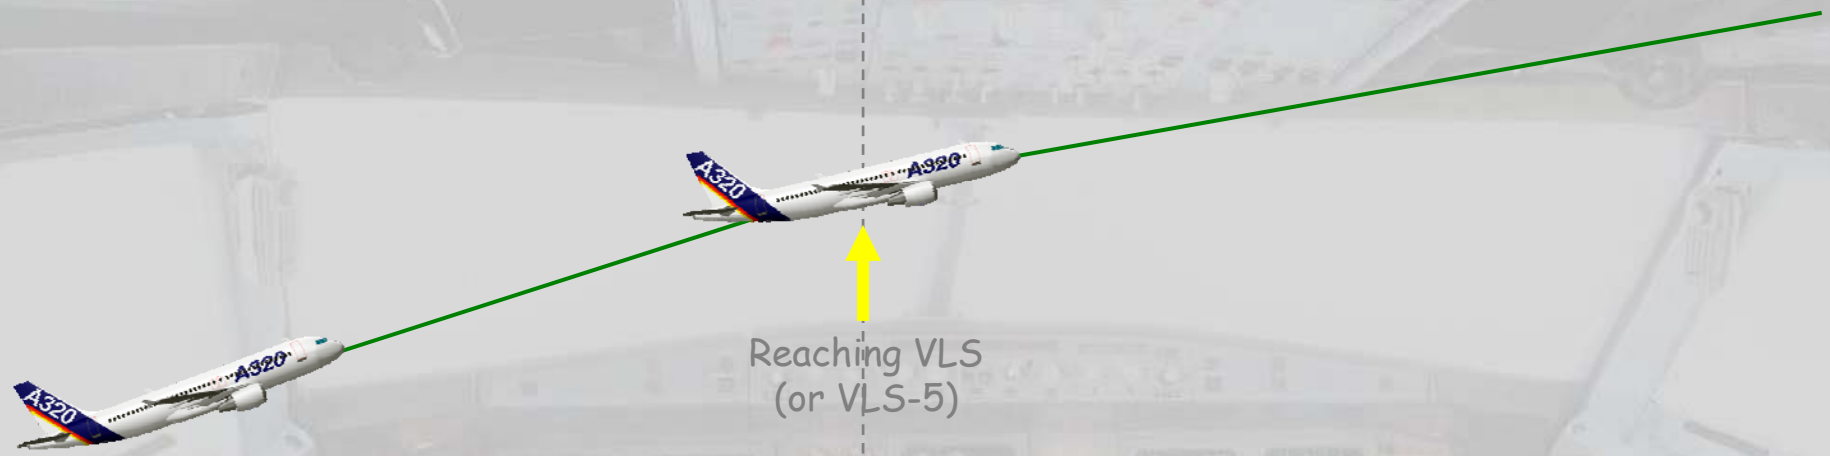

Reaching VLS
(or VLS-5)

Click
Click
Click

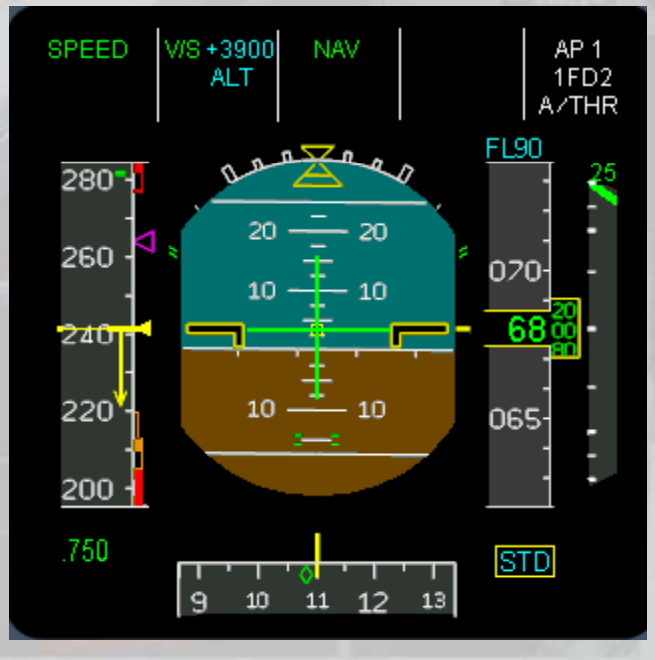

VERTICAL

- Excessive V/S in climb

Note: This does not apply to A320 without GSP

Reaching VLS
(or VLS-5)

Click
Click
Click

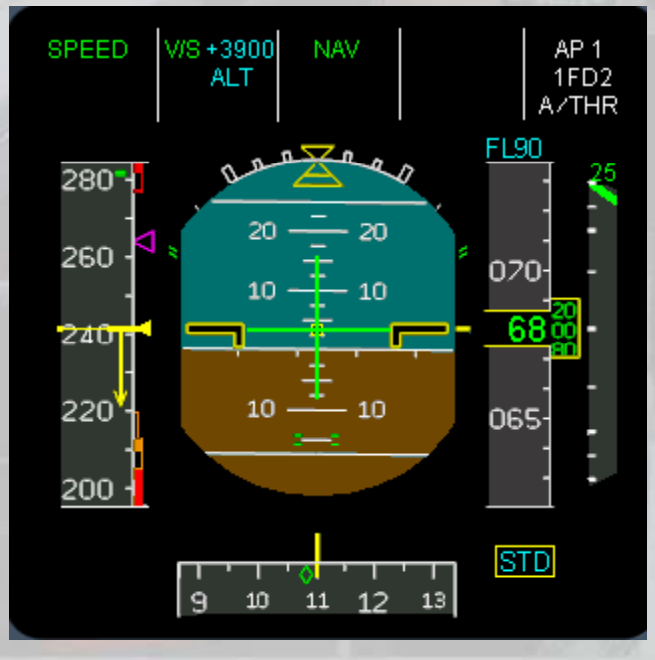

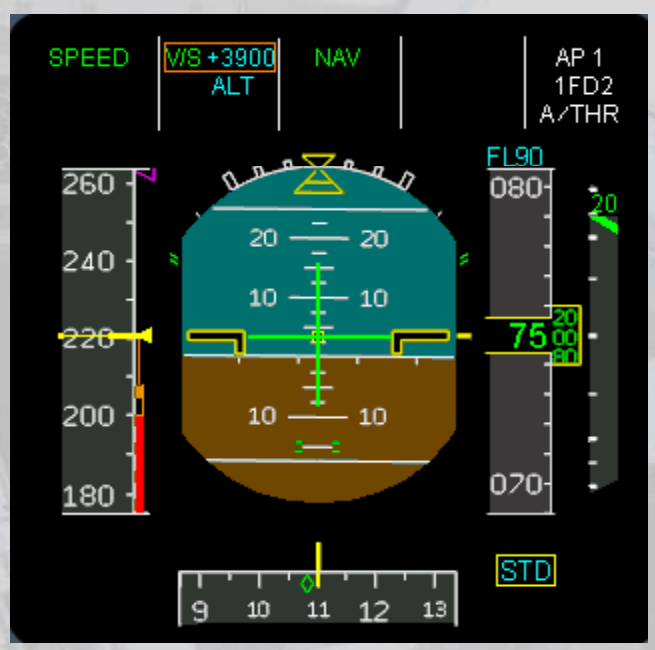

VERTICAL

- Excessive V/S in descent

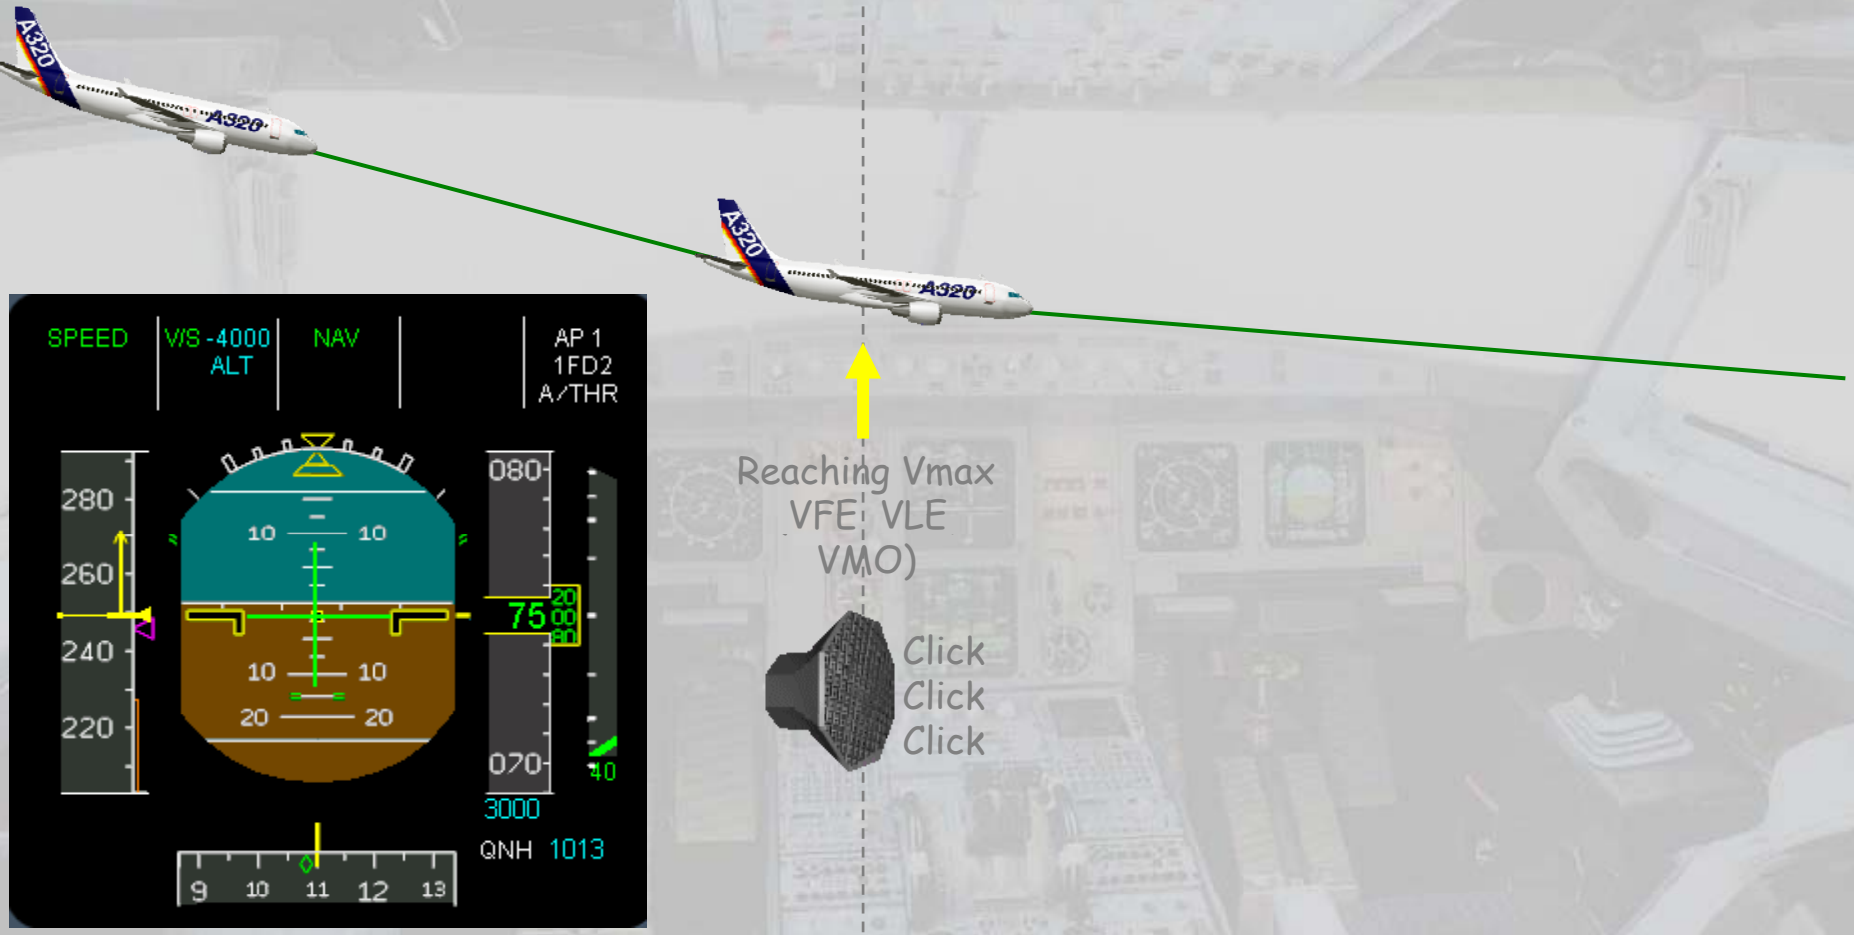

VERTICAL

- Excessive V/S in descent

Note: This does not apply to A320 without GSP

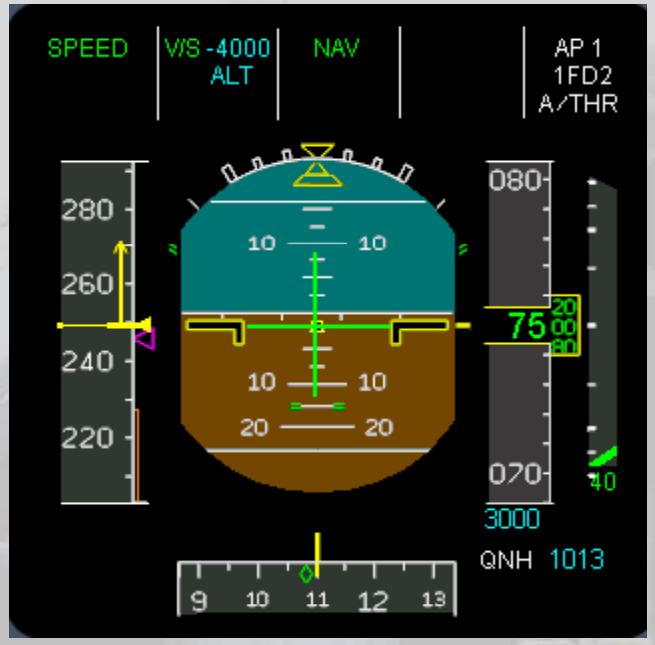

Reaching Vmax
VFE VLE
VMO)

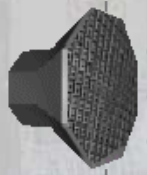

Click
Click
Click

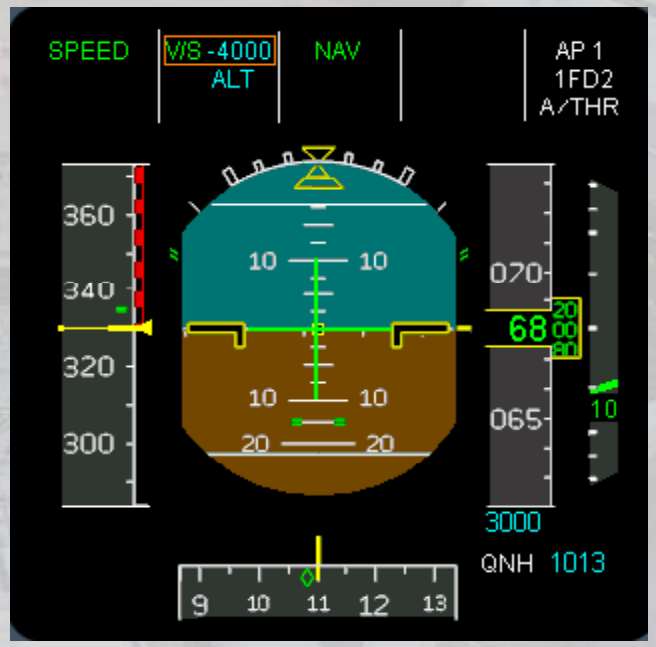

VERTICAL

- FD orders not followed

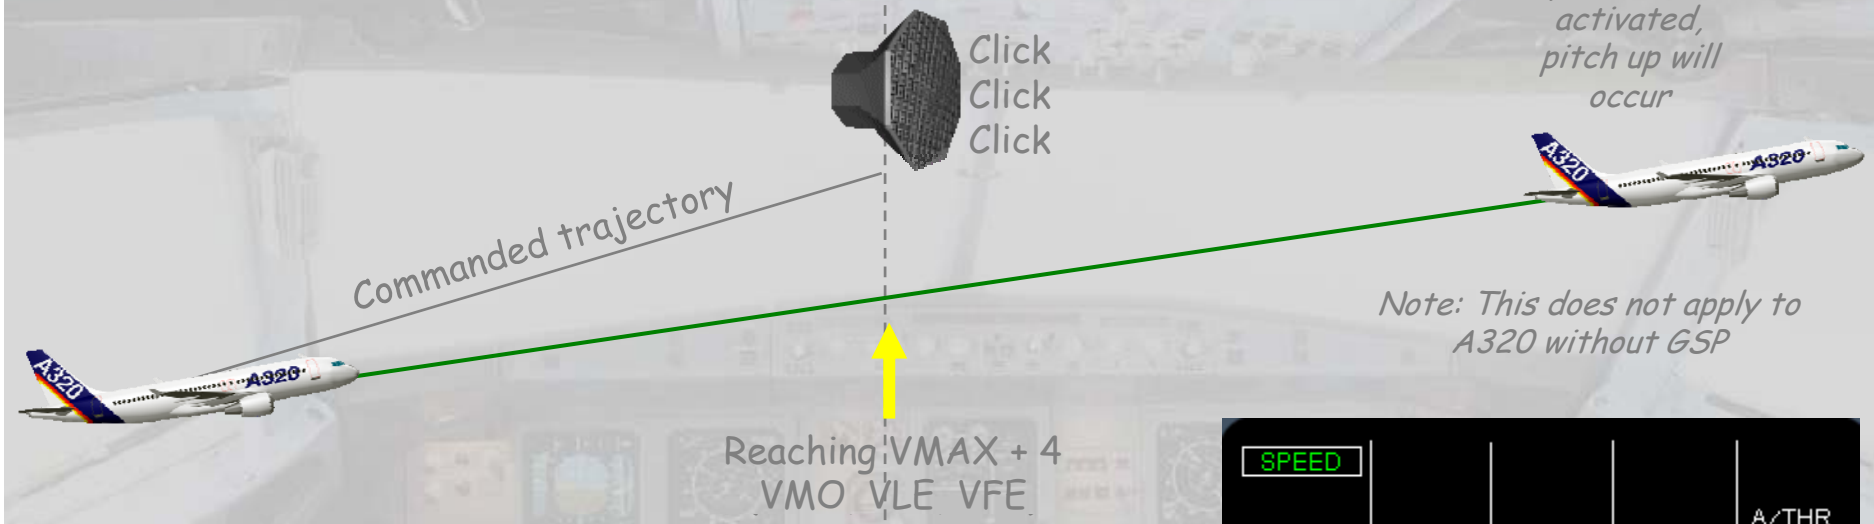

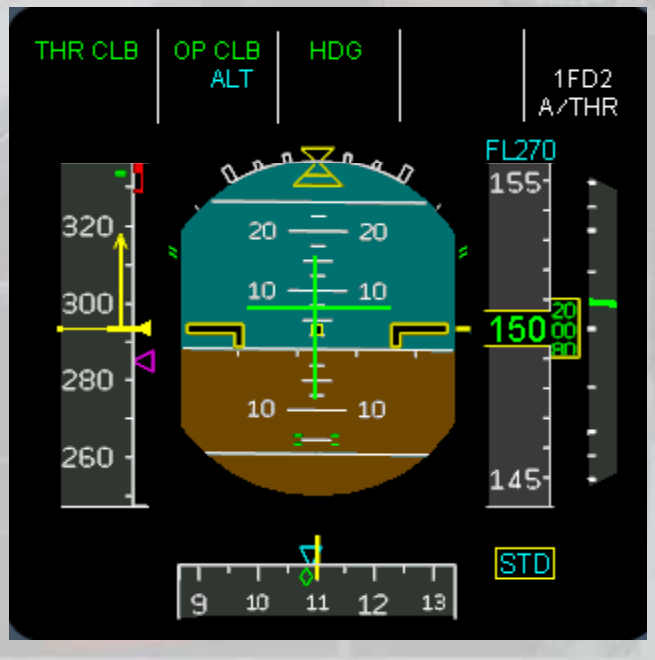

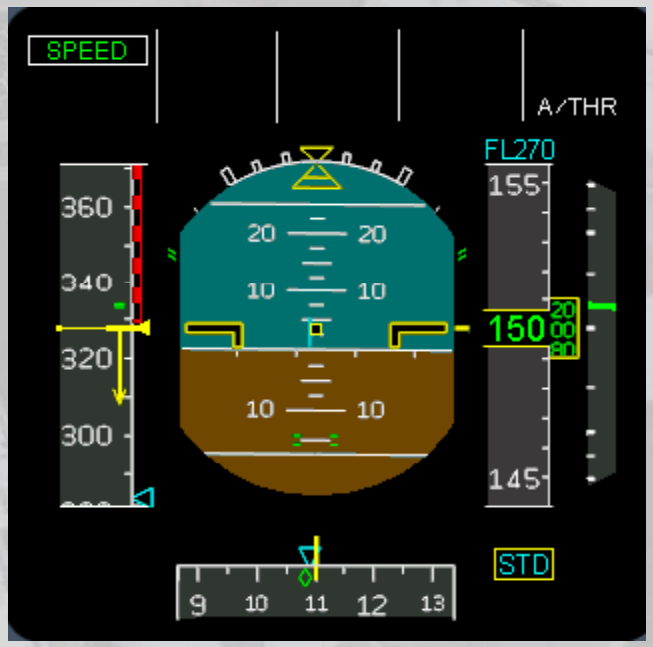

VERTICAL

- FD orders not followed

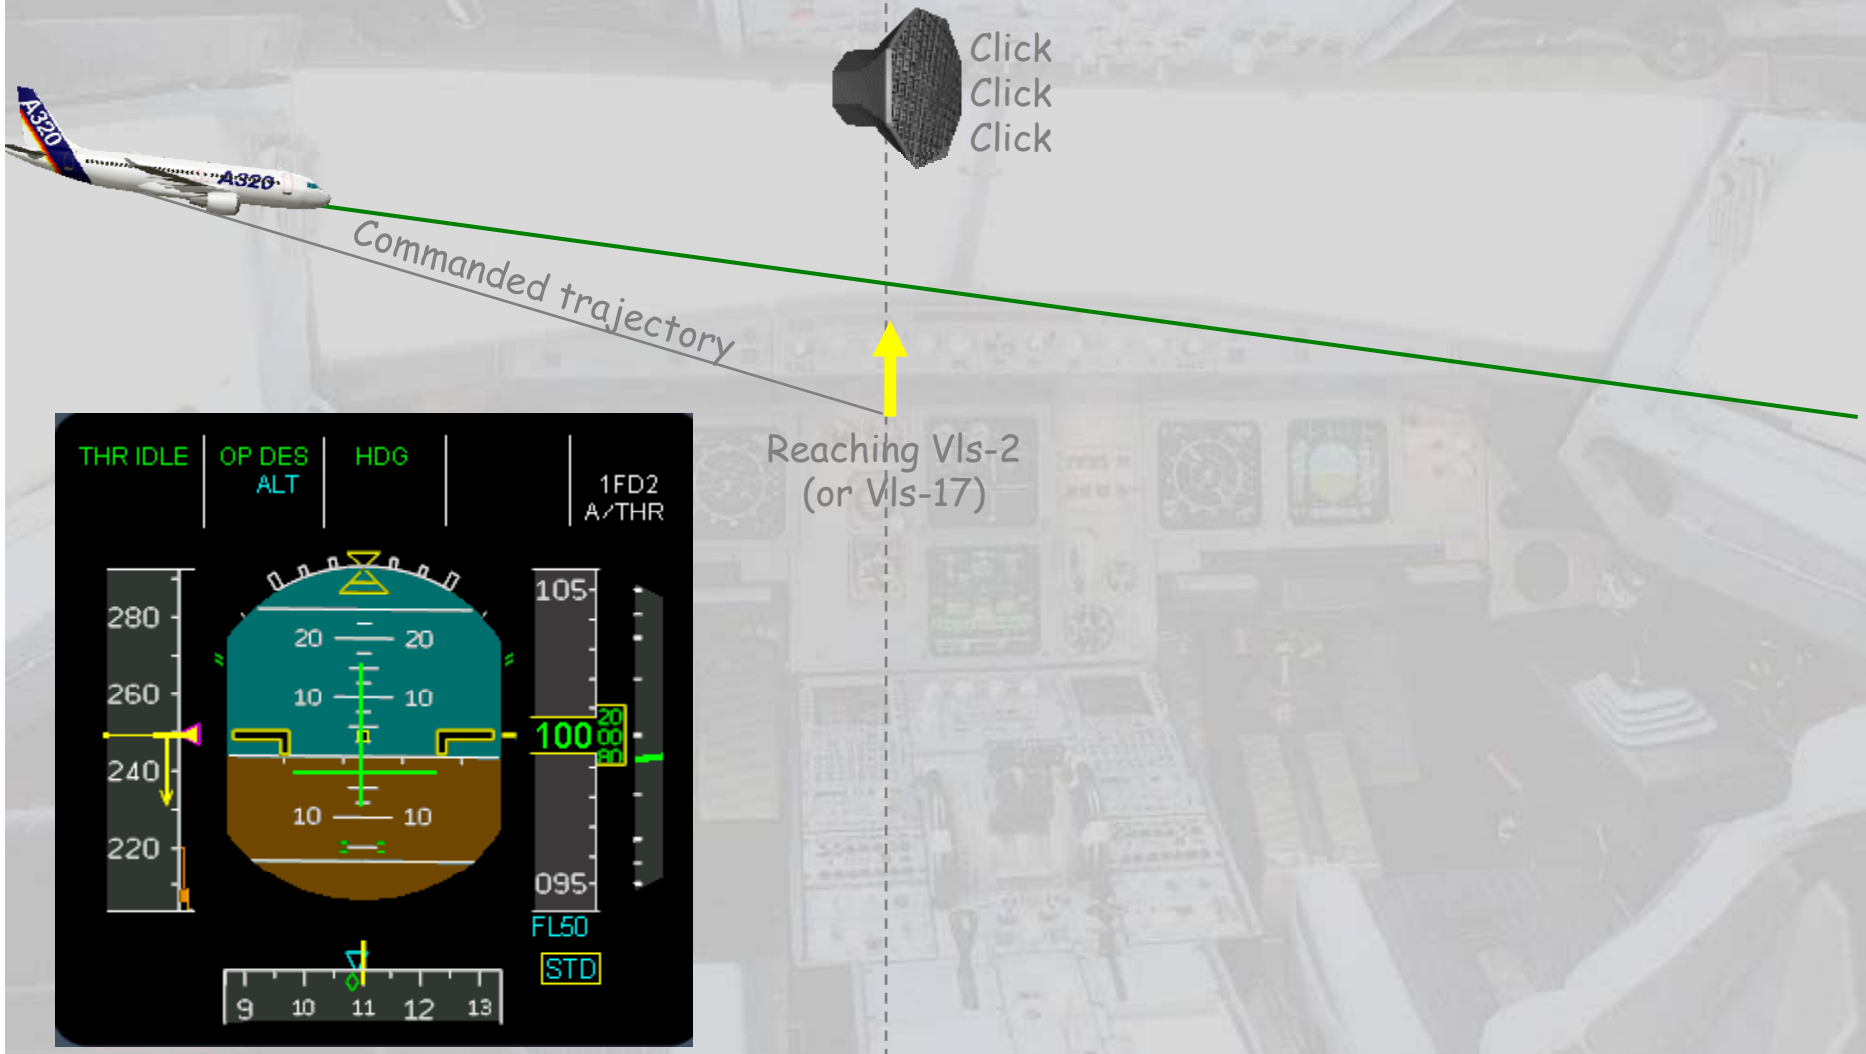

VERTICAL

- FD orders not followed

Note: This does not apply to A320 without GSP

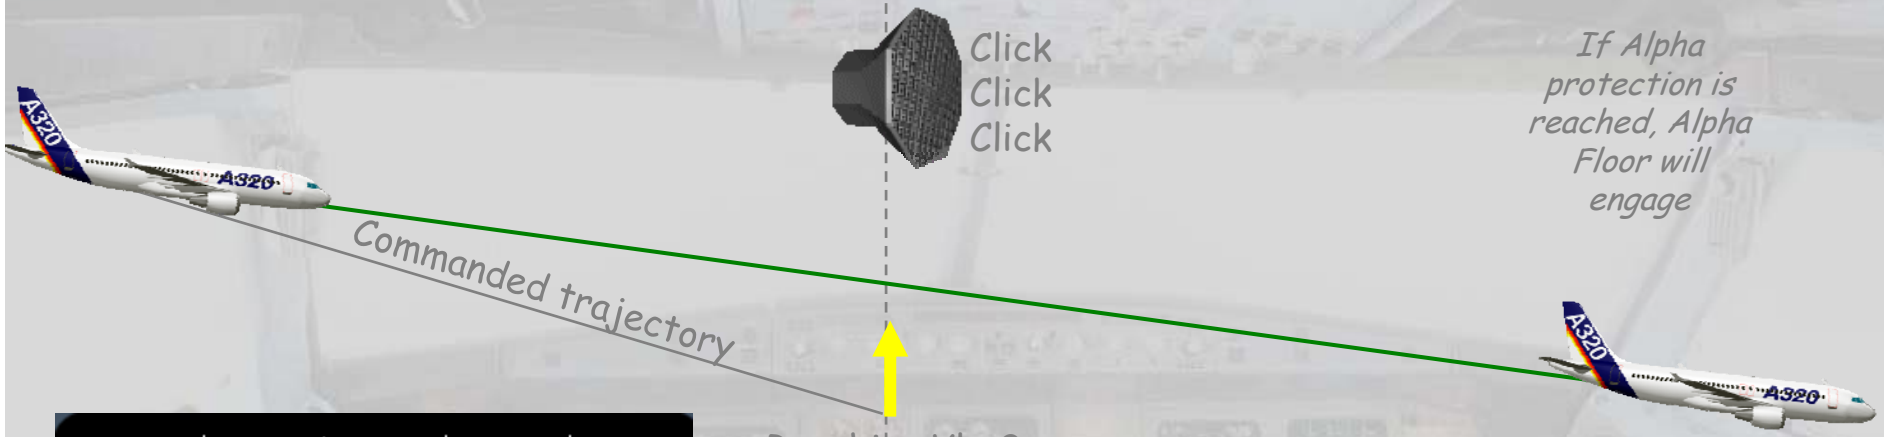
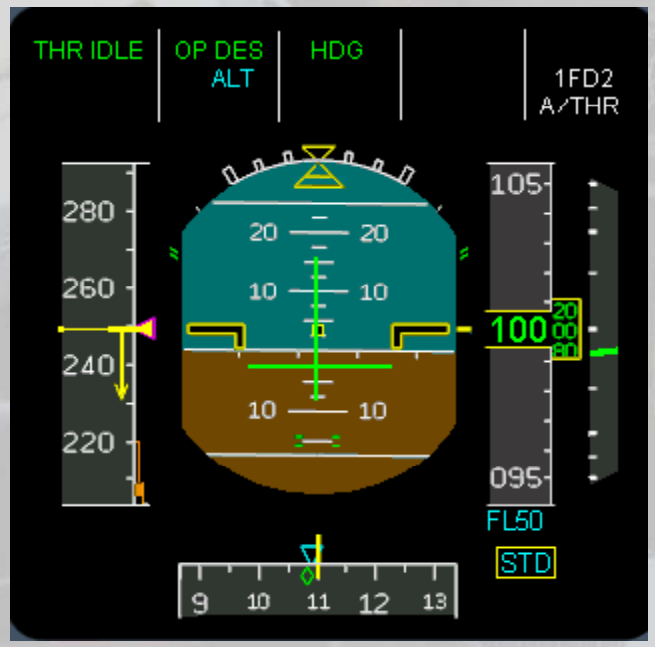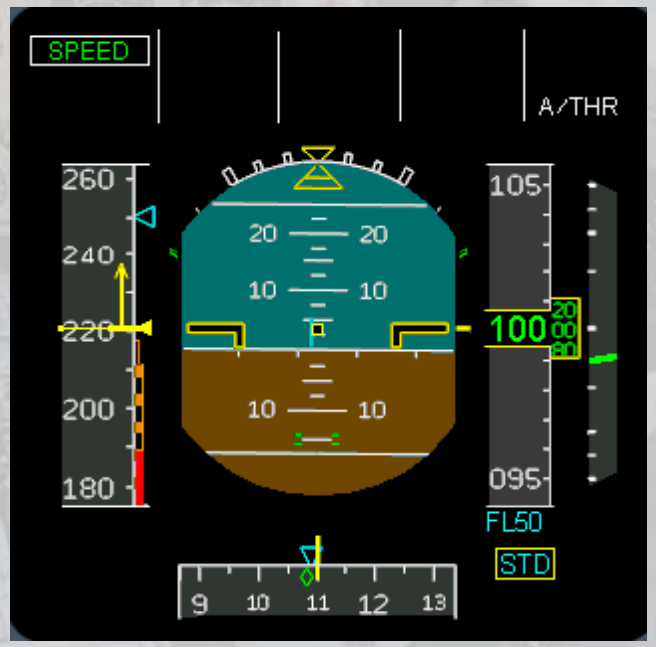
If Alpha protection is reached, Alpha Floor will engage