

Technical Datasheet Input / Output Modules with Modbus RTU Protocol with RS485 Interface

The IO modules communicate via RS485. The port can drive distances up to max 700 meters without the use of any repeater (*this feature however also depends on the signal strength of the Modbus Master Device*).

The RS485 Digital IO module is sturdy, low power usage and easy to use.

Port AI and 1 Port AO Module: -



The IO modules are mounted on DIN rail mountable casing and with exposed connectors and LED indicators. The DIP switch for Slave ID and Baud rate are placed inside the enclosure.

The design of the modules incorporates '**resettable Fuses**' to safeguard against reverse polarity connection both for **Power** and **Communication** port.

Specifications

General –

I/O Connectors	2 Pin 5.08 mm pitch pluggable screw terminals.
Dimensions	70 mm L x 110 mm B x 50 mm H
Power	Input Power – 24 V AC/DC Typical – 12V DC @ 80mA
Operating Temperature	0 – 60± C (32 ~ 140±F)
Storage Temperature	-20 - 70± C (-4 ~ 158±F)
Storage Humidity	5 ~ 95 % RH, non – Condensing

Certifications



AI Inputs –

Input Signal	1
Accuracy	4 – 20 mA / 0 – 20 mA / 0 – 10 V (jumper selectable)
Input Resolution	± 2% Full scale
Isolation	10-bit /12-bit resolution (optional)
External Loop Voltage	Optically Isolated
AI input impedance	+ 12 VDC min 120Ω

AO Outputs –

Channels	1
Inputs Resolution	10 Bit
Signal Range	0 – 10V
Accuracy	± 2 % of Full scale
Linearity Error	0.1 %
Conversion Time	20 msec

Additional Features: -

Communication port isolated

Input power reverse polarity safety

ESD Safety IEC 61000-4-2, □ 30KV contact, □ 30KV air EFT IEC 61000-4-4, 50A (5/50ms) 750V isolation.

CRC Error check. No configuration needed on the IO board

Configuration Settings: -

Communication Speed 9600 – 19200 Kbps (DIP SW Selectable)

Data Bits 8

Parity None

Stop bit 1

CRC Yes

Slave ID 1-15 (DIP SW Selectable)

Function Code AI 0x03 Read Holding Registers

AI Register Address 10 Bit -2 / 12 Bit - 3.

Function Code AO 0x10 Read Holding Registers

AO register Address 10 Bit -1

ID	Function Description	Register Description	Modbus Function Code	Protocol	Data Type
1	AI 1 - 10 Bit	40001	0X03	RS485	16 Bit Unsigned int
2	AI 1 - 12 Bit	40002	0x03	RS485	16 Bit Unsigned int
1	AO 1 - 10 Bit	40003	0X03	RS485	16 Bit Unsigned int
2	AO 1 - 12 Bit	40004	0x03	RS485	16 Bit Unsigned int

Note: -


For MODBUS communications, **a shielded and twisted pair cable** is used. One example of such cable is Belden 3105A.

Recommended Cable Electrical Characteristics: -

22 AWG Cable	Shielded and twisted pair should be used.
Tinned Copper	Recommended
Nominal Conductor DCR	14.7 ohm / 1000 ft
Nominal Capacitance	11 pf / feet (conductor to conductor)
High Frequency Non-Insertion Loss	0.5db / 100ft

NOTE – By default the Jumper setting on the board is 10 V and 10 Bit.


BAUD RATE DESCRIPTION

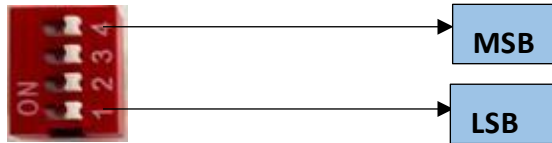

- For Baud rate Selection, DIP SW is used as per the diagram.
- Pulling up the switch will make Baud rate active.
- If no selection is made 9600 will be default Baud rate.
- When u change the Baud rate in the Module power 'ON' condition, pls press the reset button to get Change to affect.

Baud Rate	DIP SWITCH			
	1	2	3	4
9600	OFF	OFF	OFF	OFF
19200	ON	OFF	OFF	OFF
38400	OFF	ON	OFF	OFF
57600	OFF	OFF	ON	OFF
115200	OFF	OFF	OFF	ON

SLAVE ID DESCRIPTION

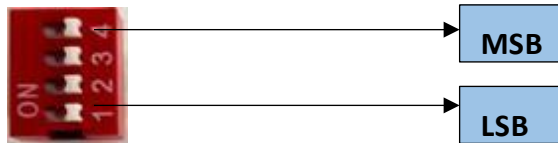

For Slave ID Selection SW is used to Set The SLAVE ID .


For Slave ID DIP Switch **LSB** is "1" follow through "4" is **MSB**.

Slave ID Confirmed through below Device ID table .

IF Eg. Slave ID 1 is Needed to be selected Switch number 1 should pulled up other three should be selected down side. So "1 0 0 0" will be selected as Slave ID 1.


Slave ID	DIP SWITCH				OUTPUT (Binary)	OUTPUT (Decimal)
	1	2	3	4		
0	OFF(0)	OFF(0)	OFF(0)	OFF(0)	0 0 0 1	1
1	ON(1)	OFF(0)	OFF(0)	OFF(0)	0 0 0 1	1
2	OFF(0)	ON(1)	OFF(0)	OFF(0)	0 0 1 0	2
3	ON(1)	ON(1)	OFF(0)	OFF(0)	0 0 1 1	3
4	OFF(0)	OFF(0)	ON(1)	OFF(0)	0 1 0 0	4
5	ON(1)	OFF(0)	ON(1)	OFF(0)	0 1 0 1	5
6	OFF(0)	ON(1)	ON(1)	OFF(0)	0 1 1 0	6
7	ON(1)	ON(1)	ON(1)	OFF(0)	0 1 1 1	7
8	OFF(0)	OFF(0)	OFF(0)	ON(1)	1 0 0 0	8
9	ON(1)	OFF(0)	OFF(0)	ON(1)	1 0 0 1	9
10	OFF(0)	ON(1)	OFF(0)	ON(1)	1 0 1 0	10
11	ON(1)	ON(1)	OFF(0)	ON(1)	1 0 1 1	11
12	OFF(0)	OFF(0)	ON(1)	ON(1)	1 1 0 0	12
13	ON(1)	OFF(0)	ON(1)	ON(1)	1 1 0 1	13
14	OFF(0)	ON(1)	ON(1)	ON(1)	1 1 1 0	14
15	ON(1)	ON(1)	ON(1)	ON(1)	1 1 1 1	15

AI

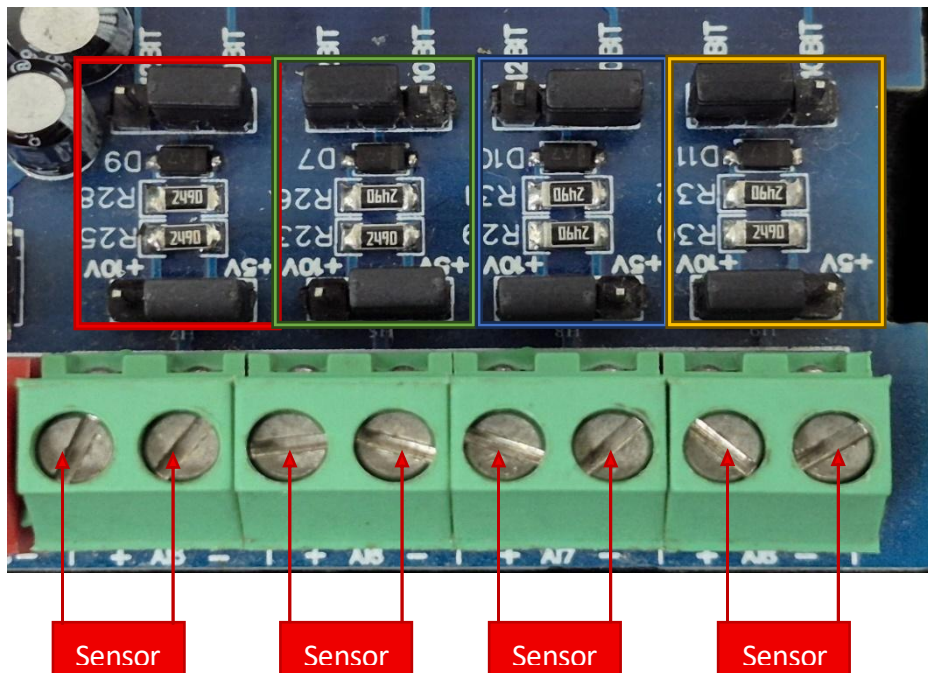


- **Analog Input (AI) Operation:** Each channel provides two terminals: + (Positive) and - (Negative/Common). These are used to read external analog sensor signals.
- **Channel Configuration (Visual Guide):** Each of the four AI channels features two dedicated jumpers to independently set the voltage range and bit resolution. Refer to the color-coded boxes in the board diagram to configure your desired scenario:
 - **Red Box (5V, 10-bit):** Set the voltage jumper to **+5V** and the resolution jumper to **10 BIT**.
 - **Green Box (5V, 12-bit):** Set the voltage jumper to **+5V** and the resolution jumper to **12 BIT**.
 - **Blue Box (10V, 10-bit):** Set the voltage jumper to **+10V** and the resolution jumper to **10 BIT**.
 - **Yellow Box (10V, 12-bit):** Set the voltage jumper to **+10V** and the resolution jumper to **12 BIT**.
- **Sensor Wiring Connections:**
 - The analog sensor's positive signal wire should be connected to the **+** terminal of the desired channel.
 - The sensor's common or ground wire should be connected to the corresponding **-** terminal.
- **Crucial Setup Recommendation:** Always ensure that the voltage jumper setting strictly matches the maximum output range of your connected sensor (either 5V or 10V) to guarantee accurate analog-to-digital conversion and prevent data clipping.

AO

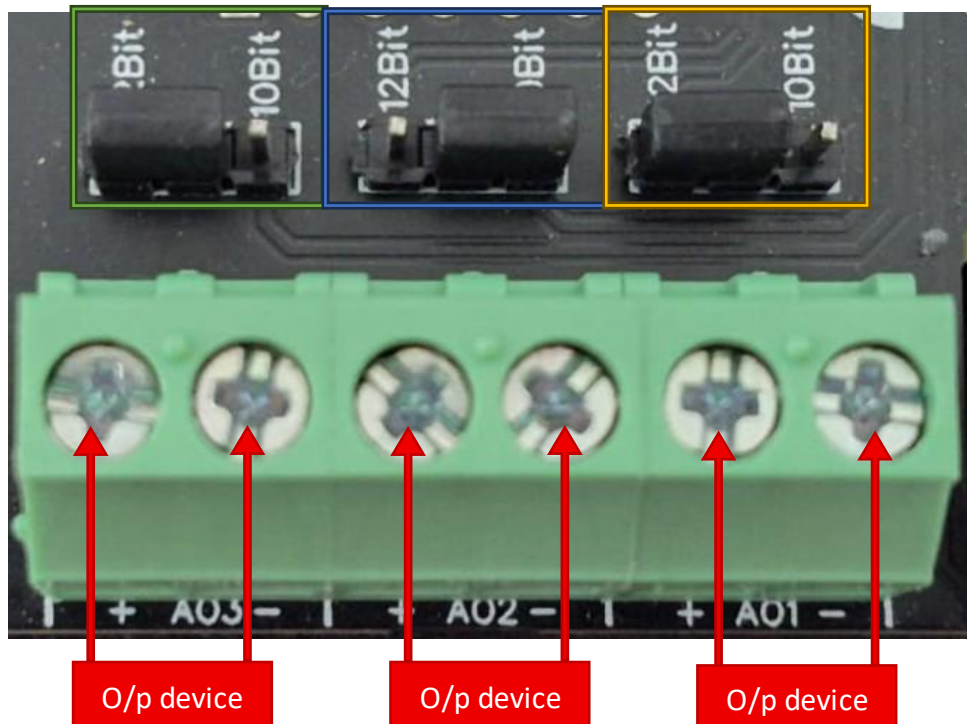

- **Analog Output (AO) Operation:** Each channel provides two terminals: + (**Positive**) and - (**Negative/Common**). These are used to send variable analog signals to **external output (O/p) devices**, such as variable frequency drives or proportional valves.
- **Channel Configuration (Visual Guide):** Each of the three AO channels features a **dedicated jumper** to set the **output bit resolution**. Refer to the color-coded boxes in the board diagram to configure your desired resolution:
 - **Green & Yellow Box (12-bit):** Set the resolution jumper to **12Bit**.
 - **Blue Box (10-bit):** Set the resolution jumper to **10Bit**.
- **Output Device Wiring Connections:**
 - The external device's positive signal wire should be connected to the + terminal of the desired channel (AO1, AO2, or AO3).
 - The device's common or ground wire should be connected to the corresponding - terminal..
- **Crucial Setup Recommendation:** Always ensure that the hardware jumper setting (10-bit or 12-bit) matches the output scaling configured in your main control software. A mismatch between software resolution and hardware configuration will result in incorrect output signal levels.

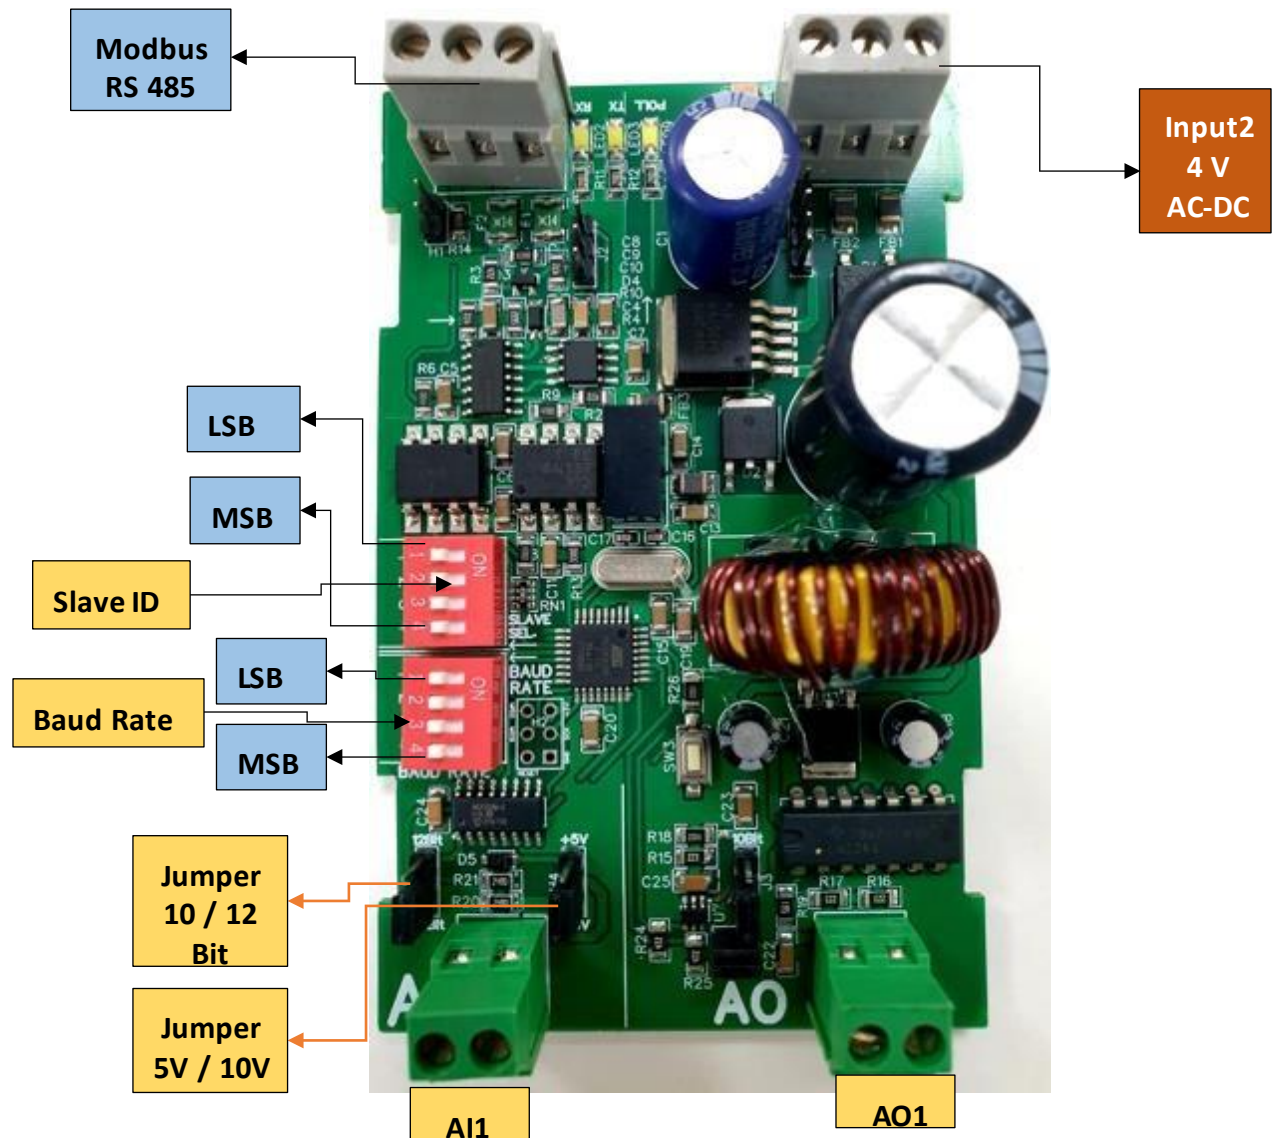

Contact Information

Augmatic Technologies Pvt. Ltd.,
Plot no 6, Shah Industrial Estate II,
Kotambi,
Vadodara – 391510.

Email – Sales@wittelb.com

Support E.: support@wittelb.raiseaticket.com / M.: 9403892805