
Technical Datasheet WIN-SN-TnH-W-D Sensor

The Master Display Unit serves as a central hub that wirelessly receives temperature and humidity data from a connected slave sensor over a local Wi-Fi network. Once the information is received, the Display Unit collects and displays the environmental data directly on the screen. To enhance on-site monitoring, the interface features onboard data logging and plots real-time visual graphs for both temperature and humidity.

Display Module: -

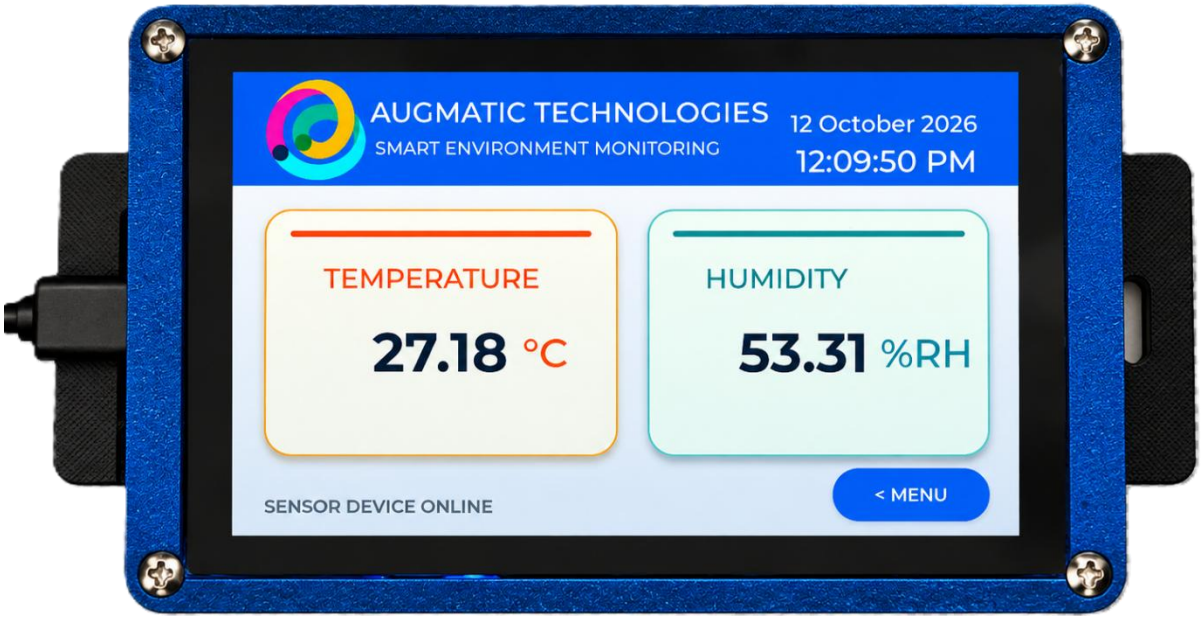

The module features a wall-mountable enclosure with an integrated display for easy installation and deployment. The unit is designed for continuous 24/7 operation and is exceptionally easy to use.

For seamless setup, configuration settings such as local Wi-Fi connectivity and sensor pairing can be managed directly through the integrated display interface or the built-in web portal.

Specifications

General –

Dimensions	98 mm L x 98 mm B x 34 mm H
Power	Input Power – 5 VDC Type C
Operating Temperature	-20°C to +80°C (-4°F to +176°F)
Storage temperature	-20°C to +80°C (-4°F to +176°F)
Storage Humidity	5 ~ 95 % RH, non – Condensing
Certifications	RoHS, CE APPROVED

Operator Interface & Navigation Guide

1. Initial Network Provisioning (Wi-Fi Setup):

Upon first boot or when a network change is required—the device enters Access Point (AP) mode, and the screen displays a "WiFi Setup Required". The unit broadcasts its own local network named **WIN-SN-TnH-W-M-D-5.0**. Users simply connect to this network via a mobile device or laptop using the password **12345678**. Open a web browser and navigate to **http://192.168.4.1** to securely pass your local Wi-Fi credentials to the unit.




2. Home Screen & Main Navigation

Once provisioned, the device boots to the Home Screen, displaying the company logo (WittelB), the current date and time, and the system title ("Augmatic Technologies - Smart Environment Monitoring"). Tapping the orange **[NEXT >]** button at the bottom right opens the **Main Menu**, which splits the interface into three primary pathways:

- **Dashboard:** View live temperature and humidity data from the connected sensor.
- **Local Trends:** Displays historical trend graphs for each monitored parameter (**Temperature & Humidity**). Users can independently select **6-hour, 12-hour, or 24-hour** trend data for each parameter.
- **WiFi Settings:** Access network and sensor configuration parameters to update the device whenever the Wi-Fi network changes.




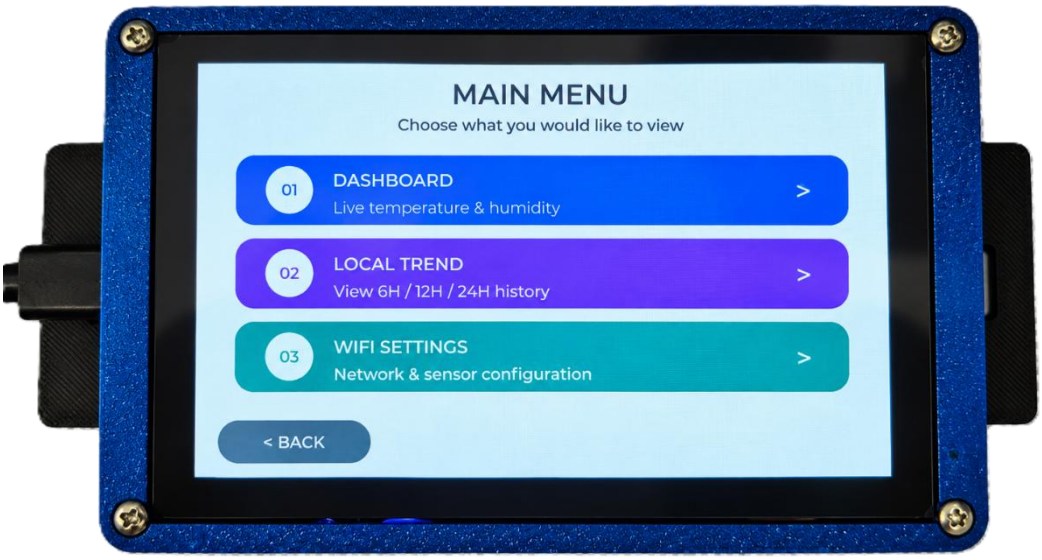


3. Live Telenett Dashboard / Live Telemetry Dashboard

The Dashboard provides a clear, real-time view of all monitored parameters on a single screen, enabling users to quickly assess current environmental conditions.

- **Real-Time Monitoring:** Displays the latest values of all connected sensors, including **Temperature & Humidity**
- **Color-Coded Display:** Each parameter is presented in a dedicated color-coded tile for improved readability and quick identification.
- **Instant Data Updates:** Sensor readings are refreshed continuously, providing up-to-date information for effective environmental monitoring.
- **User-Friendly Interface:** The intuitive display allows users to easily view and monitor all air quality parameters from a single dashboard screen.

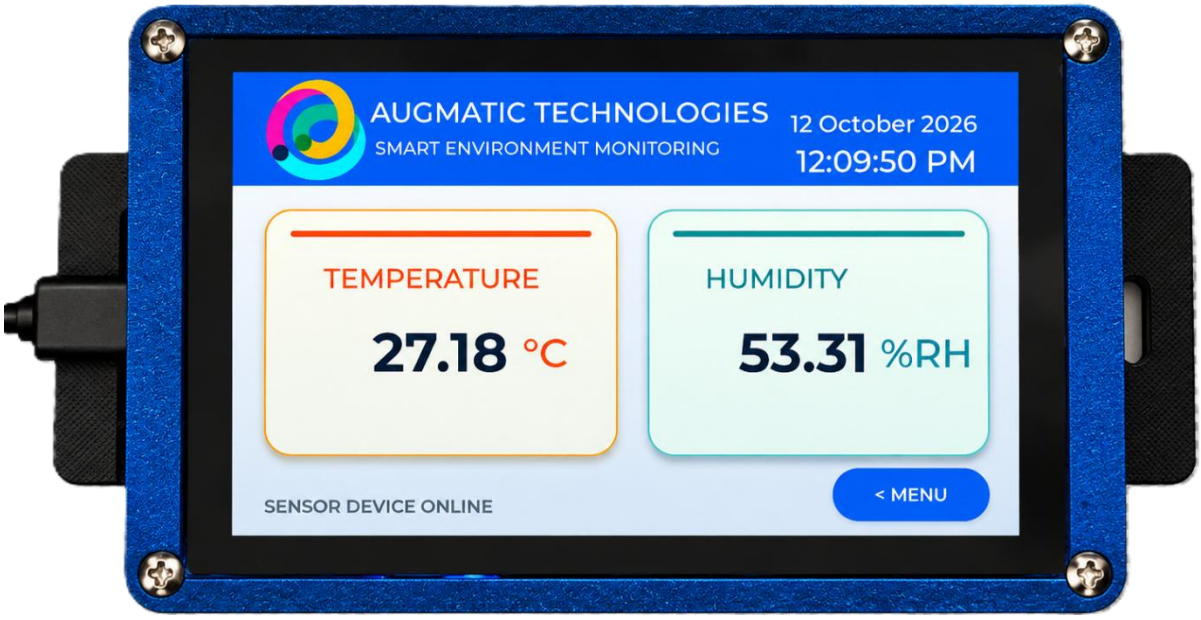

4. Local Trends

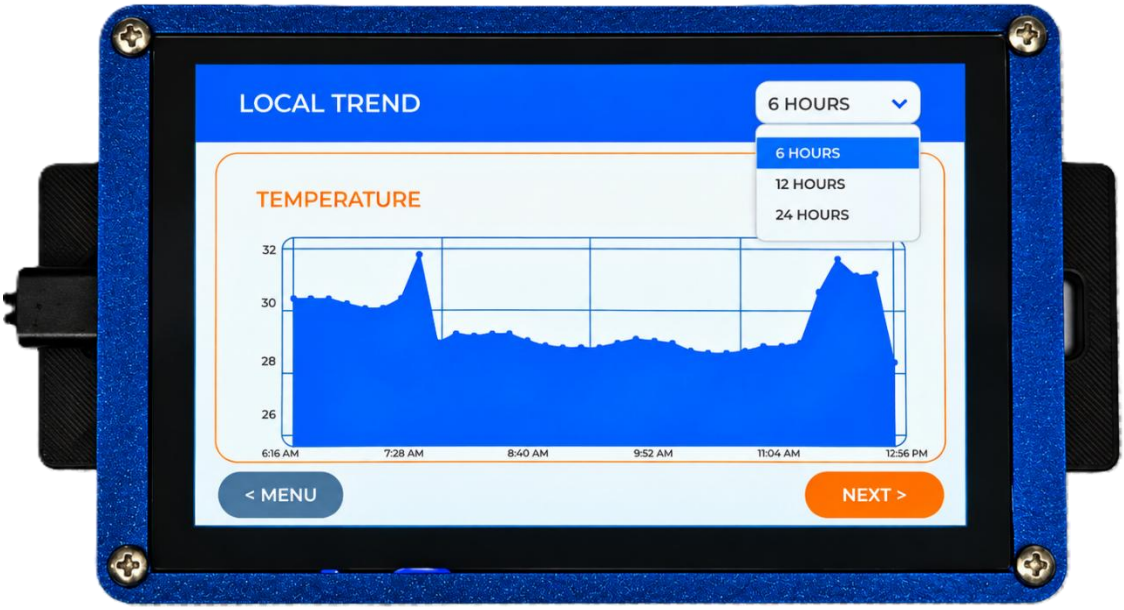




- **Live Trend Monitoring:** View real-time graphical data for **Temperature & Humidity,** enabling continuous monitoring of environmental conditions.
- **Individual Parameter Analysis:** Each parameter (**Temperature & Humidity**) can be viewed independently with its own dedicated trend graph.
- **Selectable Time Range:** Users can choose **6-hour, 12-hour, or 24-hour** historical data for each parameter individually to analyze short-term and long-term trends.
- **Default Time Range:** By default, the trend graph displays the **last 6 hours** of data. Users can change the view to **12 hours** or **24 hours** for each parameter individually.

Web Portal Configuration Guide

The embedded web portal provides a unified, single-page interface for configuring both local Wi-Fi credentials and sensor IP addressing. This streamlines setup and enables seamless remote sensor data monitoring.


1. Initial Wi-Fi Connection & IP Setup

- First, connect your mobile device or PC directly to the Display's local hotspot. Search for the Wi-Fi network named **WIN-SN-TnH-W-M-D-5.0** and enter the password **12345678**.
- Open your web browser and navigate to **192.168.4.1** to access the initial configuration portal.
- Enter your local Wi-Fi network credentials to connect the device to your facility's network.

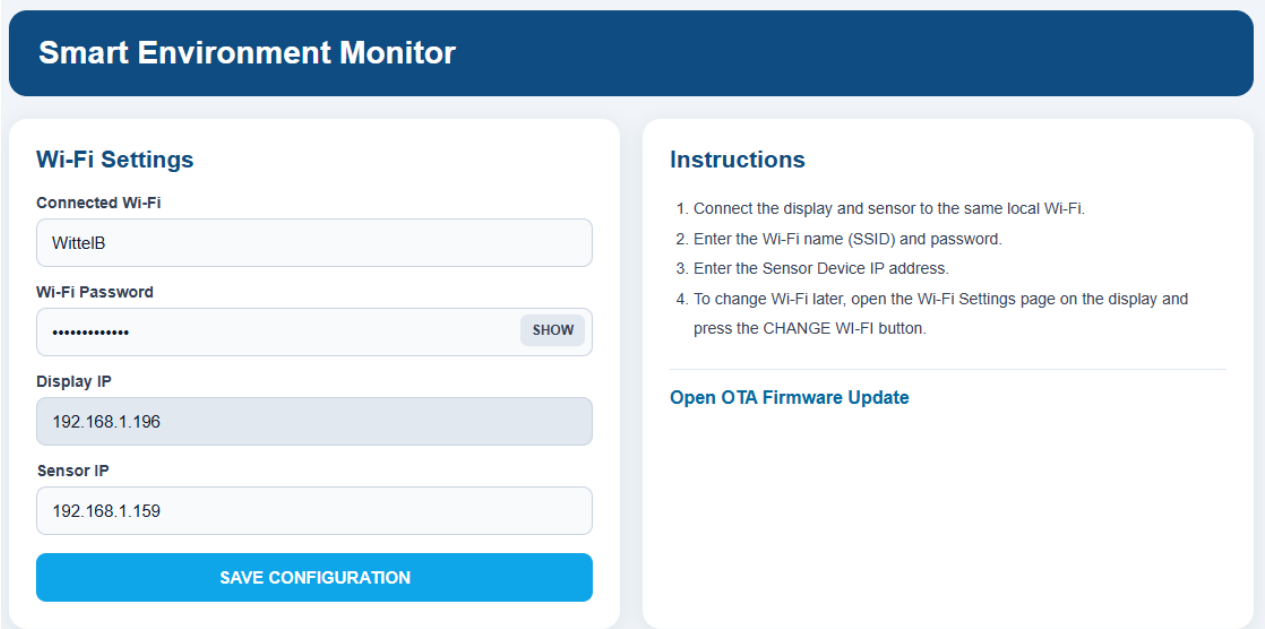

2. Accessing the Smart Environment Monitor Settings

- Ensure your PC or mobile device is now connected to your standard local network (the same one the device just joined).
- Enter the assigned **IP Address (e.g., 192.168.1.196)** into your web browser. *(Note: You can locate the correct Sensor IP Address by checking the Slave Device's Wi-Fi Configuration web page).*
- You will be directed immediately to the unified Smart Environment Monitor Configuration Settings page.

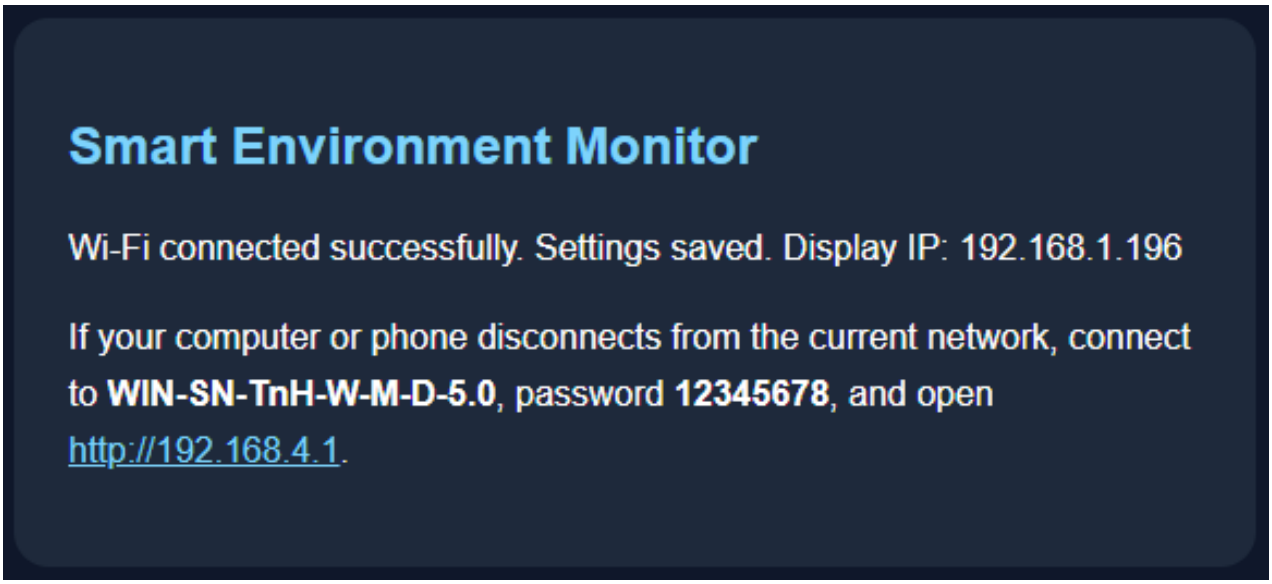

Contact us: -

Augmatic Technologies Pvt. Ltd.,
Plot no 6, Shah Industrial Estate II,
Kotambi,
Vadodara – 391510.
Email – Sales@wittelb.com
Support: support@wittelb.raiseaticket.com / +91 94038 92805