



WIN - UART TTL TO ETHERNET

Configuration Step for **WIN - UART TTL TO ETHERNET Converter**

- Connect 5V DC Supply to the Module.
- Connect your UART TTL device to the TX, RX, and GND terminals of the Module.
- Connect the Network Ethernet Cable to the Ethernet port of the module.
- Default IP Address of the Module is “192.168.1.254”.
- After connecting, the module is ready for UART to TCP/UDP conversion.
- Please enter “192.168.1.254” in your web browser. Make sure your device is in the same network as the Module.
- After entering the above IP Address, you will find a webpage which has 6 pages for Configurations.

Page Number 1 (System Info)

- On the first page, you will get the Current System Information of the module.
- SW Version, Microcontroller, EEPROM Health, Ethernet Chip, Ethernet Sockets, MAC Address, and IP Address are available on this First page.
- Current hardware diagnostics and active network parameters are printed directly on the page for easy monitoring.
- On the left Selection panel, you can navigate to other page information.
- System Info, UART Status, IP Settings, TCP/UDP Settings, UART Settings, and available Tools are placed on the Left Selection Panel.

UART ⇒ TCP/UDP Gateway

System Info

UART Status

IP Settings

TCP/UDP Settings

UART Settings

Tools

System Info

SW Version: 7.3
Microcontroller: Arduino Uno
EEPROM Health: 3 Write Cycles
Ethernet Chip: W5500
Ethernet Sockets: 4
MAC Address: 90:A2:DA:95:27:FB
IP Address: 192.168.1.254

Page Number 2 (UART Status)

- The second page is setup for live monitoring and discovery of your serial connection.
- Users can use this page to actively search for connected devices by clicking the 'UART Scan' button.
- Once the scan is initiated, the module will probe the serial bus and display any actively responding UART slave addresses (e.g., "0Ah Scanning...").
- **Users should ensure the physical connections (TX, RX, and GND) are secure on the module before initiating a scan to successfully discover connected devices.**

UART ⇒ TCP/UDP Gateway

System Info

UART Status

IP Settings

TCP/UDP Settings

UART Settings

Tools

UART Status

UART :

UART Slaves:
0Ah Scanning...

Page Number 3 (IP Settings)

- Third Page is setup for IP Settings Configuration.
- MAC Address, Static IP, Sub mask & Gateway can be set from this page.
- MAC Address randomization can be done from the third page by clicking the 'Randomize' button.
- Users must click 'Save & Apply' to confirm and save any changes made to the network parameters.

UART ⇒ TCP/UDP Gateway

System Info

UART Status

IP Settings

TCP/UDP Settings

UART Settings

Tools

IP Settings

MAC Address:

Static IP:

Submask:

Gateway:

Page Number 4 (TCP/UDP Settings)

- On the fourth page, TCP/UDP configuration can be applied by the user.
- UART TCP Port, UART UDP Port, & WebUI Port can be set from this page.
- UART Mode selection can be done from the fourth page.
- **UART Mode: 1. UART TCP/UDP | 2. UART over TCP/UDP**
- UART TCP Idle Timeout (in seconds) can also be configured here.

UART ⇒ TCP/UDP Gateway

System Info	TCP/UDP Settings
UART Status	
IP Settings	
TCP/UDP Settings	
UART Settings	
Tools	

UART TCP Port: (1~65535)

UART UDP Port: (1~65535)

WebUI Port: (1~65535)

UART Mode:

UART TCP Idle Timeout: (1~3600) sec

Save & Apply

Cancel

UART Mode:

P Idle Timeout: sec

Save & Apply

Cancel

Page Number 5 (UART Settings)

- Fifth page is setup for UART Settings Configuration.
- Baud Rate, Data Bits, Parity, and Stop Bits can be set from this page.
- Inter-frame Delay, Response Timeout, and Retry Attempts as well.
- Users must click 'Save & Apply' to confirm any changes made to the serial communication parameters. [note: it will take few seconds for values to change.]

UART ⇒ TCP/UDP Gateway

System Info	UART Settings
UART Status	
IP Settings	
TCP/UDP Settings	
UART Settings	
Tools	

Baud Rate: bps

Data Bits: bit

Parity:

Stop Bits: bit

Inter-frame Delay: (4~250) ms

Response Timeout: (50~5000) ms

Attempts: (1~5)

Save & Apply

Cancel

- The sixth page provides essential system maintenance tools for the gateway.
- It allows the user to perform a system 'Reboot' or 'Load Default Settings' to restore the factory static IP (192.168.1.254).
- Also, on the module you can short the header H3 (DS_RST) to reset to default settings.

UART ⇒ TCP/UDP Gateway

System Info

UART Status

IP Settings

TCP/UDP Settings


UART Settings

Tools

Tools

Load Default Settings (static IP: 192.168.1.254)

Reboot

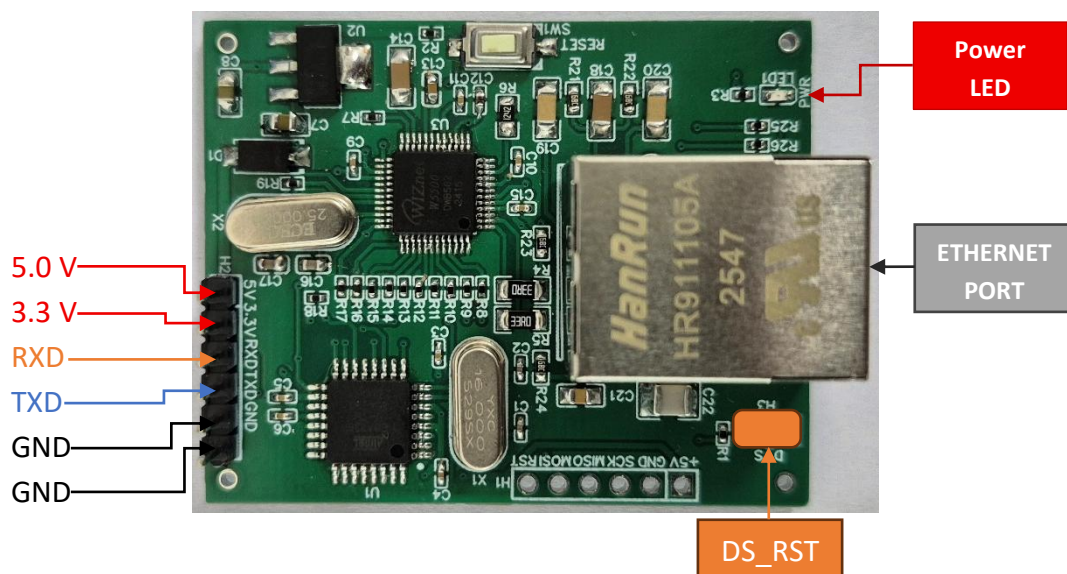

Contact us: -

Augmatic Technologies Pvt. Ltd.,
Plot no 6, Shah Industrial Estate II,
Kotambi,
Vadodara – 391510.
Email – Sales@wittelb.com