

Technical Datasheet Input / Output Modules with Modbus RTU Protocol with RS485 Interface

The IO modules communicate via RS485. The port can drive distances up to max 700 meters without the use of any repeater (*this feature however also depends on the signal strength of the Modbus Master Device*).

The RS485 Digital IO module is sturdy, low power usage and easy to use.

4 Port DO Module: -



The IO modules are mounted on DIN rail mountable casing and will also have a top acrylic safety cover on top for safety.

The design of the modules incorporates '**resettable Fuses**' to safeguard against sudden High Voltage spikes. the board also has '**reverse polarity**' protection both for input and power connector.

the communication port also has signal isolation and additional jumper for 'end of line' 120 ohms termination resistance which may or may not be used.

Specifications

General –

I/O Connectors	12 Pin 5.08 mm pitch pluggable screw Terminal Block
Dimensions	70 mm x 110 mm x 50 mm
Power	Input Power – 24 V AC/DC Typical – 12V DC @ 80mA
Operating Temperature	0 – 60° C (32 ~ 140°F)
Storage Temperature	-20 - 70° C (-4 ~ 158°F)
Storage Humidity	5 ~ 95 % RH, non – Condensing

Certifications



Relay Output –

Channels	4
Contact Form	1A, 1C
Contact Material	Ag Alloy
Contact Capacity	10A @ 240VAC, 10A @ 28VDC
Coil Voltage	5 – 48 VDC
Coil Power	0.36 W
Insulation Resistance	250MΩ
Electrical Life	1 x 10 ⁵
Mechanical Life	1 x 10 ⁷
Operating Time	7 msec, Max 15 msec
Release Time	2 msec, Max 6 msec

Additional Features: -

Communication port isolated
 Input power reverse polarity safety
 ESD Safety IEC 61000-4-2, ± 30KV contact, ± 30KV air
 EFT IEC 61000-4-4, 50A (5/50ms)
 750V isolation.
 CRC Error check.
 No configuration needed on the IO board

DIP SETTING – For Manual Switch Setup
Configuration Settings: -

Communication Speed	9600 – 115200 Kbps (Default 9600) DIP SW selectable
Data Bits	8
Parity	None
Stop bit	1
CRC	Yes
Slave ID	Pre-Configured OR DIP SW Selectable
Function code	0x05 and 0x0F (5 Single coil & 15 multiple coil)
DO Register Address	0,1,2,3.

Note: -


For MODBUS communications, a **shielded and twisted pair cable** is used. One example of such cable is Belden 3105A.

Recommended Cable Electrical Characteristics:

22 AWG Cable	Shielded Twisted pair should be used
Tinned Copper	Recommended
Nominal Conductor DCR	14.7 ohm / 1000 ft
Nominal Capacitance	11 pf / feet (conductor to conductor)
High Frequency Non-Insertion Loss	0.5db / 100ft

ID	Function Description	Register Description	Modbus Function Code	Protocol	Data Type
1	DO 1	00001	0X05,0X0F	RS485	1 Bit Boolean
2	DO 2	00002	0X05,0X0F	RS485	1 Bit Boolean
3	DO 3	00003	0X05,0X0F	RS485	1 Bit Boolean
4	DO4	00004	0X05,0X0F	RS485	1 Bit Boolean

DO

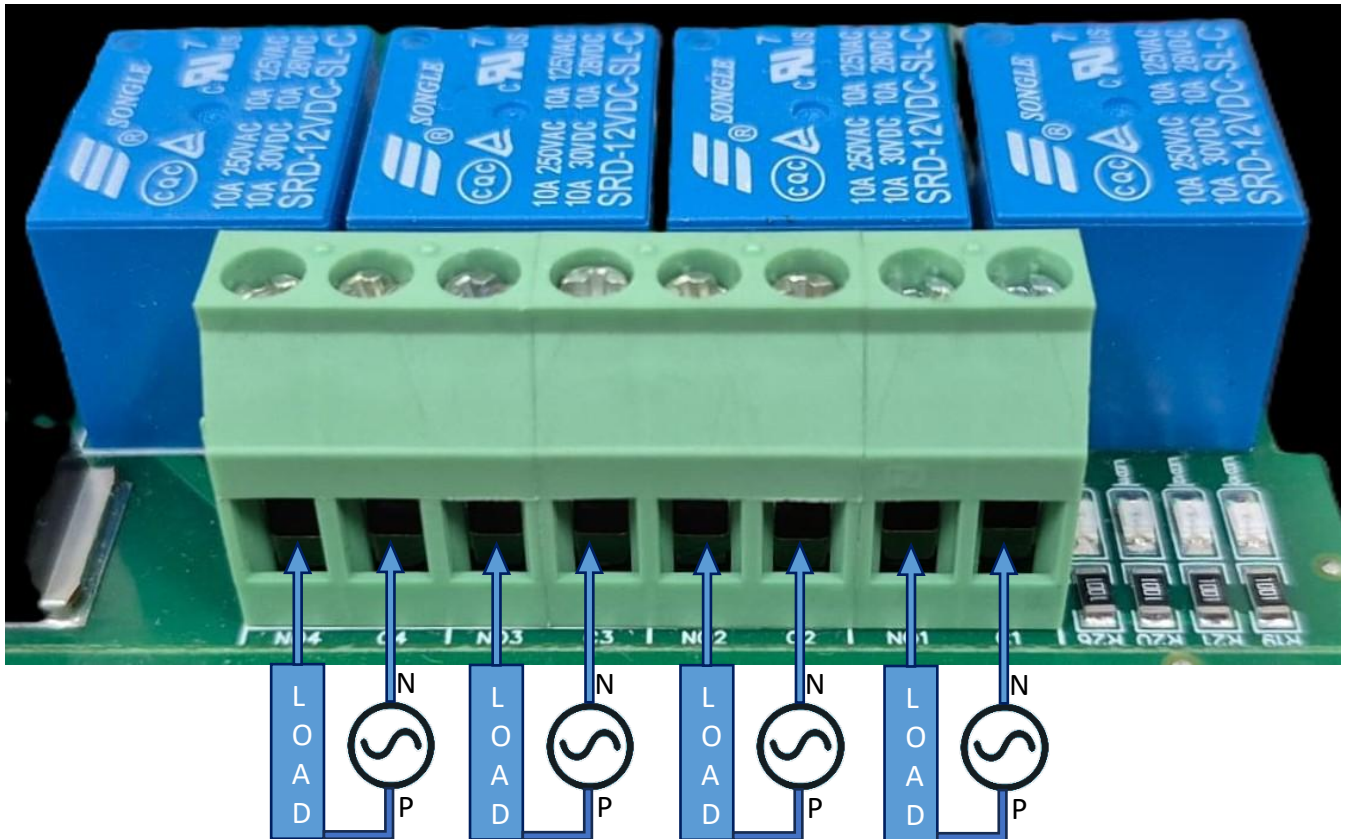


- **Digital Output (DO) operation:** Each channel provides two terminals: **C (Common)** and **NO (Normally Open)**. When the relay coil is energized, terminal **C** is **internally connected to NO**, allowing current to flow. When the relay is de-energized, the connection between **C and NO** remains open, and the load stays OFF.
- **Load Wiring Connections:**
 - **AC Load Connection:** The **AC Live (Phase)** wire should be connected to terminal **C**. The load is connected between terminal **NO** and **Neutral (N)**.
 - **DC Load Connection:** The **positive supply (+V)** should be connected to terminal **C**. The load is connected between terminal **NO** and **Ground (GND)**.
- **Crucial Safety Recommendation and Rating:** It is strongly recommended to switch the Live (Phase) conductor in AC applications to ensure the load is safely de-energized when the relay is off.

Note: Ensure that the connected load does not exceed the relay's contact rating of **10A @ 250VAC** (or **10A @ 125VAC**) or **10A @ 30VDC** (or **10A @ 28VDC**).

Slave ID:


BAUD RATE DESCRIPTION:

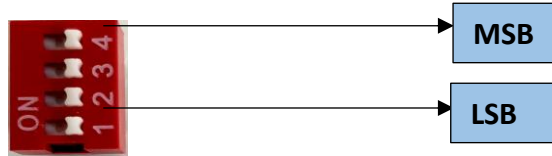

- For Baud rate Selection, DIP SW is used as per the diagram.
- Pulling up the switch will make Baud rate active.
- If no selection is made 9600 will be default Baud rate.
- When u change the Baud rate in the Module power 'ON' condition, pls press the reset button to get Change to affect.

Baud Rate	DIP SWITCH			
	1	2	3	4
9600	OFF	OFF	OFF	OFF
19200	ON	OFF	OFF	OFF
38400	OFF	ON	OFF	OFF
57600	OFF	OFF	ON	OFF
115200	OFF	OFF	OFF	ON

SLAVE ID DESCRIPTION:

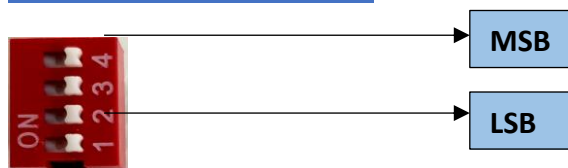

For Slave ID Selection SW is used to Set the SLAVE ID.

For Slave ID DIP Switch **LSB is "1"** follow through **"4" is MSB**.

Slave ID Confirmed through below Device ID table. If Eg: Slave ID 1 is Needed to be selected Switch number 1 should pulled up other three should be selected down side. So "1 0 0 0" will be selected as Slave ID 1.

Slave ID	DIP SWITCH				OUTPUT (Binary)	OUTPUT (Decimal)
	1	2	3	4		
0	OFF(0)	OFF(0)	OFF(0)	OFF(0)	1 0 0 0	1
1	ON(1)	OFF(0)	OFF(0)	OFF(0)	1 0 0 0	1
2	OFF(0)	ON(1)	OFF(0)	OFF(0)	0 1 0 0	2
3	ON(1)	ON(1)	OFF(0)	OFF(0)	1 1 0 0	3
4	OFF(0)	OFF(0)	ON(1)	OFF(0)	0 0 1 0	4
5	ON(1)	OFF(0)	ON(1)	OFF(0)	1 0 1 0	5
6	OFF(0)	ON(1)	ON(1)	OFF(0)	0 1 1 0	6
7	ON(1)	ON(1)	ON(1)	OFF(0)	1 1 1 0	7
8	OFF(0)	OFF(0)	OFF(0)	ON(1)	1 0 0 0	8
9	ON(1)	OFF(0)	OFF(0)	ON(1)	1 0 0 1	9
10	OFF(0)	ON(1)	OFF(0)	ON(1)	1 0 1 0	10
11	ON(1)	OFF(0)	ON(1)	ON(1)	1 0 1 1	11
12	OFF(0)	OFF(0)	ON(1)	ON(1)	1 1 0 0	12
13	ON(1)	OFF(0)	ON(1)	ON(1)	1 1 0 1	13
14	OFF(0)	ON(1)	ON(1)	ON(1)	1 1 1 0	14
15	ON(1)	ON(1)	ON(1)	ON(1)	1 1 1 1	15

SOFT SETTING – For Modbus / Software Setup

Configuration Settings: -


Communication Speed	9600 – 115200 (DIP SW selectable)
Data Bits	8
Parity	None
Stop bit	1
CRC	Yes
Slave ID	Soft settings (1-247).
Function code DO	0x05 and 0x0F (5 Single coil & 15 multiple coil)
DO Register Address	0, 1, 2, 3.
Function Code Soft Serial	0x03 Read Holding Registers
Soft serial Register Address	11, 12, 13, 14, 15, 16, 17, 18.

Note:

1. In register 40015- you will be able to see the current parity and you can change it in register 40016
2. In register 40017- you will be able to see the current stop bit and you can change it in register 40018
3. If you want to enter the baud rate 9600/19200/38400/57600/115200etc. Enter it as 960/1920/5760/11520etc.
4. After that press the reset button or reboot the system.


BAUD RATE and SLAVE ID DESCRIPTION:

- As you can see in the image above, the resistor 40011 – 960 represents the present bund rate (9600) of the board and 40013 – 1 represents the present slave id of the board.
- To change the baud rate and slave id you have to enter a value on the 40012, resistor for the baud rate and 40014 for the slave id as shown in the image below.

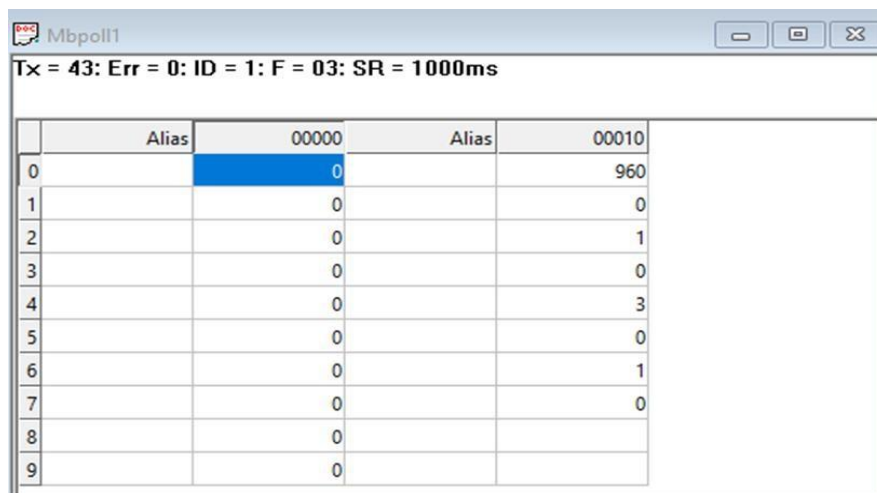

Tx = 43: Err = 0: ID = 1: F = 03: SR = 1000ms

	Alias	00000	Alias	00010
0		0		960
1		0		0
2		0		1
3		0		0
4		0		3
5		0		0
6		0		1
7		0		0
8		0		
9		0		

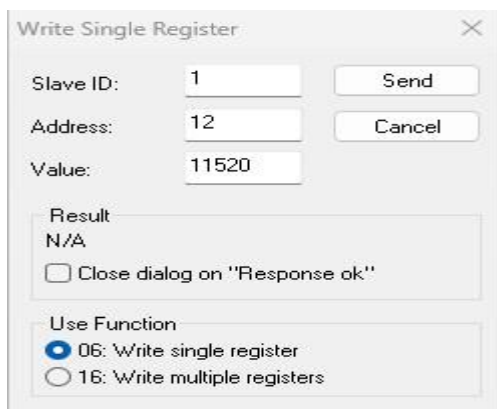

Write Single Register

Slave ID: 1 Send

Address: 12 Cancel

Value: 11520


Result: N/A

☐ Close dialog on "Response ok"

Use Function:

☒ 06: Write single register

☐ 16: Write multiple registers

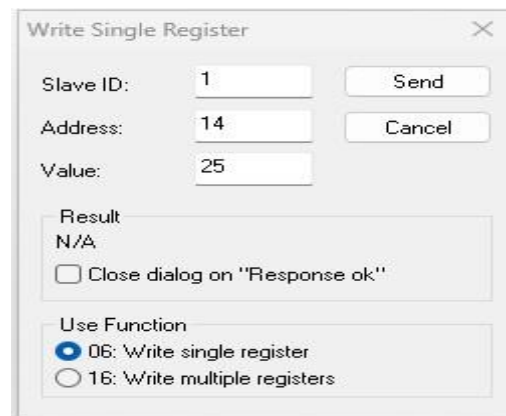

Write Single Register

Slave ID: 1 Send

Address: 14 Cancel

Value: 25

Result: N/A

☐ Close dialog on "Response ok"

Use Function:

☒ 06: Write single register

☐ 16: Write multiple registers

Mbpoll1

Tx = 21: Err = 0: ID = 1: F = 03: SR = 1000ms


	Alias	00000	Alias	00010
0		0		960
1		0		11520
2		0		1
3		0		25
4		0		3
5		0		0
6		0		1
7		0		0
8		0		
9		0		

As you can see in the image above I set 115200 baud rate and slave ID 25.

Note:

- When entering baud rate values such as 9600 / 19200 / 38400 / 57600 / 115200, enter them as 960 / 1920 / 3840 / 5760 / 11520, respectively.
- After entering the values, press the reset button or reboot the system.
- Once restarted, you will see the updated values:
- 40011 – 11520 → Baud Rate (115200)
- 40013 – 25 → Slave ID (25)
- You can also change Parity Bit and Stop Bit of the device in the same way.
- Jumper Setting (Hardware Method):
- If you place the jumper, the device will load its default communication settings (default baud rate (9600) and slave ID (1)).
- This is useful when you have many devices with different settings and want a quick way to restore defaults without software changes.
- Relation between Jumper and Reset Button:
The jumper enables the default mode, and the reset button activates it.
- Simply insert the jumper → press reset → the device restarts with factory default settings automatic.

For more details: <https://youtu.be/DA8AUJ1H7jE?si=OQyzNOjltiIDFP4m>

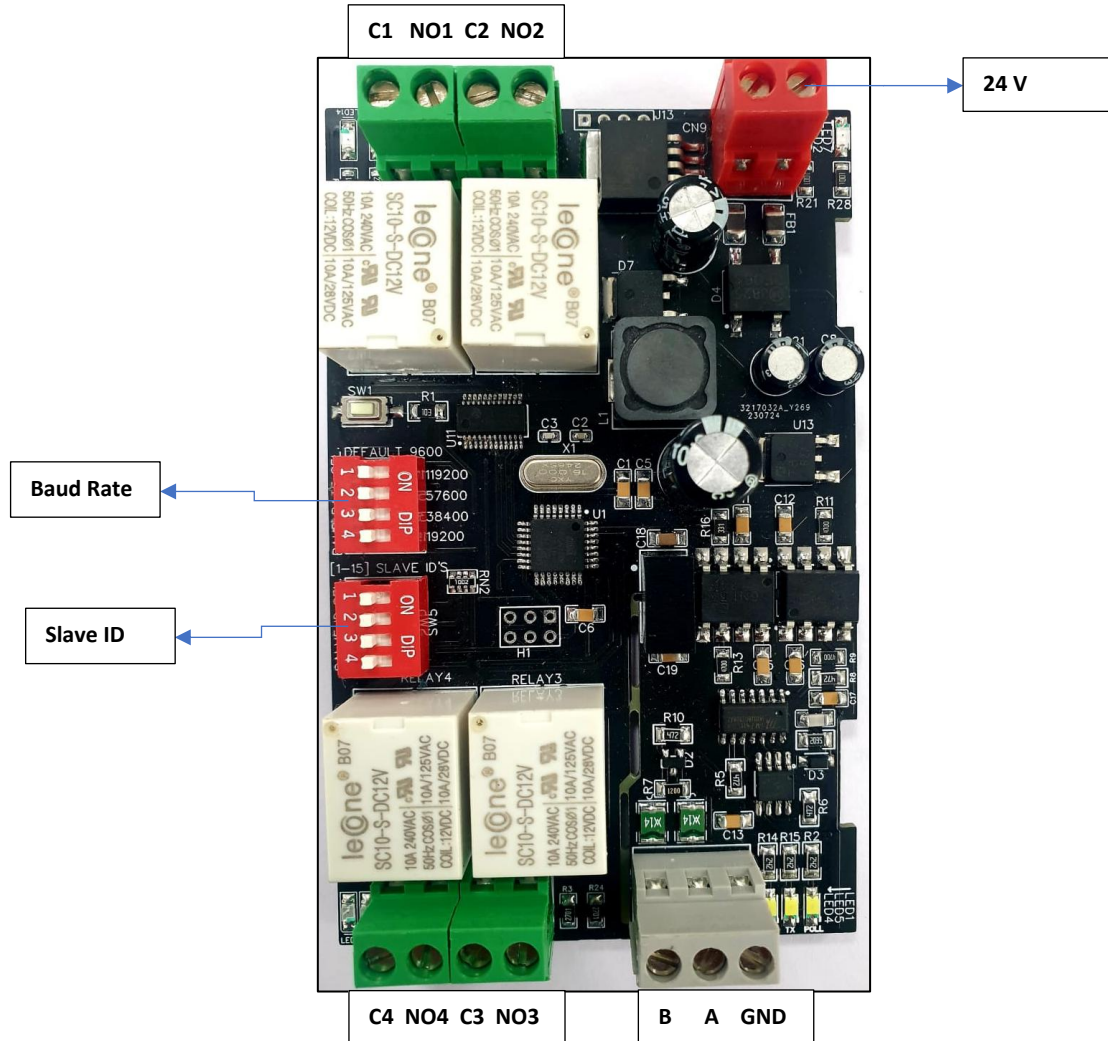

Contact Information

Augmatic Technologies Pvt. Ltd.,
Plot no 6, Shah Industrial Estate II,
Kotambi,
Vadodara – 391510.

Email – Sales@wittelb.com

Support E.: support@wittelb.raiseaticket.com / M.: 9403892805