




G-BOX (Access control)) Deployment

2024.08.26



Part I : G-BOX Product Parameters

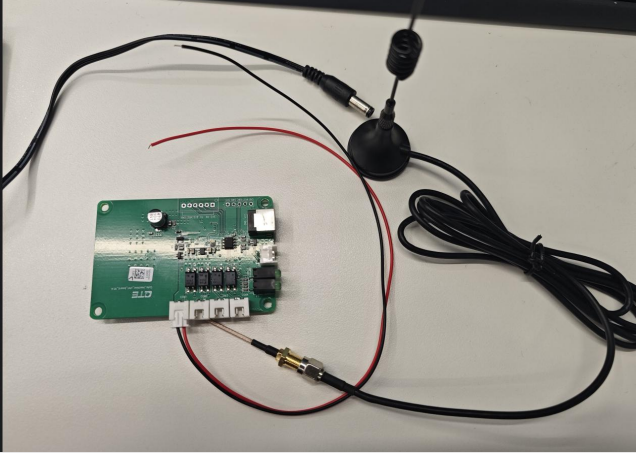V1.4 Gate board		Communication Method	Lora Radio Frequency	
		Operating Voltage	AC 100-240v/DC 12V	
		Communication Distance to the robot	4 Meter	
		Product Dimension		
		Docking Methods	Access control/gate opener dry contact signals	
		Availability	unavailable	
V2.4 Gate board		Communication Method	2.4G Hz	
		Operating Voltage	AC 100-240v/DC 12V	
		Communication Distance to the robot	4 Meter	
		Product Dimension	100*85*25mm	
		Number of single-project support matches	98	
		Docking Methods	Access control/gate opener dry contact signals	
		Availability	Available	




Part II: 2.4G Hz G-BOX Deployment Instructions



GBOX Master

Power Adapter

GBOX IO cable

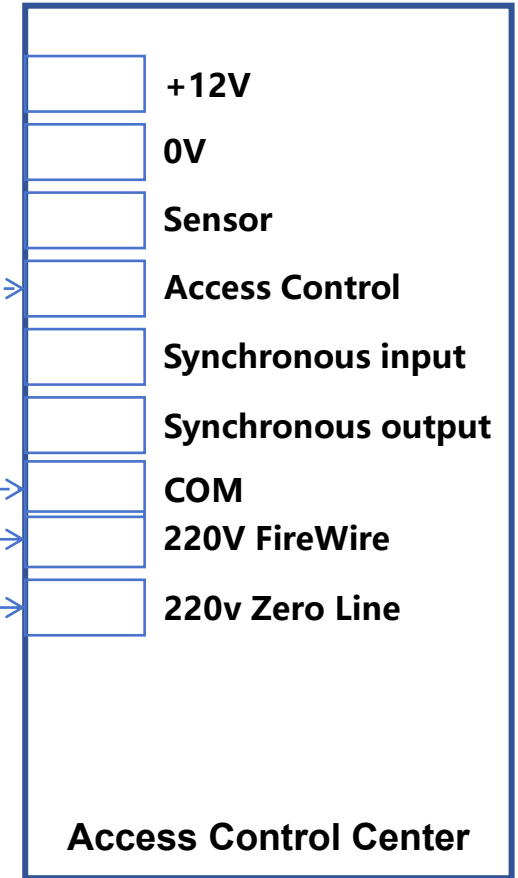

Introduction: The first two digits of the display are the channel band, which needs to be consistent with the channel of the robot scheduling module, the default is 1, no need to set; the last two digits are the number, the default is 1, the maximum support 99; If there are more than one door control in this scene, you need to change the number of each door control to different; When the device has not been operated for a long time, the screen will turn off automatically but it does not affect the normal use, you can press the set button (set) to view the information;


Setting method 1. After connecting the power supply, the screen lights up, please press the set button lightly within 5s (the device needs to be restarted after the timeout) to enter the setting mode. enter the setting mode; 2, the channel number in the screen starts to flash, at this time you can press the (+) adjustment button to change the channel; if you don't need to change the channel or have already changed it, you can proceed to step three; 3、 Press the set button again, the numbered digits in the screen begin to flash, at this time you can press the (+) adjustment button to change the number; 4, with the adapter to the product for power supply and test, such as the screen is normally lit and the number is normal, the setup is complete.



Part II: 2.4G Hz G-BOX Deployment Instructions



The antenna needs to be placed vertically,
horizontally the signal is not good

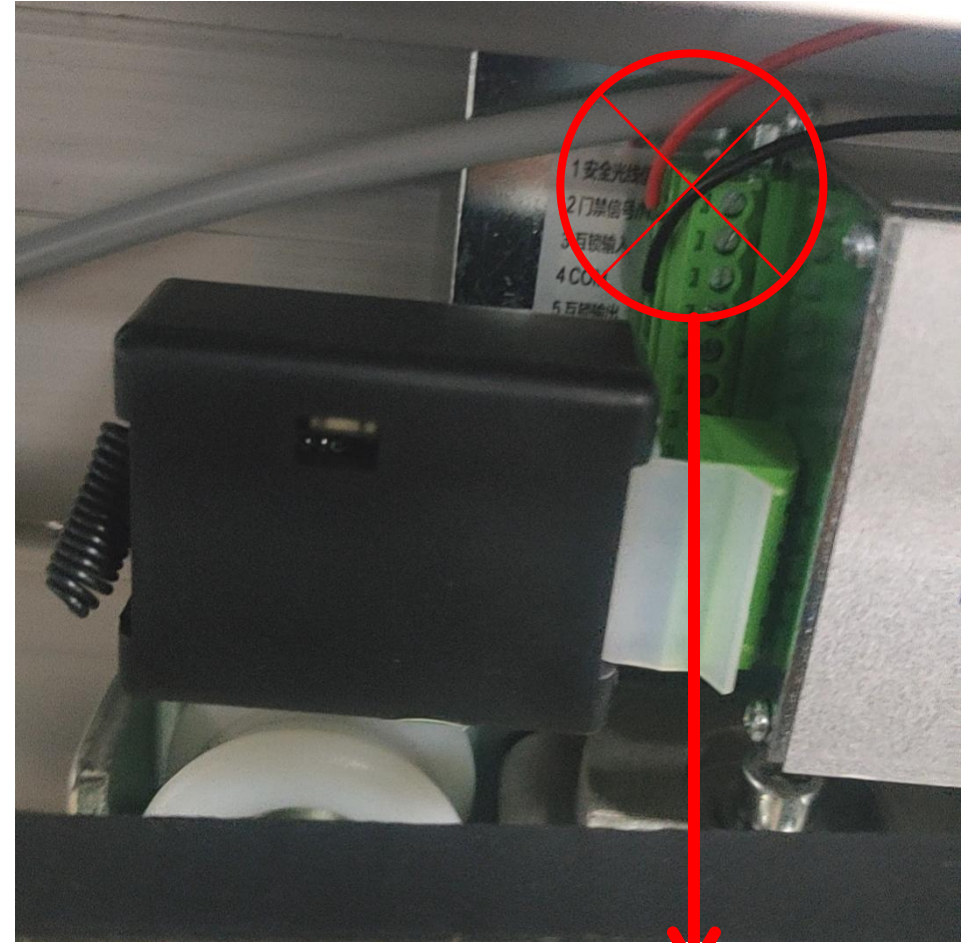

Don't leave too much wire out, it's easy to short out
the lap wire and cause the control to malfunction


Part III: Description of the 2.4G Hz G-BOX Robotics Installation

Step1: Gate area mapping

Operation and maintenance platform-remote deployment connected to the robot, map management Click on the corresponding floor - click retouching

Click on the gate area - polygon, in the corresponding map area to draw the gate area, MAC address input box in the last two G-BOX number, gate number box to enter and the robot number is not consistent with the number of digits, for example, there is only one G-BOX module, the above shows 0205, then the gate number can be entered:

1, gate mac address input: 5, gate number is the serial number, used to distinguish between multiple G-BOX order; input is complete, click on the gate inside or gate outside (inside), and then click on the gate to draw the gate area, then click on the gate area - polygon, in the corresponding map area. BOX; after inputting, click the inner gate or outer gate (inner connects to CONTROL 3, outer connects to CONTROL 1), finally click confirm, click save map, and then restart the robot.

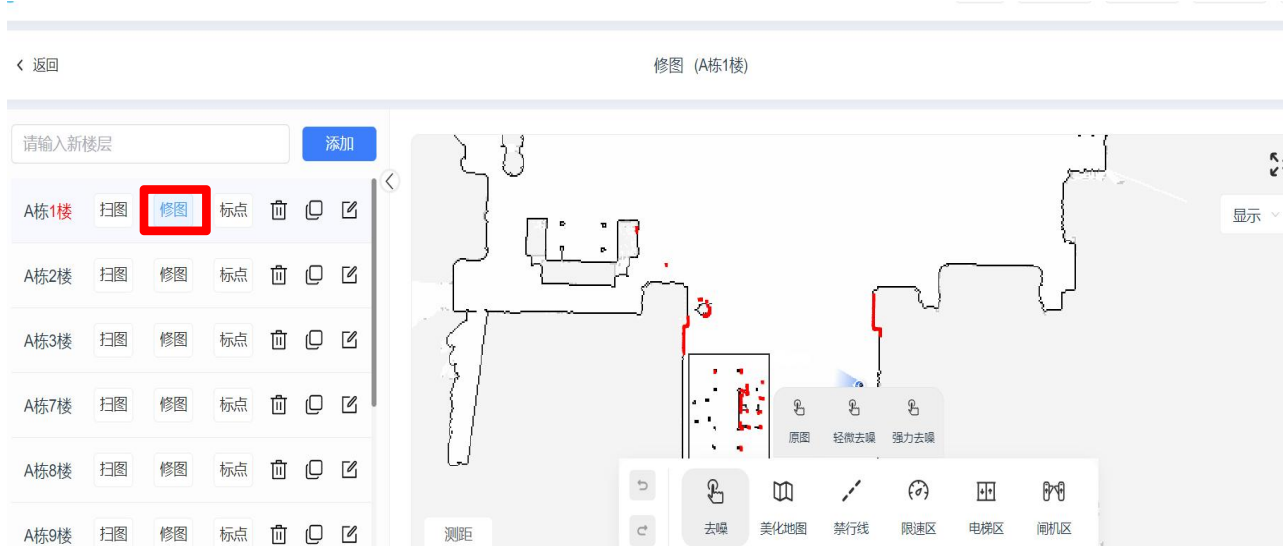


1



2

Part III: Description of the 2.4G Hz G-BOX Robotics Installation


Step1: gate area mapping, Operation and maintenance platform-remote deployment connected to the robot, map management. Click on the corresponding floor - click retouching, Click on the gate area - polygon, in the corresponding map area to draw the gate area, MAC address input box in the last two G-BOX number, gate number box to enter and the robot number is not consistent with the number of digits, for example, there is only one G-BOX module, the above shows 0205, then the gate number can be entered: 1, gate mac address input: 5, gate number is the serial number, used to distinguish between multiple G-BOX order; input is complete, click on the gate inside or gate outside (inside), and then click on the gate to draw the gate area, then click on the gate area - polygon, in the corresponding map area. BOX; after inputting, click the inner gate or outer gate (inner connects to CONTROL 3, outer connects to CONTROL 1), finally click confirm, click save map, and then restart the robot.

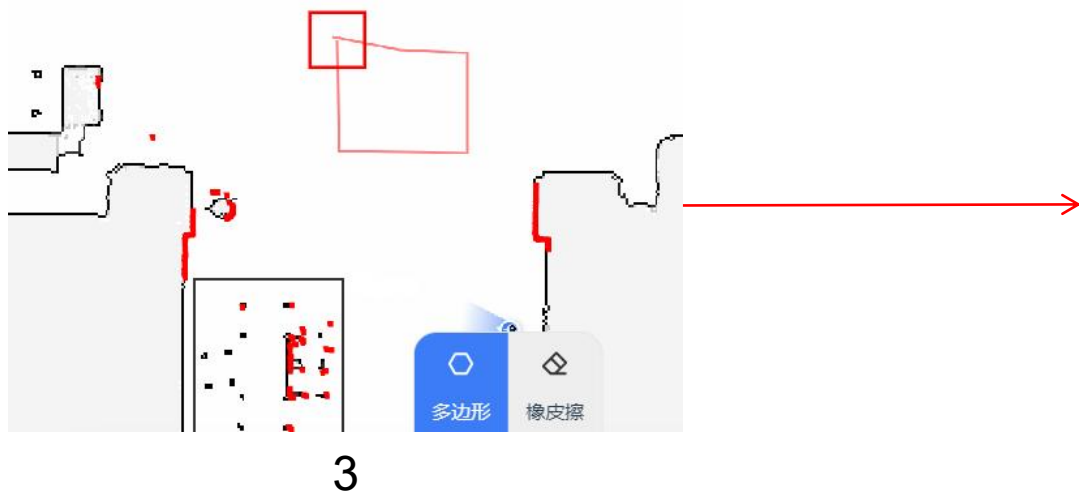

The screenshot shows a dialog box titled '闸机区域' (Gate Area) with a close button 'X' in the top right corner. It contains three input fields: '闸机编号: *' (Gate Number: *) with the value '1', '闸机mac地址: *' (Gate MAC Address: *) with the value '5', and '闸机方向: *' (Gate Direction: *) with radio buttons for '闸机内侧' (Gate Inner Side) and '闸机外侧' (Gate Outer Side). The '闸机内侧' option is selected. At the bottom right, there are two buttons: '取消' (Cancel) and '确定' (Confirm).

Part III: Description of the 2.4G Hz G-BOX Robotics Installation

Step2: Robot Scheduling Channel Configuration Click on DynaRobot, enter the super password, click on System Settings, click on Exit program Click Robot Installation Assistant, keep clicking Next until Step 4, Advanced Settings. Multi-machine setup, queuing setup, turn on the scheduling switch, select the origin, set the robot number (not the same as the last two digits of the G-BOX), the channel for scheduling (the channel representing the first two digits of the G-BOX), click Save, and click Upload Map. After the setup is complete, the robot stays in the charging pile, restart the robot

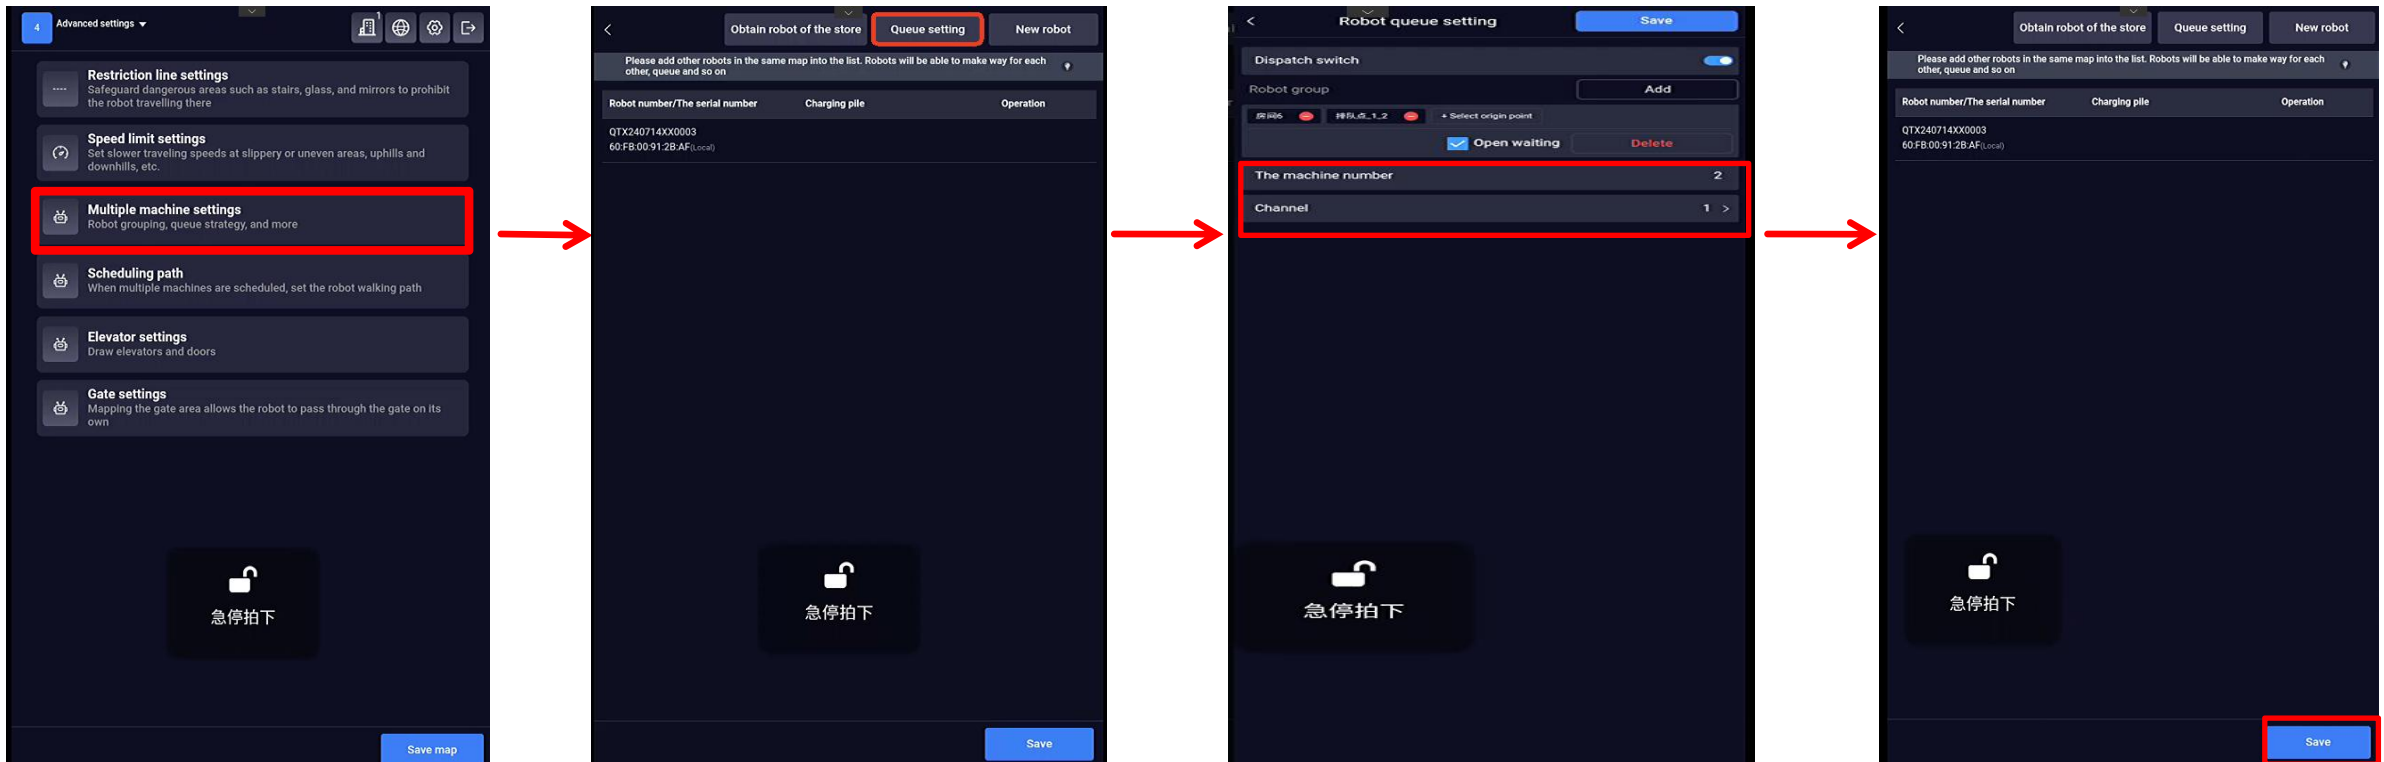



01

Robots don't go through the gate.

1、 Check whether the G-BOX device is powered on, whether the antenna is connected, whether the channel and number are the same as those set by the machine.2、 Check whether the robot scheduling channel and number, ros version is 2.2.4-c10 and above, and whether the scheduling module version is 3.1.1 and above.3、 Check whether the CONTROL port of G-BOX is lighted when the robot passes through, and check whether it is not lighted 1 or 2.4, manually open the gate to test whether the robot passes, such as through, open the door signal wiring, such as not through, check 1, 2, map

02

Robot caught in the gate

1、 Check whether the map gate area is too large or too small2、 Check whether the gate has a retrograde ban, if necessary contact the gate manufacturer to close the3、 Check whether the gate is forced to close the door, if necessary, contact the gate manufacturer off