



MODULE 2 ASSI 3

Cyber security

**1. LIST 5 COMMON ISSUES USERS FACE WITH
USB KEYBOARDS OR MICE ON LAPTOPS, AND
WRITE ONE POSSIBLE SOLUTION FOR EACH**

Common USB Keyboard/Mouse Issues and Solutions

Issue

1. Keyboard or mouse not detected
2. Device works intermittently
3. Keyboard keys not responding
4. Mouse cursor freezes or moves erratically
5. USB device is very slow or stops working

Possible Solution


Unplug the USB device and reconnect it to another USB port.

Check the USB cable for damage and try a different USB port.

Restart the laptop and update or reinstall the keyboard driver.

Clean the mouse sensor and try using it on a suitable flat surface.

Restart the laptop and update the USB/chipset drivers.

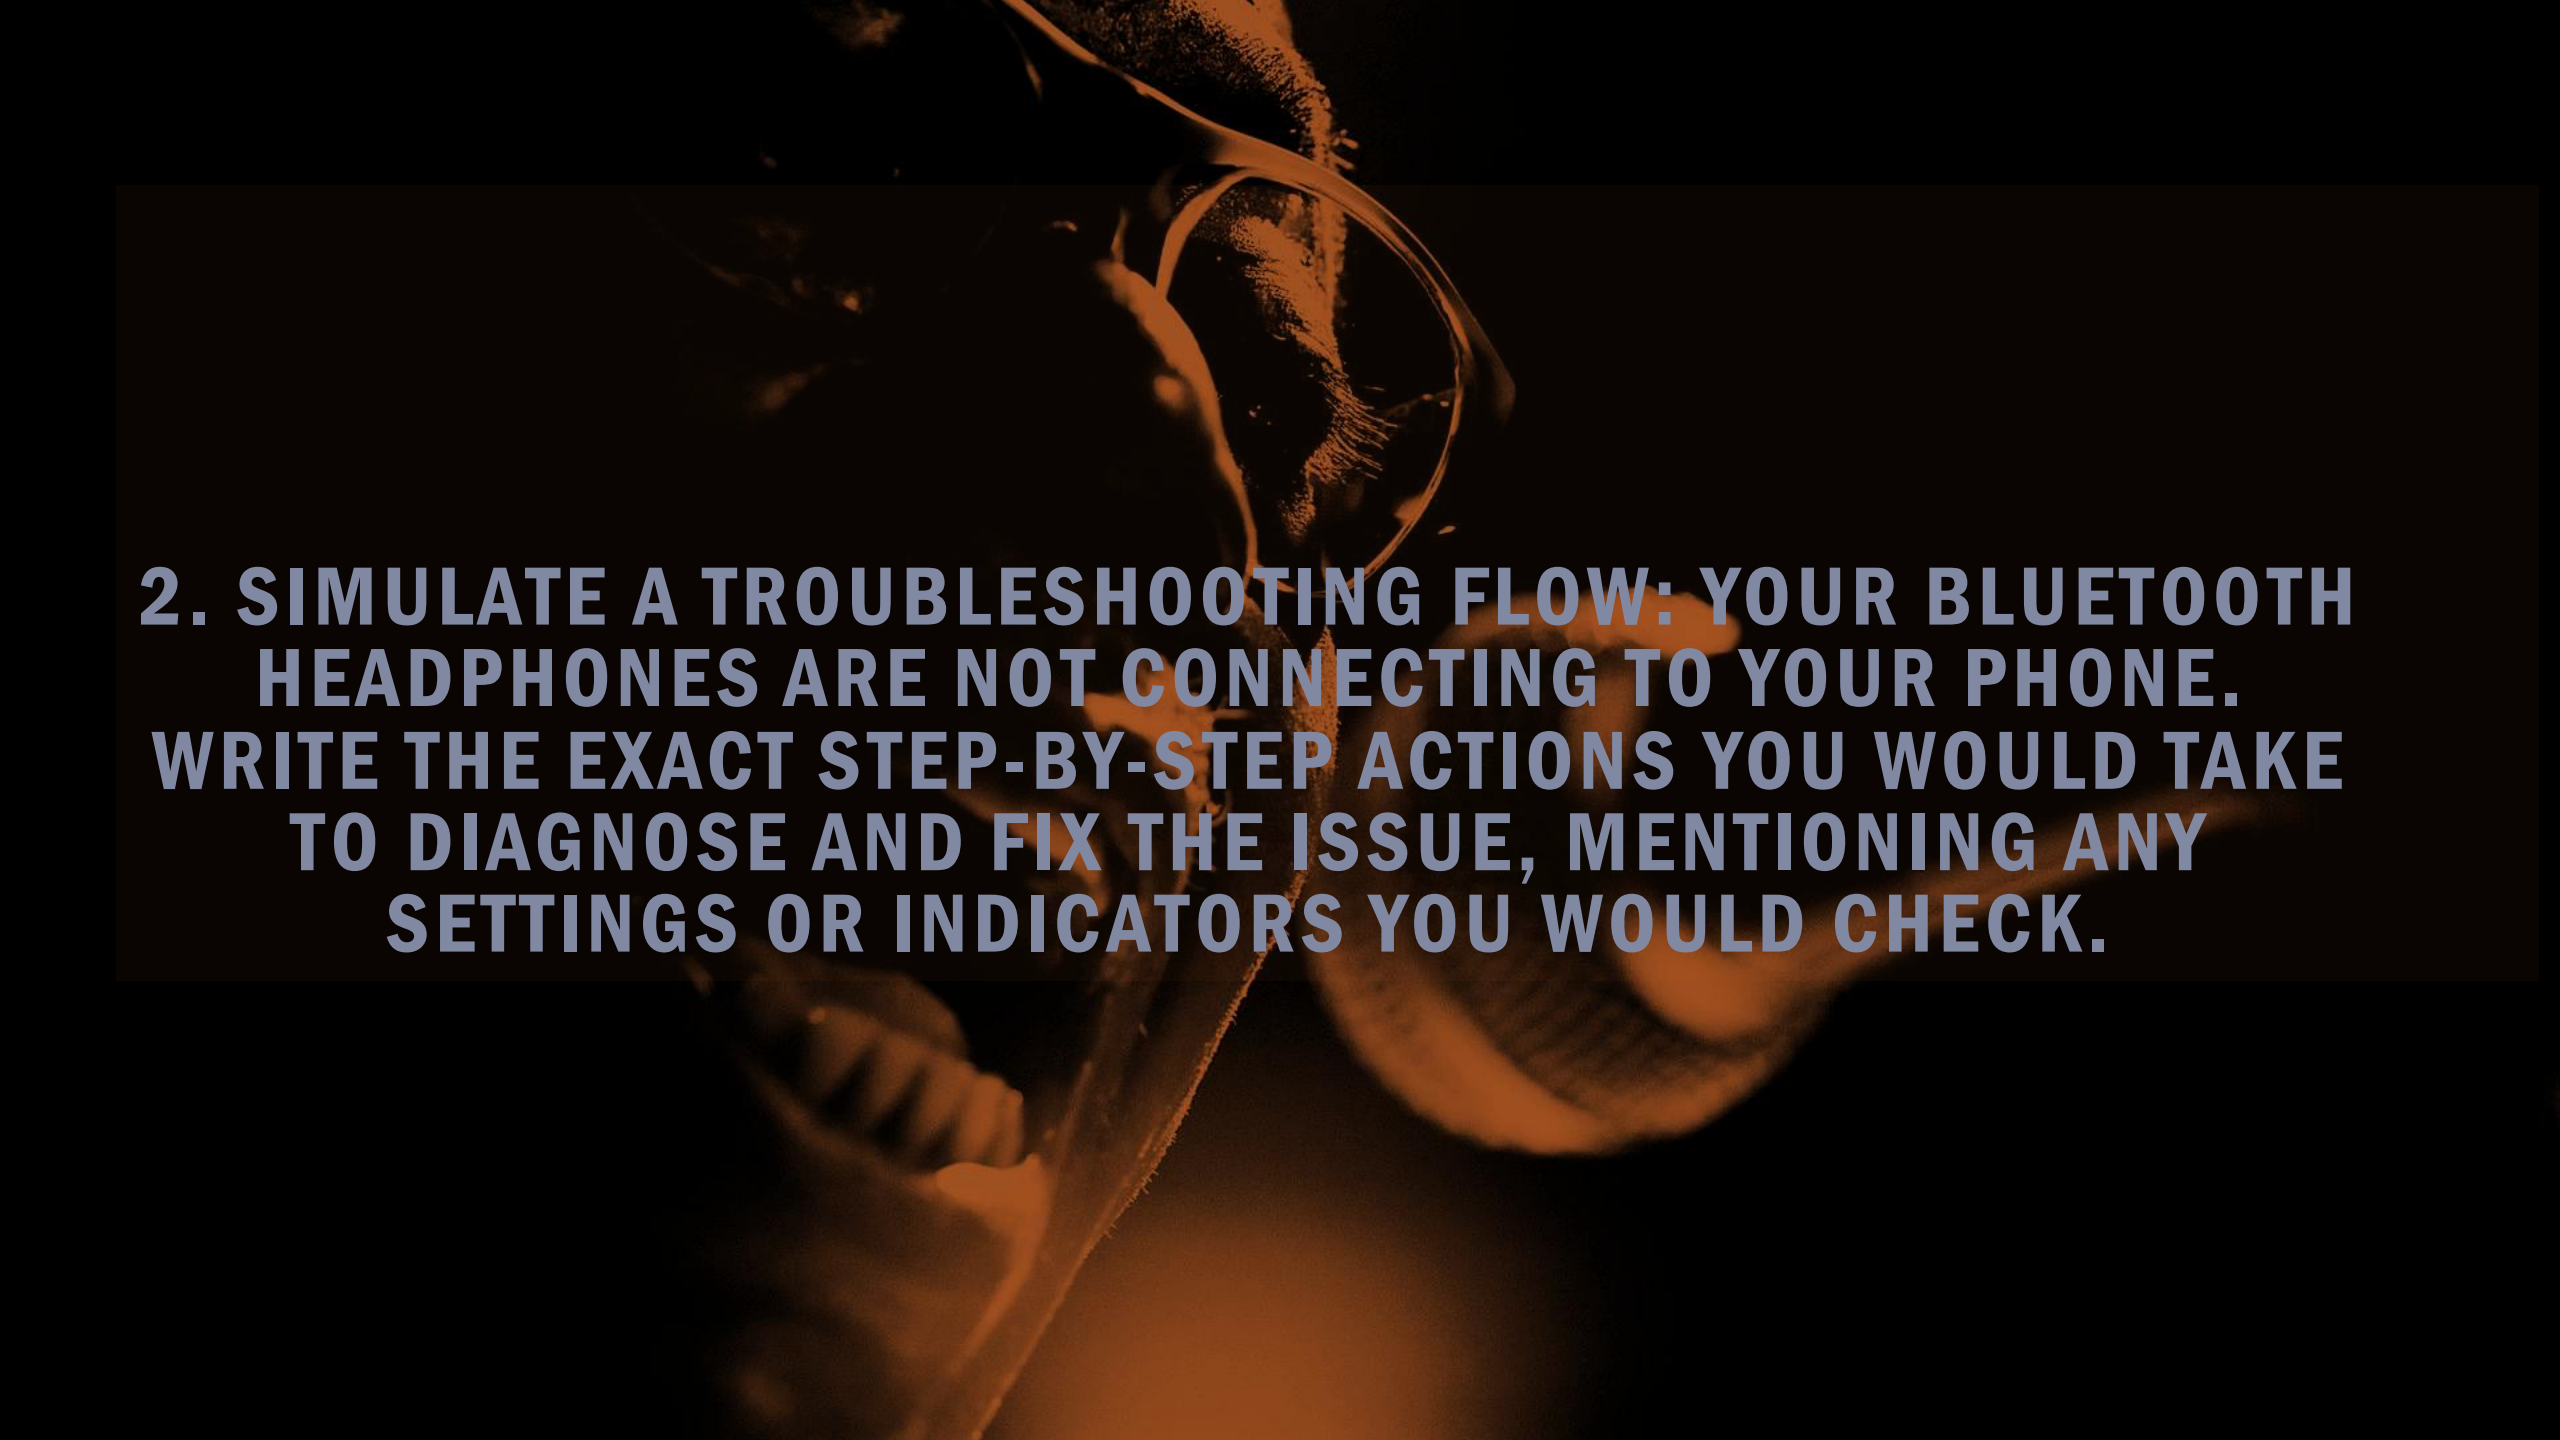

2. SIMULATE A TROUBLESHOOTING FLOW: YOUR BLUETOOTH HEADPHONES ARE NOT CONNECTING TO YOUR PHONE. WRITE THE EXACT STEP-BY-STEP ACTIONS YOU WOULD TAKE TO DIAGNOSE AND FIX THE ISSUE, MENTIONING ANY SETTINGS OR INDICATORS YOU WOULD CHECK.

BLUETOOTH HEADPHONES NOT CONNECTING – TROUBLESHOOTING FLOW

Check the headphones' power – Turn the headphones on and make sure the battery is sufficiently charged.

Check Bluetooth on the phone – Go to **Settings** → **Bluetooth** and make sure Bluetooth is **ON**.

Check pairing mode – Put the headphones into **Bluetooth pairing mode** and look for a blinking Bluetooth/status indicator.

Check the device list – In the phone's Bluetooth settings, look for the headphones under **Available Devices**.

Try connecting – Tap the headphones' name and wait for the status to change to **Connected**.

Check for an existing connection – If the headphones are connected to another phone, laptop, or tablet, disconnect them from that device first.

Forget and re-pair – If the headphones appear but will not connect, tap **Forget/Unpair**, then put them back into pairing mode and pair them again.

Restart both devices – Turn Bluetooth off and on, restart the phone, and power-cycle the headphones.

Check distance and interference – Keep the headphones within a few meters of the phone and move away from possible sources of interference.

Reset the headphones – If the problem continues, perform the manufacturer's **Bluetooth/factory reset** procedure and try pairing again.

Final check – Test the headphones with another phone. If they still fail to connect, the headphones may have a hardware or battery problem.

**3. A USER REPORTS THAT THEIR
EXTERNAL WEBCAM IS NOT DETECTED
DURING A ZOOM CALL ON WINDOWS 10.
WRITE A CHECKLIST OF 6 THINGS TO
CHECK OR TRY TO RESOLVE THE
PROBLEM.

HIN
T: CONSIDER DEVICE
MANAGER, PRIVACY SETTINGS, AND APP
PERMISSIONS.**

CHECKLIST: EXTERNAL WEBCAM NOT DETECTED IN ZOOM ON WINDOWS 10

Check the USB connection – Unplug the webcam and reconnect it to another USB port; make sure its indicator light turns on if it has one.

Check Device Manager – Open Device Manager → Cameras/Imaging devices and check whether the webcam appears. Update or reinstall its driver if necessary.

Check Windows camera privacy settings – Go to Settings → Privacy → Camera and turn on Allow access to the camera on this device.

Allow app access – In Settings → Privacy → Camera, enable Allow apps to access your camera and Allow desktop apps to access your camera.

Select the correct camera in Zoom – Open Zoom → Settings → Video and select the external webcam from the Camera drop-down menu.

Close other apps and restart – Close apps such as Teams or Skype that may be using the webcam, then restart Zoom and the computer.

4. YOU ARE HELPING A FRIEND WHOSE PRINTER IS SHOWING 'OFFLINE' STATUS ON THEIR PC. DESCRIBE HOW YOU WOULD USE THE WINDOWS TROUBLESHOOTER TOOL TO TRY TO FIX THE ISSUE, AND EXPLAIN WHAT INFORMATION THE TOOL PROVIDES DURING THE PROCESS.

USING WINDOWS TROUBLESHOOTER TO FIX AN OFFLINE PRINTER

Open Settings – Click Start → Settings → Devices → Printers & scanners.

Select the printer – Click the printer that shows **Offline** and select **Manage**.

Run the troubleshooter – Click **Run the troubleshooter** and allow Windows to check the printer.

Follow the instructions – Follow the on-screen steps suggested by the troubleshooter, such as checking the printer connection, restarting the printer, or correcting printer settings.

Apply recommended fixes – If Windows finds a problem, select **Apply this fix** or follow the recommended solution.

Test the printer – After troubleshooting, print a test page to confirm that the printer is back online.

Information Provided by the Troubleshooter

During the process, Windows reports **what it is checking**, such as the printer connection, driver, print spooler, and printer configuration. It also identifies **detected problems**, indicates whether they were **fixed automatically**, and may provide **additional steps** if the problem cannot be fixed automatically.



THANK YOU