

ST-Li-48105(48V105Ah)



General

Nominal Voltage	48V
Recommended work SOC range	10-100%
Cell Count	15
Nominal Capacity	105Ah@0.5C 25°C
Energy	5040Wh
IP Rating	IP65
Self Discharge	≤1% per month
Cycle life	4000times(80%D O D)

Charging

Recommended charging current	50A
Max Charging Current	105A
BMS High Voltage Cutoff	54.75V
Charging Temp. Range	0°C~45°C

Discharging

Recommended Discharge Current	75A
Continue discharge current	105A
Max Discharge 5 Sec	200A
BMS Voltage Cutoff	42V
Discharge Temp Range	-20°C~60°C

PACK Style



Physical

Cell Chemistry	Lithium Iron Phosphate
Cell Type	Prismatic LFP 105Ah
Cell Configuration	15S1P
Series Connectable	No
Parallel Connectable	No
Weight	48Kg
Dimension LxWxH	544X300X219mm
Shell Type	Powder Coated Steel
UN Shipping Class	UN 3480


Safety

Charging Freeze Protection	Yes, Under Under 0°C
Pack Over-Voltage	Yes
Cell Balancing	Yes
Pack Under-Voltage	Yes
Cell Under-Voltage	Yes
Cell Over-Temp	Yes
BMS Over-Temp	Yes
Short Circuit/Over Current	Yes
Certifications	UN38.3


Communication

Bluetooth	Yes
CAN	Yes

0.5C Charge and discharge Performance at 25°C

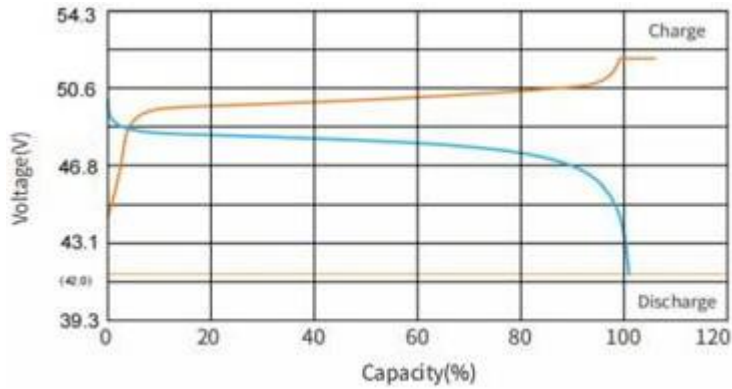

PACK SIZE

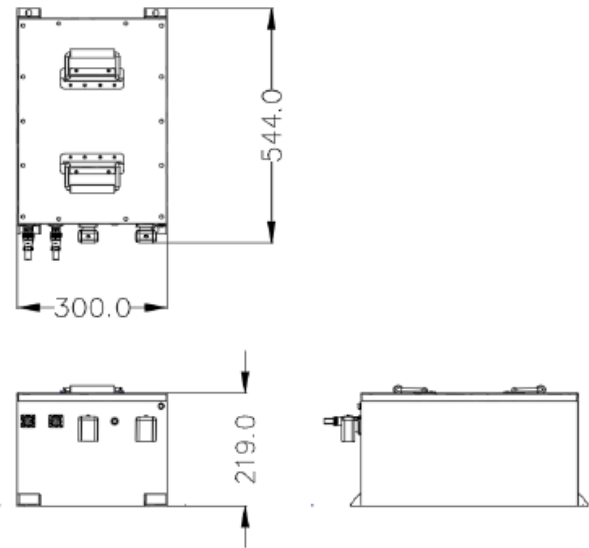

Cautions

1. Do NOT short circuit, crush or disassemble.
2. Do NOT heat or incinerate.
3. Do NOT immerse in any liquid.
4. Store at 50% capacity. Recharge every 6 months. The storage area should be clean, cool, dry and ventilated.
5. Disconnect charging source prior to connecting or disconnecting battery terminals.
6. Do NOT dispose of batteries in a fire as they can explode.
7. Do NOT open, alter, or mutilate battery. Released electrolyte is harmful to skin and eyes. It may be toxic.
8. Do NOT mix different types and brands of lithium-ion batteries.
9. Do NOT dispose in trash, follow local regulations and manufacturer's instruction.
10. See installation instructions before connecting to the supply.
11. The battery cabinet receives power from more than one source. Disconnection of all DC sources is required to De-energize this unit before installing or servicing. Wait 5 minutes before opening the unit.
12. Do NOT install on or over combustible surfaces.
13. Refer to manual before servicing.
14. Do NOT touch bare terminals.