

ETABSPY V2.0



1 Introduction

ETABSPY is a Python-based automation tool developed to streamline the extraction, processing, and formatting of shear wall pier forces from an analyzed ETABS model for use in S-CONCRETE.

Historically, this workflow required:

- Manual retrieval of pier forces from ETABS
- Copying and pasting results into Excel
- Post-processing forces using spreadsheets
- Manual preparation of S-CONCRETE input files

This process was repetitive, time-consuming, and susceptible to human error. ETABSPY automates the entire workflow by:

- Directly extracting forces from ETABS via API
- Performing all post-processing using Python (NumPy and Pandas)
- Automatically generating formatted S-CONCRETE design files
- Allowing granular user control over load combinations, walls, magnification factors, and story grouping

Processing times are significantly reduced while maintaining engineering transparency and control.

The screenshot displays the ETABSPY application window. On the left, a sidebar lists various dataframes loaded from a pickle file, including Story_Definitions (13 rows), Load_Pattern_Definitions (6 rows), Load_Case_Definitions_Linear_Static (1 row), Load_Combination_Definitions (2269 rows), Area_Section_Property_Definitions (5 rows), Area_Assignments_Pier_Labels (352 rows), Material_Properties_Concrete_Data (9 rows), Material_Properties_Steel_Data (5 rows), Objects_and_Elements_Areas (845 rows), Objects_and_Elements_Frames (1060 rows), Objects_and_Elements_Joints (1057 rows), Pier_Forces (30420 rows), Pier_Label_Definitions (165 rows), Pier_Section_Properties (130 rows), load_cases_df (13 rows), load_combinations_df (598 rows), stories_df (14 rows), materials (18 rows), area_pier_labels (380 rows), wall_sections_df (5 rows), pier_props_df (130 rows), wall_pier_props_df (130 rows), and pf_df (166920 rows).

The central panel displays the 'Story_Definitions' table:

	Tower	Story	Height	IsMaster	SimilarTo	IsSpliced	Color
0	T1	ROOF	3600	Yes	None	No	Yellow
1	T1	MPH FLOOR	5000	Yes	None	No	Blue
2	T1	AMENITY	4000	Yes	None	No	Cyan
3	T1	FLOOR 10	3600	Yes	None	No	Magenta
4	T1	FLOOR 9	3240	Yes	None	No	Gray8Dark
5	T1	FLOOR 8	3240	Yes	None	No	Green
6	T1	FLOOR 7	3240	Yes	None	No	Red
7	T1	FLOOR 6	3240	Yes	None	No	Yellow
8	T1	FLOOR 5	3240	Yes	None	No	Blue
9	T1	FLOOR 4	3240	Yes	None	No	Cyan

Below the table are buttons for 'Export to CSV' and 'Edit in Excel'.

The right panel shows the 'Activity Log' with the following entries:

```

Ready...
Loading from pickle file...
Path: C:/Users/siavash.habibi/OneDrive - Salas OBrien/Coding/ETABSPY/tests/26-02-11 - 20211158 - 403 Keele St. (43 - Core Shaft)-ULS-EQ_etabspy_20260217_112729.pk1
=====
✓ Loaded ETABSPY object with settings and 25 dataframes
Successfully loaded pickle file
Model: 26-02-11 - 20211158 - 403 Keele St. (43 - Core Shaft)-ULS-EQ_etabspy_20260217_112729
Tables loaded: 25
Populating property list...
Loaded from pickle (no active ETABS
  
```

At the bottom right of the activity log is a 'Clear Log' button.



2 Model Health Check

ETABSPY will perform an automated health check of the ETABS model. Key aspects such as geometry, load combinations, and element assignments will be reviewed, and a concise summary report will be generated to ensure the model is ready for further analysis. This button will only work if an active connection to an ETABS model has been made. Otherwise the button will be disabled.

ETABSPY

File Actions View Help

Check Model Health

Create Wall SCONC Files

ULS/SLS Model Switcher...

0211158 - 403 Keele St. (48 - SC86, SC234, SC24 Offset)-ULS-EQ.EDB | Units: {force: 'N', 'length': 'mm', 'temperature': 'C', 'modulus': 'MPa', 'stress': 'MPa', 'moment': 'N.mm'}

100%

Story_Definitions (13 rows)

Load_Pattern_Definitions (1 rows)

Load_Case_Definitions_Linear Stati

Load_Combination_Definitions (37

Area_Section_Property_Definitions

Area_Assignments_Pier_Labels (68:

Material_Properties_Concrete_Data

Material_Properties_Steel_Data (5

Objects_and_Elements_Areas (3447

Objects_and_Elements_Frames (260

Objects_and_Elements_Joints (3695

Pier_Forces (93500 rows)

Pier_Label_Definitions (166 rows)

Pier_Section_Properties (374 rows)

load_cases_df (53 rows)

load_combinations_df (598 rows)

stories_df (14 rows)

materials (18 rows)

area_pier_labels (1535 rows)

areas_df (1535 rows)

wall_sections_df (5 rows)

pier_props_df (374 rows)

wall_pier_props_df (268 rows)

pf_df (532576 rows)

stories_df

	name	elevation	height	is_master_story	similar_to_story	splice_above	splice_he
0	Base	0.00	0.00	False	None	False	0.00
1	UPPER GR	6450.00	6450.00	True	None	False	0.00
2	FLOOR 2	9870.00	3420.00	True	None	False	0.00
3	FLOOR 3	13290.00	3420.00	True	None	False	0.00
4	FLOOR 4	16530.00	3240.00	True	None	False	0.00
5	FLOOR 5	19770.00	3240.00	True	None	False	0.00
6	FLOOR 6	23010.00	3240.00	True	None	False	0.00
7	FLOOR 7	26250.00	3240.00	True	None	False	0.00
8	FLOOR 8	29490.00	3240.00	True	None	False	0.00
9	FLOOR 9	32730.00	3240.00	True	None	False	0.00
10	FLOOR 10	36330.00	3600.00	True	None	False	0.00

Export to CSV

Edit in Excel

Activity Log

9_FLOOR 10_AMENITY_W300_C35.SCO for stories ['FLOOR 9', 'FLOOR 10', 'AMENITY']

Writing SCONCRETE file W1_FLOOR 6_FLOOR 7_FLOOR 8_W300_C35.SCO for stories ['FLOOR 8', 'FLOOR 6', 'FLOOR 7']

Writing SCONCRETE file W1_FLOOR 4_FLOOR 5_W300_C35.SCO for stories ['FLOOR 4', 'FLOOR 5']

Writing SCONCRETE file W1_FLOOR 3_W300_C35.SCO for stories ['FLOOR 3']

Writing SCONCRETE file W1_UPPER GR_FLOOR 2_W300_C35.SCO for stories ['FLOOR 2', 'UPPER GR']

SCONC files created: C:/Users/siavash.habibi/OneDrive - Salas OBrien/Coding/ETABSPY/manuals/pdfs/ETABPY V2.0 W1 SCONCRETE Files


Clear Log

3 S-CONCRETE File Generation Workflow

ETABSPY is designed around a two-stage workflow:

1. **Data acquisition** (from an analyzed ETABS model)
2. **Offline processing + S-CONCRETE generation** (no ETABS connection required once data is saved)

The data from an ETABS model can be retrieved using the Connect to ETABS button. Ensure the ETABS model is the active API instance from the Tools menu in ETABS prior to using the Connect to ETABS button of ETABSPY.

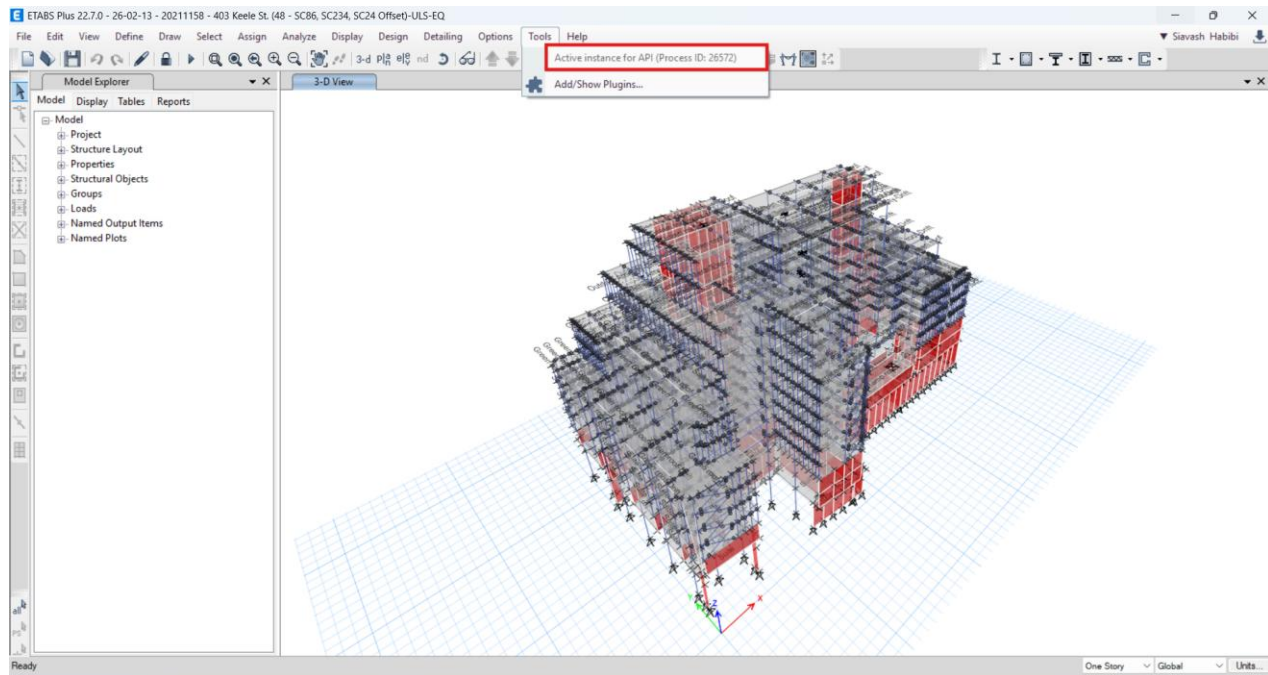

3.1 Connect to an analyzed ETABS model

By opening ETABSPY and connecting to an **already analyzed** ETABS model, ETABSPY will retrieve all required results data from ETABS necessary for generation of S-CONCRETE files. ETABSPY does not run the ETABS analysis. The ETABS model must already be analyzed and results must be available.

To begin, click the Connect to ETABS button located in the top toolbar. Once selected:


- A green loading bar will appear directly below the top toolbar.
- ETABSPY will begin retrieving all required datasets from the active, analyzed ETABS model.
- The software will extract geometry, load cases, load combinations, pier forces, and associated metadata required for downstream processing.

3.1.1 Data Acquisition

This data acquisition step is typically the most time-consuming phase of the workflow. Loading time depends primarily on:

- Model size
- Number of load cases and load combinations
- Number of piers
- Story count

Large models with extensive result datasets will require more time and memory to load.

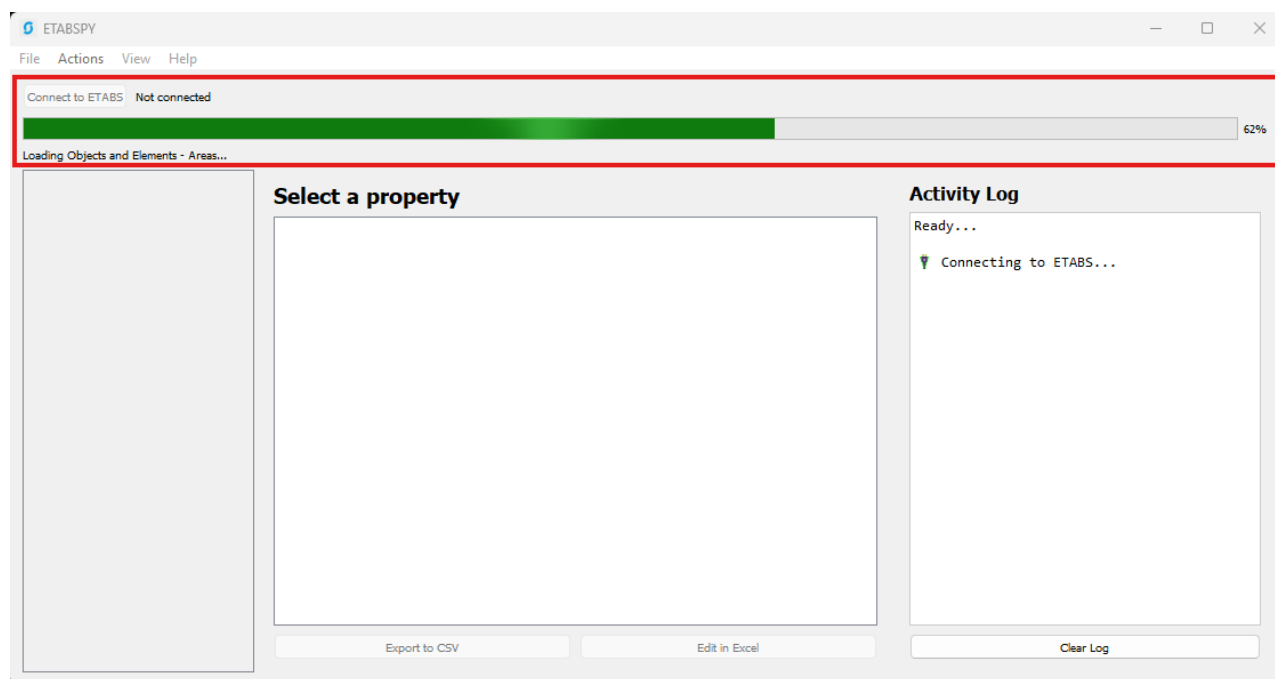

3.1.2 Memory Requirements & Stability

Because ETABSPY retrieves and stores large result arrays in memory, system resources are critical. For large ETABS models, it is recommended to:

- Use a system with at least 16 GB of RAM
- Close all other unnecessary software before connecting
- Avoid running memory-intensive applications during the loading phase


Insufficient available memory may result in:

- Slowed loading performance
- Software freezing
- Application crash during dataset retrieval


Reducing the number of load combinations or pier labels in a model will enhance performance. Once the dataset has been successfully retrieved, performance during filtering and S-CONCRETE generation is significantly faster.

3.1.3 Data Post-Processing

Once loading is finished, the name of the ETABS model will appear below the top tool bar, the Connect to ETABS button will also become disabled. All the datasets retrieved will appear in the left side column.

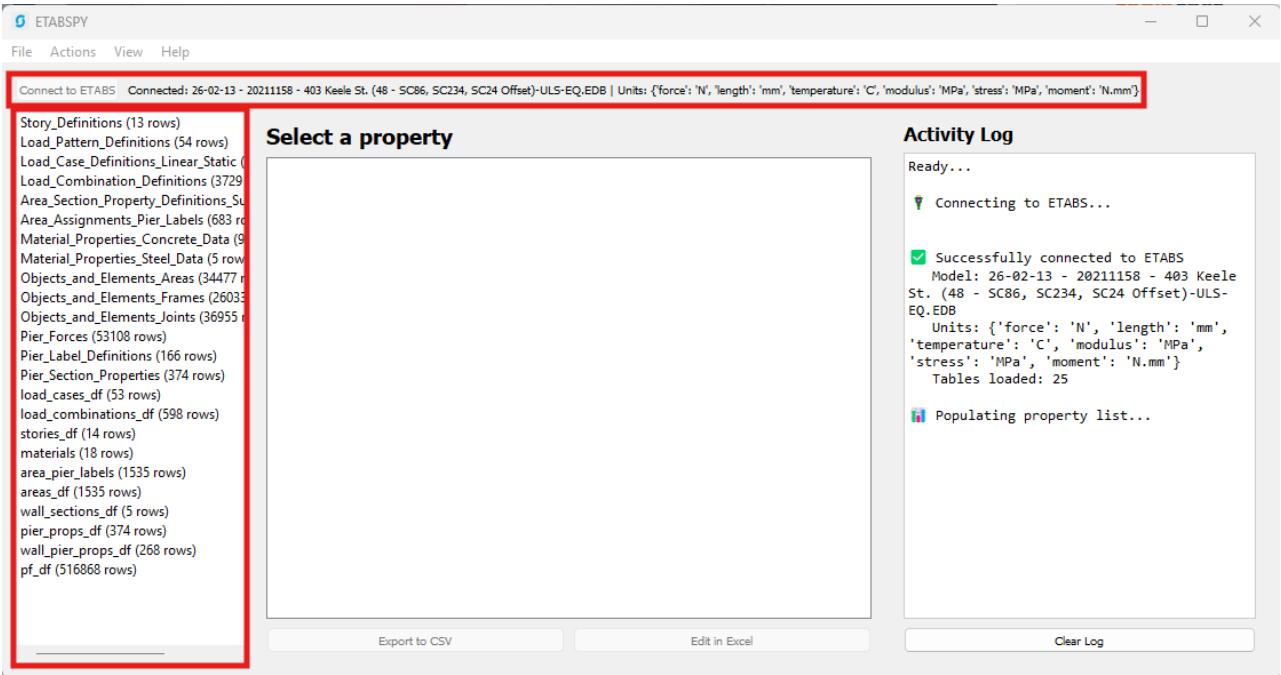

The user can select each property and view it as a table in the middle column. In addition the user has the ability to export each table as a CSV file or Edit them in Excel using the two buttons located below the center column. This is identical to how ETABS allows the user to export a table or edit it live using the Interactive Database button in the Edit menu of ETABS.

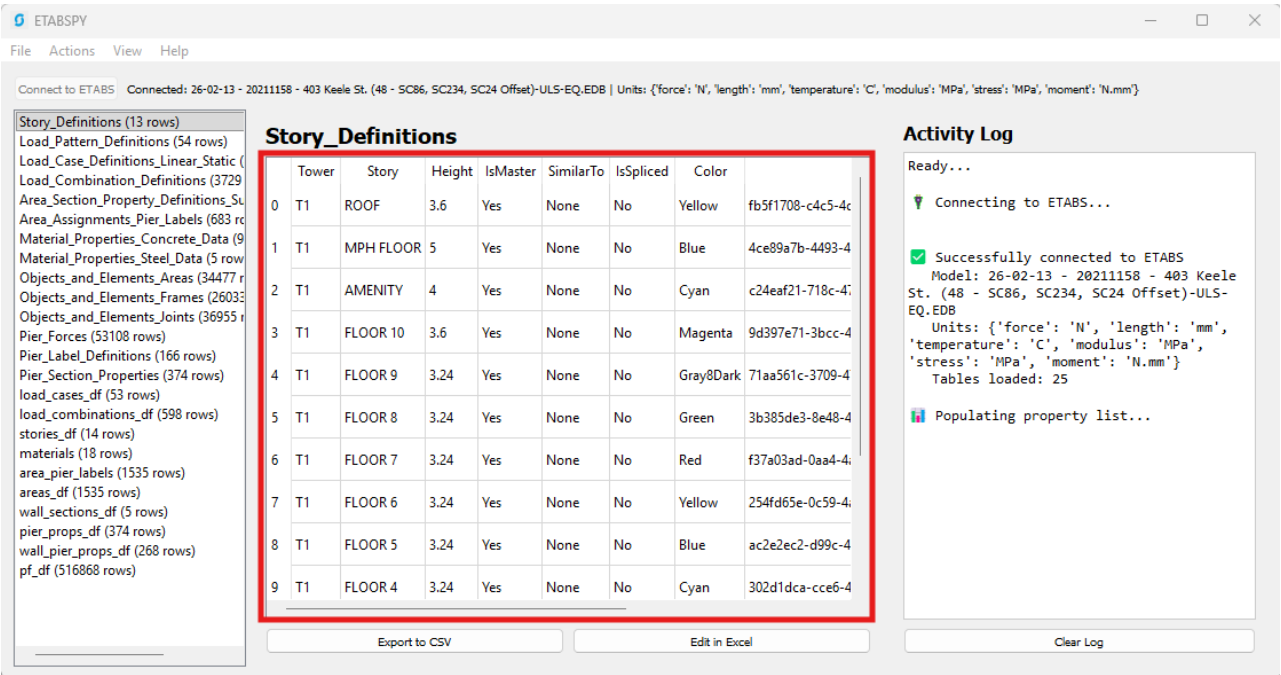



3.2 Save Retrieved Dataset (Pickle)

Once data has been loaded, the entire dataset can be saved as a pickle (.pkl) file. This enables an “offline mode” workflow:

- In the future, the user can load the pickle dataset
- ETABS does not need to be opened or connected
- All settings, filtering, and file generation can proceed from the stored dataset

The screenshot shows the ETABSPY application window. The 'File' menu is open, and 'Save .pkl File...' is highlighted. The 'Story_Definitions' table is displayed with the following data:

	Tower	Story	Height	IsMaster	SimilarTo	IsSpliced	Color	
0	T1	ROOF	3.6	Yes	None	No	Yellow	fb5f1708-c4c5-4c
1	T1	MPH FLOOR	5	Yes	None	No	Blue	4ce89a7b-4493-4
2	T1	AMENITY	4	Yes	None	No	Cyan	c24eaf21-718c-4
3	T1	FLOOR 10	3.6	Yes	None	No	Magenta	9d397e71-3bcc-4
4	T1	FLOOR 9	3.24	Yes	None	No	Gray8Dark	71aa561c-3709-4
5	T1	FLOOR 8	3.24	Yes	None	No	Green	3b385de3-8e48-4
6	T1	FLOOR 7	3.24	Yes	None	No	Red	f37a03ad-0aa4-4
7	T1	FLOOR 6	3.24	Yes	None	No	Yellow	254fd65e-0c59-4
8	T1	FLOOR 5	3.24	Yes	None	No	Blue	ac2e2ec2-d99c-4
9	T1	FLOOR 4	3.24	Yes	None	No	Cyan	302d1dca-cce6-4

The 'Activity Log' on the right shows the following steps:



- Ready...
- Connecting to ETABS...
- Successfully connected to ETABS
- Model: 26-02-13 - 20211158 - 403 Keele St. (48 - SC86, SC234, SC24 Offset)-ULS-EQ.EDB
- Units: {'force': 'N', 'length': 'mm', 'temperature': 'C', 'modulus': 'MPa', 'stress': 'MPa', 'moment': 'N.mm'}
- Tables loaded: 25
- Populating property list...

The screenshot shows a Windows File Explorer window titled 'Save ETABSPY Data'. The file name is '26-02-13 - 20211158 - 403 Keele St. (48 - SC86, SC234, SC24 Offset)-ULS-EQ_etabspy_20260218_112424'. The save type is 'Pickle Files (*.pkl)'. The file is being saved to the 'etabs_files' folder in the 'Siavash - Salas OBrien' directory.

Name	Status	Date modified	Type
etabs_files	✓	2/16/2026 11:41 AM	File
26-02-11 - 20211158 - 403 Keele St. (43 - Core Shaft)-ULS-EQ_etabspy_20260216_194905.pkl	✓	2/16/2026 7:49 PM	PKL
26-02-11 - 20211158 - 403 Keele St. (43 - Core Shaft)-ULS-EQ_etabspy_20260217_112713.pkl	✓	2/17/2026 11:27 AM	PKL
26-02-11 - 20211158 - 403 Keele St. (43 - Core Shaft)-ULS-EQ_etabspy_20260217_112729.pkl	✓	2/17/2026 11:27 AM	PKL



Once a the dataset has been saved, the data can be loaded to ETABSPY from a previously saved file using the Open .pkl File button in the File menu of the top toolbar:

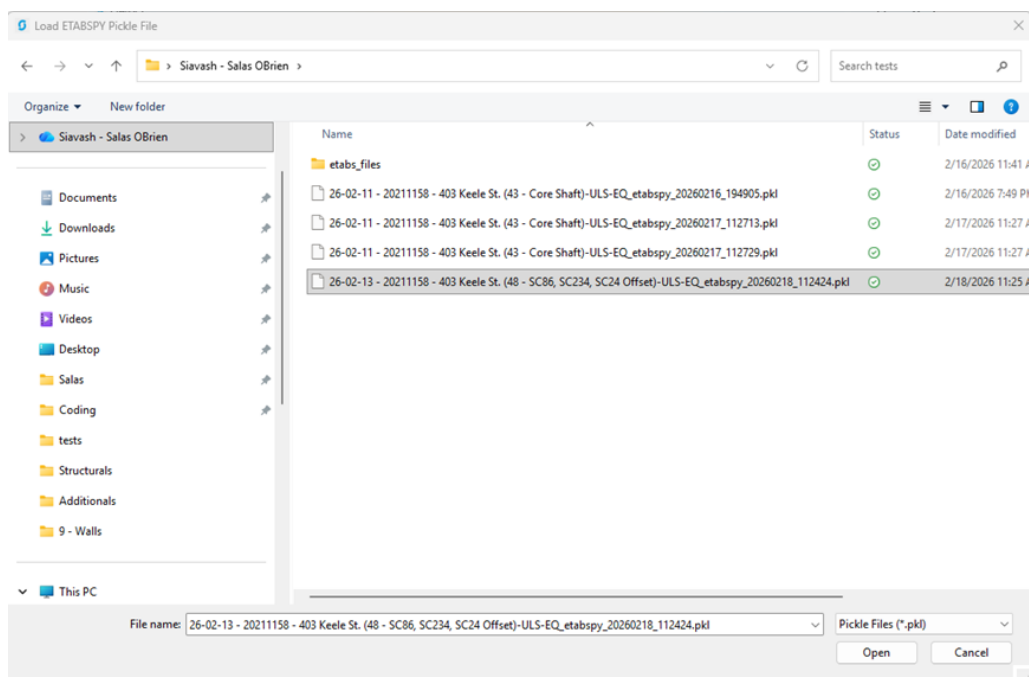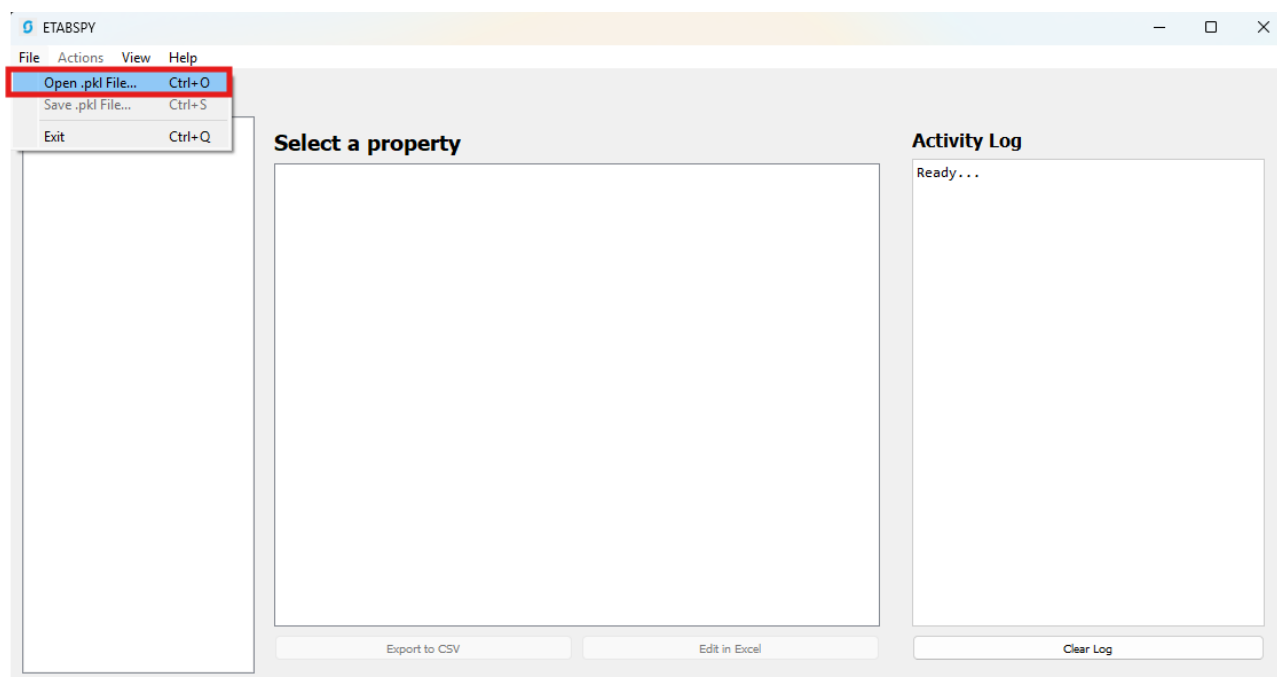



3.3 Configure Output Using the Settings Menu

Use the **Settings** menu in ETABSPY to define what will be included in the S-CONCRETE output, including:



- **Walls / piers** to include
- **Load combinations** to include
- **Rd value** used for seismic shear magnification logic (as applicable)


These settings control what ETABSPY will process and export.

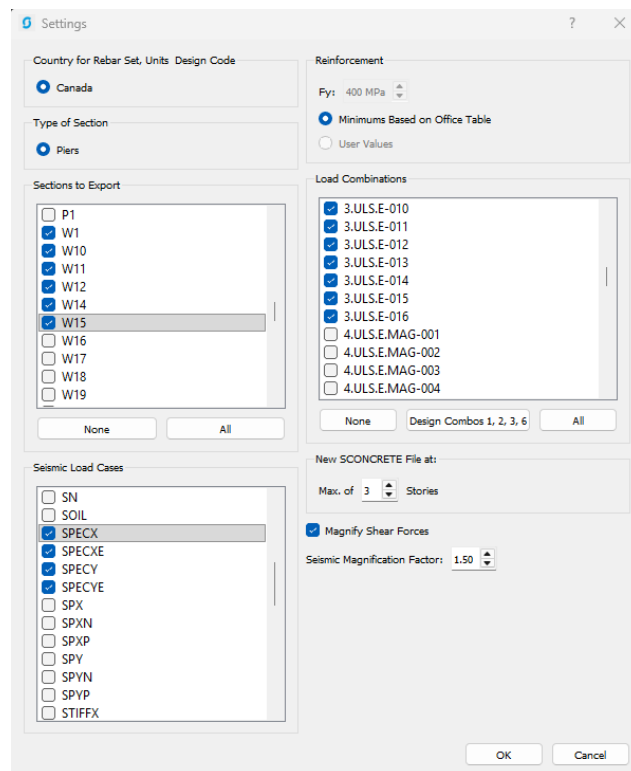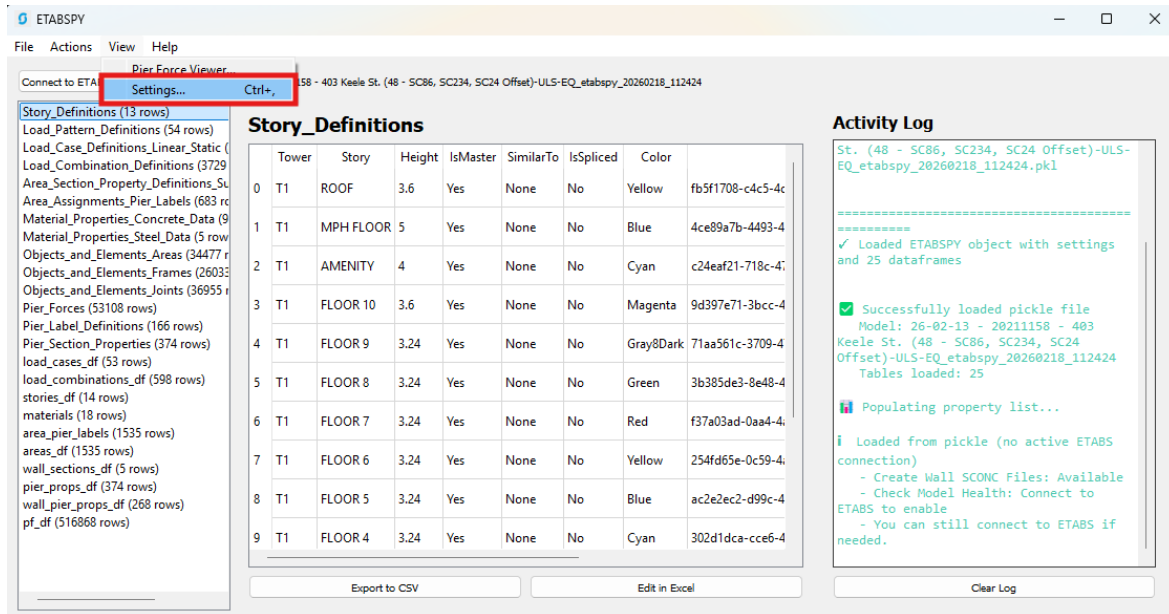



3.3.1 Shear Force Magnification (Rd Application)

Shear force magnification is applied **only to seismic load cases** using the Rd value specified by the user in the **Settings** menu. During processing, ETABSPY scans each of the selected load combinations and deconstructs them into their individual load cases. If a load case within a combination belongs to the defined group of seismic load cases, the shear components **V2** and **V3** associated with that load case are multiplied by the user-defined seismic magnification factor (Rd). Non-seismic load cases remain unchanged. After applying the magnification to the applicable seismic components, the load combination is reconstructed to produce the final magnified shear forces used in the generated S-CONCRETE file.

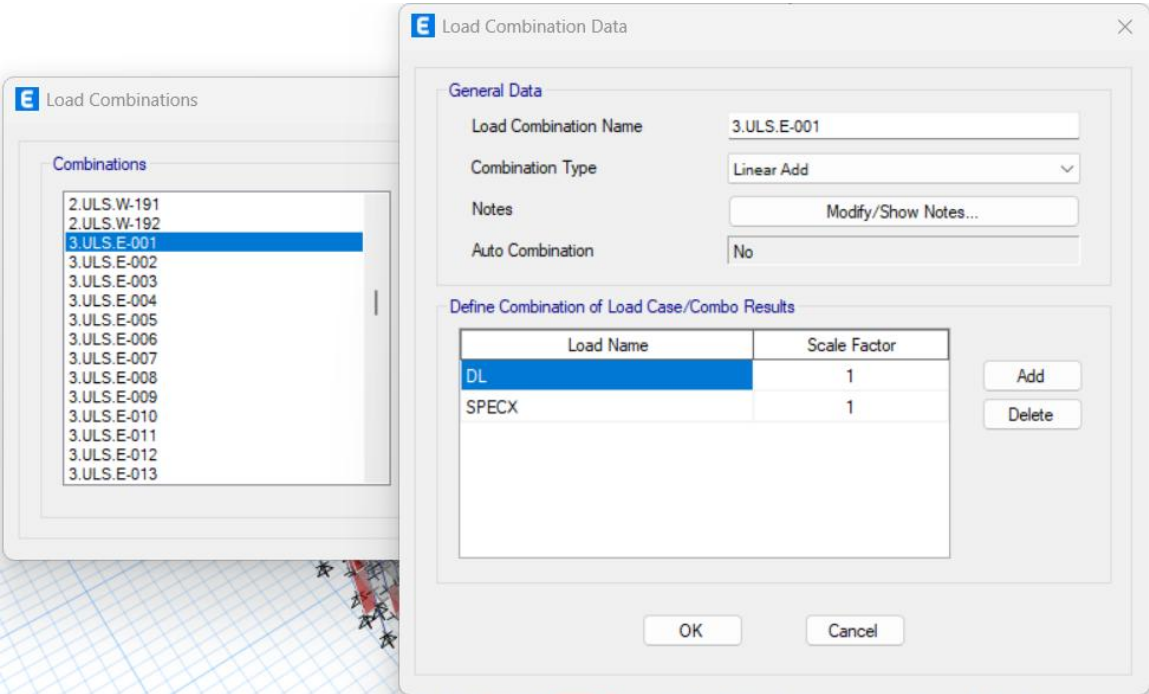

Pier Forces

File

Edit

Format-Filter-Sort

Select

Options

Units: As Noted

Hidden Columns: No

Sort: None

Pier Forces

	Story	Pier	Output Case	Case Type	Step Type	Location	P kN	V2 kN	V3 kN	T kN-m	M2 kN-m	M3 kN-m
▶	ROOF	W1	DL	LinStatic		Top	-94.3828	-53.5779	4.185	-1.221	-9.9434	65.5649
	ROOF	W1	DL	LinStatic		Bottom	-229.403	-53.5779	4.185	-1.2242	5.0702	-127.5907
	ROOF	W1	SPECX	LinRespSpec	Max	Top	100.5261	492.1436	0.1896	0.9945	0.3057	742.6
	ROOF	W1	SPECX	LinRespSpec	Max	Bottom	100.5261	492.1436	0.1896	1.0237	0.4325	1049.2035
	ROOF	W1	3.ULS.E-001	Combination	Max	Top	6.1433	438.5657	4.3747	-0.2264	-9.6378	808.1649
	ROOF	W1	3.ULS.E-001	Combination	Max	Bottom	-128.8768	438.5657	4.3747	-0.2005	5.5027	921.6128
	ROOF	W1	3.ULS.E-001	Combination	Min	Top	-194.909	-545.7214	3.9954	-2.2155	-10.2491	-677.0351
	ROOF	W1	3.ULS.E-001	Combination	Min	Bottom	-329.9291	-545.7214	3.9954	-2.248	4.6377	-1176.7941

Record:

<<

<

1

>

>>

of 104

Add Tables...

Done



$$V_{2_{3.ULS.E-001} Max} = V_{2_{DL}} + V_{2_{SPECX}} = -53.58 + 492.14 = -438.56 \text{ kN}$$

$$V_{2_{3.ULS.E-001} Min} = V_{2_{DL}} - V_{2_{SPECX}} = -53.58 - 492.14 = -545.72 \text{ kN}$$

Settings

Country for Rebar Set, Units, Design Code

Canada

Type of Section

Piers

Sections to Export

GW16

GW17

GW18

GW20

GW3

GW6

GW8

GW9

P1

W1

W10

None

All

Seismic Load Cases

LLR

Modal

SN

SOIL

SPECX

SPECXE

SPECY

SPECYE

SPX

SPXN

SPXP

SPY

SPYN

Reinforcement

Fy: 400 MPa

Minimums Based on Office Table

User Values

Load Combinations

2.ULS.W-188

2.ULS.W-189

2.ULS.W-190

2.ULS.W-191

2.ULS.W-192

3.ULS.E-001

3.ULS.E-002

3.ULS.E-003

3.ULS.E-004

3.ULS.E-005

3.ULS.E-006

None

Design Combos 1, 2, 3, 6

All

New SCONCRETE File at:


Max. of 3 Stories

Magnify Shear Forces


Seismic Magnification Factor: 1.50

OK

Cancel

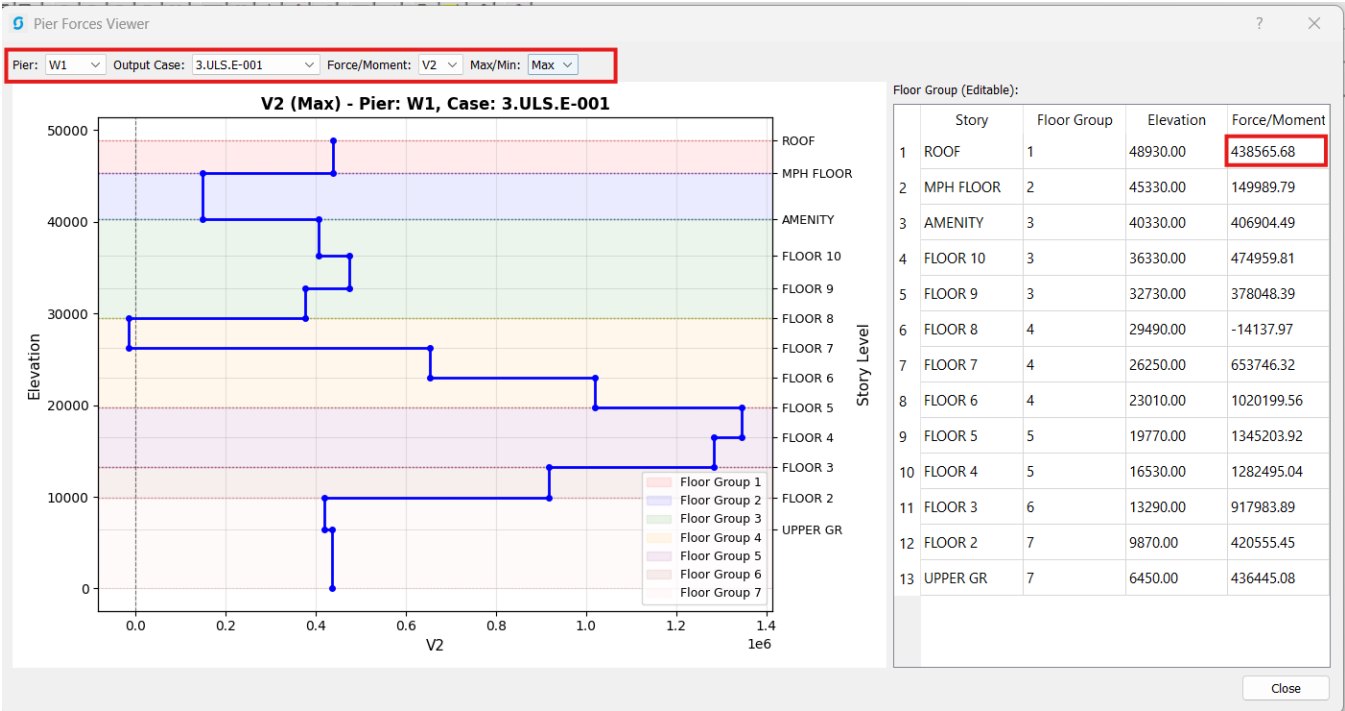

Close

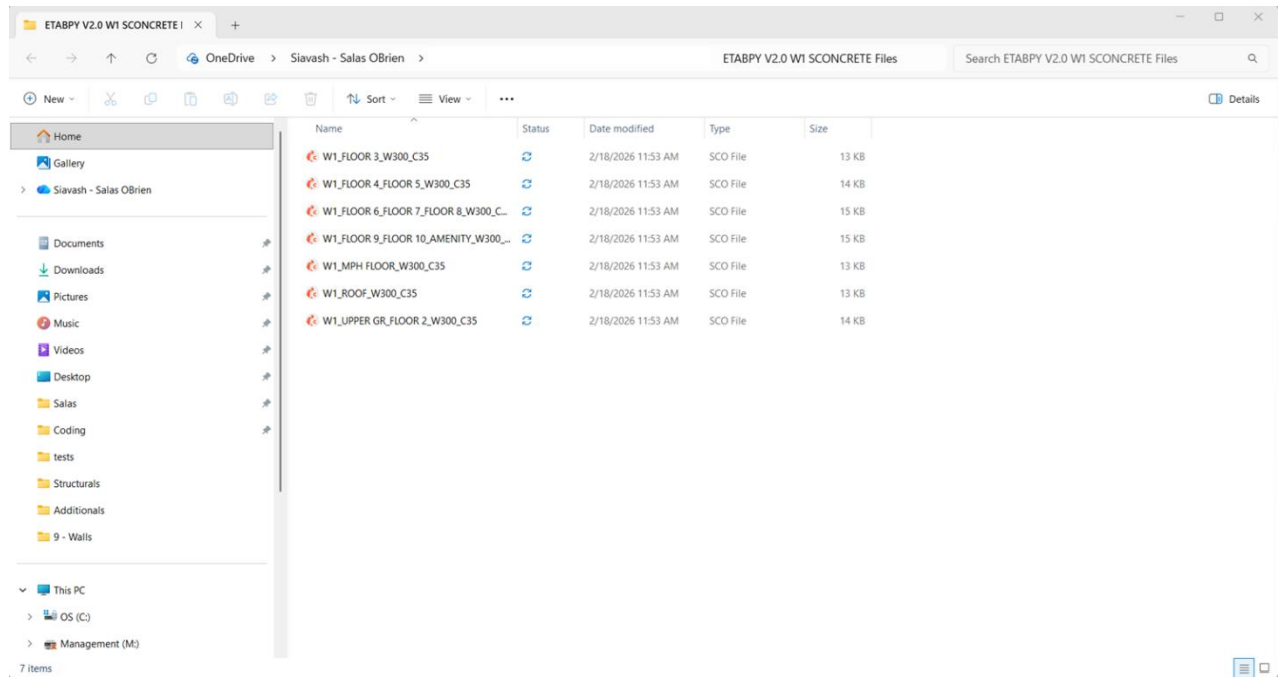

S-CONCRETE - [C:\USERS\SIYASH.HABIB\ONEDRIVE - SALAS OBRIEN] W1_ROOF_W300_C35.SCO

File Edit View Run Results Settings Help

Loads (Factored)

I-Shape Wall

Material Properties

$f_c' = 35$ MPa
 f_y (panel vert) =
 f_y (panel horz) =
 f_y (zone vert) =
 f_y (zone horz) =
 $W_c = 2400$ kg/m
 $W_s = 7850$ kg/m
 $\rho = 20$ mm
 $E_s = 200000$ MPa
 $E_c = 28165$ MPa
 $G_c = 11735$ MPa

Miscellaneous

Quantities (App Concrete = 381 Steel = 62.3 kg)

Zone Cover = 4

Panel Cover = 4

Orientation = 0°
 (+) Direction Indicated

Zone A Zone B

Ok
 Cancel
 Help
 Clear
 Copy
 Paste

☐ Ignore Axial
☐ Magnify Shears

No.	N [kN]	T [kNm]	V _z [kN]	M _y [kNm]	C _m [y-y]	V _y [kN]	M _z [kNm]	C _m [z-z]	Load Type	Active Status	Comment
1	6.14332	-0.226412	4.469465	-9.637751	0.4	684.6375	808.1649	0.951	Seismic	✓	ROOF-W1-3.ULS E-001-Top-Max
2	-128.8768	-0.2005146	4.469465	5.502726	0.4	684.6375	921.6128	0.951	Seismic	✓	ROOF-W1-3.ULS E-001-Bottom-Max
3	-194.909	-2.215489	3.900635	-10.24905	0.419	-791.7932	-677.0351	0.83	Seismic	✓	ROOF-W1-3.ULS E-001-Top-Min
4	-329.9291	-2.247958	3.900635	4.6377	0.419	-791.7932	-1176.794	0.83	Seismic	✓	ROOF-W1-3.ULS E-001-Bottom-Min
5	0	0	0	0	1	0	0	1	Wind	✓	
6	0	0	0	0	1	0	0	1	Wind	✓	
7	0	0	0	0	1	0	0	1	Wind	✓	

$$V_{2,ULS,E-001\ Max} = V_{2,DL} + V_{2,SPECX} = -53.58 + 1.5 * 492.14 = -684.63\ kN$$

$$V_{2,ULS,E-001\ Min} = V_{2,DL} - V_{2,SPECX} = -53.58 - 1.5 * 492.14 = -791.79\ kN$$

3.3.2 Moment Distribution Factor (c_m)

The moment distribution factor is calculated based on the moment at top and bottom of a pier.

No.	N [kN]	T [kNm]	V _z [kN]	M _y [kNm]	C _m [y-y]	V _y [kN]	M _z [kNm]	C _m [z-z]	Load Type	Active Status	Comment
1	6.14332	-0.226412	4.469465	-9.637751	0.4	684.6375	808.1649	0.951	Seismic	✓	ROOF-W1-3.ULS E-001-Top-Max
2	-128.8768	-0.2005146	4.469465	5.502726	0.4	684.6375	921.6128	0.951	Seismic	✓	ROOF-W1-3.ULS E-001-Bottom-Max
3	-194.909	-2.215489	3.900635	-10.24905	0.419	-791.7932	-677.0351	0.83	Seismic	✓	ROOF-W1-3.ULS E-001-Top-Min
4	-329.9291	-2.247958	3.900635	4.6377	0.419	-791.7932	-1176.794	0.83	Seismic	✓	ROOF-W1-3.ULS E-001-Bottom-Min



$$C_m = 0.6 + 0.4 \left(\frac{808.16}{921.61} \right) = 0.951 > 0.4$$

3.4 Assign Stories per S-CONCRETE File Using Pier Force Viewer

The Pier Force Viewer dialog provides visual and tabular control over how stories are grouped into individual S-CONCRETE files. In this dialog, the user can manipulate:

- Which stories are included
- How stories are grouped into each S-CONCRETE file set (based on ETABSPY's logic and/or user overrides)

ETABSPY

File Actions View Help

Check Model Health
Create Wall SCONC Files

13 - 20211158 - 403 Keele St. (48 - SC86, SC234, SC24 Offset)-ULS-EQ_etabspy_20260218_112424

Story_Definitions

	Tower	Story	Height	IsMaster	SimilarTo	IsSpliced	Color	
0	T1	ROOF	3.6	Yes	None	No	Yellow	fb5f1708-c4c5-4c
1	T1	MPH FLOOR	5	Yes	None	No	Blue	4ce89a7b-4493-4
2	T1	AMENITY	4	Yes	None	No	Cyan	c24eaf21-718c-4
3	T1	FLOOR 10	3.6	Yes	None	No	Magenta	9d397e71-3bcc-4
4	T1	FLOOR 9	3.24	Yes	None	No	Gray8Dark	71aa561c-3709-4
5	T1	FLOOR 8	3.24	Yes	None	No	Green	3b385de3-8e48-4
6	T1	FLOOR 7	3.24	Yes	None	No	Red	f37a03ad-0aa4-4
7	T1	FLOOR 6	3.24	Yes	None	No	Yellow	254fd65e-0c59-4
8	T1	FLOOR 5	3.24	Yes	None	No	Blue	ac2e2ec2-d99c-4
9	T1	FLOOR 4	3.24	Yes	None	No	Cyan	302d1dca-cce6-4

Export to CSV Edit in Excel

Activity Log

St. (48 - SC86, SC234, SC24 Offset)-ULS-EQ_etabspy_20260218_112424.pkl

✓ Loaded ETABSPY object with settings and 25 dataframes

✓ Successfully loaded pickle file
Model: 26-02-13 - 20211158 - 403 Keele St. (48 - SC86, SC234, SC24 Offset)-ULS-EQ_etabspy_20260218_112424
Tables loaded: 25

Populating property list...

i Loaded from pickle (no active ETABS connection)
- Create Wall SCONC Files: Available
- Check Model Health: Connect to ETABS to enable
- You can still connect to ETABS if needed.

Clear Log

3.4.1 Visual Grouping Representation

Story grouping is displayed graphically using a color-coded chart.

- Each distinct color represents a separate S-CONCRETE file.
- Stories sharing the same color will be written into the same generated file.
- A change in color indicates the start of a new S-CONCRETE file group.

This visual representation allows the user to quickly verify grouping logic before file generation.

3.4.2 Floor Group Column (Manual Control)


On the right half of the **Pier Force Viewer** dialog, the “**Floor Group**” column allows the user to manually assign stories to specific file groups. Using this column, the user can:

- Reassign a story to a different file group
- Combine stories into a single file



- Split stories into separate files
- Override the default automatic grouping logic

Any modification made in the Floor Group column will immediately update the color grouping in the chart, ensuring visual confirmation of the file organization.

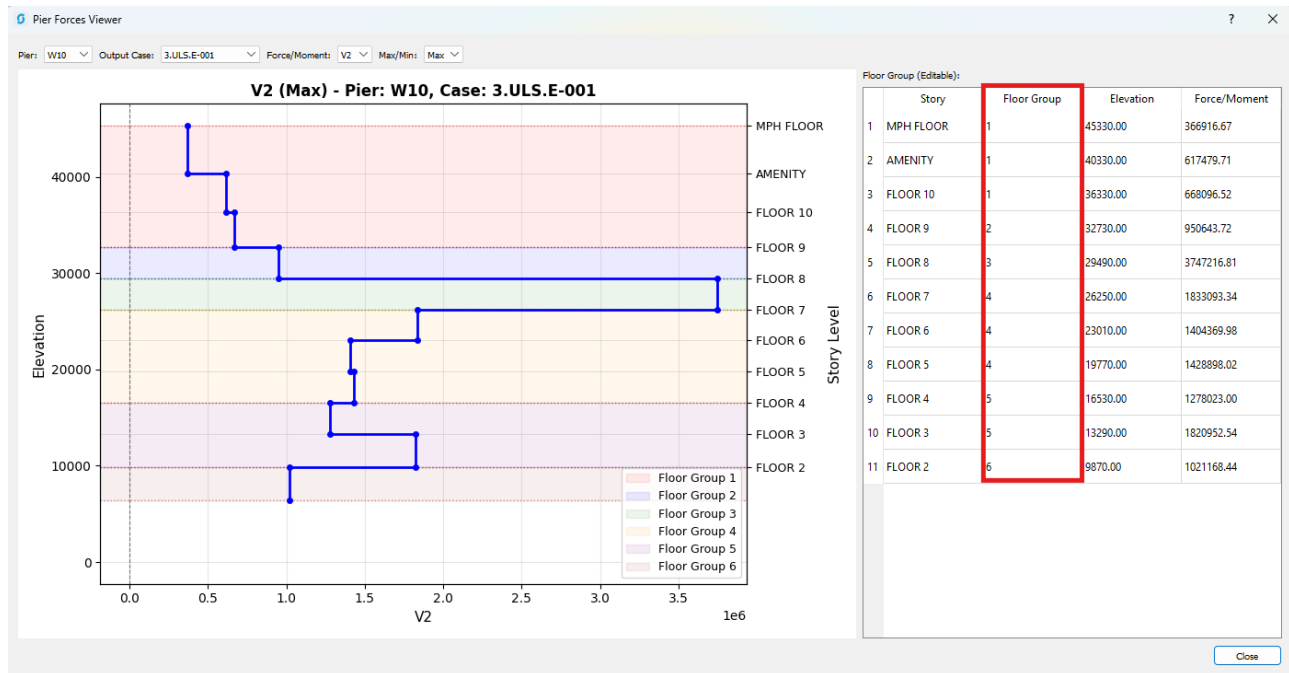


3.5 Generate S-CONCRETE Files (Action Menu)

Once the dataset is loaded (live from ETABS or from pickle) and the settings + Pier Force Viewer selections are complete, generate the S-CONCRETE files via:

Actions → Create Wall SCONC Files

ETABSPY will create the final S-CONCRETE input files based on:

- Selected walls/piers
- Selected load combinations
- Applied Rd magnification rules (where applicable)
- Story grouping selections from Pier Force Viewer

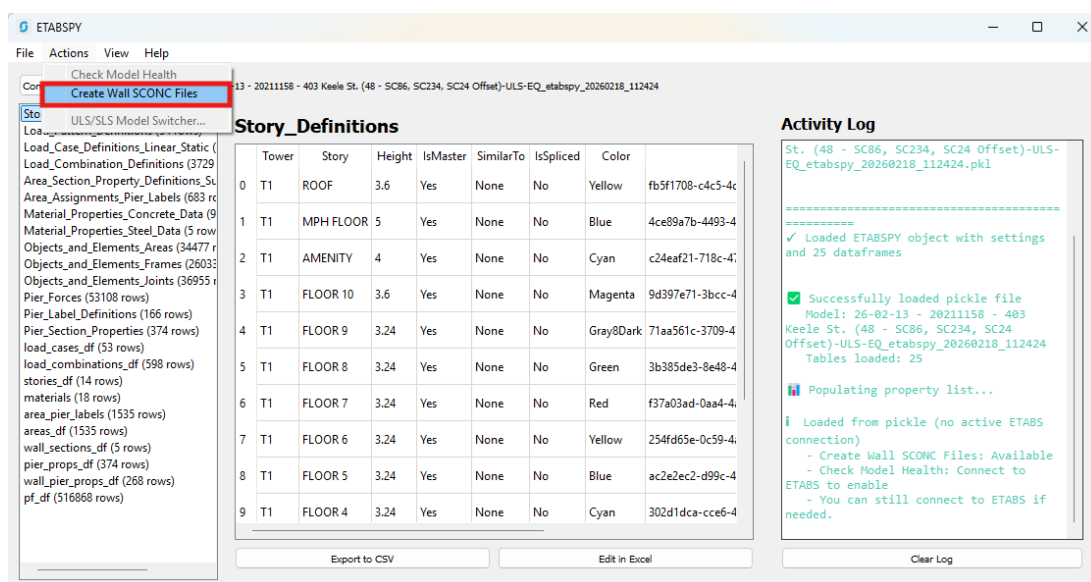

3.5.1 SCONCRETE File Naming Convention


All generated SCONCRETE files follow a standardized naming convention to ensure clarity, traceability, and consistency across projects. The file naming format is:

<Pier-Label>_<Story1>_<Story2>_<Story3>_W<Wall-Thickness>_C<Wall-f'c>

3.5.1.1 Naming Components

Each segment of the file name represents:

- Pier-Label**
 The ETABS pier label (e.g., W1, W2, etc.)
- Story1_Story2_Story3**
 The stories included in that specific SCONCRETE file group. Stories are listed in order and separated by underscores. The number of stories included depends on the grouping defined in the Pier Force Viewer dialog.
- W<Wall-Thickness>**
 Wall thickness millimeters (as defined in the ETABS model). Example: W300 → 300 mm wall thickness.
- C<Wall-f'c>**
 Concrete compressive strength (MPa). Example: C35 → 35 MPa concrete.

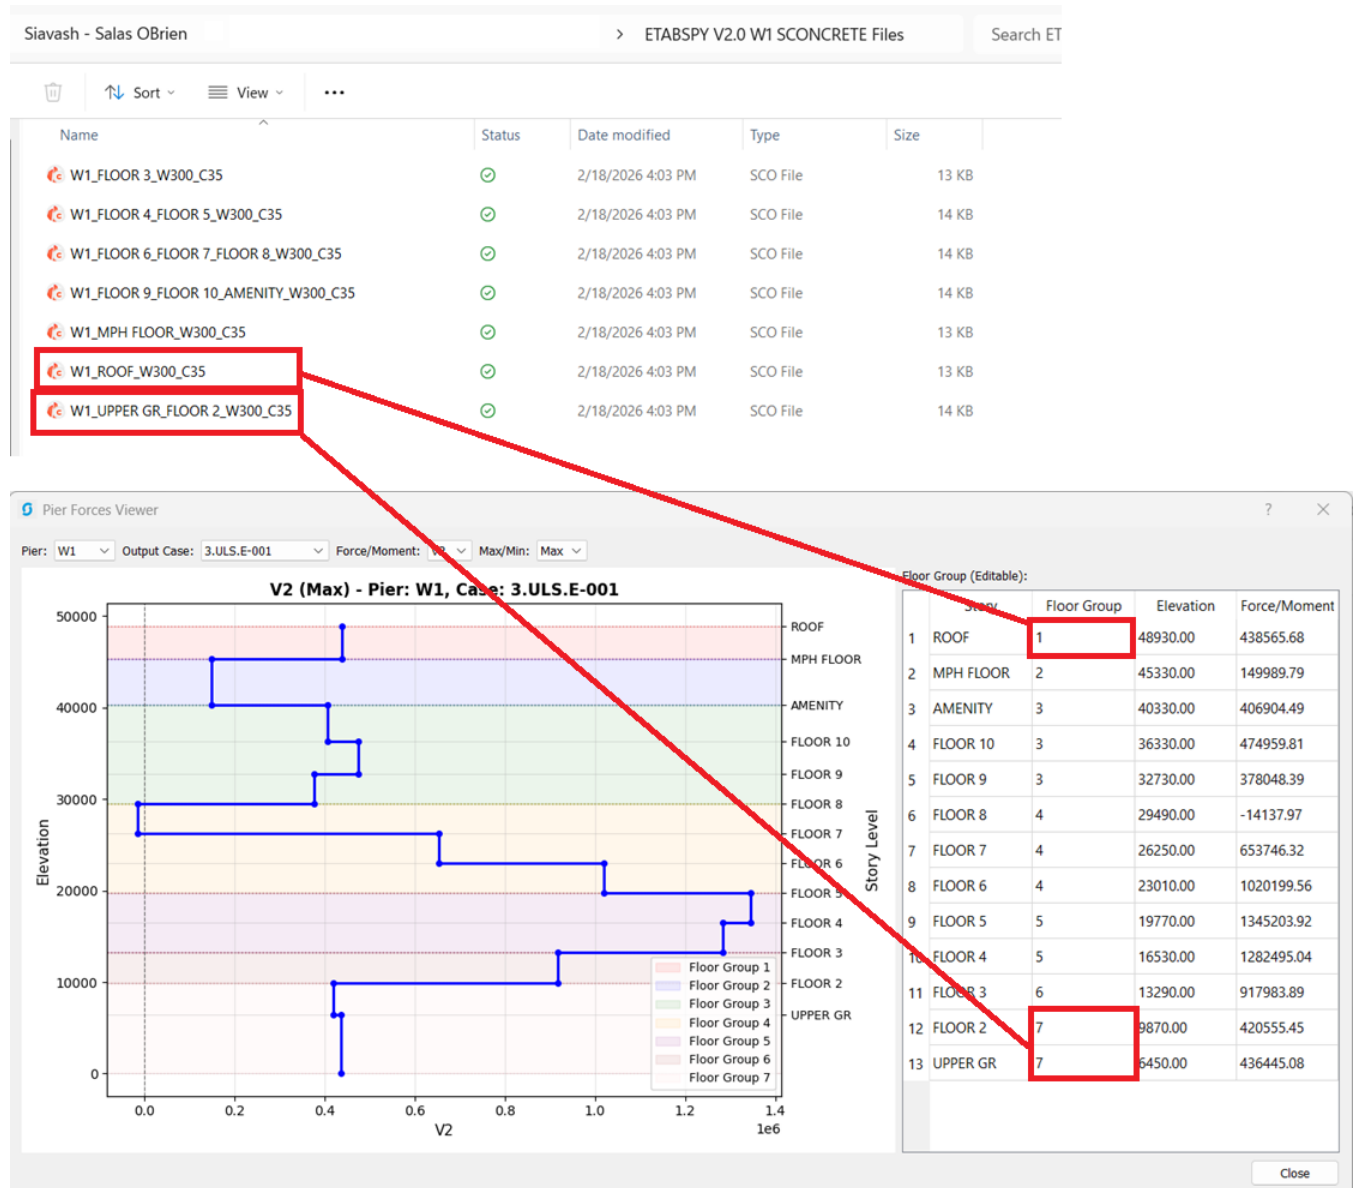



3.6 Documentation & Support

3.6.1 Accessing Project Documentation

This document, along with:

- The associated **pickle dataset file**
- The generated **S-CONCRETE files for W1**

can be accessed through the **Documentation** dialog under the **Help** menu in ETABSPY. This allows users to reference:

- Example output files
- Saved datasets
- Supporting documentation

without needing to locate them manually within the project directory.

ETABSPY

File Actions View Help

Connect to ETABS... Report Issue/Suggestion Documentation... About ETABSPY...

Created wall SCONC files: 100%

Story_Definitions (13 rows)
Load_Pattern_Definitions (1 rows)
Load_Case_Definitions_Linear_Static (37 rows)
Area_Assignments_Pier_Labels (68 rows)
Material_Properties_Concrete_Data (5 rows)
Material_Properties_Steel_Data (5 rows)
Objects_and_Elements_Areas (344 rows)
Objects_and_Elements_Frames (26 rows)
Objects_and_Elements_Joints (369 rows)
Pier_Forces (93500 rows)
Pier_Label_Definitions (166 rows)
Pier_Sections_Properties (374 rows)
load_cases_df (53 rows)
load_combinations_df (598 rows)
stories_df (14 rows)
materials (18 rows)
area_pier_labels (1535 rows)
areas_df (1535 rows)
wall_sections_df (5 rows)
pier_props_df (374 rows)
wall_pier_props_df (268 rows)
pf_df (532576 rows)
df_defines (10 rows)

stories_df

	name	elevation	height	is_master_story	similar_to_story	splice_above	splice_height
0	Base	0.00	0.00	False	None	False	0.00
1	UPPER GR	6450.00	6450.00	True	None	False	0.00
2	FLOOR 2	9870.00	3420.00	True	None	False	0.00
3	FLOOR 3	13290.00	3420.00	True	None	False	0.00
4	FLOOR 4	16530.00	3240.00	True	None	False	0.00
5	FLOOR 5	19770.00	3240.00	True	None	False	0.00
6	FLOOR 6	23010.00	3240.00	True	None	False	0.00
7	FLOOR 7	26250.00	3240.00	True	None	False	0.00
8	FLOOR 8	29490.00	3240.00	True	None	False	0.00
9	FLOOR 9	32730.00	3240.00	True	None	False	0.00
10	FLOOR 10	36330.00	3600.00	True	None	False	0.00

Export to CSV Edit in Excel

Activity Log

9_FLOOR 10_AMENITY_W300_C35.SCO for stories ['FLOOR 9', 'FLOOR 10', 'AMENITY']
Writing SCONCRETE file W1_FLOOR 6_FLOOR 7_FLOOR 8_W300_C35.SCO for stories ['FLOOR 8', 'FLOOR 6', 'FLOOR 7']
Writing SCONCRETE file W1_FLOOR 4_FLOOR 5_W300_C35.SCO for stories ['FLOOR 4', 'FLOOR 5']
Writing SCONCRETE file W1_FLOOR 3_W300_C35.SCO for stories ['FLOOR 3']
Writing SCONCRETE file W1_UPPER GR_FLOOR 2_W300_C35.SCO for stories ['FLOOR 2', 'UPPER GR']

SCONC files created: C:/Users/siavash.habibi/OneDrive - Salas OBrien/Coding/ETABSPY/manuals/pdfs/ETABSPY V2.0 W1 SCONCRETE Files

Clear Log

3.6.2 Reporting Issues & Suggestions

Users are encouraged to submit:

- Bug reports
- Feature requests
- Workflow improvement suggestions



via the **Report Issue / Suggestion** button located in the Help menu. Selecting this option will redirect the user to a Google Form where details of the issue or suggestion can be submitted directly to the Author.