ROIP Module User Guide

Nov 3, 2026 · @George

Overview

A pair of 551 ROIP modules links two radio sites over any IP network, so a radio at one site can be heard and keyed from the other. This guide covers firmware v79.

Each module sits between local radio equipment and an Ethernet connection. Modules work in pairs: whatever goes in at one site comes out at the other, in both directions at once (full duplex).

A pair carries four things between sites:

- **Audio**: the local audio goes to the far site, and the far site's audio is played out locally.
- **PTT and COR**: when local equipment asserts PTT, audio is sent; when audio arrives from the far site, the module asserts COR.
- **DCN serial data**: an RS-485 bus at one site is bridged byte for byte to the RS-485 bus at the other.
- **Two logic lines**: two inputs at one site drive two outputs at the other.

Setup is done with short text commands over the USB console, with the guided `//setup` command, or from a phone over the module's own Wi-Fi setup network. Settings are saved in the module and survive a power cycle.

What's new since v66

Version	Change
v79	`//status` and `//info` give a one-line-per-item summary; the per-direction table moved to `//status,detail`
v78	Emphasis set separately for each path: `//audioin,flat|pre|de` and `//audioout,flat|pre|de` (replaces the v77 flat/radio presets)
v77	Flat/radio presets for the radio-connection filters (replaced in v78)


Version	Change
v76	Software de-emphasis and pre-emphasis (750 µs), 300 Hz input high-pass, 3 kHz output low-pass; `//bitrate` data-rate report
v75	Display sends only the changed parts of the screen, so serial traffic no longer breaks up audio
v74	Unreachable-gateway guard; `//dacprime`; `//rs485hw`; worst-case timing figures in `//net`; DHCP renews during very long transmissions
v73	DCN dialing backs off when the peer can't be reached; quieter console at boot
v72	Wi-Fi setup mode; link check in both directions; boot summary; clock-drift correction; faster, sequenced GPIO; GPIO force commands
v71	Factory default is a static address, 192.168.1.73
v70	`//setup` guided setup; `//net` regrouped, with the command for each setting
v69	Start-up splash screen
v68	Command history (Up/Down arrows, `//history`); ADPCM level fix
v67	Peer can be a DNS name (dynamic DNS); `//dns`; new default ports 7300-7303 and password `sierra`

If you are upgrading from v66 or earlier, both modules must be updated together: the default ports and password changed in v67.

How it works

Each module sends four independent streams to its peer, each on its own port, so one stream can fail without taking down the others.

Each module sends four independent streams to its peer

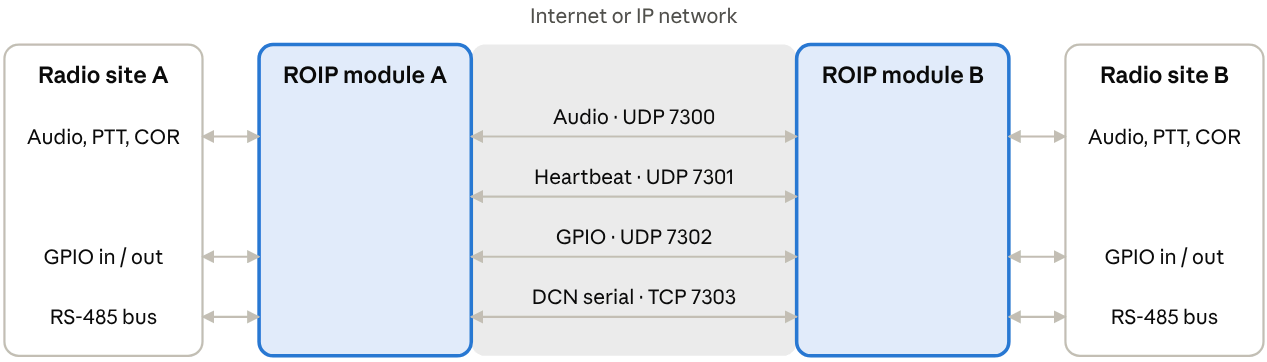

two-site link · four streams with default ports

Audio, GPIO and DCN carry the local equipment's signals; the heartbeat runs module to module only.

Stream	Protocol	Default port	Sent when	Purpose
Audio	UDP	7300	PTT active (plus a keepalive every 2 s when idle)	10 ms audio frames, 16 kHz mono
Heartbeat	UDP	7301	Every 1 s	Tells each side the other is reachable; carries loss figures and which streams it is receiving
GPIO	UDP	7302	At once on a change, repeated after 20 and 50 ms, plus every 150 ms	State of the two logic inputs
DCN serial	TCP	7303	When RS-485 data arrives	Password-protected byte-for-byte serial bridge

Audio and PTT/COR

1. Local equipment pulls **PTT_INPUT** low (J3 pin 4).
2. The module captures audio, applies any input filters set, encodes it, and sends a numbered 10 ms frame every 10 ms.

3. The peer buffers about 60 ms of frames to smooth out network jitter, then plays them out of its audio output.
4. While frames are arriving, the peer asserts **COR_OUTPUT** (J3 pin 2, active low).
5. When PTT is released, the sending module can play a courtesy tone, then sends an end marker so the peer drops COR at once. If the end marker is lost, COR drops after the audio timeout (300 ms) plus the COR tail (500 ms).

Both directions work at the same time: a module can send while it receives.

Jitter buffer and clock drift

The receiving module plays frames in sequence-number order, not arrival order:

- A lost frame is replaced with silence.
- Frames that arrive out of order are put back in order.
- If the stream pauses, the buffer refills to 60 ms before resuming rather than playing stale audio.

The two modules run on separate crystals, so their sample clocks differ by up to about 40 ppm, one 10 ms frame every few minutes. Since v72 the receiver resamples by up to ±500 ppm to keep its buffer at the target depth. That is a pitch change of under 1 cent, inaudible, and it removes the periodic 10 ms skip or gap on long transmissions.

The module also keeps 30 ms of audio queued in its output (`//dacprime`), so a brief stall at the module itself doesn't interrupt playback.

Audio codecs

The sending side chooses the codec. The receiver decodes whatever arrives, so the two ends don't have to match.

Codec	Data rate per direction (IP level)	Notes
PCM (default)	282 kbps	Uncompressed, best quality, lowest CPU
u-law	154 kbps	Telephone-standard companding
ADPCM	93 kbps	4:1 compression; each packet carries its own decoder state, so a lost packet doesn't upset the next

Codec	Data rate per direction (IP level)	Notes
Opus	58-90 kbps at 32-64 kbps settings	Adjustable bitrate; the heaviest on CPU

These figures include UDP and IP headers. Each 10 ms packet carries 28 bytes of headers, so header overhead is a large share of the compressed codecs. `//bitrate` shows the measured rates.

DCN serial bridge

Bytes arriving on the local RS-485 bus are sent to the peer, and bytes from the peer are written out on the local bus. The bridge is transparent: it does not interpret DCN addresses or commands.

Both modules listen for a connection and also dial out, so either side can establish the link. The side that dials sends the shared password; the side that accepts checks it and drops the connection if it doesn't match. No data crosses until the password is accepted.

If dialing fails, the module waits twice as long before each new attempt, up to 60 s, and stops dialing while audio is flowing. It keeps listening the whole time, so the peer can still dial in.

GPIO pass-through

Input 1 at one site drives output 1 at the other, and input 2 drives output 2. Inputs are active low. Each change carries a sequence number, so a delayed packet can't flip an output back to an old state. If no update arrives from the peer for 2 s, the outputs return to idle rather than holding their last state.

Peer address and the gateway check

The peer's address can be an IP address or a DNS name, such as a dynamic DNS name. A name is looked up at start-up and again every 5 minutes while audio is idle, or every 30 s while the peer can't be heard. If the address changes, the module follows it.

If the module's own address, netmask or gateway is wrong for the site, nothing it sends can leave the local network. Since v74 the module detects this, pauses all traffic to the peer, says so on the console and the display (`NO GW`), and retries every 10 s. This keeps the console and display responsive on a misconfigured module.

Security

The DCN password is sent in clear text, and the audio, heartbeat and GPIO streams are not authenticated. Over the open internet, run the pair over a VPN, or restrict the forwarded ports to the other site's address.

Getting started: a pair over the internet

Each module needs a fixed address on its own network, the other site's public address, four forwarded ports on each router, and the same link password. Five answers in `//setup`, or on the Wi-Fi setup page, cover everything but the router.

Before you start

- **A reachable public address at each site.** A static public IP or a dynamic DNS name (for example `parc1.mywire.org`) both work. A site behind carrier-grade NAT (router WAN address 100.64.x.x to 100.127.x.x) can't accept incoming traffic: use a VPN instead.
- **Upload bandwidth.** With the default PCM codec each direction uses about 300 kbps. On slower connections, switch to u-law or ADPCM.
- **A way to configure the module.** Either a USB cable and a terminal program at 115200 baud with local echo on, or a phone or laptop with Wi-Fi.
- **Test on the bench first.** Configure both modules, connect them to the same switch with LAN addresses, and confirm they link before taking them to the sites.

Example addresses

The steps below use these example addresses. Substitute your own.

Setting	Site A	Site B
Public address (router WAN or DNS name)	203.0.113.10	siteb.mywire.org
Module LAN address	192.168.1.50	192.168.10.50
Netmask	255.255.255.0	255.255.255.0
Gateway (router LAN)	192.168.1.1	192.168.10.1
Remote site entered on this module	siteb.mywire.org	203.0.113.10

Step 1: configure each module

Use either method on each module. Both ask the same five things: static or DHCP, the address details, the remote site, and the link password.

Option A: guided setup over USB. Type `//setup` and answer each question. Press Enter to keep the value in brackets, or type `//cancel` to quit without changes:

```
> //setup
Use static IP or DHCP? S/D (Default: STATIC): s
What is your device's static IP address? (Default: 192.168.1.73):
192.168.1.50
Enter the device netmask (Default: 255.255.255.0):
Enter the network gateway (Default: 192.168.1.1):
Enter the remote device WAN address, IP or DNS name (required):
siteb.mywire.org
Enter the link password (Default: sierra): YourSharedSecret
--- Setup summary ---
...
Save these settings? Y/N (Default: Y): y
Reboot now so the network settings take effect? Y/N (Default: Y): y
```

Option B: Wi-Fi setup from a phone.

1. Hold the mode button while powering up, and keep holding it for 2 s.
2. The display shows a Wi-Fi network named `SRS-ROIP-xxxx` and its password. The password is unique to the module and only shown on the module itself.
3. Join that network. The setup page opens by itself; if it doesn't, browse to `http://192.168.4.1`.
4. Fill in the form and tap **Save and restart**.

The module returns to normal operation by itself after 10 minutes with no activity on the page, or when the mode button is pressed again. Wi-Fi is never on in normal operation.

If you'd rather use DHCP, choose it and add a DHCP reservation in the router for the module's MAC address. The boot summary and `//net` show the MAC.

Step 2: forward ports on each router

Forward these to the module's LAN address:

Protocol	Port	Stream
UDP	7300	Audio
UDP	7301	Heartbeat
UDP	7302	GPIO
TCP	7303	DCN serial

Limit each rule to the other site's public address if your router supports it. The DCN link needs TCP 7303 forwarded at only one of the two sites, but forwarding it at both is simplest. The UDP ports must match on both modules: if you change one, change it on both.

Step 3: optional settings

- **Codec**: `//codec,ulaw` or `//codec,adpcm` for limited upload bandwidth.
- **DCN baud rate**: `//dcnbaud,9600` to match your RS-485 bus.
- **Emphasis**: `//audioin` and `//audioout` if the module is wired to a radio's discriminator or modulator, or to equipment that expects one. See Connecting to radios.

Step 4: check the link

About 10 s after start-up, each module prints a status summary on the console. Type `//status` (or `//info`) at any time for the same summary. A working pair looks like this:

```
> //status
--- Status ---
  My IP address      192.168.1.50  (static)
  Ethernet           connected
  Remote IP address  siteb.mywire.org  (198.51.100.20)
  Remote device      connected
  Audio channel      working
  Serial channel     working
  GPIO channel       working
--------------
```

Audio and GPIO show `working` only when they work in both directions.

When an item isn't working, its line says why, and `//status,detail` shows each stream in each direction with a hint on which site's router to check. See the example under Examples.

The Link LED should be on solid at both sites. To test audio end to end, send a tone from one site and listen at the other:

```
//tone,1000,3000
```

Then set levels to suit your equipment with `//rxlevel` (audio sent to the far site) and `//txlevel` (audio played out locally).

Connecting to radios: emphasis and filters

Each audio path has its own emphasis setting, so the module can match whatever is wired to it at each end. Both paths are flat by default.

Setting	Input path (audio in → network)	Output path (network → audio out)
`flat`	Passed through unchanged	Passed through unchanged
`de`	From a discriminator: de-emphasized before sending	Network audio is pre-emphasized; equipment here wants flat audio
`pre`	From a flat source: pre-emphasized before sending	To a modulator: pre-emphasized

Set them with `//audioin,flat|pre|de` and `//audioout,flat|pre|de`. Two band-limiting filters are switched on their own:

Filter	Path	What it does
`//rxhpf,on`	Input, before the emphasis	300 Hz high-pass, 4th order. Removes CTCSS, DCS and DC offset
`//txlpf,on`	Output, after the emphasis	3 kHz low-pass, 4th order. Keeps out-of-band energy off a modulator

`//filters` shows all four settings at once.

Common setups

Wired to	Commands
Speaker or line audio at both ends	`//audioin,flat`, `//audioout,flat` (the defaults)
A radio's discriminator and modulator	`//audioin,de`, `//audioout,pre`, `//rxhpf,on`, `//txlpf,on`
A repeater controller that expects discriminator and modulator connections	Same as a radio: the module's output then looks like discriminator audio and its input accepts modulator audio
A discriminator here, a speaker-level radio at the far end	Here: `//audioin,de`, `//rxhpf,on`. Far end: flat

Time constant

All emphasis uses a 750 µs time constant, the standard for land-mobile and amateur FM (TIA-603: 6 dB per octave from 300 to 3000 Hz). The measured response stays within about 1 dB of ideal across that band. Change it with `//emphtc,<µs>` only if your equipment uses another standard; 75 µs is the broadcast-FM value.

Levels

De-emphasis is unity at 1 kHz, so the level at 1 kHz doesn't change. Pre-emphasis is unity at 3 kHz so it can never clip a full-scale signal, which means 1 kHz comes out about 9 dB lower.

- After setting `pre` on a path, raise that path's level by about 14 steps: `//rxlevel` for the input, `//txlevel` for the output (for example 50 → 64). Each step above 50 adds 0.64 dB.
- The console prints the change and which level to adjust whenever you switch. It never changes a level itself.
- Set deviation with a 1 kHz test tone sent from the far site (`//tone,1000,10000`) and a deviation meter on the transmitter.

Limits

Input de-emphasis boosts a 100 Hz tone about 13 dB relative to 1 kHz, so use `//rxhpf,on` with it. The 300 Hz high-pass gives −52 dB at 67 Hz, −38 dB at 100 Hz and −24 dB at 150 Hz, but only −7 dB at 254 Hz, so the highest CTCSS tones may still be faintly audible. Test tones and courtesy tones are generated after the input filters, so they are sent flat.

Command reference

Every command starts with `//`, is typed on the USB console at 115200 baud, and is not case-sensitive (except the password itself). **Saved** settings survive a reboot; **Reboot** means the change takes effect after `//reboot`. The Up and Down arrows recall the last 50 commands.

Setup and status

Command	What it does	Default
`//setup`	Guided setup: addressing, remote site, link password	
`//status` (or `//info`)	Summary: my IP, Ethernet, remote IP, remote device connected, and whether the audio, serial and GPIO channels work	
`//status,detail`	Each stream in each direction, with hints on which router to check	
`//net` (or `//config`)	Every setting, grouped, with the command that changes it, plus live status	
`//version`	Firmware version	
`//help`	Lists the commands	
`//history`	Lists recent commands	
`//reboot`	Restarts the module; settings are kept	
`//factoryreset`	Explains the reset; then `//factoryreset,confirm` erases every setting and reboots	

Link

Command	What it does	Default
`//remoteip,<ip or name>`	Peer site's public address, or a DNS name. Saved	not set
`//setpassword,<text>`	Shared DCN link password; must match the peer exactly. Saved	sierra
`//remoteport,<1-65535>`	Peer's DCN TCP port. Saved	7303
`//localport,<1-65535>`	This module's DCN TCP listening port. Saved, applies at once	7303
`//connect`	Looks up a DNS name again, then drops and re-dials the DCN link at once	
`//reconnectinterval,<ms>`	Base time between DCN dial attempts (100-60000); doubles after each failure, up to 60 s. Saved	2000

Network

Command	What it does	Default
`//dhcp,on` / `off`	Uses DHCP, or the static address only. Saved, reboot	off
`//staticip,<ip>`	Static address; also the fallback if DHCP fails. Saved, reboot	192.168.1.73
`//netmask,<mask>`	Static netmask. Saved, reboot	255.255.255.0
`//gateway,<ip>`	Static gateway. Saved, reboot	192.168.1.1
`//dns,<ip>` / `auto`	DNS server for name lookups; `auto` uses the DHCP server's, or the gateway. `//dns` shows it. Saved	auto
`//mac,<aa:bb:cc:dd:ee:ff>` / `auto`	Overrides the MAC address, or returns to the chip-derived one. Saved, reboot	unique per chip

Command	What it does	Default
`//audioport,<n>`	Audio UDP port; must match the peer. Saved	7300
`//heartbeatport,<n>`	Heartbeat UDP port; must match the peer. Saved	7301
`//gpioport,<n>`	GPIO UDP port; must match the peer. Saved	7302
`//hbinterval,<ms>`	How often a heartbeat is sent (100-60000). Saved	1000
`//hbtimeout,<ms>`	Silence before the peer counts as lost (100-120000). Saved	3000

Audio

Command	What it does	Default
`//rxlevel,<0-100>`	Level of local audio sent to the peer (50 = unity, 0.64 dB per step above). Saved	50
`//txlevel,<0-100>`	Level of peer audio played out locally (50 = unity). Saved	50
`//inputlevel,<0-30>`	Analog input gain in dB, in 3 dB steps. Saved	0
`//codec,pcm` / `ulaw` / `adpcm` / `opus`	Codec for the audio this module sends. Saved	pcm
`//opusbitrate,<6000-64000>`	Opus bitrate in bits per second. Saved	64000
`//adaptive,on` / `off`	Lowers the Opus bitrate automatically when the peer reports loss. Saved	off
`//tone,<hz>,<ms>[,<level>]`	Sends a test tone to the peer (100-4000 Hz, up to 300000 ms, level 0-100)	
`//dacprime,<3-8>`	10 ms frames kept queued in the audio output: more rides out longer stalls but adds delay. Saved	3

Command	What it does	Default
`//driftcorrect,on` / `off`	Clock-drift correction on playback; `//driftcorrect` shows the current correction. Not saved	on

Emphasis and filters

Command	What it does	Default
`//audioin,flat` / `pre` / `de`	Emphasis on audio in → network; `de` for a discriminator. `//audioin` shows it. Saved	flat
`//audioout,flat` / `pre` / `de`	Emphasis on network → audio out; `pre` for a modulator. `//audioout` shows it. Saved	flat
`//rxhpf,on` / `off`	300 Hz high-pass on the input. Saved	off
`//txlpf,on` / `off`	3 kHz low-pass on the output. Saved	off
`//emphtc,<25-2000>`	Emphasis time constant in µs. Saved	750
`//filters`	Shows all four settings and any level change to make	

PTT, COR and courtesy tone

Command	What it does	Default
`//audiotimeout,<ms>`	Time after the last audio frame before COR starts to drop (0-60000). Saved	300
`//pttdelay,<ms>`	COR hang time after that (0-60000). Saved	500
`//unkeytone,<hz>,<ms>[,<level>]`	Courtesy tone sent when PTT is released; `<ms>` = 0 turns it off. Saved	off
`//unkeybeeps,<1-3>`	Number of beeps in the courtesy tone. Saved	1
`//unkeybeepgap,<ms>`	Silence between beeps (0-5000). Saved	100
`//unkeypredelay,<ms>`	Silence before the tone (0-10000). Saved	200

Command	What it does	Default
`//unkeypostdelay,<ms>`	Silence after the tone (0-10000). Saved	200

DCN serial and GPIO

Command	What it does	Default
`//dcnbaud,<300-921600>`	RS-485 baud rate; must match the bus. Saved, applies at once	9600
`//rs485hw,on` / `off`	Lets the UART switch the RS-485 driver itself instead of the firmware waiting for each send. Check with a scope before relying on it. Saved, reboot	off
`//localgpio1,on` / `off`, `//localgpio2,...`	Forces this module's output 1 or 2, ignoring the peer. Not saved	
`//remotegpio1,on` / `off`, `//remotegpio2,...`	Forces what this module sends for input 1 or 2, so the peer's output follows. Not saved	
`//gpiorelease`	Releases every forced GPIO	

Diagnostics

Command	What it does	Default
`//bitrate`	Data rates per stream, sent and received: payload, IP, Ethernet and wire kbps, plus the expected audio rate for the current codec	
`//bitrate,on` / `off` / `reset`	One `[RATE]` line per second, stop, or clear the averages	off
`//console,on` / `off`	Shows or hides background log messages; command replies always show	off

Command	What it does	Default
`//diag,on` / `off`	PTT, capture and jitter-buffer statistics in the log	off
`//instrumentation,on` / `off`	Timing and packet diagnostics in the log	off
`//faultlog,on` / `off` / `clear`	Starts, stops or empties the fault log; `//faultlog` prints it	off
`//timingreset`	Clears the worst-case timing figures shown in `//net`	
`//display,on` / `off`	Turns all display updates on or off	on
`//scopegain,in` / `out` / `both,<1-16 or auto>`	Scope page vertical gain; `//scopegain` shows it. Saved	2

The switches marked Not saved, and the console, diagnostic, fault-log and display switches, return to their defaults on every boot.

Examples

These console sessions show what you type after the `>` prompt and what the module replies. Long replies are shortened with `...`.

Find a missing port forward with //status

```
> //status
--- Status ---
  My IP address      192.168.1.50  (static)
  Ethernet           connected
  Remote IP address  siteb.mywire.org  (198.51.100.20)
  Remote device      connected
  Audio channel      NOT working -- the remote isn't receiving ours
  Serial channel     working
  GPIO channel       working
  //status,detail shows each direction and what to check.
--------------
> //status,detail
--- Link status ---
  This board   192.168.1.50  (Ethernet up)
```

```
  Remote site  siteb.mywire.org -> 198.51.100.20
  Channel      Port       Receiving from peer  Peer receiving us
  Heartbeat    UDP 7301   yes                  yes
  Audio        UDP 7300   yes                  NO
  GPIO         UDP 7302   yes                  yes
  DCN serial   TCP 7303   working (we dialed out)
  > The peer isn't receiving our audio -- check UDP 7300 is forwarded on the
PEER site's router.
-------------------
```

The summary shows audio isn't working, and the detail table shows why: this module hears everything from site B, but site B isn't receiving this module's audio. The fix is on site B's router: forward UDP 7300 to its module.

Point a module at a dynamic DNS name

```
> //remoteip,siteb.mywire.org
Remote site set to hostname siteb.mywire.org
DNS: siteb.mywire.org -> 198.51.100.20
```

The module looks the name up again every 5 minutes, and sooner if the peer goes quiet, so it follows the far site when its address changes.

Connect to a radio's discriminator and modulator

```
> //audioin,de
Audio input emphasis: de
...
> //rxhpf,on
...
> //audioout,pre
Audio output emphasis: pre
Output level at 1 kHz is now 8.9 dB lower -- raise //txlevel by about 14 to
keep the same level.
...
> //txlpf,on
...
> //txlevel,64
TX audio level set to 64% (applied immediately)
> //filters
--- Audio filters ---
  Input  (audio in -> network):   emphasis de,  300 Hz high-pass ON
  Output (network -> audio out):  emphasis pre,  3 kHz low-pass ON
  Time constant: 750 us (land-mobile / amateur FM standard)
  Pre-emphasis is unity at 3 kHz, so 1 kHz is -8.9 dB on the output -- raise
//rxlevel or //txlevel to suit (~0.64 dB per step above 50).
```

Then send a 1 kHz tone from the far site and check deviation at the transmitter.

Check the data rate of a codec

Set the codec, hold PTT (or send a tone), and read the last second:

```
> //codec,ulaw
Audio codec set to ulaw
> //bitrate
--- Data rates ---
Last 1000 ms:
  Channel    Dir    pkt/s   payload        IP  Ethernet      wire   (kbps)
  Audio      out    100.0     132.0     154.4     168.8     184.8
  Audio      in       0.0       0.0       0.0       0.0       0.0
  Heartbeat  out      1.0       0.0       0.3       0.5       0.7
  Heartbeat  in       1.0       0.0       0.3       0.5       0.7
  GPIO       out      7.0       0.2       1.7       3.6       4.7
  GPIO       in       7.0       0.2       1.7       3.6       4.7
  DCN (est)  out      0.0       0.0       0.0       0.0       0.0
  DCN (est)  in       0.0       0.0       0.0       0.0       0.0
  Total      out    108.0     132.2     156.4     172.9     190.2
  Total      in       8.0       0.2       2.0       4.1       5.4
...
Expected while sending audio (u-law, 100 pkt/s): payload 132.0, IP 154.4,
Ethernet 168.8, wire 184.8 kbps
```

The measured audio row matches the expected figure. Use the IP column to compare against an internet plan's upload speed, and `//bitrate,on` to watch the rate change second by second.

Add a two-beep courtesy tone

```
> //unkeytone,1000,100,50
Unkey tone: 1000.00 Hz for 100 ms at 50% — will play automatically when
PTT_INPUT releases.
> //unkeybeeps,2
Unkey tone set to 2 beeps
Gap between beeps: 100 ms (see //unkeybeepgap to change it)
```

Test the GPIO lines without wiring

```
> //remotegpio1,on
Remote GPIO output 1 forced ON (sent to the peer; local input ignored until
//gpiorelease)
> //gpiorelease
All GPIO forcing released -- inputs and outputs back to normal pass-through.
```

Output 1 at the far site switches on until the force is released.

Track down intermittent audio dropouts

Turn on the fault log at both sites and leave the link in normal use:

```
> //faultlog,on
Fault logging: ON (//faultlog to view, //faultlog,clear to empty)
```

When a dropout is heard, print the log on the module whose audio dropped:

```
> //faultlog
--- Fault log: 3 record(s), oldest first, logging ON, now @184211ms ---
     52310ms  LOOP STALL   180ms, slowest: serviceDcnBus
     52362ms  DAC DRY      ~150ms of silence (estimate)
     97004ms  LOST FRAME   x4 over 30ms  seq 9631
--- end of fault log ---
```

Times are milliseconds since start-up. Here a busy moment on the module itself caused the first dropout, and four packets lost in transit caused the second. Fault types are listed under Troubleshooting.

Front panel

Three LEDs show the link at a glance, the display steps through eight status pages, and the mode button changes pages or, held at power-up, starts Wi-Fi setup.

LEDs

LED	On solid	Blinking	Off
Status	Ethernet link up	Fast (~5 Hz): no Ethernet link. Slow (1 Hz): Wi-Fi setup mode	
Link	Heartbeats arriving from the peer		Peer not heard for 3 s
Activity		Fast: audio or DCN data moving, either direction	Idle, or peer not reachable

A healthy idle pair shows Status and Link on solid and Activity off.

Mode button

Action	Result
Press during normal operation	Next display page
Hold while powering up, for 2 s	Wi-Fi setup mode (see Getting started)
Press during Wi-Fi setup mode	Leaves setup mode without changes and restarts

Display pages

The module shows a splash screen with the firmware version for 2 s at start-up, then the Summary page. Each press of the mode button moves to the next page; after the last it returns to Summary.

Page	Shows
Summary	One line each for Ethernet and peer, audio, DCN and GPIO (codes below)
Link	Ethernet up, down or no gateway; this module's IP address; peer heartbeat
Audio	PTT, audio being sent, COR
Serial	DCN connection, password accepted, data moving
DCN Monitor	The last characters sent (S>N) and received (N>S) on the DCN bridge
GPIO	State of the two inputs and two outputs
Scope In	Live waveform of the local input audio, before filtering
Scope Out	Live waveform of the audio arriving from the peer

On the Summary page:

- `Eth:UP Pr:OK`: Ethernet link and peer heartbeat. `DOWN` and `LOST` when not; `Eth:NO GW` when the gateway or peer doesn't answer.
- `TX:ACT RX:ACT PCM`: sending audio, receiving audio (COR), and the codec the peer is sending (`--` before any audio has arrived).

- `DCN:OK Data:ACT`: DCN connected with the password accepted, and data moving.
- `I1:A I2:- O1:1 O2:0`: inputs active (`A`) or idle (`-`), outputs on (`1`) or off (`0`).

The display updates only the parts of the screen that change, so it no longer interrupts audio. The scope pages redraw about once a second; `//scopegain` makes the trace larger or smaller. Modules with the 16x2 character display show every page except the two scope pages.

Troubleshooting

Start with `//status` on both modules: it shows which item isn't working and why. `//status,detail` shows each stream in each direction and which router to check, `//net` shows every setting, and `//console,on` shows connection messages (`[DCN]`, `[LINK]`) as they happen.

Symptom	Likely cause	What to do
`Ethernet: connected, but the gateway doesn't answer`; display shows `NO GW`	This module's IP address, netmask or gateway is wrong for the site	Check them against the router with `//net`, or run `//setup`
`Remote device: NOT connected`	Wrong remote address, the peer is offline, ports not forwarded at this site, or this site is behind carrier-grade NAT	Check the remote address points at the other site; forward the UDP ports here; check the router's WAN address isn't 100.64.x.x to 100.127.x.x
Audio or GPIO `NOT working` in one direction	That port isn't forwarded on one router	`//status,detail` names the port and the site
Remote IP address `not resolved yet`	Name misspelled, or no working DNS server	Check the name; set a server with `//dns,8.8.8.8`
`Serial channel: NOT working -- not connected`	TCP 7303 not reachable at either site, or a UPnP port conflict on the router	Forward TCP 7303 at one site or both; `//connect` retries at once
Serial connects then drops; `peer password REJECTED`	Passwords differ	Set the same `//setpassword` on both; it is case-sensitive

Symptom	Likely cause	What to do
Serial working, but bus devices don't respond	Baud rate mismatch	Set `//dcnbaud` to the bus speed on both modules
Audio channel working but nothing heard	PTT not reaching the module, or levels too low	Watch `PTT: ACTIVE` on the Audio page; send `//tone,1000,3000` from the far site
Audio too quiet after setting `pre` on a path	Pre-emphasis lowers 1 kHz by about 9 dB	Raise `//rxlevel` (input) or `//txlevel` (output) by about 14
Hum or buzz at 67-254 Hz in radio audio	CTCSS from the discriminator passing through	`//rxhpf,on`
Muffled or harsh audio	Emphasis set on a path whose equipment already handles it, or missing where it doesn't	Check `//filters` against the equipment at each end (see Connecting to radios)
Choppy audio over the internet	Not enough upload bandwidth, or packet loss	Compare `//bitrate` (IP column) with the upload speed; try `//codec,ulaw` or `//codec,adpcm`; use the fault log
Short dropouts when the module is busy	Brief stalls at the module itself	Check `Loop worst` in `//net`; `//dacprime,5` adds 20 ms of tolerance and 20 ms of delay
Two modules show the same MAC address	Address clash on the same network	Give one module another MAC with `//mac`, then `//reboot`
COR stays on after the far site unkeys	End marker lost; COR falls back to the timeouts	Normal for up to `//audiotimeout` + `//pttdelay` (800 ms by default)

Fault log entries

With `//faultlog,on`, the module records each audio fault and link event. Repeats of the same fault within 250 ms are counted in one record (`x4 over 30ms`). The log keeps the latest 128 records in memory and is cleared by a reboot.

Entry	Meaning
`UNDERRUN`	Audio from the peer paused mid-transmission; shows the gap. Usually a stall at the sending site or on the network
`LOST FRAME`	A packet never arrived and silence was played in its place
`LATE RESYNC`	Several packets arrived too late to play; the buffer realigned to the stream
`JUMP RESYNC`	The packet sequence jumped, typically after an outage or a peer reboot
`TRIM`	One 10 ms frame was dropped to remove extra delay
`I2S SHORT WR`	The audio output could not accept a full frame at once
`DAC DRY`	The audio output ran out of queued audio; shows roughly how long it played silence
`LOOP STALL`	The module was busy for over 40 ms; names the slowest task
`GATEWAY DOWN` / `GATEWAY OK`	The gateway (or peer, on the same network) stopped or resumed answering
`ETH DOWN` / `ETH UP`	The Ethernet cable or link went down or came back
`PEER LOST` / `PEER OK`	Heartbeats from the peer stopped or resumed
`DNS FAIL`	Looking up the remote name failed
`PEER ADDR`	The remote name now points to a new address
`DHCP`	A DHCP lease renewal or rebind took place

Re-keying PTT within about 1 s of releasing it can also appear as an `UNDERRUN`. Printing the log briefly pauses the module, so it may record its own `LOOP STALL`.