
// generative instrument

Gruz_OS

diceFriend / quick start

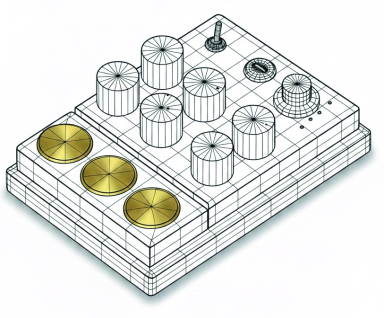

Bass, resonant noise and damaged ambience coupled through memory, feedback and saturation.

START: USB power + stereo audio out; begin with the listening level low. Starts in AS with all three tracks open.

AS: pads strike BASS / NOISE / AMBIENT and add density. **TS:** hold T1 / T2 / T3 to open the matching track.

// KNOBS / AS + TS

P	NORMAL	SHIFT
1	BASS level	BASS pitch: MIDI 24-60
2	NOISE level	NOISE pitch: MIDI 36-72
3	AMBIENT level	AMBIENT pitch: MIDI 36-72
4	BASS density / PM	MEMORY: recirculation / coupling
5	NOISE density	SATURATION
6	AMBIENT density / glitches	FX / MOTION / overload

Pickup: after startup, layer change, DICE or MIDI control, move a knob about 8% to take control; it glides for 200 ms.

// TRACKS / MODES

BASS: sub-rich PM. **NOISE:** pitched resonators with rungler excitation. **AMBIENT:** six detuned oscillators plus short clicks. Track energy cross-modulates the complete organism.

AS: all tracks remain open; clock gives a gentle bloom. **TS:** pads gate tracks; effect tails decay naturally. External clock can pulse all tracks until MIDI notes take over TS articulation.

// DICE / SHIFT

Tap DICE: randomize the active layer. **NS + DICE 3 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader. Changing SHIFT cancels a hold.

// CV / CLOCK

CV1: priority trigger and step. **CV2:** smoothed coupling control; sends CC74, not V/oct.
Priority: CV, then MIDI, then internal. MIDI after 20 s without CV; internal after 30 s without external clock.

// USB MIDI

IN: AS ch 1-3 = tracks; TS ch 1 = all. Note On sets pitch and strikes; Note Off releases. Clock 24 PPQN; CC20-31 panel.
OUT ch 16: local notes, CV2 CC74 and activity CC102-104. No MIDI Thru or same-port echo.

LEDs: active layer, clock / step, then BASS / NOISE / AMBIENT activity. Start clean with low density; raise MEMORY, SATURATION and FX / MOTION gradually.