
// generative instrument

DriftScape_OS

diceFriend / quick start

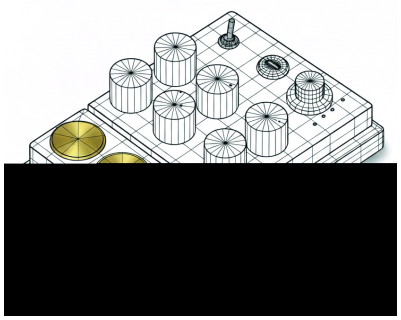

A wandering low body, two wind-chime melodies and long tonal reflections.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: autonomous ambient landscape. **TS:** three dedicated resonators with individual decay.

AS: T1 Freeze / T2 Dissolve / T3 Bloom. **TS:** T1-T3 strike their own resonators; hold for a longer gesture.

// KNOBS / AS

P	NORMAL	SHIFT
1	Melody A / B balance	MIDI transpose / root
2	Mutation	Drift
3	Body decay	Stereo spread
4	Reverb / space	Tempo: 20-180 BPM
5	Chime decay	Chime register
6	Chime timbre	Body / chime balance

// KNOBS / TS

P	NORMAL	SHIFT
1	T1 pitch	Resonance / Q
2	T2 pitch	Stereo spread
3	T3 pitch	Brightness
4	T1 decay	Resonator character
5	T2 decay	Reserved
6	T3 decay	Gentle fold

SHIFT: up = second layer; down = normal. **Pickup:** After changing layers or using DICE, move a knob to take control of its stored value.

// DICE / SHIFT

Tap DICE: new landscape. **SHIFT + DICE 3 s:** deeper randomization. **DICE 3 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: trigger / clock. **CV2:** modulation; repeated pulses can become clock / triggers. CV2 also modulates space and chime timbre; steady level sends CC74.
Banana: 0-9 V; common GND.

// USB MIDI

IN: notes set the tonal center and excite AS / TS; Clock. **OUT:** pad / CV notes and internal / CV Clock. SHIFT P1 transposes generated MIDI, not incoming notes.

For a calm field, lower Mutation and raise Body Decay. Center Melody Balance to hear both chime layers. TS SHIFT P5 has no assigned function.