
// generative instrument

Flux_OS

diceFriend / quick start

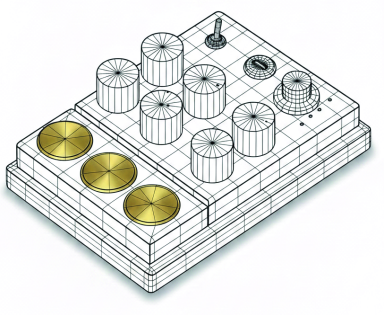

Three FM voices, remembered timbres and rhythms that stretch between pulses and evolving phrases.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: irregular autonomous FM phrases. **TS:** three voices, with Strike / Hold / Bloom articulations.

AS: T1 accents depth; T2 shifts ratios; T3 freezes memory / motion. **TS:** each pad has its own pitch and decay.

// KNOBS / AS

P	NORMAL	SHIFT
1	Fundamental pitch	FM topology
2	FM ratio	Detune
3	FM depth	Feedback
4	Decay	Contour
5	Rate: 30-300 BPM*	Body resonator
6	Motion / irregularity	Stereo space

// KNOBS / TS

P	NORMAL	SHIFT
1	T1 pitch	FM ratio
2	T2 pitch	FM depth
3	T3 pitch	Topology
4	T1 decay	Feedback
5	T2 decay	Contour
6	T3 decay	Detune

SHIFT: up = second layer; down = normal. **Pickup:** After changing layers or using DICE, move a knob to take control of its stored value.

// DICE / SHIFT

Tap DICE in AS: randomize normal layer, keep Rate. **SHIFT + tap:** randomize SHIFT. **Tap in TS:** Strike / Hold / Bloom. **DICE 3 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: AS step or three TS triggers. **CV2:** Depth modulation; repeated edges can become clock. **Banana:** 0-9 V; common GND.

// USB MIDI

IN: notes, Clock; bend +/-2 semitones; pressure / CC1 / CC74 raise Depth. **OUT:** local notes, CC and internal / CV Clock. **Panel:** CC20-25 = normal P1-P6; CC26-31 = SHIFT P1-P6.

*With external clock, AS normal P5 selects /4, /2, x1, x2 or x4. TS pad pressure does not change timbre; Body and Space belong to AS.
