
// generative instrument

PERC_OS

diceFriend / quick start

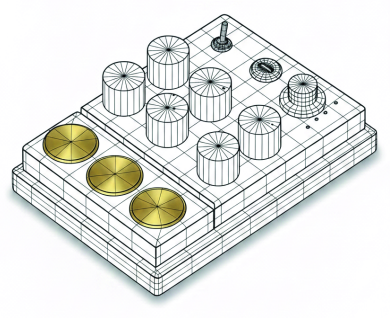

A touch percussion looper: kick, snare, hi-hat, rhythm mutation and four synthesis engines.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

Loop + Touch: one operating model. A 32-step loop spans two bars of 4/4.

T1: kick. **T2:** snare. **T3:** hi-hat. Tap to play and record. Hold a pad 3 s to clear its track.

// SIX KNOBS / TWO LAYERS

P	NORMAL	SHIFT
1	Kick character	Tempo: 20-240 BPM
2	Snare character	Chaos / mutation
3	Hi-hat character	Feel: quantize > swing
4	Kick decay	Compression
5	Snare decay	Fracture
6	Hi-hat decay	Resonant space

SHIFT: up = second layer; down = normal. **Pickup:** After switching layers, move the knob to take control. Touching a pad also unlocks its sound-control pair.

// DICE / SHIFT

Tap DICE: new sound, same beat. **SHIFT + tap:** rhythm mutation. **DICE 3 s:** next engine. **DICE + pad:** randomize / audition that voice. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1 / CV2: clock inputs only. One pulse advances one sixteenth; an empty track stays silent.
Banana: 0-9 V; common GND.

// USB MIDI

IN: Clock / transport; notes are ignored. CC20-25 = SHIFT globals; CC26-31 = normal sound controls. **OUT:** Clock and panel CC; loop hits do not send notes.

Start with SHIFT P1 tempo, then record the three pads. Hold DICE beyond 0.7 s to raise chaos; SHIFT + DICE 3 s then release commits rhythm mutation.