
// generative instrument

Gambi_OS

diceFriend / quick start

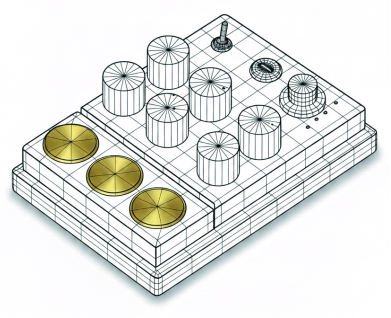

Slow veils, wet clatter and vinyl dust. Three drifting tracks melt into one soft, unstable wall.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: autonomous soundscape; each step moves one track. **TS:** pads open the tracks with slow swells.

AS: T1-T3 strike their track; hold for more texture. **TS:** T1-T3 open T1 / T2 / T3; release to fade.

// KNOBS / AS + TS

P	NORMAL	SHIFT
1	Level T1	Pitch T1: MIDI 36-60
2	Level T2	Pitch T2: MIDI 48-72
3	Level T3	Pitch T3: MIDI 60-84
4	Stickiness T1	Time: step 6 s to 1.2 s, glides
5	Stickiness T2	Instability: dissonance / wow / glitch
6	Stickiness T3	FX: wash; last quarter = excess

SHIFT: up = second layer; down = normal. **Pickup:** after changing layers, DICE or MIDI CC, move a knob about 8% to take control; it glides in over 200 ms.

// TRACKS / FX

Each track = **WELON** veil + **REZONANS** clatter and droplets + **FAKTURA** breath and grunts. Melodies walk a mode and hook on m2, tritone, M7 and m9. Chain: glitch, vinyl, tape wow, phaser, long reverb. **FX is level-matched:** more noise and crackle, not more volume.

// LEDS

Layer LEDs show NORMAL / SHIFT. LED 0 flashes on every step and blinks fast on AS / TS. LEDs 1-3 show T1 / T2 / T3 activity.

// DICE / SHIFT

Tap DICE: new values for the active layer and a new melody mode. **DICE 3 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: priority clock; each edge moves the melody.
CV2: wetness: deeper wow, more clatter, grunts and glitches; sends CC74.
Banana: 0-9 V; common GND.

// USB MIDI

IN: ch 1-3 set pitch of T1-T3 and strike (TS: ch 1 plays all); Note Off releases. Clock 24 PPQN, Start / Stop. CC20-31 panel.
OUT: ch 16 notes, CC74, CC102-104 activity.

For wide wings, set Time low, FX around 70% and Instability near the centre. Push FX into its last quarter for vinyl excess.