
// generative instrument

Drzazga_OS

diceFriend / quick start

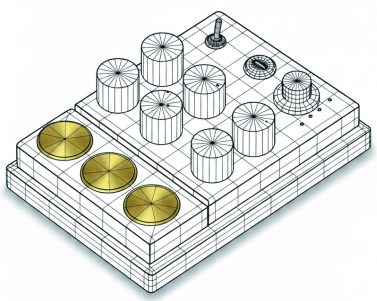

Kick and electric pulse hold the ground. Wood, triangle, can, blip and zap splinter in between, glitches fill the gaps.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: plays by itself; sparse by default, drill at the top of the knobs. **TS:** 32-step loop recorded with the pads, like PERC_OS.

AS: T1 kick, T2 hold = hat roll, T3 hold = freeze + avalanche. **TS:** T1 kick, T2 hat, T3 extra chosen by Material; hold 3 s = clear lane.

// KNOBS / AS + TS

P	NORMAL	SHIFT
1	Kick: deep and long to tight	Tempo: 50-200 BPM, 16th steps
2	Hat: dark tick to buzzing pulse	Density: sparse relabi to drill
3	Material: wood > tri > can > blip > zap	Crumbs: how often extras appear
4	Decay: extras dry to ringing	Relabi: time bending, phase shear
5	Glitch: grains in the gaps	Ratchet: repeats, rolls, drill
6	Space: room > drive > crush	Evolution: pattern rewrites itself

SHIFT: up = rhythm layer; down = timbre layer. **Pickup:** after changing layers, DICE or MIDI CC, move a knob about 8% to take control; it glides in over 200 ms.

// VOICES / GLITCH

Base: KICK + HAT stay stable; Density thins or fills the same groove. **Extras:** WOOD, TRI, CAN, BLIP (rungler), ZAP (arc) appear by chance on 5-13 step cycles, preferring the gaps. In TS they answer the recorded beat. **Glitch:** stutter, reverse, octave, crush, tape stop cut from the latest hits.

// LEDS

Layer LEDs show NORMAL / SHIFT. LED 0 flashes on every step, brighter on quarters; blinks fast on AS / TS. LEDs 1-3: kick, hat, extras + glitch.

// DICE / SHIFT

Tap DICE: new sounds for the extras; kick and hat stay. **SHIFT + tap:** new sequence (TS: variation of the loop). **DICE 3 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: priority clock; each edge = one 16th step.
CV2: second clock (like PERC_OS); level adds Density and Glitch; sends CC74.
Banana: 0-9 V; common GND.

// USB MIDI

IN: ch 1 plays the T3 voice and sets its pitch; ch 2-8 voices 0-6; ch 10 GM drums. Clock 24 PPQN (6 = one 16th), Start / Stop. CC20-31 panel, CC117 remote DICE.
OUT: ch 16 notes (one per step), Clock, CC74. Own clock under MIDI (CC85).

For drill, push Density, Ratchet and Glitch above 80%. For floating splinters, keep Density low, Relabi high and Decay long.