
// generative instrument

Modal_OS

diceFriend / quick start

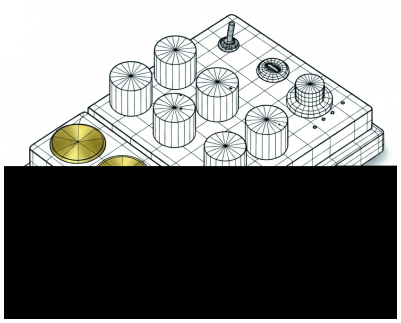

Ringing strings, metal bars, hollow caves and clustered resonators.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: self-exciting stereo modal bank. **TS:** three struck resonators.

TS: T1-T3 strike separate modal voices; hold for longer resonant gestures.

// KNOBS / AS

P	NORMAL	SHIFT
1	Tempo / MIDI transpose*	Drive / excitation
2	Left root pitch	LFSR rate
3	Right root pitch	Resonator density
4	Feedback	Detune / stereo
5	Exciter chaos	LFSR density
6	Decay	Modal mix

// KNOBS / TS

P	NORMAL	SHIFT
1	T1 pitch	Exciter chaos
2	T2 pitch	Exciter level
3	T3 pitch	Feedback
4	T1 decay	Drive
5	T2 decay	Detune
6	T3 decay	Fold / strike character

SHIFT: up = second layer; down = normal. **Pickup:** After changing layers or using DICE, move a knob to take control of its stored value.

// DICE / SHIFT

Tap DICE in AS: randomize. **Tap in TS:** Strings / Bars / Cave / Poly. **SHIFT + tap:** randomize AS or TS timbre. **DICE 3 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: trigger / clock. **CV2:** modulation; repeated pulses can become clock / triggers. CV1 can strike all TS voices.
Banana: 0-9 V; common GND.

// USB MIDI

IN / OUT: notes and clock. **AS CC:** 20 = left pitch, 21 = speed, 22 = right pitch, 23-25 = feedback / chaos / decay; 26-31 = SHIFT. **TS:** CC52-57 normal, CC58-63 SHIFT.

*With external clock, normal P1 transposes the second MIDI-output layer. Raise decay and feedback gradually for sustained resonance.