


XONE:92 Chassis assembly Front view

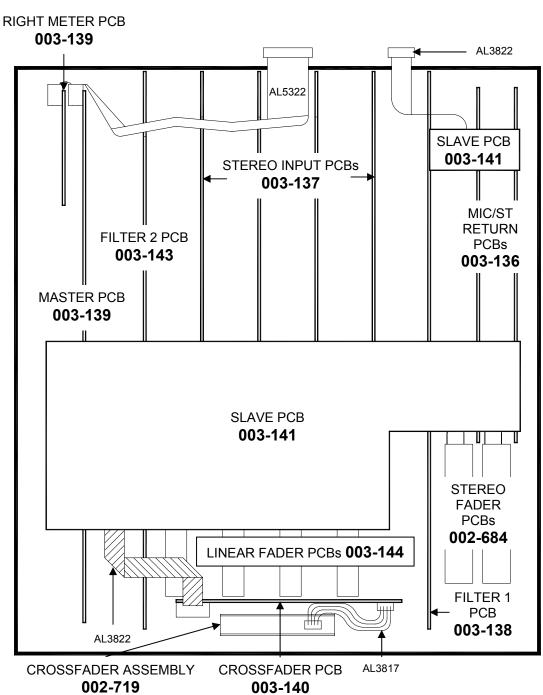

XONE:92 Front Panel assembly Front view

ROTARY versions use ROTARY FADER PCB 003-145 instead of 003-144

Product	XONE:92-R/100
	XONE:92-R/110
	XONE:92-R/120
	XONE:92-R/220
	XONE:92-R/240
	XONE:92/110
	XONE:92/120
	XONE:92/220
	XONE:92/240
Pack Assembly	003-132
Main Assembly (Line	ear) 003-133
Top Panel Assembly	(Linear) 003-134
Chassis Assembly	003-135
Main Assembly (Rot	ary) 003-146
Top Panel Assembly	(Rotary) 003-147
-1	, (1 10 10 11)
.,	, (c
Stereo Fader PCB	,
	002-684
Stereo Fader PCB	
Stereo Fader PCB Mic/Stereo Return P	
Stereo Fader PCB Mic/Stereo Return P Stereo Input PCB	
Stereo Fader PCB Mic/Stereo Return P Stereo Input PCB Filter 1 PCB	
Stereo Fader PCB Mic/Stereo Return P Stereo Input PCB Filter 1 PCB Master PCB	
Stereo Fader PCB Mic/Stereo Return P Stereo Input PCB Filter 1 PCB Master PCB Crossfader PCB	
Stereo Fader PCB Mic/Stereo Return P Stereo Input PCB Filter 1 PCB Master PCB Crossfader PCB	
Stereo Fader PCB Mic/Stereo Return P Stereo Input PCB Filter 1 PCB Master PCB Crossfader PCB Slave PCB Connector PCB	
Stereo Fader PCB Mic/Stereo Return P Stereo Input PCB Filter 1 PCB Master PCB Crossfader PCB Slave PCB Connector PCB Filter 2 PCB	
Stereo Fader PCB Mic/Stereo Return P Stereo Input PCB Filter 1 PCB Master PCB Crossfader PCB Slave PCB Connector PCB Filter 2 PCB Linear Fader PCB	
Stereo Fader PCB Mic/Stereo Return P Stereo Input PCB Filter 1 PCB Master PCB Crossfader PCB Slave PCB Connector PCB Filter 2 PCB Linear Fader PCB Rotary Fader PCB	