



UltraVision TOUCH 3.8R11

(PC and TOPAZ versions)

Product Bulletin



www.zetec.com

Table of Content

[Table of Content.....](#) [2](#)

[UltraVision Touch 3.8R11](#) [43](#)

[Purpose of UltraVision Touch 3.8R11.....](#) [43](#)

[Important information about UltraVision Touch 3.8R11](#) [54](#)

[What’s new](#) [54](#)

[New TOPAZ¹⁶.....](#) [54](#)

[UltraVision New Features and Improvements.....](#) [54](#)

[Interactive Help](#) [54](#)

[Non Corrected C-Scan View](#) [65](#)

[Inspection speed optimization.....](#) [65](#)

[Read back mode](#) [65](#)

[Pause mode for analysis](#) [76](#)

[Scan Axis Repositioning](#) [76](#)

[Improvements to weld overlays.....](#) [76](#)

[Proposed setup for NDT PaintBrush.....](#) [87](#)

[Compound Scan](#) [97](#)

[Important note about using a Linear Corrosion type array on TOPAZ¹⁶](#) [97](#)

[Downloading and installing UltraVision Touch 3.8R11 for TOPAZ.....](#) [108](#)

[Table of Content.....](#) [2](#)

UltraVision Touch 3.8R11

Zetec has just released UltraVision Touch 3.8R11. This software version can be used in TOPAZ, TOPAZ¹⁶ and TOPAZ³² as well as on a PC running Windows 7 or Windows 10.

This product bulletin presents an overview of the new features and changes that are included in this new software release.

UltraVision Touch 3.8R11 is also the first version of UltraVision Touch that includes TOPAZ¹⁶ instrument support. For more information about this product please visit <http://www.zetec.com/products/ultrasound/instrumentation/topaz16/>

UltraVision Touch 3.8R11 is available in three embedded versions for being used on TOPAZ product family:

- **Topaz 3.8R11** for TOPAZ instruments
- **Topaz16 3.8R11** for TOPAZ¹⁶ instruments
- **Topaz 3.8R11 (x64)** for TOPAZ³² instruments

And two versions to be used on PC:

- **UltraVision Touch 3.8R11** for 32 version environments
- **UltraVision Touch 3.8R11(x64)** for 64 version environments

For downloading UltraVision Touch 3.8R11 or other any UltraVision version and access to our latest software documentation, please visit www.zetec.com

Purpose of UltraVision Touch 3.8R11

UltraVision Touch 3.8R11 is Zetec's latest upgrade for Zetec's UltraVision Touch software. This software release includes several new features and improvements. Zetec's hardware and software development process is performed according to a quality system that is certified ISO 9001-2008.

With this certified software development process, Zetec guarantees that the changes between previous UltraVision Touch (3.5R10, 3.6R2, 3.6R5, 3.7R1, 3.7R21 and 3.8R7) to UltraVision Touch 3.8R11 have no consequences on the sensitivity and the accuracy of the signal amplitude and flight time outputs displayed, recorded or automatically processed by the software. This includes additions of mathematical modules used for the positioning of indications or for geometric conditions adjustments.

Important information about UltraVision Touch 3.8R11

What's new

Since March 2016, all UltraVision Classic and UltraVision Touch versions running on PC will be managed under the Software Service Program (SSP). This means that one-year of free upgrades is offered at the purchase of the license key. After that, upgrades will need to be purchased according to the SSP guidelines.

All embedded UltraVision Touch versions running on TOPΔZ, TOPΔZ¹⁶ or TOPΔZ³² units will continue to benefit from unlimited free of charge upgrades.

New TOPΔZ¹⁶

TOPΔZ¹⁶ is the latest member in Zetec's family of portable integrated ultrasonic products. TOPΔZ¹⁶ is available in two configurations (16/64 and 16/128). More information about this product can be found at <http://www.zetec.com/products/ultrasound/instrumentation/topaz16/>


UltraVision New Features and Improvements

Interactive Help


UltraVision Touch 3.8R11 adds a new Interactive Help tool.

Interactive Help is simply activated by pressing on a button or features for 3 seconds. A pop up type window containing the description and "how to..." guidelines for this feature will appear.

Interactive Help is intended to simplify training and the understanding of the less used functions.

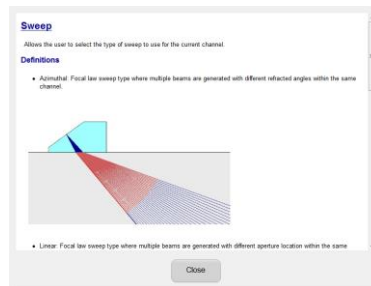

Non Corrected C-Scan View

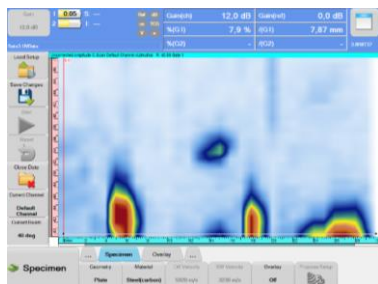

The **Non Corrected C-Scan View** displays the amplitude readings of each focal law taken from the gate and plotting the information side by side, without correction for actual angle.

When used on a Raster Scan, the data cursor allows selecting which scan line to display in the view.


Inspection speed optimization

Maximum acquisition speed is typically determined by:


- Data throughput
- Available energy for pulsing
- Acoustic sound propagation time

During setup preparation, any of these three factors can limit the achievable acquisition rate. UltraVision Touch now includes an optimization algorithm that helps identifying which of the above mentioned factors is limiting the maximum attainable acquisition speed. Optimization is not performed automatically as this may interfere with the existing instrument settings.

This new optimisation is located in Channels menu.

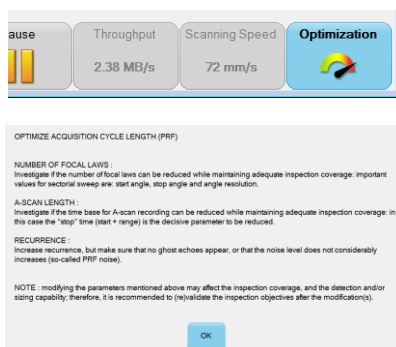

Read back mode

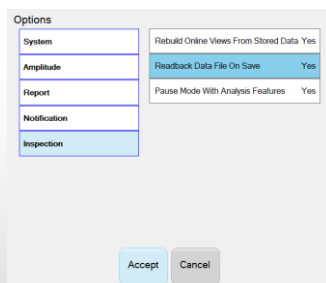

Enable When there is Read Back mode - Read Back mode is enabled, data files will be automatically open at the end of each inspection cycle.

Therefore, it is not any more necessary to manually perform the "open data file" operation for doing the analysis of the recently acquired data. Closing the data file, will automatically prepare the instrument for the next inspection cycle.

This new operating mode can be activated from the Options -> Inspection menu.


Pause mode for analysis

The new Pause mode, allows accessing analysis tools previously not available in acquisition mode. it is now possible to:

- [Change the focal displayed](#)
- [Choose the data position displayed](#)
- [Do sizing and measurements with cursors](#)
- [Move gate selector in dynamic views](#)

When in Pause mode, it is possible to reconstruct Online Views from Stored Data for doing data validation without opening inspection data files.

Pause mode can be activated or deactivates from the Options menu.

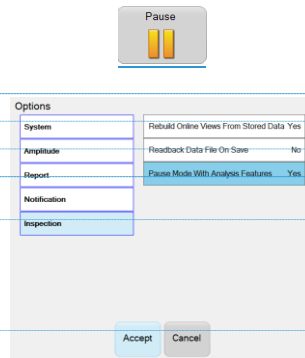

Mis en forme : Police :10 pt, Couleur de police : Texte 1, Anglais (États-Unis)

Mis en forme : Police :10 pt, Couleur de police : Texte 1, Anglais (États-Unis)

Mis en forme : Police :10 pt, Couleur de police : Texte 1, Anglais (États-Unis)

Mis en forme : Police :10 pt, Couleur de police : Texte 1, Anglais (États-Unis)


Mis en forme : Police :10 pt, Couleur de police : Texte 1, Anglais (États-Unis)

Mis en forme : Police :10 pt, Couleur de police : Texte 1, Anglais (États-Unis)

Mis en forme : Police :10 pt, Non Gras

Mis en forme : Anglais (États-Unis)

Scan Axis Repositioning

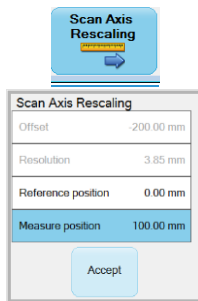

During post inspection analysis, data scan position can be re-scaled along a new scan axis length. This new features, allows for proper scaling of data when performing a manual un-encoded inspection sequence.

When a data file is loaded, user can rescale a snippet of the data along the scan axis. The selection of the data area is done with cursors and then it is needed to specify the new scan length.


The Scan Axis Repositioning tool can stretch or shrink data.

Scan Axis Repositioning button is accessible in the Analysis menu.

Mis en forme : Centré


Improvements to weld overlays

Weld Overlays can now be configured to adjust overlay color, line weight and line type.

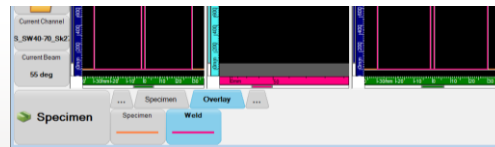

Scan Axis Repositioning

Proposed setup for NDT PaintBrush

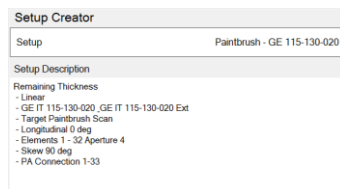


A new Proposed Setup tool for NDT PaintBrush configurations is now included in UltraVision Touch 3.8R11.

This tool helps creating the right UT setup when using either 1D Dual Linear Array type probes for corrosion inspection or a traditional 1D linear arrays.

The proposed setup tool pre-configures the apertures and position the gates according to the specimen settings simplifying the setup creation process.

Improvements to weld overlays

Weld Overlays can now be configured to adjust overlay color, line weight and line type.

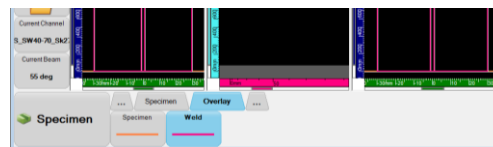

Compound Scan

Compound scanning contains several improvements:

- It is now possible to define the resolution for the compound scan generation (this replaces the option Sparse/Dense available in previous versions)
- The increment in aperture element will now be a function of the number of focal laws and the length of the probe to cover


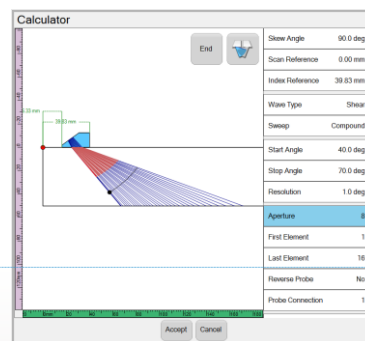


Tableau mis en forme

Mis en forme : Centré

Mis en forme : Police :10 pt

Mis en forme : Normal, Retrait : Gauche : 0.63 cm, Sans numérotation ni puces

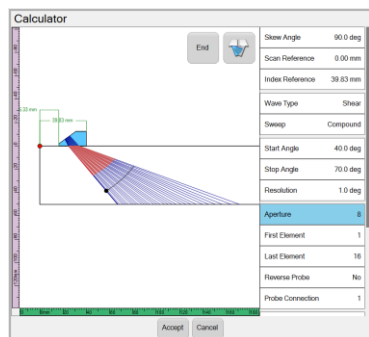

Compound scanning contains several improvements:

- It is now possible to define the resolution for compound scan generation (this replaces the option Sparse/Dense available in previous versions)
- The increment in aperture element will now be a function of the number of focal laws and the length of the probe to cover

Mis en forme : retrait : Gauche : 1.27 cm

Mis en forme : retrait : Gauche : 1.27 cm, Sans numérotation ni puces

Mis en forme : Paragraphe de liste

Important note about using a Linear Corrosion type array on TOPAZ¹⁶

1D Dual Linear Arrays 10053850 and 10053851 will replace probes 10051864 and 10052070 for corrosion mapping applications using NDT PaintBrush. Probes 10051864 and 10052070 are not supported by TOPAZ¹⁶.

These new part numbers have the same acoustic characteristic of the probes that they are replacing. Element wiring has been modified to be compatible with TOPAZ¹⁶, TOPAZ³² and TOPAZ instruments.

- 10053850 ZPA-PB1D-TR-5M48x10-6.0-ZPAC-WM (replaces item 10051864)
- 10053851 ZPA-PB1D-TR-5M24x10-6.0-ZPAC-WM (replaces item 10052070)

Mis en forme : Couleur de police : Texte 1, Anglais (États-Unis)

Downloading and installing UltraVision Touch 3.8R11 for TOPAZ

To upgrade TOPAZ software to the new 3.8R8 version, please download the appropriate UltraVision Touch version according to your instrument model from our website: www.zetec.com

UltraVision Touch is available in two versions and there are several install files available according to the software version and platform to use:

- *UltraVisionTouch 3.8R11*: Install file of UltraVision Touch for PC in 32-bits version.
- *UltraVisionTouch 3.8R11 (x64)*: Install file of UltraVision Touch for PC in 64-bits version.
- *Topaz 3.8R11*: Install file of UltraVision Touch for TOPAZ.
- *Topaz16 3.8R11*: Install file of UltraVision Touch for TOPAZ¹⁶.
- *Topaz 3.8R11 (x64)*: Install file of UltraVision Touch for TOPAZ³².

To install the downloaded version on your TOPAZ:

1. Save the file and unzip it on a USB drive;
2. Connect the USB drive to your TOPAZ
3. Go to **TOOLS > SYSTEM** and click on **System Update**
4. In the dialog, you should already see the TOPAZ 3.8R11 installer from your USB drive, but if not, click on the arrow at the top-right corner of the dialog until you see your USB and select the TOPAZ 3.8R11 installer;
5. Click on **Install**.