PRODUCT
INFORMATION

SHEHDS
Be Your Light Show Partner

LED Par 18x18W RGBWA+UV

Wash Wall Lighting

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY

BEFORE YOU INITIAL START - UP!

1. Maintenance

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

During the operation the housing becomes hot). Allow the fixture to cool approximately 20 minutes prior to manipulate with it.

Make sure that the available voltage is not higher than stated on the rear panel.

to completely remove power from unit when not in use or before cleaning or servicing the fixture.

Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the power-cord from time to time.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power-cord by the plug. Never pull out the plug by tugging the power cord.

This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.

The electric connection, repairs and servicing must be carried out by a qualified employee.

Do not connect this device to a dimmer pack.

Do not switch the fixture on and off in short intervals as this would reduce the fixture's life.

During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.

Do not touch the device's housing bare hands during its operation (housing becomes hot)!

For replacement use fixtures and fuses of same type and rating only.

CAUTION!

Be careful with your operations.

With a high voltage you can suffer a dangerous electric shock when touching the wires!

2. Operating determination

Attention: The powerCON is a connector without breaking capacity, i.e. the powerCON should not be connected or disconnected under load or live!

Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

1. Unpack and check carefully to ensure that there is no transportation damage before using theunit.
2. DO install and operate by qualified operator.
3. Be sure that no ventilation slots is blocked, otherwise the unit will be overheated.
4. DO NOT connect the device to any dimmer pack.
5. Keep flammable materials away from the fixture while operating to avoid fire hazard.
6. Make sure the power cord is not crimped or damaged; replace it immediately if damaged.
7. Unit's surface temperature may reach up to 70℃. DO NOT touch the housing bare-handed during its operation.
8. Please read the instruction carefully which includes important information about the installation, usage and maintenance.
9. Avoid any flammable liquids, water or metal from entering the unit. Once it happens, cut off the mains power immediately.
10. DO NOT operate in a dirty or dusty environment. DO clean the fixture regularly.
11. DO NOT touch any wire during operation as there might be a hazard of electric shock.
12. Avoid entanglement of the power cord with other wires.
13. The minimum distance to objects/surface must be more than 0.5 meter s
14. In the event of serious operating problem, stop using the unit immediately.
15. Never turn on and off the unit time after time.
16. The housing, the lenses, or the ultraviolet filter must be replace d if they are visibly damaged.
17. DO NOT open the housing as there are no user serviceable parts inside.
18. DO NOT attempt to operate this unit if it becomes damaged. DO NOT attempt any repairs yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center if needed.
19. Disconnect this product from its power source before servicing.

3. Attention Item

1.For guarantee the life of product,please do not use it the place over 45 degree.

2.Please don't lay the product on the un-fixable or shakable place.

3.Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.

4.Power supply should not be changed over +&-10% while the light is using,it will be decreased the life of fixture if the power is too high,but it will be influenced the luminosity if the power is too low.

5.After power off,if it is need used again,please cool down over 20 minuter.

6.Please look round the manual for ensure the product can be used normally.

4. Rigging the fixture

A structure intended for installation of the fixture(s) must safely hold weight of the fixture(s) placed on it.The structure has to be certificated to the purpose.

The fixture (fixtures) must be installed in accordance with national and local electrical and construction codes and regulation.

For overhead installation, the fixture must be always secured with a safety wire that can bear at least 10 times the weight of the fixture

When rigging, derigging or servicing the fixture staying in the area below the installation place, on bridges,under high working places and other endangered areas is forbidden.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.

Allow the fixture to cool for ten minutes before handling.

The projector should be installed outside areas where persons may walk by or be seated.

IMPORTANT! OVERHEAD RIGGING REQUIRES EXTENSIVE EXPERIENCE

including calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installation yourself, but use a help of professional companies.

CAUTION: Fixtures may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do not install the fixture!

The fixture has to be installed out of the reach of public.

The fixture must never be fixed swinging freely in the room.

Danger of fire !

When installing the device, make sure there is no highly inflammable material (decoration articles, etc.) in a distance of min. 1 m.

The minimum distance of 8 meters between light output from the moving head and the lit objects must be kept!

CAUTION!

Use 2 appropriate cfixtures to rig the fixture on the truss.

Follow the instructions mentioned at the bottom of the base.

Make sure that the device is fixed properly! Ensure that the structure (truss) to which you are attaching the fixtures is secure.

The fixture can be placed directly on the stage floor or rigged in any orientation on a truss without altering its operation characteristics.

For securing a fixture to the truss, install two safety wires which can hold at least 10 times the weight of the fixture. Use only the safety wires with screw-on carabines.

5. DMX-512 connection

The fixture is equipped with both 3-pin sockets for DMX input and output.The sockets are wired in parallel.

Only use a shielded twisted-pair cable designed for 3-pin XLR-plugs and connectors in order to connect the controller with the fixture or one fixture with another.

DMX - output
XLR mounting-sockets (rear view):

1 - Shield
2 - Signal (-)
3 - Signal (+)

DMX-input
XLR mounting-plugs (rear view):

1 - Shield
2 - Signal (-)
3 - Signal (+)

Building a serial DMX-chain:

Connect the DMX-output of the first fixture in the DMX-chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected. Up to 32 fixtures can be connected.

Caution: At the last fixture, the DMX-cable has to be terminated with a terminator.

Solder a 120 Ω resistor between Signal (–) and Signal (+) into a 3-pin XLR-plug and plug it in the DMX-output of the last fixture.

6. Fixture installing

1. When install and operate by qualified operator. Fixture(s) should be installed in areas outside walking paths, seating areas, or away from areas were unauthorized personnel might reach the fixture by hand. NEVER stand directly below the fixture(s) when rigging, removing or servicing.

2. Always ensure that the unit is firmly fixed to avoid vibration and slipping off during operation. Ensure that the trussing or area of installation must be able to hold 10 times the weight without any deformation. Always attach a safety cable that can hold at least 12 times the weight of the fixture whenever installing this fixture in a suspended environment to ensure that the fixture will not fall if the clamp fails.

7. Vertical and horizontal splicing

Align the two lamps horizontally or vertically to fit together.



Insert the hex wrench into the hexagonal slotsand tighten themclockwise to release and secure the locking mechanismsinsidethe fixture with the other fixture.

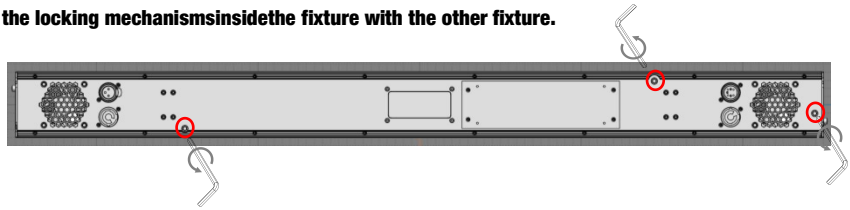

If you need to connect and alignmore fixtures, repeat the steps above.

To detach the fixtures, simply reverse the steps mentioned above.

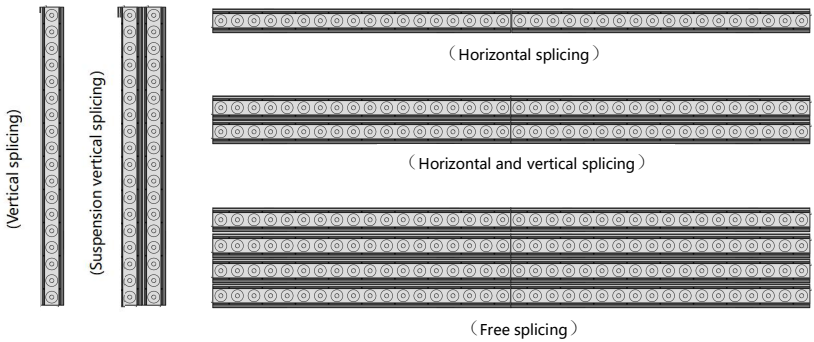

Tip:

1: Before installation, please ensure that the display screen and buttons of each lighting fixture are in the same orientation!

2: When hanging and installing, please keep 4 lamps in each room connected and fixed to the stage truss using light hooks! Be sure to keep the lighting fixtures free from other gravitational pressures to prevent the risk of deformation and detachment of the tripod structure!

8. Technical Specifications

Light source parameters	
Dimmer:	0-100% 16Bit mechanic
Light source:	18x18W RGBWA UV 6in1 mixing
Beam Lux:	3264 Lux / 2m
Beam angle:	25°
Strobe:	Flash rate 0-25HZ
Color:	RGBWA UV 6in1 mixing color
Security System	
Safety Item	Over current and voltage protection
Degree Of Protection	IP20
Operating Temperature	-20℃~45℃
Interface And Control System	
Control Interface	DMX In/Out
DMX Channel	12/108/120 CH
Power Interface	Neutrik PowerCon
Signaling Protocol	DMX 512,RDM，Manual mode,Stand alone,Master&slave
Cooling System	
Cooling Method	Passive heat dissipation
Power Consumption	
Working Power	AC100-240V,50/60Hz
Physical Parameters	
Material:	Die cast aluminum casing
Product Size	100cm x 8cm x 9.5cm
Product Weight	5.3kg
Package Size	104.5cm x 12cm x 17cm
Package Weight	6.5kg

Beam angel and luminance:

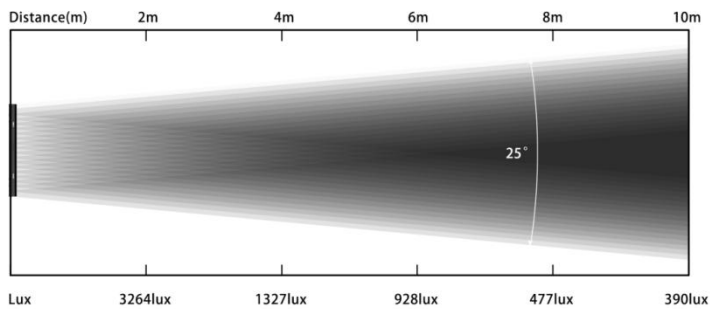

9. Maintenance and Cleaning

It is absolutely essential that the fixture is kept clean and that dust, dirt and smoke-fluid residues must not build up on or within the fixture. Otherwise, the fixture's light-output will be significantly reduced. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to function reliably throughout its life.

A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should alcohol or solvents be used!

DANGER !

Disconnect from the mains before starting any maintenance work

The front objective lens will require weekly cleaning as smoke-fluid tends to building up residues, reducing the light-output very quickly. The cooling-fans should be cleaned monthly. The interior of the fixture should be cleaned at least annually using a vacuum-cleaner or an air-jet. Remove dust and dirt from the fans and cooling vents using a soft brush and vacuum-cleaner.

Important! Check the air filters periodically and clean before they become clogged!

Clean two air filters placed in the fixture´s covers and two in the fixture base. Use a vacuum cleaner, compressed air or you can wash them and put back dry.

10. Main Functions.

Lock screen and unlock:

The screen will be automatically locked if there is no operation for a long time, and can be unlocked by press [up], [down], [up], [down].

- To access the control menus , press the [MENU] button.
- Navigate the menu structure ,using the [ENTER], [UP] and [DOWN] buttons.
- To select a menu option or to confirm a selection, press the [ENTER] button.
- To return to a higher level in the menu structure without making a change.

Menu				Default value
Manual	Function	Manual/DMX	Running mode	DMX
	Static	R-000-255	Red color 0-255	255
		G-000-255	Green color 0-255	255
		B-000-255	Blue color 0-255	255
		W-000-255	White color 0-255	255
		Y-000-255	Amber color 0-255	255
		P-000-255	Violet color 0-255	255
		S-000-255	Strobe	000
	Effect	C-000-255	Color mode effect 0-25	001
		H-000-255	Color 0-255	000

		S-000-255	Speed 0-255	000
	Sound	000/001	Sound mode On / Off	000
Set up	Function	Manual / DMX	Running mode	DMX
	DMX address	001-512	DMX address	001
	CH Mode	12/120/108	Channel mode	12
	DMX signal	Maintain/Clear	Keep / Clear	Maintain
	Dimming bit	16bt / 08bt	Dimming mode bit	16bt
	Curve	Linear	Optically Linear	Linear
		Square	Square Law	
		Anti	Inverse Square Law	
		S-Line	S-curve	
	Thermometer	℉ / ℃	Temperature unit display	℃
	Reset	No/Yes	Restart the lighting fixture	No
System	V1.0	Current version number		
	中/EN	Menu Language		中
	Inverted	Off / On	Invert LED Effect Pixel	Off
	Screensaver	Off / On	Screen on / Off	Off
	Style	Blue / Black	Screen color	Blue

Running Manual Mode Color:

Select Manual **-** Static **-** R **/** G **/** B **/** W **/** Y **/** P.

For example:

Red Dimming: R-255 ,B-000,G--000,W-000,Y-000,P-000.

Red+Amber Mixing Dimming:R255,B-000,G-000,W-000,Y-255,P-000.

……

Manual Strobe mode:

Manual **-** Static **-** S-000-255**,press [Enter],[Up]/[Down] button to set the frequency of strobe.**

Tip: Strobe Mode requires a combination of Static Mode or Effect Mode to function properly!

Dimmer Mode Curve:

Select Set up **-** Curve**,press [Enter],[Up]/[Down] button to select**

Linear,Square,Anti,,S-Line,confirm your selection with [Enter].

Dimmer Mode:

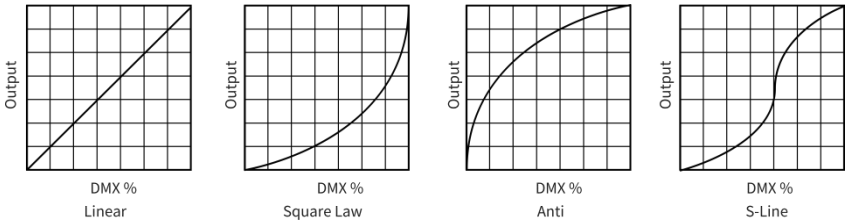

Language:

If the device is in Chinese language mode, please restart the device and set it to English according to the following Chinese options.

Select 系统， **press [Enter]**

Use [Up]/[DOWN] button to select EN**,confirm your selection with [ENTER].**

Set up path: 系统 **-** 中 **/ EN**

12 Channels Mode			
Channel	**Value**	**Function**	
CH1	Dimmer	0-255	Dimming
CH2	Strobe	0-255	Strobe
CH3	Auto mode	0-1 2-15 16-30 31-45 46-60 61-75 76-90 91-105 106-120 121-135 135-150 151-165 166-180 181-195 196-210 211-225 226-240 241-255	No function Auto mode 1 Auto mode 2 Auto mode 3 Auto mode 4 Auto mode 5 Auto mode 6 Auto mode 7 Auto mode 8 Auto mode 9 Auto mode 10 Auto mode 11 Auto mode 12 Auto mode 13 Auto mode 14 Auto mode 15 Color mode Sound mode
CH4	Auto speed	0-255	Auto mode speed slow to fast
CH5	8/16bit	0-128 129-255	When Auto mode channel is enabled, 000-128 is 8BT, 129-255 is 16BT, When Auto mode channel is closed, 000-128 is 16BT, 129-255 is 8BT,
CH6	Red	0-255	Red
CH7	Green	0-255	Green
CH8	Blue	0-255	Blue
CH9	White	0-255	White
CH10	Amber	0-255	Amber
CH11	Violet	0-255	Violet
CH12	Back color	0-255	Back color mode

120 Channels Mode			
Channel	**Value**	**Function**	
CH1	Dimmer	0-255	Dimming
CH2	Strobe	0-255	Strobe
CH3	Dim-Red	0-255	Red
CH4	Dim-Green	0-255	Green

CH5	Dim-Blue	0-255	Blue
CH6	Dim-White	0-255	White
CH7	Dim-Amber	0-255	Amber
CH8	Dim-Violet	0-255	Violet
CH9	Auto mode	0-1 2-15 16-30 31-45 46-60 61-75 76-90 91-105 106-120 121-135 135-150 151-165 166-180 181-195 196-210 211-225 226-240 241-255	No function Auto mode 1 Auto mode 2 Auto mode 3 Auto mode 4 Auto mode 5 Auto mode 6 Auto mode 7 Auto mode 8 Auto mode 9 Auto mode 10 Auto mode 11 Auto mode 12 Auto mode 13 Auto mode 14 Auto mode 15 Color mode Sound mode
CH10	Auto speed	0-255	Auto mode speed slow to fast
CH11	8/16bit	0-128 129-255	When Auto mode channel is enabled, 000-128 is 8BT, 129-255 is 16BT, When Auto mode channel is closed, 000-128 is 16BT, 129-255 is 8BT,
CH12	Back color	0-255	Back color
CH13	1# Red	0-255	1# Red
CH14	1# Green	0-255	1# Green
CH15	1# Blue	0-255	1# Blue
CH16	1# White	0-255	1# White
CH17	1# Amber	0-255	1# Amber
CH18	1# Violet	0-255	1# Violet
CH19	2# Red	0-255	2# Red
CH20	2# Green	0-255	2# Green
CH21	2# Blue	0-255	2# Blue
CH22	2# White	0-255	2# White
CH23	2# Amber	0-255	2# Amber
CH24	2# Violet	0-255	2# Violet
CH25	3# Red	0-255	3# Red
CH26	3# Green	0-255	3# Green
CH27	3# Blue	0-255	3# Blue
CH28	3# White	0-255	3# White
CH29	3# Amber	0-255	3# Amber
CH30	3# Violet	0-255	3# Violet

CH31	4# Red	0-255	4# Red
CH32	4# Green	0-255	4# Green
CH33	4# Blue	0-255	4# Blue
CH34	4# White	0-255	4# White
CH35	4# Amber	0-255	4# Amber
CH36	4# Violet	0-255	4# Violet
CH37	5# Red	0-255	5# Red
CH38	5# Green	0-255	5# Green
CH39	5# Blue	0-255	5# Blue
CH40	5# White	0-255	5# White
CH41	5# Amber	0-255	5# Amber
CH42	5# Violet	0-255	5# Violet
CH43	6# Red	0-255	6# Red
CH44	6# Green	0-255	6# Green
CH45	6# Blue	0-255	6# Blue
CH46	6# White	0-255	6# White
CH47	6# Amber	0-255	6# Amber
CH48	6# Violet	0-255	6# Violet
CH49	7# Red	0-255	7# Red
CH50	7# Green	0-255	7# Green
CH51	7# Blue	0-255	7# Blue
CH52	7# White	0-255	7# White
CH53	7# Amber	0-255	7# Amber
CH54	7# Violet	0-255	7# Violet
CH55	8# Red	0-255	8# Red
CH56	8# Green	0-255	8# Green
CH57	8# Blue	0-255	8# Blue
CH58	8# White	0-255	8# White
CH59	8# Amber	0-255	8# Amber
CH60	8# Violet	0-255	8# Violet
CH61	9# Red	0-255	9# Red
CH62	9# Green	0-255	9# Green
CH63	9# Blue	0-255	9# Blue
CH64	9# White	0-255	9# White
CH65	9# Amber	0-255	9# Amber
CH66	9# Violet	0-255	9# Violet
CH67	10# Red	0-255	10# Red

CH68	10# Green	0-255	10# Green
CH69	10# Blue	0-255	10# Blue
CH70	10# White	0-255	10# White
CH71	10# Amber	0-255	10# Amber
CH72	10# Violet	0-255	10# Violet
CH73	11# Red	0-255	11# Red
CH74	11# Green	0-255	11# Green
CH75	11# Blue	0-255	11# Blue
CH76	11# White	0-255	11# White
CH77	11# Amber	0-255	11# Amber
CH78	11# Violet	0-255	11# Violet
CH79	12# Red	0-255	12# Red
CH80	12# Green	0-255	12# Green
CH81	12# Blue	0-255	12# Blue
CH82	12# White	0-255	12# White
CH83	12# Amber	0-255	12# Amber
CH84	12# Violet	0-255	12# Violet
CH85	13# Red	0-255	13# Red
CH86	13# Green	0-255	13# Green
CH87	13# Blue	0-255	13# Blue
CH88	13# White	0-255	13# White
CH89	13# Amber	0-255	13# Amber
CH90	13# Violet	0-255	13# Violet
CH91	14# Red	0-255	14# Red
CH92	14# Green	0-255	14# Green
CH93	14# Blue	0-255	14# Blue
CH94	14# White	0-255	14# White
CH95	14# Amber	0-255	14# Amber
CH96	14# Violet	0-255	14# Violet
CH97	15# Red	0-255	15# Red
CH98	15# Green	0-255	15# Green
CH99	15# Blue	0-255	15# Blue
CH100	15# White	0-255	15# White
CH101	15# Amber	0-255	15# Amber
CH102	15# Violet	0-255	15# Violet
CH103	16# Red	0-255	16# Red
CH104	16# Green	0-255	16# Green

CH105	16# Blue	0-255	16# Blue
CH106	16# White	0-255	16# White
CH107	16# Amber	0-255	16# Amber
CH108	16# Violet	0-255	16# Violet
CH109	17# Red	0-255	17# Red
CH110	17# Green	0-255	17# Green
CH111	17# Blue	0-255	17# Blue
CH112	17# White	0-255	17# White
CH113	17# Amber	0-255	17# Amber
CH114	17# Violet	0-255	17# Violet
CH115	18# Red	0-255	18# Red
CH116	18# Green	0-255	18# Green
CH117	18# Blue	0-255	18# Blue
CH118	18# White	0-255	18# White
CH119	18# Amber	0-255	18# Amber
CH120	18# Violet	0-255	18# Violet

108 Channels Mode			
Channel	**Value**	**Function**	
CH1	1# Red	0-255	1# Red
CH2	1# Green	0-255	1# Green
CH3	1# Blue	0-255	1# Blue
CH4	1# White	0-255	1# White
CH5	1# Amber	0-255	1# Amber
CH6	1# Violet	0-255	1# Violet
CH7	2# Red	0-255	2# Red
CH8	2# Green	0-255	2# Green
CH9	2# Blue	0-255	2# Blue
CH10	2# White	0-255	2# White
CH11	2# Amber	0-255	2# Amber
CH12	2# Violet	0-255	2# Violet
CH13	3# Red	0-255	3# Red
CH14	3# Green	0-255	3# Green
CH15	3# Blue	0-255	3# Blue

CH16	3# White	0-255	3# White
CH17	3# Amber	0-255	3# Amber
CH18	3# Violet	0-255	3# Violet
CH19	4# Red	0-255	4# Red
CH20	4# Green	0-255	4# Green
CH21	4# Blue	0-255	4# Blue
CH22	4# White	0-255	4# White
CH23	4# Amber	0-255	4# Amber
CH24	4# Violet	0-255	4# Violet
CH25	5# Red	0-255	5# Red
CH26	5# Green	0-255	5# Green
CH27	5# Blue	0-255	5# Blue
CH28	5# White	0-255	5# White
CH29	5# Amber	0-255	5# Amber
CH30	5# Violet	0-255	5# Violet
CH31	6# Red	0-255	6# Red
CH32	6# Green	0-255	6# Green
CH33	6# Blue	0-255	6# Blue
CH34	6# White	0-255	6# White
CH35	6# Amber	0-255	6# Amber
CH36	6# Violet	0-255	6# Violet
CH37	7# Red	0-255	7# Red
CH38	7# Green	0-255	7# Green
CH39	7# Blue	0-255	7# Blue
CH40	7# White	0-255	7# White
CH41	7# Amber	0-255	7# Amber
CH42	7# Violet	0-255	7# Violet
CH43	8# Red	0-255	8# Red
CH44	8# Green	0-255	8# Green
CH45	8# Blue	0-255	8# Blue
CH46	8# White	0-255	8# White
CH47	8# Amber	0-255	8# Amber
CH48	8# Violet	0-255	8# Violet
CH49	9# Red	0-255	9# Red
CH50	9# Green	0-255	9# Green
CH51	9# Blue	0-255	9# Blue
CH52	9# White	0-255	9# White

CH53	9# Amber	0-255	9# Amber
CH54	9# Violet	0-255	9# Violet
CH55	10# Red	0-255	10# Red
CH56	10# Green	0-255	10# Green
CH57	10# Blue	0-255	10# Blue
CH58	10# White	0-255	10# White
CH59	10# Amber	0-255	10# Amber
CH60	10# Violet	0-255	10# Violet
CH61	11# Red	0-255	11# Red
CH62	11# Green	0-255	11# Green
CH63	11# Blue	0-255	11# Blue
CH64	11# White	0-255	11# White
CH65	11# Amber	0-255	11# Amber
CH66	11# Violet	0-255	11# Violet
CH67	12# Red	0-255	12# Red
CH68	12# Green	0-255	12# Green
CH69	12# Blue	0-255	12# Blue
CH70	12# White	0-255	12# White
CH71	12# Amber	0-255	12# Amber
CH72	12# Violet	0-255	12# Violet
CH73	13# Red	0-255	13# Red
CH74	13# Green	0-255	13# Green
CH75	13# Blue	0-255	13# Blue
CH76	13# White	0-255	13# White
CH77	13# Amber	0-255	13# Amber
CH78	13# Violet	0-255	13# Violet
CH79	14# Red	0-255	14# Red
CH80	14# Green	0-255	14# Green
CH81	14# Blue	0-255	14# Blue
CH82	14# White	0-255	14# White
CH83	14# Amber	0-255	14# Amber
CH84	14# Violet	0-255	14# Violet
CH85	15# Red	0-255	15# Red
CH86	15# Green	0-255	15# Green
CH87	15# Blue	0-255	15# Blue
CH88	15# White	0-255	15# White
CH89	15# Amber	0-255	15# Amber

CH90	15# Violet	0-255	15# Violet
CH91	16# Red	0-255	16# Red
CH92	16# Green	0-255	16# Green
CH93	16# Blue	0-255	16# Blue
CH94	16# White	0-255	16# White
CH95	16# Amber	0-255	16# Amber
CH96	16# Violet	0-255	16# Violet
CH97	17# Red	0-255	17# Red
CH98	17# Green	0-255	17# Green
CH99	17# Blue	0-255	17# Blue
CH100	17# White	0-255	17# White
CH101	17# Amber	0-255	17# Amber
CH102	17# Violet	0-255	17# Violet
CH103	18# Red	0-255	18# Red
CH104	18# Green	0-255	18# Green
CH105	18# Blue	0-255	18# Blue
CH106	18# White	0-255	18# White
CH107	18# Amber	0-255	18# Amber
CH108	18# Violet	0-255	18# Violet

Troubleshooting

Following are a few common problems that may occur during operation. Here are some suggestions for troubleshooting:

A. The unit does not work, no light and the fan does not work

- **Check the connected power.**
- **Measure the voltage.**
- **Check the power indicator to see whether it can be lit up or not.**

B. Not responding to the DMX controller

- **Check whether the DMX connectors and the DMX cables are connected correctly.**
- **Check whether the DMX address is correctly set.**
- **If the intermittent DMX signal problem occurs, check whether the XLR socket and the signal cable are well connected.**
- **Try it with another DMX controller.**

◆ **Check whether the DMX cables run near or alongside to the high-voltage cables, which may damage or interfere with the signal circuit.**

Package List

1.2m Power Cable x 1

1.0m Anti-interference 3-pin DMX512 Cable x 1

User Manual x 1

Customized screwdriver x1

(B) M4 screw x8

M4 nut x2

Rubber gasket x2

Standing tripod x2

Knob of Standing tripod x2