



How to download MCUBrew32




How to Download from the ABOV Official Website

You can download MCUBrew32 from the introduction page on the ABOV official website.

- ABOV Official Website
 - Link : [ABOV Semiconductor – ABOV Semiconductor Co., Ltd.](http://www.abov-semiconductor.com)

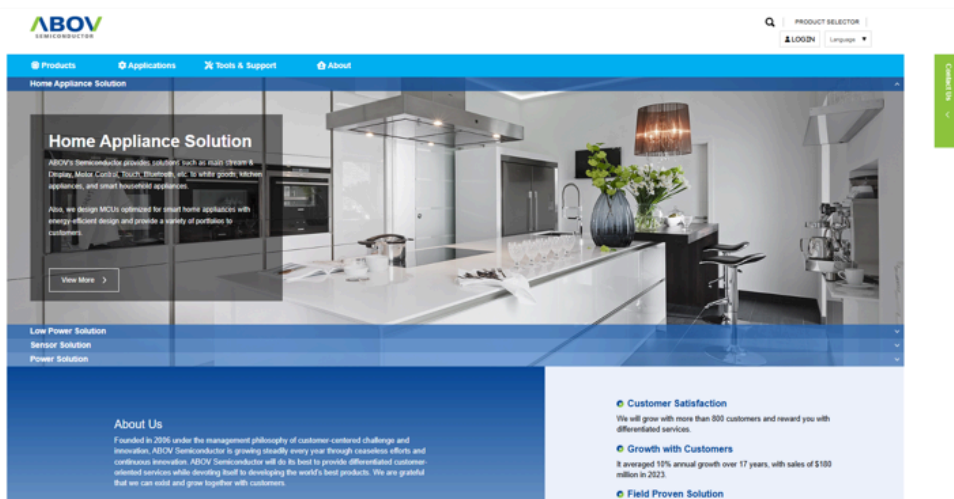


- Download Path
 - Tool & Support > Software Development Tools > Development Tools > MCUBrew32
 - Link : [ABOV Semiconductor - Development Tools](http://www.abov-semiconductor.com/development-tools)

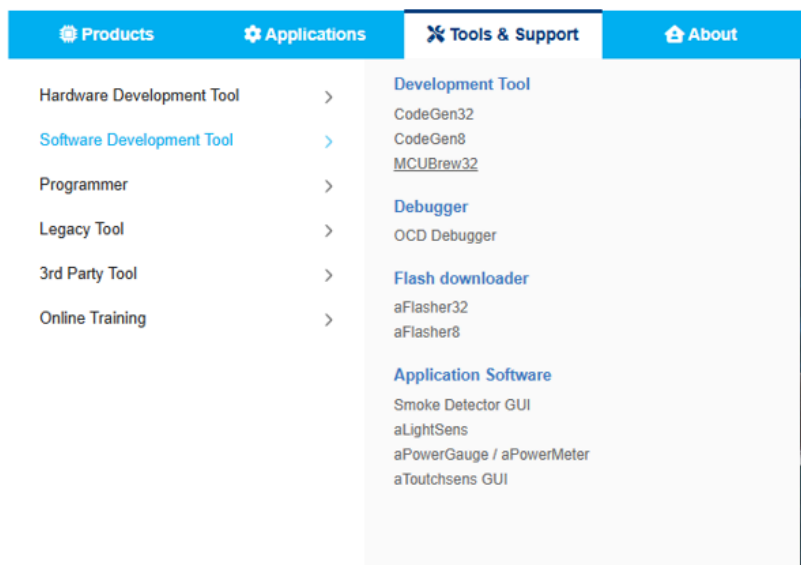


Development Tools > MCUBrew32

- Link : [ABOV Semiconductor - MCUBrew32](https://www.abov.co.kr/kr/tools_support/debug_tools.php?category=mcubrew32)

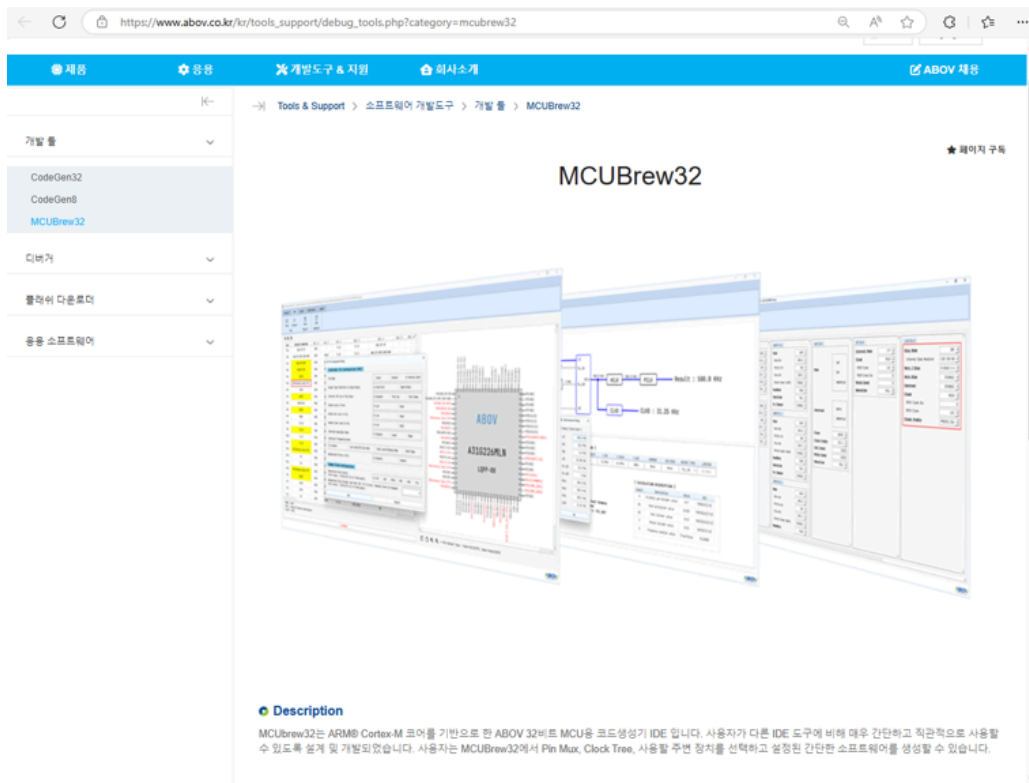

How to Download from the MCUBrew32 Wiki

This method uses the site where MCUBrew32 manuals, distribution files, and AUDK32 information are provided.

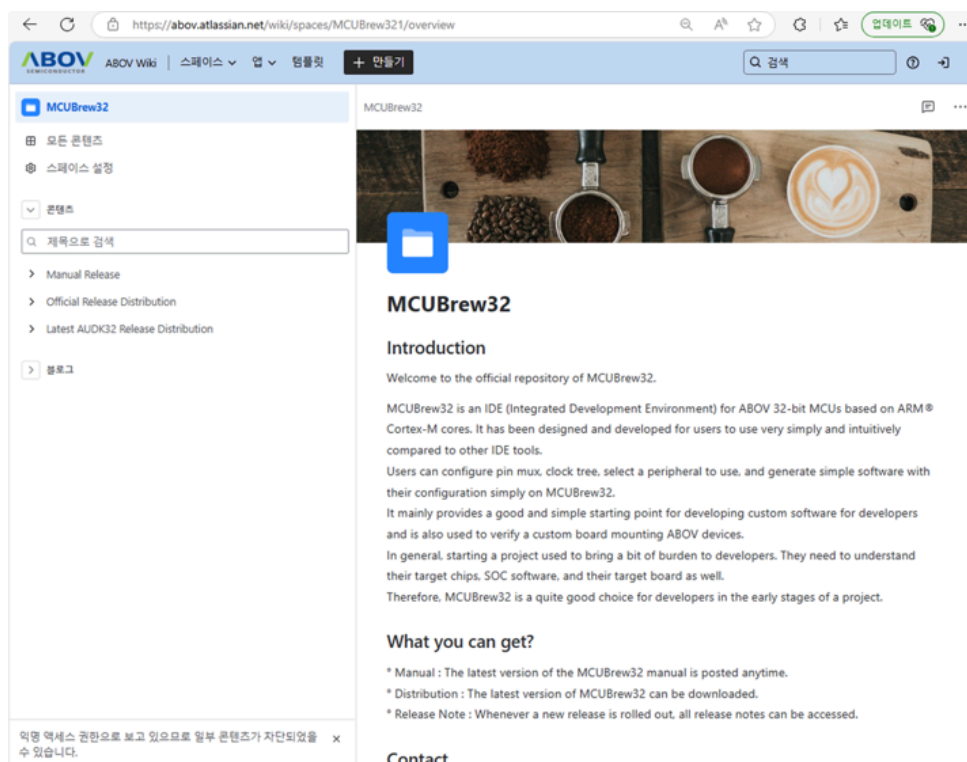

- MCUBrew32 Official Site : [MCUBrew32 - ABOV Wiki](https://mcubrew32.wiki)
 - Site Structure
 - Manual Release
 - Link : [Manual Release - MCUBrew32 - ABOV Wiki](https://mcubrew32.wiki)
 - Installer Distribution
 - Link : [Official Release Distribution - MCUBrew32 - ABOV Wiki](https://mcubrew32.wiki)
 - AUDK32 File Distribution
 - (old)Link : [Latest AUDK32 Release Distribution - MCUBrew32 - ABOV Wiki](https://mcubrew32.wiki)
 - (new)Link : [Official Release Distribution](https://mcubrew32.wiki)
 - Installer Download
 - File Name : MCUBrew32-1.0.0.exe

