



CONVERSION REFERENCES


°C	°F	Meter	Feet
-20	-4	0.25	0.82
-18	-0.4	0.5	1.64
-16	3.2	0.15	2.46
-14	8.8	1	3.28
-12	10.4	1.25	4.1
-10	14	1.5	4.92
-8	17.6	1.75	5.74
-6	21.2	2	6.56
-4	24.8	2.25	7.38
-2	28.4	2.5	8.2
0	32	2.75	9.02
2	35.6	3	9.84
4	39.2	3.25	10.66
6	42.8	3.5	11.48
8	46.4	3.75	12.3
10	50	4	13.12
12	53.6	4.25	13.94
14	57.2	4.5	14.76
16	60.8	4.75	15.58
18	64.4	5	16.4
20	68	5.25	17.22
21	69.8	5.5	18.04
22	71.6	5.75	18.86
23	73.4	6	19.68
24	75.2	6.25	20.5
25	77	6.5	21.32
26	78.8	6.75	22.14
27	80.6	7	22.96
28	82.4	7.25	23.78
29	84.2	7.5	24.6
30	86		
31	87.8		
32	89.6		

°F = (°C) x 1.8 + 32
1 Meter = 3.28 Feet

GENERAL BMS NOTES

- THOROUGHLY REVIEW THE ENTIRE SET OF CONTRACT DOCUMENTS (E.G. PLANS, SPECIFICATIONS, ETC.) AS A WHOLE.
- CONTROL DRAWINGS DO NOT INCLUDE ALL HVAC CONTROL DEVICES. PACKAGED MECHANICAL EQUIPMENT ARE FURNISHED WITH FACTORY-MOUNTED AND WIRED CONTROL WHICH ARE TO BE INCORPORATED INTO THE BMS. DRAWINGS ARE DIAGRAMATIC SHOWING GENERAL INTENT FOR BMS. PROVIDE FUNCTIONAL CONTROL SYSTEM INTERFACE WITH LIDL NATIONWIDE BMS.
- MOTOR STARTERS MAY NOT BE ADJACENT TO ITS EQUIPMENT. REFER TO ELECTRICAL DRAWINGS FOR ACTUAL LOCATION.
- WORK CLOSELY WITH VFD START-UP PERSONNEL TO MEET FACILITY REQUIREMENTS. PRIOR TO SUBSTANTIAL COMPLETION.
- PROVIDE SUBMITTALS FOR THE BMS DRAWINGS INCLUDING FLOOR AND ROOF PLANS CALLING OUT CONTROL DEVICES, WIRING NETWORK, MONITORING DEVICES, AND CONTROL POINT MATRIX FOR REVIEW BY EOR, AOR, AND/OR OWNER REPRESENTATIVE AND FOR RECORD PURPOSES. ELECTRONIC AUTOCAD DWG FILES AND/OR REVIT FILES ARE AVAILABLE UPON REQUEST.
- PROVIDE A RECORD SET OF AS-BUILT DRAWINGS. ELECTRONIC AUTOCAD DWG FILES AND/OR REVIT FILES ARE AVAILABLE UPON REQUEST.
- CONSULTANT DRAWINGS INCLUDING BUT NOT LIMITED TO STRUCTURAL, MECHANICAL, ELECTRICAL, PLUMBING, REFRIGERATION, FIRE PROTECTION, AND CIVIL ARE SUPPLEMENTARY TO THE DRAWINGS. NOTIFY THE ARCHITECT OF ANY AND ALL DISCREPANCIES IDENTIFIED BETWEEN THE CONSULTANTS DRAWINGS WITH A WRITTEN REQUEST FOR CLARIFICATION. WORK INSTALLED IN CONFLICT WITH THE DRAWINGS AND PROJECT MANUAL SHALL BE CORRECTED BY THE CONTRACTOR AT THE CONTRACTORS EXPENSE.
- CONTROLS CONTRACTOR SHALL WORK CLOSELY WITH BALANCING CONTRACTOR TO MEET FACILITY REQUIREMENTS. PRIOR TO SUBSTANTIAL COMPLETION.
- ALL CONTROL, CONDUIT AND WIRE SHALL NOT BE INSTALLED SUCH THAT MECHANICAL MAINTENANCE ARE PROHIBITING OR LIMITED.
- CONTROLS CONTRACTOR SHALL BE RESPONSIBLE FOR PROVIDING CONDUIT, WIRE, AND TRANSFORMERS TO PROPERLY ENERGIZE CONTROLLERS, ACTUATORS, AND SENSORS (I.E. HUMIDITY, CO2, PRESSURE, ETC).
- WHERE A DISCREPANCY AMONG SPECIFICATION, SEQUENCE, AND SCHEMATICS OCCURS, THE MOST STRINGENT SHALL APPLY.

POINTS LIST KEY

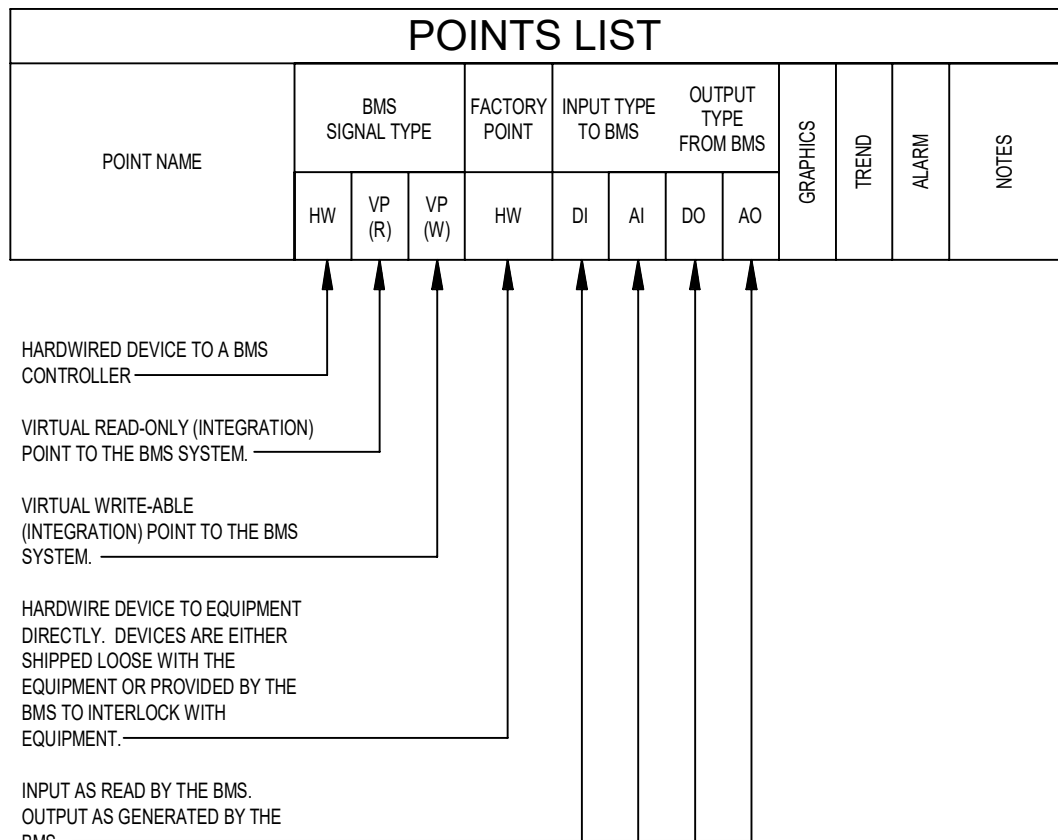

POINTS LIST KEY: EXAMPLES ONLY

POINT NAME	BMS SIGNAL TYPE		FACTORY POINT	INPUT TYPE TO BMS		OUTPUT TYPE FROM BMS		BANKS	THERO	ALARM	NOTES
	HW	VP (V)		DI	AI	DO	AO				
START/STOP	*					*	*	*	*	*	1
STATUS (CURRENT SENSOR)	*				*			*	*	*	2
TEMP SETPOINT		*				*	*	*	*	*	3
DA TEMP TO AN EQUIPMENT		*	*	*	*	*	*	*	*	*	4
ON NTAKE DAMPER			*	*	*	*	*	*	*	*	5

NOTE: (EXAMPLE SCENARIOS)

- ENABLE/DISABLE SIGNAL FROM THE BMS SYSTEM.
- MONITOR A STATUS WITH AN ANALOG INPUT TO THE BMS SYSTEM.
- OUTPUT AN ANALOG SIGNAL THROUGH INTEGRATION FROM THE BMS SYSTEM TO AN EQUIPMENT WITH FACTORY CONTROLS.
- READ AN ANALOG SIGNAL THROUGH INTEGRATION FROM AN EQUIPMENT WITH A FACTORY-PROVIDED / FIELD-INSTALLED SENSOR TO THE BMS SYSTEM.
- INTERLOCK HARDWIRES (BINARY INPUT AND BINARY OUTPUT) BETWEEN AN ACTUATOR TO AN EQUIPMENT WITHOUT ANY BMS CONTROL OR MONITORING.

TYPICAL REFERENCE FLAG / NAME REPRESENTATIONS *

A0J	ADJUSTABLE (BY OWNER)
AAC	APPLICATION ADVANCE CONTROLLER
ASC	APPLICATION SPECIFIC CONTROLLER
ACT	ACTUATOR
AFI	ABOVE FINISH FLOOR
AFS	AIR FLOW MEASURING STATION
ALRM	ALARM
BMS	BUILDING MANAGEMENT SYSTEM
BSP	BUILDING STATIC PRESSURE
BOP	BUILDING CONTROLS PANEL
CFM	CUBIC FEET PER MINUTE
CO2	CARBON DIOXIDE
CT	CURRENT TRANSDUCER
DA-SP	DISCHARGE AIR TEMPERATURE SETPOINT
DMPR	DAMPER
DPS	DIFFERENTIAL PRESSURE SWITCH
DPT	DIFFERENTIAL PRESSURE TRANSDUCER
DX	DIRECT EXPANSION
EA	EXHAUST AIR
ECOM	ECONOMIZER
EIC	EQUIPMENT INTEGRAL CONTROLLER
ENABLE	UNIT ENABLED (FAN RUNNING)
ES	END SWITCH
FA	FIELD ADJUSTABLE (BY FIELD PROGRAMMER)
F.O.	FALL OPEN VIA SPRING
F.C.	FALL CLOSE VIA SPRING
HCA	HWND-OFF-AUTO SWITCH
MIN/OA	MINIMUM OUTSIDE AIR
MOD	MODULATING SIGNAL VIA 4-20MA OR 0-10VDC
MOD-F	MODULATING SIGNAL VIA FLOATING
N.O.	NORMAL OPEN VIA SPRING
N.C.	NORMAL CLOSE VIA SPRING
OA-DM	DESIGN MINIMUM OA AIR FLOW SETPOINT
OACOC	OUTSIDE AIR CO2
ORH	OUTSIDE AIR RELATIVE HUMIDITY
OAT	OUTSIDE AIR TEMPERATURE
OC	OCCUPANCY MODE ENABLED
PAT	PREHEAT AROISCHARGE TEMPERATURE
PARG	PISTON POWER
PWR	POWER
RARH	RETURN AIR RELATIVE HUMIDITY
RAT	RETURN AIR TEMPERATURE
SARH	SUPPLY AIR RELATIVE HUMIDITY
SAT	SUPPLY AIR TEMPERATURE
SD	SMOKE DETECTOR
SPCO2	SPACE AIR CO2
SPO	SUPPLY FAN SPEED
SPRH	SPACE AIR RELATIVE HUMIDITY
SPT	SPACE AIR TEMPERATURE
VFD	VARIABLE FREQUENCY DRIVE (ALSO VSD)
WS	WATER SENSOR/DETECTION SWITCH

*NOTE: THIS IS A LIST OF TYPICAL REPRESENTATIONS. THIS LIST IS NOT INTENDED TO BE INCLUSIVE OR DEFINITIVE. REFER TO ACTUAL LOGIC DIAGRAM TO DETERMINE ACTUAL REFERENCE TAG REPRESENTATION.

CONTROL SYMBOLS

SYMBOL	DESCRIPTION
POINT NAME	DDC POINT DESCRIPTOR WITH NAME AI ANALOG INPUT DI DIGITAL INPUT AO ANALOG OUTPUT DO DIGITAL OUTPUT VI VIRTUAL POINT: VI=INPUT OR OUTPUT
T	SPACE TEMPERATURE SENSOR
H	SPACE HUMIDITY SENSOR
TH	SPACE TEMPERATURE AND HUMIDITY SENSOR
CO2	SPACE CO2 SENSOR
CO	SPACE CARBON MONOXIDE SENSOR
TS	LOW-VOLTAGE THERMOSTAT
TS	TEMPERATURE SENSOR WITH SINGLE POINT ELEMENT DUCT-MOUNTED
CO2	CARBON DIOXIDE SENSOR (DUCT-MOUNTED)
H & T	HUMIDITY & TEMPERATURE SENSOR DUCT-MOUNTED
SD	SMOKE DETECTOR
DPS	DIFFERENTIAL PRESSURE SWITCH
AFS	AIR FLOW SWITCH
DPT	DIFFERENTIAL PRESSURE TRANSMITTER/SENSOR
WLD	WATER LEAK DETECTOR
480V	CONTROL TRANSFORMER
R	RELAY COILS
NO NC	NORMALLY OPEN AND NORMALLY CLOSED CONTACTS
CS	CURRENT SWITCH / SENSOR (ON/OFF OR VFD SENSOR)
TCP	TEMPERATURE CONTROL PANEL
	CONTROL DAMPER (OPPOSED-BLADE)
	CONTROL DAMPER (PARALLEL-BLADE)
24VAC	DAMPER ACTUATOR WITH ELECTRIC ACTUATOR
	WIRING DESIGNATION

- DRAWING NOTES:
- ALL BMSF SERIES DRAWINGS ARE BUILDING AUTOMATION SYSTEM / TEMPERATURE CONTROLS
 - REFER TO M-000 AND E-000 FOR ADDITIONAL SYMBOLS AND ABBREVIATIONS.
 - CONTROL DRAWING DETAILS ARE NOT TO SCALE.

ISSUANCE

10/16/2025	100% QA/QC
11/07/2025	PERMIT CYCLE 1

PROJECT NUMBER
79650191
PROJECT MANAGER
S. CHOYAN
PROFESSIONAL

DRAWN BY
EBZ
CHECKED BY
KFM

DEVITA
Engineering Great Ideas
ATLANTA | CHARLOTTE | GREENVILLE | RICHMOND
www.devita-inc.com
877.4.DEVITA
corp@devita-inc.com
Devita & Associates, Inc. Project: 251226-02
Drawn By: EBZ Checked By: KFM

BMS SYMBOLS,
NOTES &
ABBREVIATIONS
BMS-000


LIDL US, LLC
LIDL 1517 NORCROSS, GA



499 JIMMY CARTER BLVD. NORCROSS, GA 30093

PROGRESSIVE ARCHITECTURE ENGINEERING & PLANNING, L.L.C.
PROGRESSIVE COMPANIES
Charlotte, NC | Detroit, MI | Grand Rapids, MI
weareprogressive.com




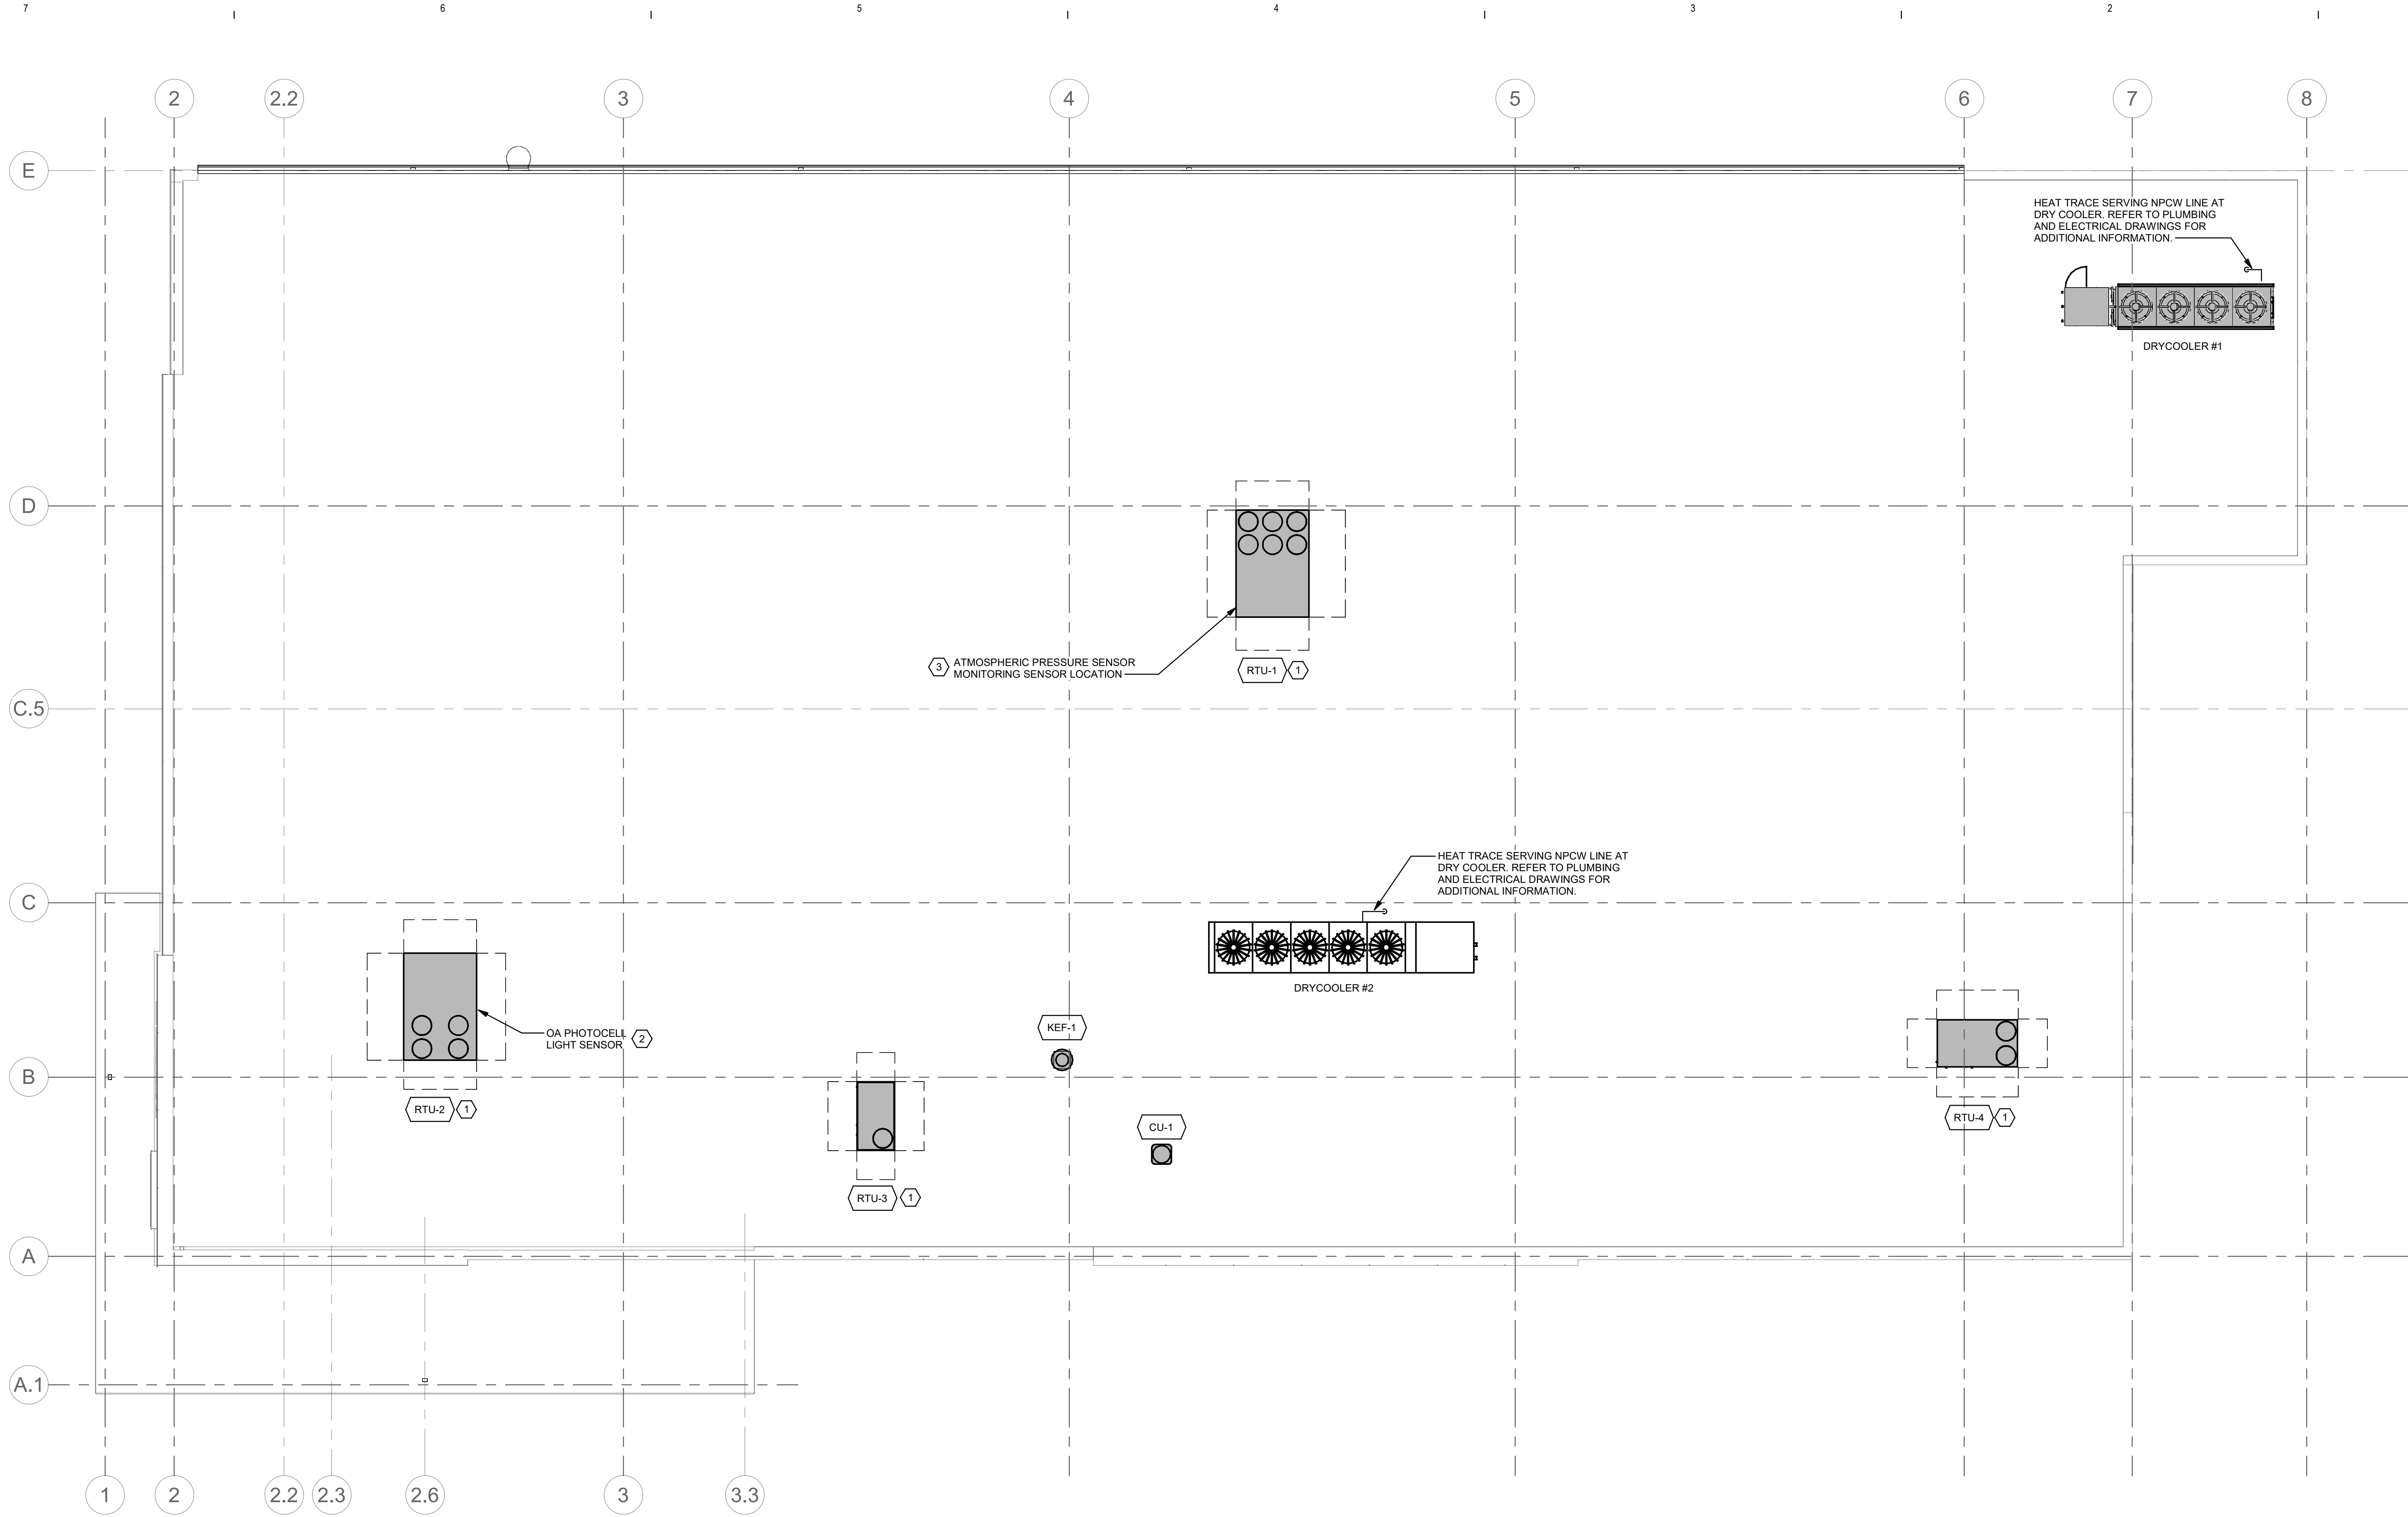


BMS ROOF PLAN
1/8" = 1'-0"

BMS KEYNOTES (R)

1. BMS INSTALLER SHALL CABLE UTILIZING CONDUIT INSTALLED BY DIVISION 26 THROUGH THE ROOFTOP CURB. REFER TO ELECTRICAL DRAWINGS FOR ADDITIONAL INFORMATION.
2. BMS INSTALLER SHALL PROVIDE A SECURED POST ON THE ROOFTOP UNITS HOOD. REFER TO PHOTOCELL LIGHT SENSOR DETAIL ON [BMS-408](#) AND ELECTRICAL DRAWINGS FOR ADDITIONAL INFORMATION.
3. INTERLOCK BUILDING AND ATMOSPHERIC PRESSURE SENSORS TO THE BMS FOR MONITORING AND LOGGING PURPOSES.

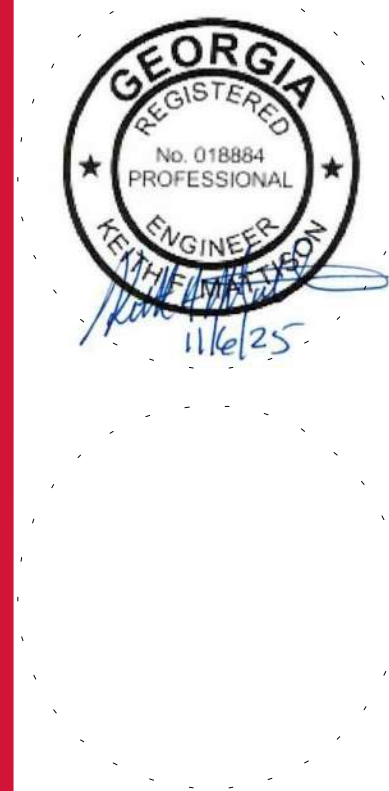

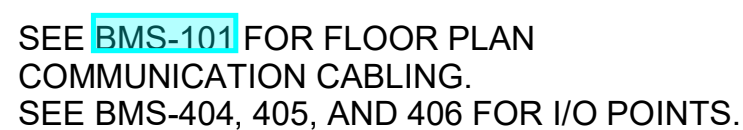

- MANAGEMENT SYSTEM AND THE NETWORKS. THE PRO CONTROLLER SHALL BE SPECIFICALLY CONFIGURED TO COMMUNICATE OVER L2 IN PROPRATE TIER CONTROL PROTOCOL.
- COPPELAND SHALL PROVIDE LOCAL SOFTWARE AND ENTERPRISE WIDE SOFTWARE LICENSES TO L2L LOCATION FOR COMPLETE OWNERSHIP OF THEIR OWN SYSTEM.
- COPPELAND BMS SYSTEM SHALL CONTROL AND/OR MONITOR THE VARIOUS ECOSYSTEMS AS SHOWN IN THE BMS SHEETS.
- THE BMS INSTALLER SHALL BE RESPONSIBLE FOR INSTALLING THE BMS PANEL AND TERMINATING THE 10 POINT SPECIFIC TO THE I/O SCHEDULE AS SHOWN ON BMS-40, 41S, AND 40R SHEETS.
- GRAPHICAL USER INTERFACE (GUI) COPPELAND SHALL PROVIDE A CUSTOM GUI WITH ADJUSTABLE TWIN KEY SENSITIVE CAPABILITIES.
- COPPELAND SHALL PROVIDE THE SAME KEY CONFIGURATIONS FOR ALL BMS PANELS TO L2L. TWO KEYS SHALL BE INCLUDED IF MISSING. COPPELAND SHALL PROVIDE NEW LOGS AND KEYS TO ALL ENCLOSURES AT NO COST TO THE OWNER.

BMS NETWORK LAYOUT BMS-401

