



UPDI HEADER




This header is for programming the ATTINY.

ONBOARD STATE LED

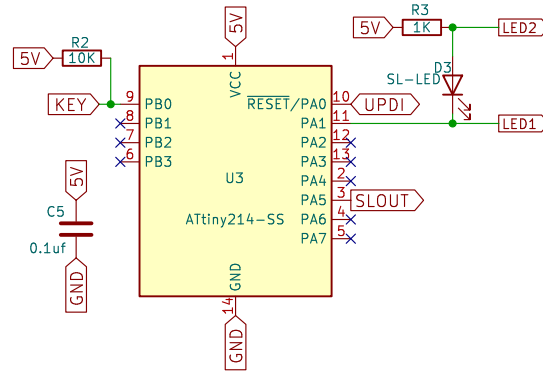


The ATTINY senses key presses from the KEY switch, debounces the input, and tells the 4066 to connect or disconnect the STATE pins.


STATE LINES

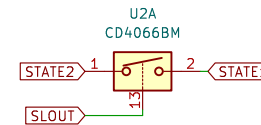

POWER



HEADER

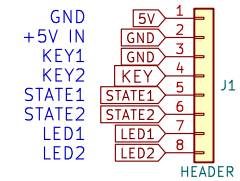


DESCRIPTION

This is a small PCB that implements Mike Naberezny's MX-Lock circuit to add a soft-toggle for MX keyboards needing a locking key, such as SHIFT-LOCK.

- * ATTINY firmware on the MX-Lock page:
<https://github.com/mnaberez/mxlock>
- * It requires 5V to power
- * Pin header to connect:
 - Power: +5V, GND
 - MX Key input: 2 lines
 - State pins: 2 lines
 - Status LED
- * UPDI programming header
- * When the MX Key is pressed the locking state is toggled. When the state is "ON" the State pins are connected, otherwise they are disconnected.
- * Status LED shows state. NOTE: 1K resistors seem ok but different LEDs might require a different value.
- * Remembers state when power is off.

CREATED: 2025-11-20
UPDATED: 2025-12-06

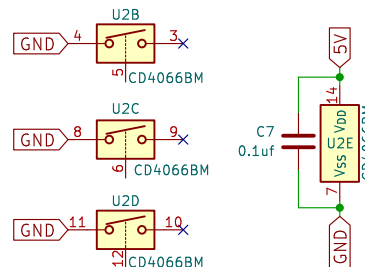

MX-TOGGLE

Based on MX-Lock by Mike Naberezny
(<https://github.com/mnaberez/mxlock>)

Steve J. Gray

Sheet: /
File: mxtoggle.kicad_sch

Title: MX-Toggle

Size: A4 Date: 2025-11-20

KiCad E.D.A. 9.0.4

Rev: MXT-V1

Id: 1/1