

Carrier 38MURA Parts List (2019)

Model 38MURA | 2019 | Parts

PL-38MURA-2019

Prototype sample document for the clickable demo. Not an official Carrier publication.

Rev	Date	Description
1.0	2019-05	Initial release for the 2019 model year.
1.1	2019-09	Updated CN2 pinout and fault-code table.
1.2	2020-02	Added inverter diagnostics and torque values.

> For professional use only. Service work must be performed by qualified personnel.

Contents


Control Box Assembly 3
Outdoor Unit Chassis 4
Condenser Fan Assembly 5
Compressor Assembly 6
Reversing Valve 7
Indoor Coil Assembly 8
Blower Assembly 9
Evaporator Components 10
Drain Pan 11
Filter Rack 12
Line Set Components 13
Electrical Accessories 14
Thermostat Accessories 15
Mounting Hardware 16
Decorative Panels 17
Fastener Kits 18
Ordering Information 19
Notes 20

> Page numbers refer to the printed page footer. Cross-references use section numbers.

Control Box Assembly

Section 2: Control Box

The control box assembly contains the control board, low-voltage transformer, run capacitor, and motor harness. Order the control board by its full part number to match the 2019 revision.

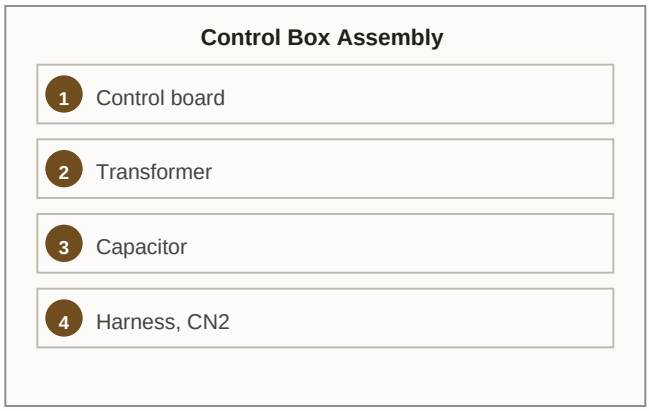

Callouts

1. Control board
2. Transformer
3. Capacitor
4. Harness, CN2

Control box assembly callouts

Item	Part Number	Description
1	CB-38MURA-2019	Control board
2	XF-24VA-01	Low-voltage transformer, 24VAC
3	CAP-35-370	Run capacitor, 35/370
4	HRN-CN2-01	Blower motor harness, CN2

> The control board is CB-38MURA-2019. Confirm the revision suffix before ordering.


4. Outdoor Unit Chassis

Connector CN2 carries the low-voltage control signal between the board and the blower motor. A loose or corroded pin here is one of the most common causes of intermittent operation.

Procedure notes

- Disconnect and lock out power.
- Confirm 0VAC and 0VDC at the board.
- Inspect connectors for corrosion.
- Record baseline readings before any change.
- Reassemble and re-check operation.

Speed Tap	CFM	Static
Low	600	0.20 in wc
Med-Low	800	0.30 in wc
Med-High	1000	0.40 in wc
High	1200	0.50 in wc

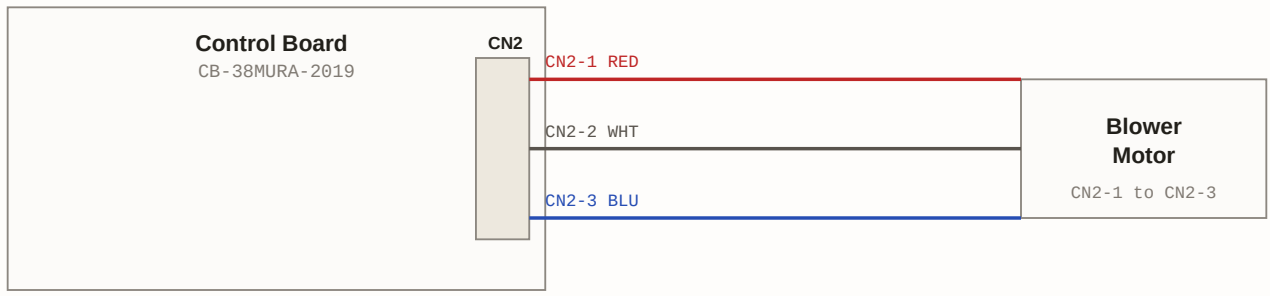

24VAC control signal from board to blower motor

Outdoor Unit Chassis reference

> Always confirm 0VAC and 0VDC at the board before making resistance measurements.


5. Condenser Fan Assembly

The board stores the last five fault codes in non-volatile memory. Review the stored codes before clearing them, because the history often points to the true root cause.

Procedure notes

- Verify thermostat demand is present.
- Check the low-voltage transformer output.
- Measure the signal at CN2.
- Compare against the table in this section.
- Clear codes only after the repair is verified.

Item	Expected	Notes
Line voltage	208-230 VAC	+/-10%
Low voltage	24 VAC	+/-10%
DC bus	310 VDC	Discharged before service
CN2 signal	24 VAC	Call for fan
Ambient	see chart	Record at test

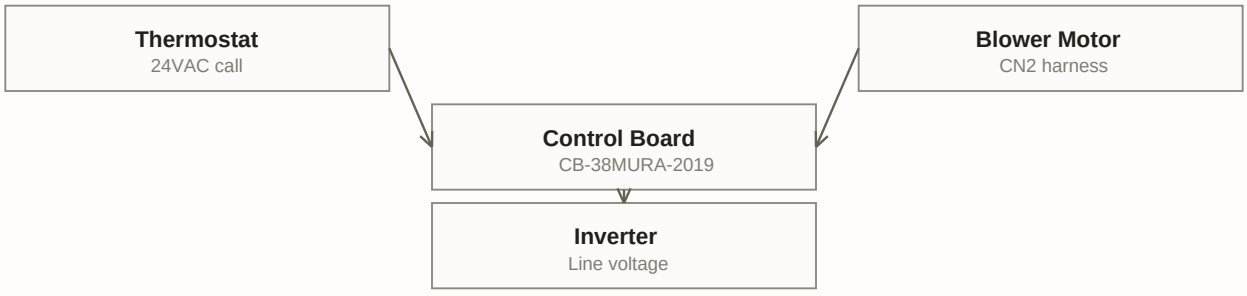

Condenser Fan Assembly reference

> Record the outdoor ambient and the suction line temperature together for an accurate comparison.


6. Compressor Assembly

Record ambient and supply-air temperatures at the same time so the temperature split can be compared against the charging chart for the current mode.

Procedure notes

- Use only factory-approved replacement parts.
- Match the full part number, including revision.
- Transfer configuration jumpers where fitted.
- Confirm harness routing against the reference photos.
- Run a full startup sequence after assembly.

Terminal	Wire	Function
CN2-1	RED	24VAC supply
CN2-2	WHT	Common return
CN2-3	BLU	Tach feedback
CN1-1	BLK	Earth ground
CN1-2	YEL	Thermostat Y

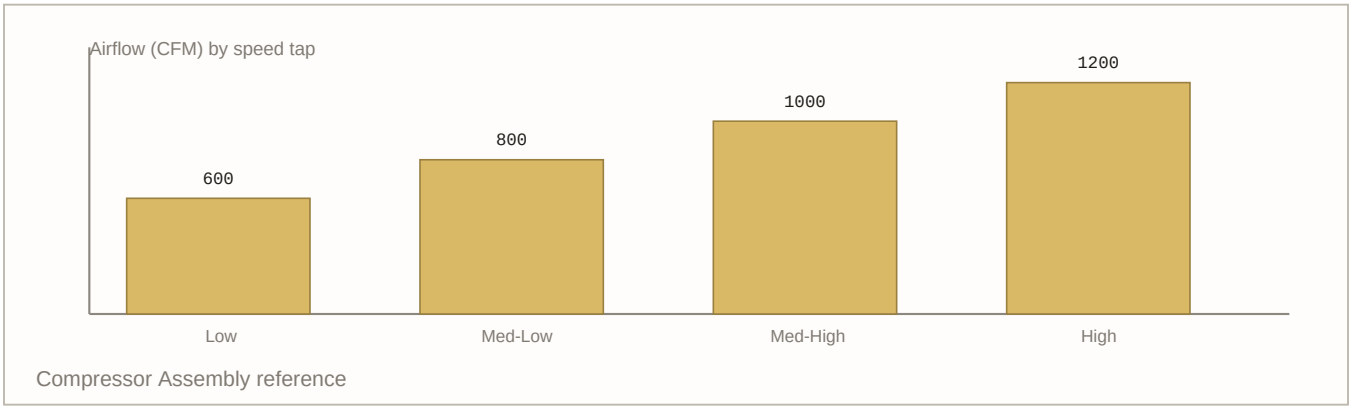

Compressor Assembly reference

> If a code returns after clearing, inspect the harness before replacing the board.


7. Reversing Valve

When a reading is out of range, do not replace the component until the associated wiring and connectors have been verified good. Most returned parts test good on the bench.

Procedure notes

- Measure with the unit in the same mode as the fault.
- Allow readings to stabilize for 30 seconds.
- Note the ambient temperature at the time of test.
- Repeat any suspect measurement twice.
- Compare to the published range, not to an assumption.

Code	Meaning	Action
E1	High pressure	Check charge and airflow
E2	Low pressure	Check charge and leak
E4	Locked rotor	Check compressor
E5	AC overcurrent	See Section 5.2
E6	Communication	Check harness

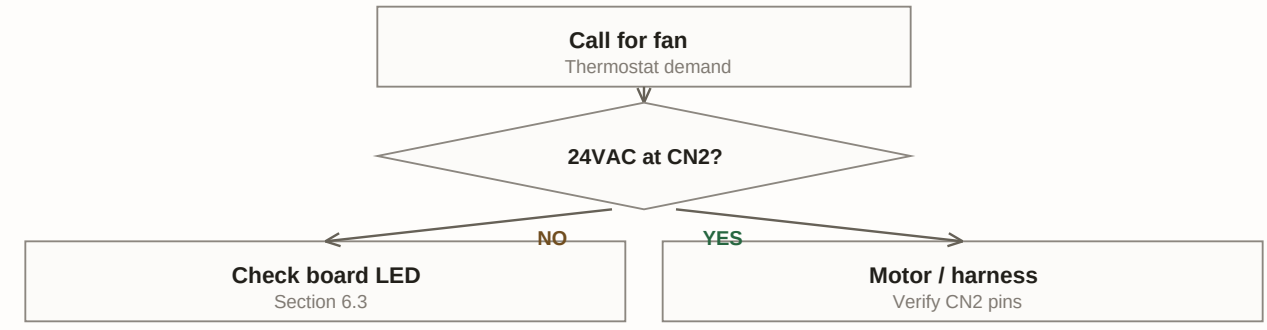

Reversing Valve reference

> Use the wiring diagram in Appendix D to confirm connector pinouts before probing.


8. Indoor Coil Assembly

Torque all electrical terminations to the value shown in the specifications table. Loose terminations overheat and can damage the board terminals over time.

Procedure notes

- Disconnect and lock out power.
- Confirm 0VAC and 0VDC at the board.
- Inspect connectors for corrosion.
- Record baseline readings before any change.
- Reassemble and re-check operation.

Step	Tool	Spec
Mounting screws	1/4 in driver	2.5 N-m
Terminals	Torque driver	0.8 N-m
Line set	Flare wrench	per chart
Filter	Hand	snug
Panel	1/4 in driver	1.5 N-m

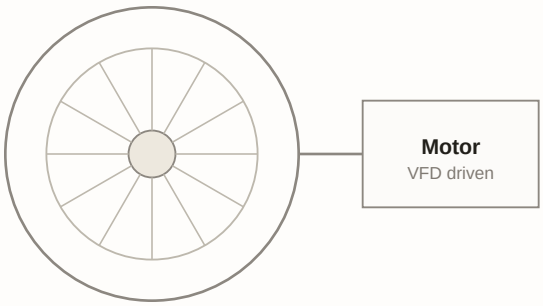

Indoor blower wheel and drive motor
Indoor Coil Assembly reference

> Always confirm 0VAC and 0VDC at the board before making resistance measurements.


9. Blower Assembly

Document the final readings and the parts used on the work order. Accurate records shorten the next visit and support the warranty claim.

Procedure notes

- Verify thermostat demand is present.
- Check the low-voltage transformer output.
- Measure the signal at CN2.
- Compare against the table in this section.
- Clear codes only after the repair is verified.

Speed Tap	CFM	Static
Low	600	0.20 in wc
Med-Low	800	0.30 in wc
Med-High	1000	0.40 in wc
High	1200	0.50 in wc

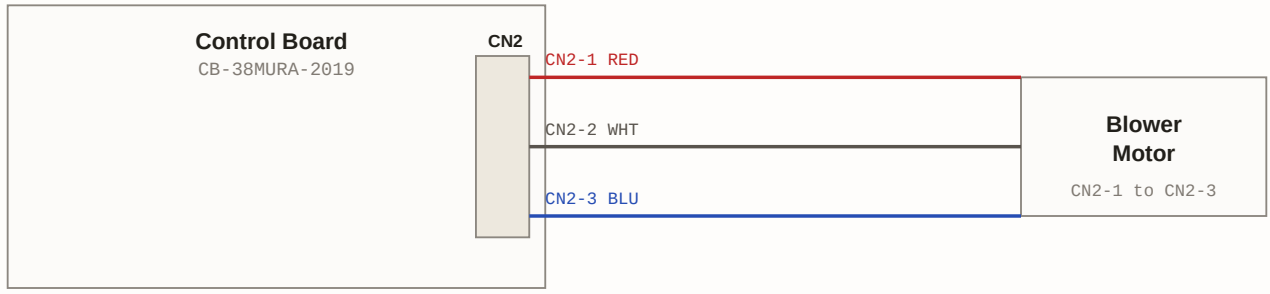

24VAC control signal from board to blower motor

Blower Assembly reference

> Record the outdoor ambient and the suction line temperature together for an accurate comparison.


10. Evaporator Components

This section covers the recommended field procedure for the 2019 Carrier 38MURA. Follow the steps in order and verify each measurement before moving to the next step. Record every reading on the service worksheet.

Procedure notes

- Use only factory-approved replacement parts.
- Match the full part number, including revision.
- Transfer configuration jumpers where fitted.
- Confirm harness routing against the reference photos.
- Run a full startup sequence after assembly.

Item	Expected	Notes
Line voltage	208-230 VAC	+/-10%
Low voltage	24 VAC	+/-10%
DC bus	310 VDC	Discharged before service
CN2 signal	24 VAC	Call for fan
Ambient	see chart	Record at test

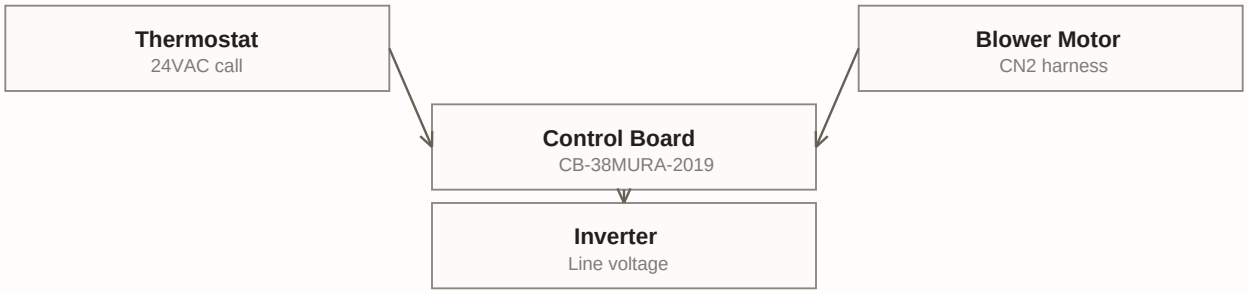

Evaporator Components reference

> If a code returns after clearing, inspect the harness before replacing the board.


11. Drain Pan

The 38MURA uses a variable-speed inverter to match capacity to load. Because the inverter regulates motor speed, most faults present as a control-signal problem rather than a mechanical failure.

Procedure notes

- Measure with the unit in the same mode as the fault.
- Allow readings to stabilize for 30 seconds.
- Note the ambient temperature at the time of test.
- Repeat any suspect measurement twice.
- Compare to the published range, not to an assumption.

Terminal	Wire	Function
CN2-1	RED	24VAC supply
CN2-2	WHT	Common return
CN2-3	BLU	Tach feedback
CN1-1	BLK	Earth ground
CN1-2	YEL	Thermostat Y

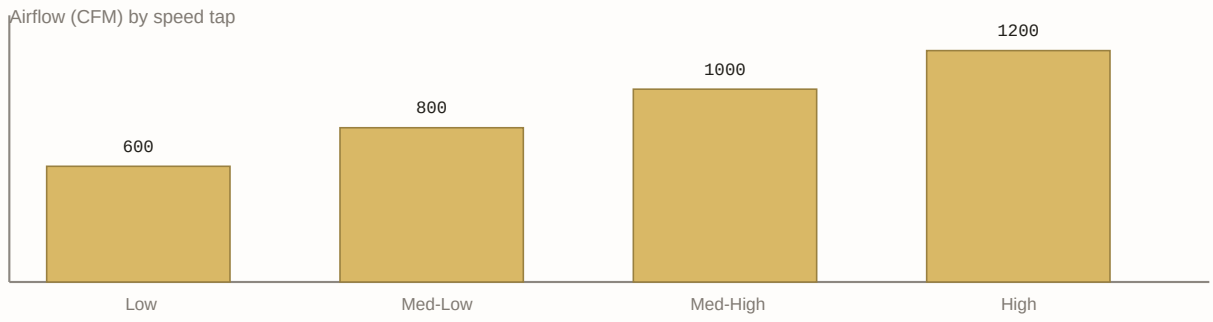

Drain Pan reference

> Use the wiring diagram in Appendix D to confirm connector pinouts before probing.


12. Filter Rack

Before opening any panel, disconnect power at the service switch and wait for the DC bus to discharge. Confirm 0VAC and 0VDC at the board before proceeding.

Procedure notes

- Disconnect and lock out power.
- Confirm 0VAC and 0VDC at the board.
- Inspect connectors for corrosion.
- Record baseline readings before any change.
- Reassemble and re-check operation.

Code	Meaning	Action
E1	High pressure	Check charge and airflow
E2	Low pressure	Check charge and leak
E4	Locked rotor	Check compressor
E5	AC overcurrent	See Section 5.2
E6	Communication	Check harness

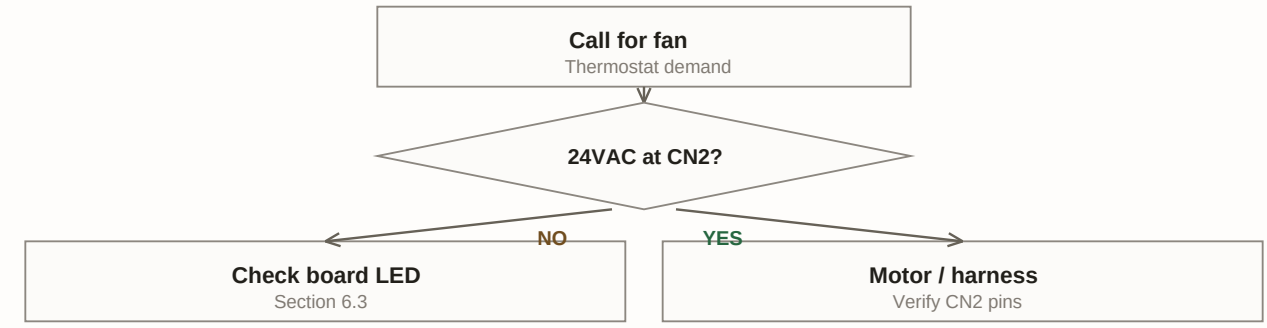

Filter Rack reference

> Always confirm 0VAC and 0VDC at the board before making resistance measurements.


13. Line Set Components

Use a calibrated multimeter with a true-RMS function for all AC measurements. Resistance checks must be made with the unit de-energized and the harness disconnected.

Procedure notes

- Verify thermostat demand is present.
- Check the low-voltage transformer output.
- Measure the signal at CN2.
- Compare against the table in this section.
- Clear codes only after the repair is verified.

Step	Tool	Spec
Mounting screws	1/4 in driver	2.5 N-m
Terminals	Torque driver	0.8 N-m
Line set	Flare wrench	per chart
Filter	Hand	snug
Panel	1/4 in driver	1.5 N-m

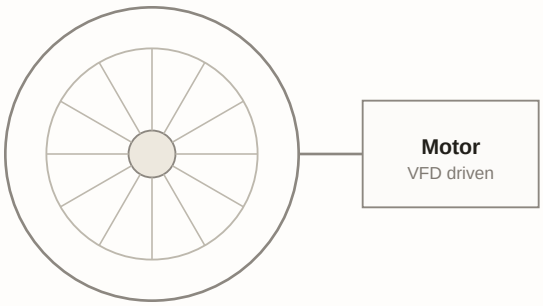

Indoor blower wheel and drive motor
Line Set Components reference

> Record the outdoor ambient and the suction line temperature together for an accurate comparison.


14. Electrical Accessories

Connector CN2 carries the low-voltage control signal between the board and the blower motor. A loose or corroded pin here is one of the most common causes of intermittent operation.

Procedure notes

- Use only factory-approved replacement parts.
- Match the full part number, including revision.
- Transfer configuration jumpers where fitted.
- Confirm harness routing against the reference photos.
- Run a full startup sequence after assembly.

Speed Tap	CFM	Static
Low	600	0.20 in wc
Med-Low	800	0.30 in wc
Med-High	1000	0.40 in wc
High	1200	0.50 in wc

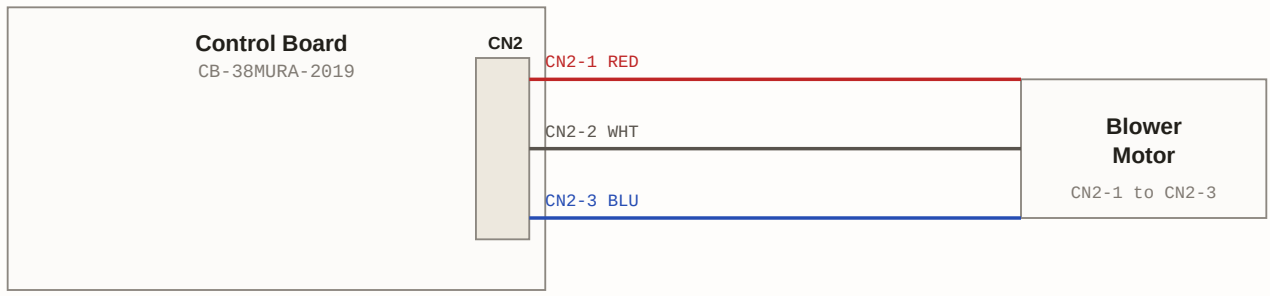

24VAC control signal from board to blower motor

Electrical Accessories reference

> If a code returns after clearing, inspect the harness before replacing the board.


15. Thermostat Accessories

The board stores the last five fault codes in non-volatile memory. Review the stored codes before clearing them, because the history often points to the true root cause.

Procedure notes

- Measure with the unit in the same mode as the fault.
- Allow readings to stabilize for 30 seconds.
- Note the ambient temperature at the time of test.
- Repeat any suspect measurement twice.
- Compare to the published range, not to an assumption.

Item	Expected	Notes
Line voltage	208-230 VAC	+/-10%
Low voltage	24 VAC	+/-10%
DC bus	310 VDC	Discharged before service
CN2 signal	24 VAC	Call for fan
Ambient	see chart	Record at test

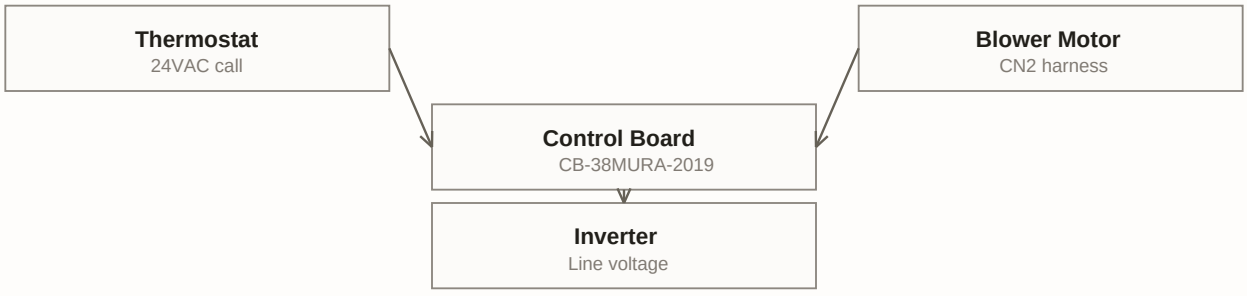

Thermostat Accessories reference

> Use the wiring diagram in Appendix D to confirm connector pinouts before probing.


16. Mounting Hardware

Record ambient and supply-air temperatures at the same time so the temperature split can be compared against the charging chart for the current mode.

Procedure notes

- Disconnect and lock out power.
- Confirm 0VAC and 0VDC at the board.
- Inspect connectors for corrosion.
- Record baseline readings before any change.
- Reassemble and re-check operation.

Terminal	Wire	Function
CN2-1	RED	24VAC supply
CN2-2	WHT	Common return
CN2-3	BLU	Tach feedback
CN1-1	BLK	Earth ground
CN1-2	YEL	Thermostat Y

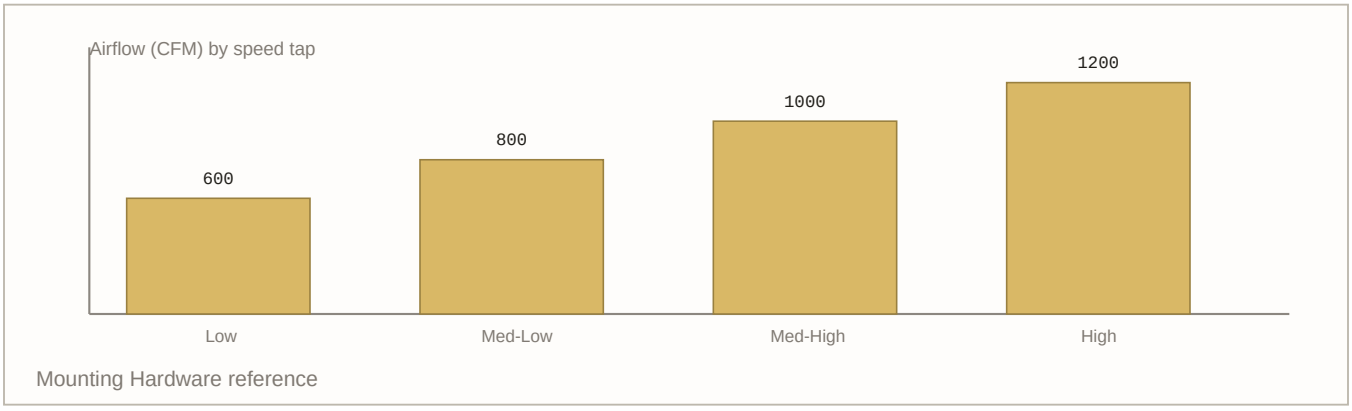

Mounting Hardware reference

> Always confirm 0VAC and 0VDC at the board before making resistance measurements.


17. Decorative Panels

When a reading is out of range, do not replace the component until the associated wiring and connectors have been verified good. Most returned parts test good on the bench.

Procedure notes

- Verify thermostat demand is present.
- Check the low-voltage transformer output.
- Measure the signal at CN2.
- Compare against the table in this section.
- Clear codes only after the repair is verified.

Code	Meaning	Action
E1	High pressure	Check charge and airflow
E2	Low pressure	Check charge and leak
E4	Locked rotor	Check compressor
E5	AC overcurrent	See Section 5.2
E6	Communication	Check harness

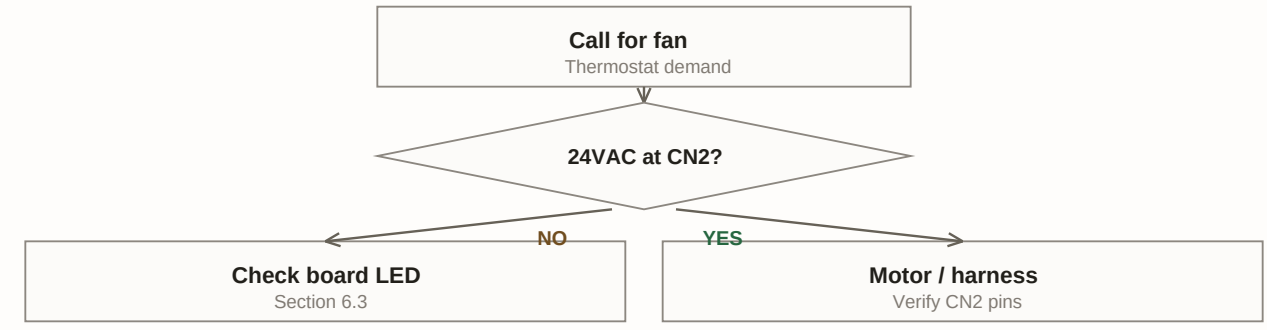

Decorative Panels reference

> Record the outdoor ambient and the suction line temperature together for an accurate comparison.


18. Fastener Kits

Torque all electrical terminations to the value shown in the specifications table. Loose terminations overheat and can damage the board terminals over time.

Procedure notes

- Use only factory-approved replacement parts.
- Match the full part number, including revision.
- Transfer configuration jumpers where fitted.
- Confirm harness routing against the reference photos.
- Run a full startup sequence after assembly.

Step	Tool	Spec
Mounting screws	1/4 in driver	2.5 N-m
Terminals	Torque driver	0.8 N-m
Line set	Flare wrench	per chart
Filter	Hand	snug
Panel	1/4 in driver	1.5 N-m

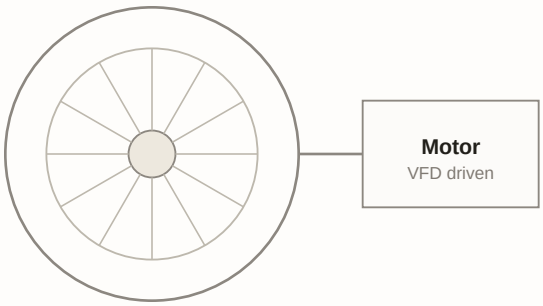

Indoor blower wheel and drive motor
Fastener Kits reference

> If a code returns after clearing, inspect the harness before replacing the board.


19. Ordering Information

Document the final readings and the parts used on the work order. Accurate records shorten the next visit and support the warranty claim.

Procedure notes

- Measure with the unit in the same mode as the fault.
- Allow readings to stabilize for 30 seconds.
- Note the ambient temperature at the time of test.
- Repeat any suspect measurement twice.
- Compare to the published range, not to an assumption.

Speed Tap	CFM	Static
Low	600	0.20 in wc
Med-Low	800	0.30 in wc
Med-High	1000	0.40 in wc
High	1200	0.50 in wc

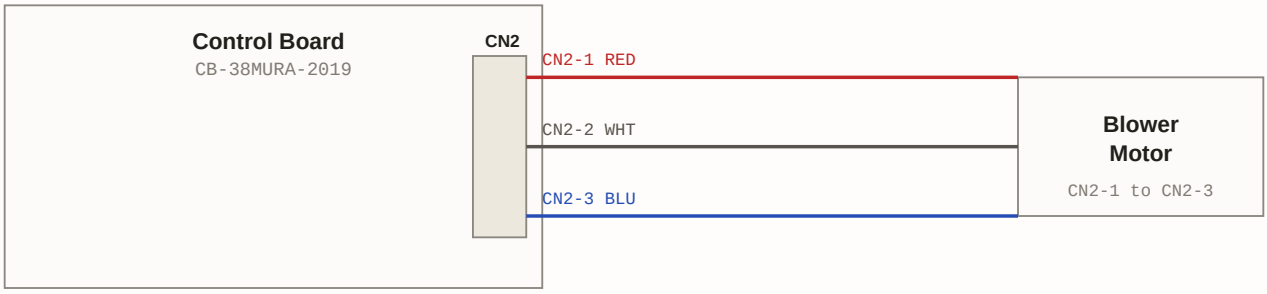

24VAC control signal from board to blower motor

Ordering Information reference

> Use the wiring diagram in Appendix D to confirm connector pinouts before probing.


20. Notes

This section covers the recommended field procedure for the 2019 Carrier 38MURA. Follow the steps in order and verify each measurement before moving to the next step. Record every reading on the service worksheet.

Procedure notes

- Disconnect and lock out power.
- Confirm 0VAC and 0VDC at the board.
- Inspect connectors for corrosion.
- Record baseline readings before any change.
- Reassemble and re-check operation.

Item	Expected	Notes
Line voltage	208-230 VAC	+/-10%
Low voltage	24 VAC	+/-10%
DC bus	310 VDC	Discharged before service
CN2 signal	24 VAC	Call for fan
Ambient	see chart	Record at test

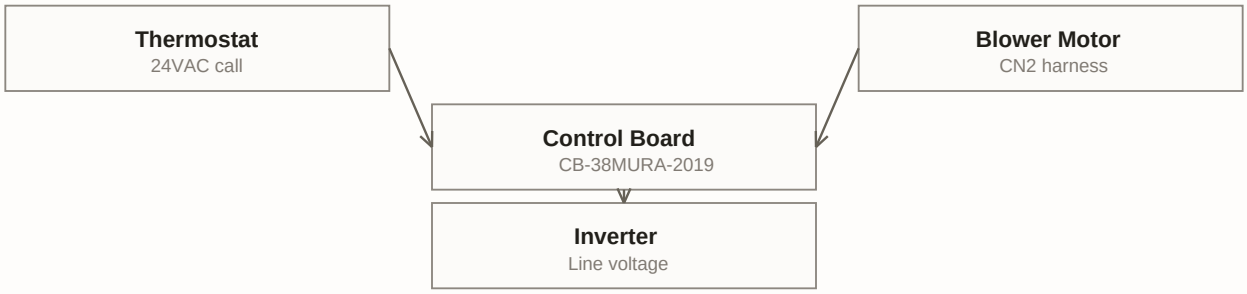

Notes reference

> Always confirm 0VAC and 0VDC at the board before making resistance measurements.