Update The Firmware on Samsung 27'' Monitors – Model LS27A600UUN

BEFORE PROCEEDING – if a laptop is connected to the monitors at a workstation, please ensure that any HDMI is removed from the onboard port on laptop (connects to TV on wall in office if present)

Plug the USB flash drive with the updated firmware into the service port (top port) on back of each monitor

- Press the center button below monitor
- Press the up (rear) button to select the menu
- Go up or down to the Support (Cloud icon) option and press the right button to bring up the support options

- Go up or down to Software Update and press the center button.

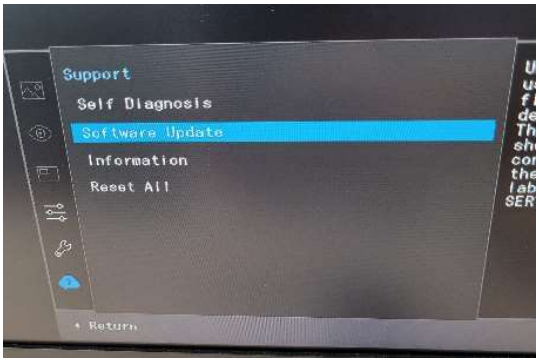

- Once it finds the update, press the center button again on OK to start it (You should see the update version list as 1016.0). When the update finishes, the progress bar will disappear, and the monitor will reboot.

To verify firmware version at any time, like after progress bar disappears and monitor wakes back up, you can go into Menu, then Support, then Information. Third line lists "Software Version"

- After monitors complete and reboot, go into "Menu" on the **<u>SECONDARY</u>** monitor (monitor that doesn't have USB-C and ethernet). From there, navigate down to "Support" and select "Reset All", then "Yes"
    - Once the monitor resets, take the following steps:
        - Plug laptop into PRIMARY monitor via the USB-C cable (if one is not already plugged in)
        - Go back to SECONDARY monitor and select "Menu", then "System", then turn OFF "Eco Sensor Mode" which is located near bottom of list. You may have to page down to find it. **** Eco Sensor Mode will be greyed out if the workstation is not detecting the laptop connection****