
Internet Radio FAQ

Tracker Plus · everything about the radio in plain words

In one line: tap Internet Radio on Home and music plays through the unit's speaker. It sounds like a little AM radio: warm, simple, decent quality.

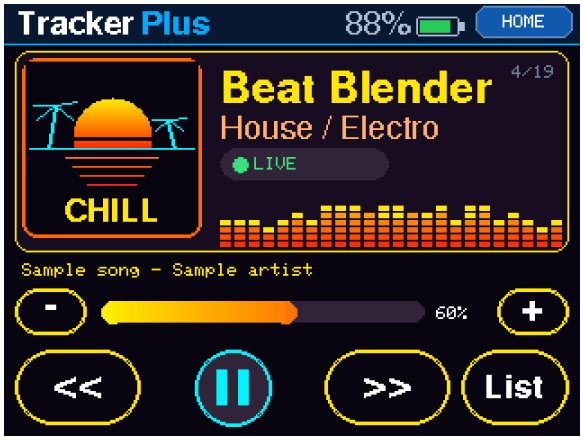

Now playing



Pick a station with List

How do I start it?

On Home, tap **Internet Radio**. Wait a few seconds. The radio connects and the music starts by itself.

What do the buttons do?

<< and **>>** go to the last and next station. The middle button pauses and plays. **List** shows all stations. **-** and **+** change the volume. The green bar only shows the volume. Press - and + to change it.

How good does it sound?


Honest answer: comparable to an AM radio. It is small and simple, and the quality is decent for a little speaker. It is made for background music, news and talk while you work.

How many stations are there?


19 are built in, including SomaFM channels, two classical stations (Radio Swiss Classic and WQXR New York) and 181.FM Old School. If a station will not play, the radio tries it twice and then moves on to the next one by itself. You can add 3 of your own with your phone, and up to 50 more from an SD card.

Can I change how it looks?

Yes. Tap the big picture to move through 6 looks: RADIO, SUNSET, RED, CHILL, COSMIC and FUNKY.

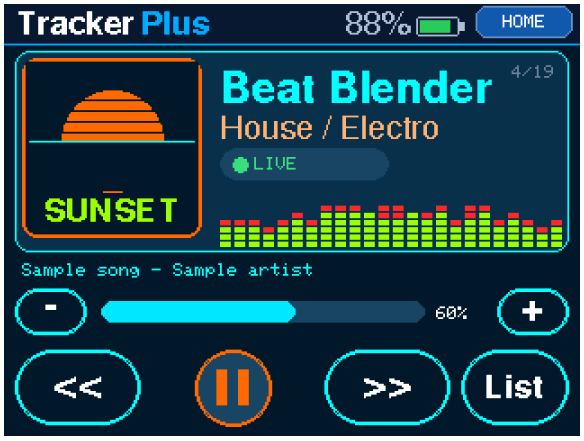

SUNSET

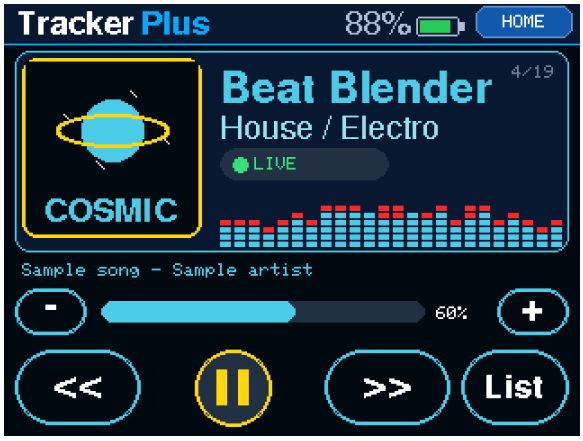

COSMIC

How do I add my own stations?

1. In the radio tap **List**, then **MY STATIONS**.
2. Scan the QR code with your phone (your phone must be on the same Wi-Fi).
3. On the page that opens, type a name and the stream address for up to 3 stations, then save.
4. They now show at the top of the list.

Stream addresses must start with **http://**. Addresses that start with https:// cannot be played by this unit.

How do I add lots of stations from an SD card?

1. Format a small SD card as FAT32 on a computer.
2. Make a text file called **STATIONS.TXT**.
3. Put one station on each line like this: **Name | http://address | Genre**
4. Put the card in the unit's SD slot and restart. Up to 50 stations load.

A station says it cannot play.

Stations sometimes go off the air. Try another one. If your own station will not play, check that its address starts with http://.

There is no sound.

Press + in the radio. Check Settings > Sound is not Off or in Quiet hours. Units that came without the speaker have no sound.

The sound stutters.

The Wi-Fi signal is probably weak. Move the unit closer to the router. Settings > Help & info shows the signal.

Does it cost anything to listen?

No. The stations are free. There is nothing to pay each month.

Need more help?

Open the full Tracker Plus guide from Settings > Help & info (scan the QR code), or

Aircraft, ships, news, weather and other live data come from free third-party services. Their availability, speed and accuracy can change at any time, so live data features cannot be guaranteed.