Chapter 9 The HOT Key

This chapter summarises the facilities provided by the **Hunter 16** HOT key, which you can use to check or change certain key aspects of the **Hunter 16** set-up. Particular uses are described in more detail as appropriate elsewhere in this manual.

9.1 Introduction

To use the HOT key, press [PAW][H]. You do not have to be at the DOS prompt to use the HOT key. For example, you can use it while in the middle of an application, without interfering with its operation in any way.

This displays a screen like the following:

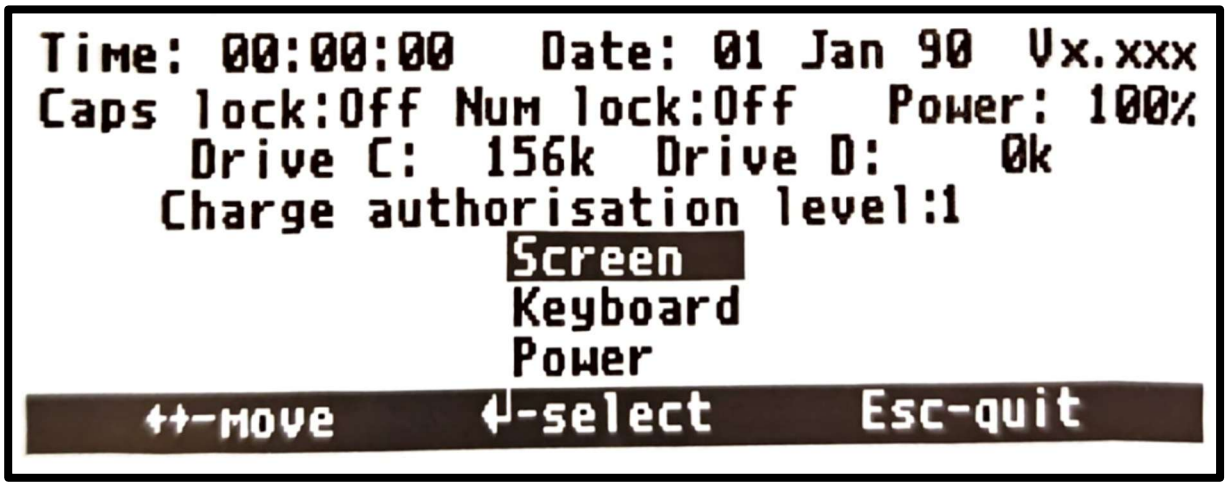

This displays summary status information about **Hunter 16** and provides you with facilities to adjust the screen, keyboard and (optionally) power settings.

The bottom line of the screen shows which keys to use. For example, to use the keyboard facilities, move the highlight to the **`Keyboard`** option by using the [Left] or [Right] keys, then press [Return] to select it.

To return to the normal screen display, press [Esc] or press [PAW][H]again.

9.2 Status information

The status information is as follows:

- The time and date

- The state of the [Caps Lock] and [Num Lock] keys
- The percentage power remaining
- The free space remaining on drive C (RAM disk) and drive D.
- The charge authorisation level. This indicates whether you can recharge the internal batteries by using the **Husky** AC adaptor. For details, see section 6.5.5.

9.3 Screen option

The **`Screen`** option displays the following:

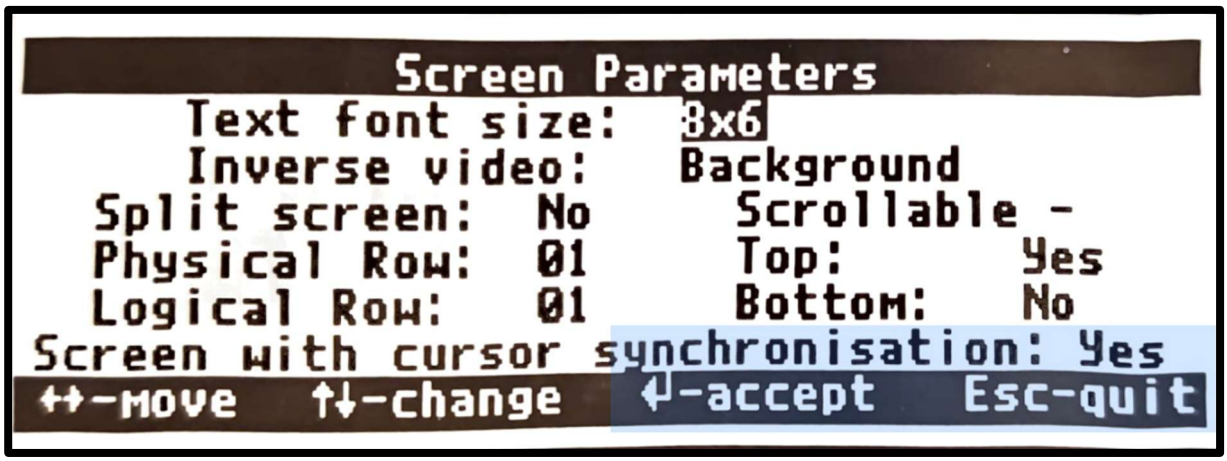

Move the highlight to the options you want to change by using the [Left] and [Right] keys, then adjust the displayed value by pressing the [Up] or [Down] keys. When you have finished, press [RETURN] to accept the changes or [Esc] to cancel them.

9.3.1 Text font

Hunter 16 can display text on the LCD in three different sizes: 8x8 (large), 8x6 (medium) and 6x4 (small). The smaller characters allow you to display more text at a time, but you will probably find the larger characters easier to read.

You can adjust the text size at any time without 'confusing' your application.

If changing the text size has no apparent effect, your application is using the display in graphics mode, which does not support this feature.

9.3.2 Inverse video

If you are using an application which displays text using a variety of text colours or other attributes (such as high intensity), you may be able to improve the display by telling **Hunter 16** to use 'inverse video' for these unsupported attributes. Either ask your technical support team which setting to use, or experiment until you achieve the best result.

9.3.3 Split screen

If an application maintains a status, message or menu line separate from the main work area on the screen, you can tell **Hunter 16** to display it permanently on the LCD by using the split screen facility. This splits the CGA and LCD into two parts (windows), displaying information from the top CGA window in the top LCD window, and the bottom CGA window in the bottom LCD window.

To do this, set **`Split Screen`** to **`Yes`**, then set **`Physical Row`** to the line (1..10) where you want to split the LCD and **`Logical Row`** to the line (1..25) where you want to split the CGA.

You can also control scrolling for each window by changing the values displayed against **`Top`** and **`Bottom`**. If you set this to Yes, the LCD window will scroll to show anything you type while the cursor is in that part of the CGA. If you set this to **`No`**, the LCD window will not scroll automatically, although you can scroll both windows by using the viewing keys.

9.3.4 Cursor synchronisation

This option allows you to decide whether to scroll the LCD automatically to keep the cursor visible, or to scroll it only when you operate the looking keys. You should leave this set to **`Yes`** unless you have problems with an application.

9.4 Keyboard option

The Keyboard option displays the following:

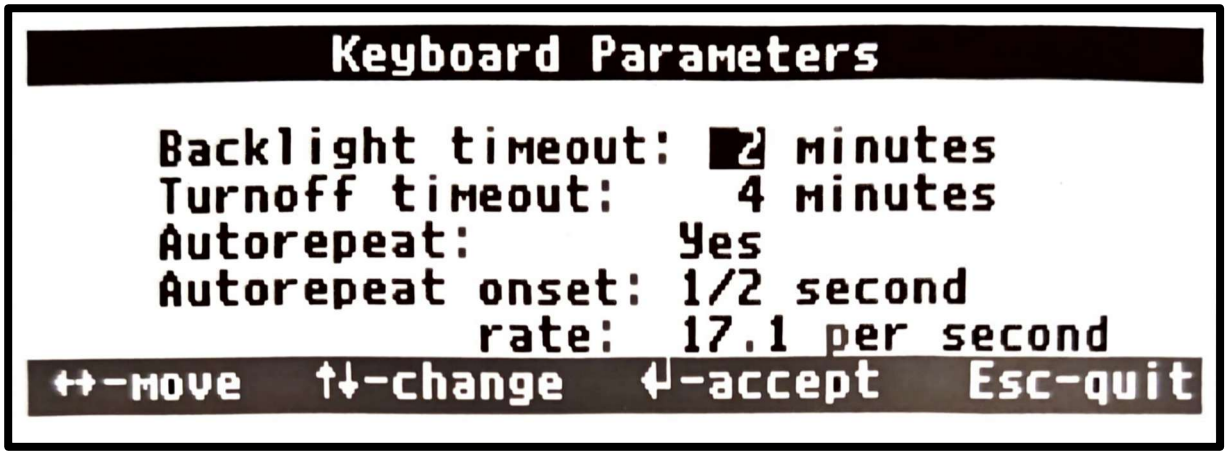

Move the highlight to the options you want to change by using the [Left] and [Right] keys, then adjust the displayed value by pressing [Up] or [Down] key. When you have finished, press [RETURN] to accept the changes or [Esc] to cancel them.

9.4.1 Backlight timeout

This value controls how long the backlight will stay turned on, if you do not press any keys. You can set it to between 1 and 5 minutes, or turn it off entirely.

This timeout is mainly provided to help save battery power when you forget to turn the backlight off!

9.4.2 Turnoff timeout

This value controls how long **Hunter 16** will stay turned on, if you do not press any keys and communications is active. You can set it to between 2 and 60 minutes, or turn it off entirely.

This timeout is mainly provided to help save battery power when you forget lo turn **Hunter 16** off! Remember that after **Hunter 16** has turned off, you will normally be able to turn on and continue exactly where you left off.

9.4.3 Autorepeat

The onset value is the delay before a key will start to autorepeat left pressed. The rate is the number of depressions per second which

will be 'typed' by autorepeat. You can set the onset to 1/4, 1/2, ¾ or 1 second. You can set the rate to between 2 and 30 characters per second.

9.5 Power option

If this option is available, selecting it displays the following:

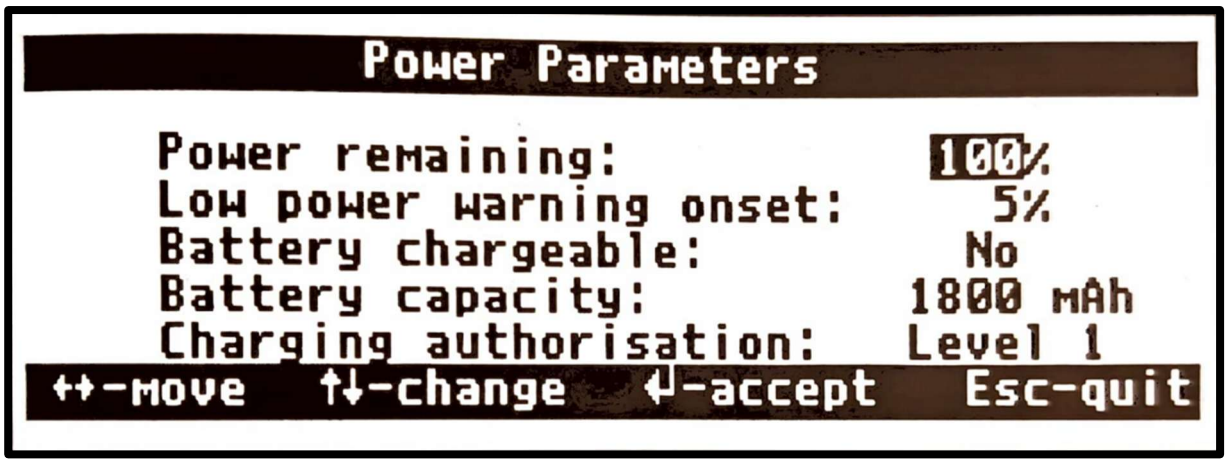

Move the highlight to the options you want to change by using the [Left] and [Right] keys, then adjust the displayed value by pressing [Up] or [Down] key. When you have finished, press [RETURN] to accept the changes or [Esc] to cancel them.

9.5.1 Power remaining

You can use this option to change the percentage power remaining, usually after fitting new alkaline batteries, or changing battery type.

If you are using rechargeable batteries, the power level is updated automatically each time you recharge, so you should not need to use this.

9.5.2 Low power warning onset

Hunter 16 will issue warning messages and turn off automatically when the percentage power remaining falls below a critical level. Use this option to change this level.

9.5.3 Battery chargeable

Use this option to enable or disable charging. (You can only enable charging if the charging authorisation allows it ie is set to 2, 3 or 4.)

9.5.4 Battery capacity

Use this option to tell **Hunter 16** the total capacity of the fitted batteries, so that it can monitor the power remaining correctly. Typical NiCads have a capacity of 600-800mAh. Typical alkalines have a capacity of 1400mAh.

9.5.5 Charging authorisation

If it is fitted with rechargeable batteries, **Hunter 16** can be recharged via the Husky AC adaptor, providing the charging authorisation is set to a value other than 1.

Do not change the charging authorisation level unless you are sure you know what you are doing. See section 6.5 for full details.