

Top Spinner

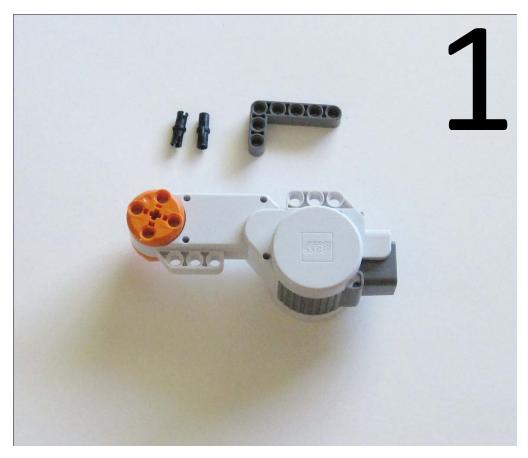



The motor with gears spins the top.

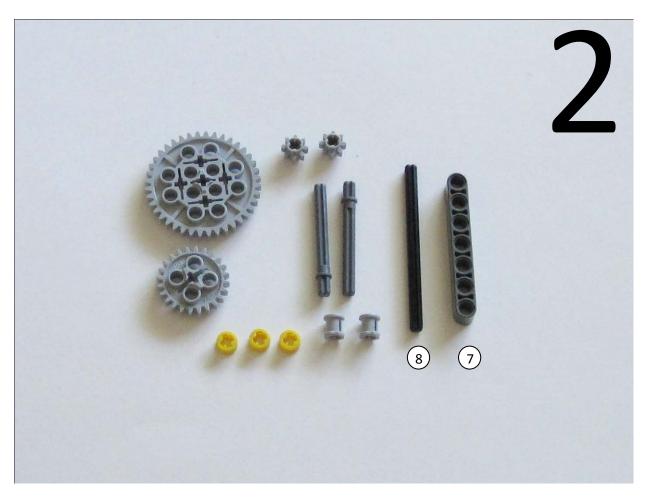








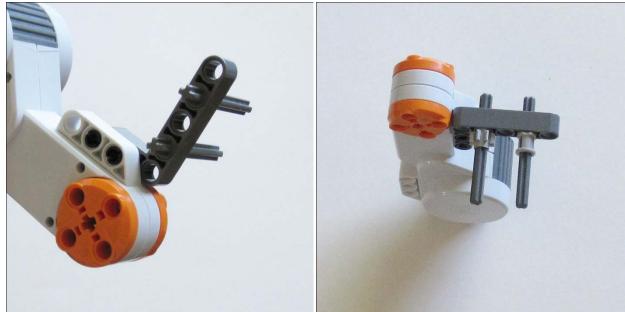

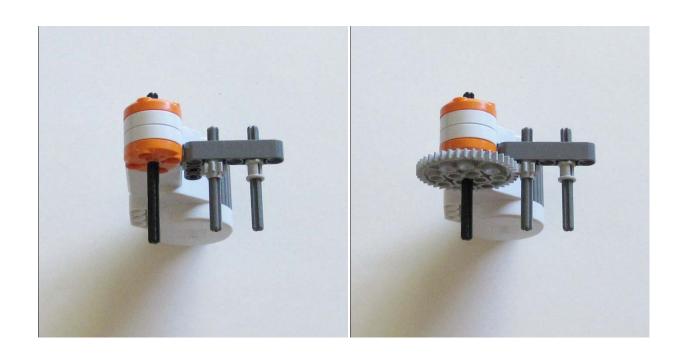


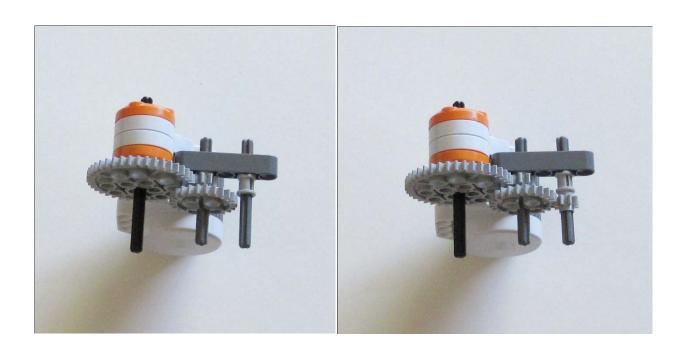


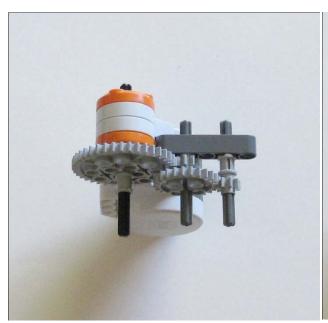


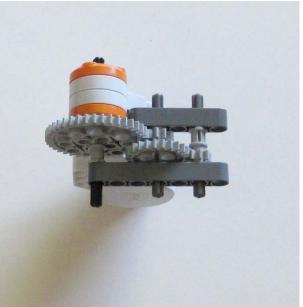



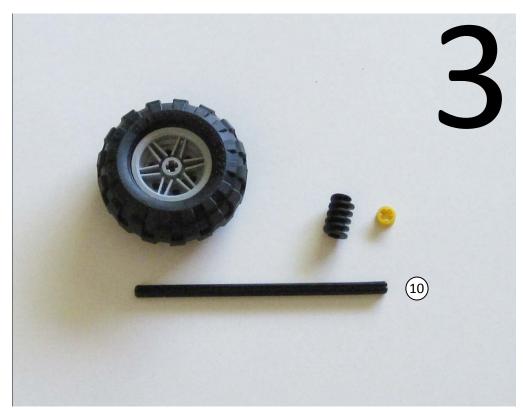

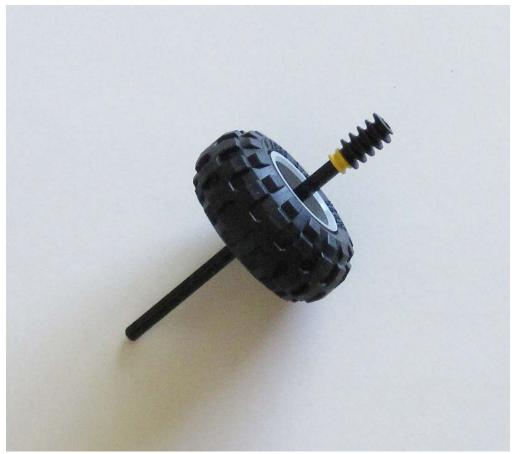

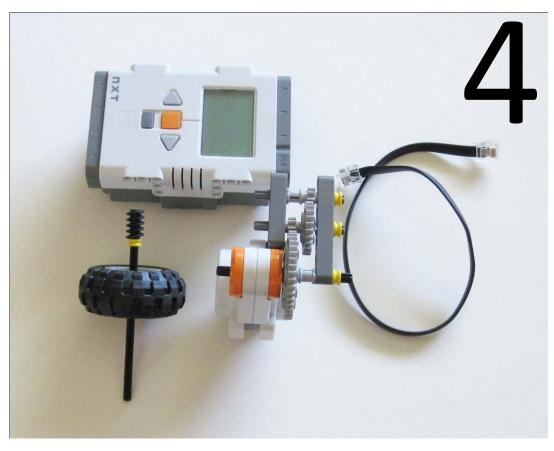



Use the shaft at the end of the gear train that spins the fastest. Insert the shaft onto the top half of the spiral worm on the top.

Adapted from nxtprograms.com for LEGO Mindstorms NXT Education kit 9797.