

# Pico WiFi DMX User Manual

---

This manual explains how to use the browser-based DMX controller with the Pico firmware. It is written for daily operation: creating fixtures, controlling lights, saving scenes, building chasers, creating effects, and using GPIO buttons or ADC inputs.

The web interface is normally opened from XAMPP. On the same computer that runs XAMPP this is often:

```
http://localhost/dmx/
```

From an iPad, phone, or another computer, use the XAMPP computer's LAN address or hostname instead, for example `http://192.168.0.50/dmx/`. This XAMPP URL is only the address of the web interface and server-side show storage.

Modal editors and dialogs require an explicit action to close. Clicking the dark area outside a modal does not dismiss it, which prevents accidental loss of edits. Use the modal's **Close**, **Cancel**, save, or other action button when you are finished.

The Pico itself is controlled over the network with its base URL, for example:

```
http://192.168.0.24/
```

The Fixture Controller can store multiple Pico base URLs as named **DMX Outputs**, with one DMX universe per Pico. Its first output remains the **Primary Pico URL** used by pages that currently support one Pico. Across the UI, live Pico updates only happen while the applicable Pico base URL is set; clearing the URL puts that output into browser-only editing. Pico base URLs are separate from the XAMPP URL: XAMPP serves the controller pages and stores the show, while each Pico URL identifies one lighting-controller hardware API.

This applies to every page that can talk to the Pico:

- **Fixture Controller** can route fixtures across multiple configured Pico outputs. A fixture sends only when its assigned output has a Pico base URL.
- **Chaser** can edit steps locally without a URL; live step preview, Chase Playback, and Pico slot actions need a Pico base URL.
- **Effects** can edit effect recipes locally without a URL; browser preview, scene-to-Pico center updates, and Pico slot actions need a Pico base URL.
- **GPIO Control** can edit and save mappings locally without a URL; upload, readback, and status polling need a Pico base URL.
- **DMX Buffer Monitor** only polls Pico buffers when a Pico base URL is set.
- **Pico Performance Test** only runs when a Pico base URL is set.

The screenshots in this manual are generated by `scripts/update_user_manual.ps1 -LocalOnly` from the repo-local PHP dev router and the deterministic data in `docs/manual-data/`. Toolbox screenshots are captured as named page elements, so the manual can be regenerated on another development machine without a local XAMPP path or hand-cropping images.

## Main Pages

| Page                                  | Purpose                                                                                                        |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <a href="#">Fixture Controller</a>    | Fixture profiles, patching, live control, groups, scenes, default and blackout values                          |
| <a href="#">Show Run</a>              | Operator page for recalling saved groups, scenes, palettes, and Pico chaser/effect slots without editing setup |
| <a href="#">MIDI Emulator</a>         | Launch Control XL-style browser controls for testing Show Run MIDI Learn without hardware                      |
| <a href="#">Chaser</a>                | Step-based chases with fade, loop modes, direction, pause/resume, and Pico slot upload                         |
| <a href="#">Effects</a>               | Continuous effects for pan/tilt pairs or scalar controls such as dimmer, zoom, iris, prism, and gobo           |
| <a href="#">GPIO Control</a>          | Map Pico GPIO buttons and ADC inputs to lighting actions                                                       |
| <a href="#">DMX Buffer Monitor</a>    | Read all 512 values from either the live output frame or the base/position buffer                              |
| <a href="#">Pico Performance Test</a> | Test Pico HTTP/DMX update performance, buffer readback, and core timing logs                                   |
| <a href="#">Room Plane</a>            | Calibrated room-plane coordinate mapping for moving lights                                                     |

# 1. Fixture Controller

The screenshot displays the DMX Fixture Controller interface. At the top, the title "DMX Fixture Controller v0.9.14" is shown, along with the status "Setup loaded from server". The "Primary Pico URL" is set to "http://192.168.0.24/" and is highlighted in dark green. Navigation buttons include "Find Pico", "DMX Outputs", "Show", "Effects", "Chaser", "GPIO", "Plane", and "Manual".

The "Show" section is active, showing a "Show name" field with "Untitled Show". Below this are buttons for "New Show", "Patch CSV", "Export Show", "Export Library", "Import Show", and "Import Library".

The "Fixture Library" section is also active. It features a search bar with "American DJ Inno Pocket" entered. Below the search bar, a message states: "Loaded 624 built-in library fixtures. Capability ranges available for 9788 controls. Wheel images available for 140 options." A list of fixtures is shown on the left, including "Spica 250M", "Twister 4", "PAR 180 COB 3in1", "ALC4", "Europe 105", and "WARP/M".

The "Spica 250M" fixture is selected, showing its details on the right. The "Fixture Information" section includes authors "Flo Edelmann, Felix Edelmann", creation date "2017-01-23", update date "2018-08-09", dimensions "427 x 459 x 373 mm", weight "18 kg", power "500 W", DMX connector "3-pin", and beam angle "18°". Below this is a table of controls:

| 11 converted controls - 16 channels      |                               |                                |
|------------------------------------------|-------------------------------|--------------------------------|
| Pan/Tilt (panTilt16 - Pan 1/2, Tilt 3/4) | Pan/Tilt Speed (wheel - CH 5) | Reset (wheel - CH 6)           |
| Color Wheel (wheel - CH 7)               | Prism (wheel - CH 9)          | Prism rotation (wheel - CH 10) |
| Gobo Wheel (wheel - CH 11)               | Gobo rotation (wheel - CH 12) | Focus (slider8 - CH 14)        |
| Shutter / Strobe (wheel - CH 15)         | Dimmer (slider8 - CH 16)      |                                |

The Fixture Controller is the central page. Use it first when setting up a new show or fixture set.

## Set the Primary Pico Base URL

1. Open the XAMPP controller URL, for example `http://localhost/dmx/` on the XAMPP computer or `http://192.168.0.50/dmx/` from another device on the LAN.
2. Enter the Pico base URL, for example `http://192.168.0.24/`.
3. If DHCP changed the Pico address, click **Find Pico**. The XAMPP server listens briefly for the Pico's UDP discovery beacon and fills the URL when a Pico is found on the same LAN. The discovered URL is stored in the browser and saved back to the current page's XAMPP setup file on Controller, Chaser, Effects, and GPIO, so the other pages and other devices can reuse the corrected address after reload.
4. The Pico base URL field checks `/status.json` automatically. It turns dark green when the Pico is reachable, dark red when it cannot connect, and keeps retrying in the background so it can recover after flashing or rebooting the Pico.
5. Control changes are sent to the Pico when a Pico base URL is set. If the field is empty, the page edits locally only and does not send live DMX updates.
6. Fixture setup changes are autosaved to the XAMPP server. Use **Export Show** before large changes when you want an extra backup of the complete show setup.

# DMX Outputs and Multiple Picos

**DMX Outputs** x

Each output represents one Pico base URL and one DMX universe. Fixtures can reuse addresses when assigned to different outputs.

**Find Picos** Found 2 Pico controllers.

**Front truss Pico** 192.168.0.21 · Discovered **Add**

**Pixel matrix Pico** 192.168.0.22 · Discovered **Add**

| Name                                | Universe                       | Pico base URL                                    |               |
|-------------------------------------|--------------------------------|--------------------------------------------------|---------------|
| <input type="text" value="Pico 1"/> | <input type="text" value="1"/> | <input type="text" value="http://192.168.1.50"/> | <b>Remove</b> |

**Add output**

**Done**

Open **DMX Outputs** in the Controller header when the show needs more than one 512-channel DMX universe. Each output has:

- A descriptive name, such as `Front truss Pico` or `Pixel matrix Pico`
- A unique universe number
- One Pico base URL
- A stable discovered-device ID when it was added through network discovery

Click **Find Picos** to listen for every Pico WiFi DMX discovery beacon on the LAN. The result list shows every discovered controller with its advertised name and IP address. Click **Add** beside each Pico that belongs to the show. The first discovered Pico fills an unused empty output; additional devices receive the next free universe number. A Pico whose device ID or normalized URL already belongs to an output is marked **Added** and cannot be added again.

**DMX Outputs** x

Each output represents one Pico base URL and one DMX universe. Fixtures can reuse addresses when assigned to different outputs.

**Find Picos** Found 2 Pico controllers. Both are assigned.

**Front truss Pico** 192.168.0.21 · Discovered **Added**

**Pixel matrix Pico** 192.168.0.22 · Discovered **Added**

| Name                                           | Universe                       | Pico base URL                                     |               |
|------------------------------------------------|--------------------------------|---------------------------------------------------|---------------|
| <input type="text" value="Front truss Pico"/>  | <input type="text" value="1"/> | <input type="text" value="http://192.168.0.21/"/> | <b>Remove</b> |
| <input type="text" value="Pixel matrix Pico"/> | <input type="text" value="2"/> | <input type="text" value="http://192.168.0.22/"/> | <b>Remove</b> |

**Add output**

**Done**


Names, universe numbers, and URLs remain editable after discovery. Click **Add output** for a controller that must be entered manually. Every output must have a unique universe number. Click **Done** to validate the list, update the Primary Pico URL from the first output, and autosave the show.

Select the wanted **DMX output** while patching a fixture. Address conflicts are checked only inside that output, so Universe 1 channel 1 and Universe 2 channel 1 are independent and may both be used. Existing fixture cards in **Patch Fixtures** also have a DMX output dropdown. Reassigning a fixture is refused if its address range would overlap another fixture on the destination output.

The Controller routes single controls, fixture Default/Blackout/Highlight recalls, Group Edit, scenes, palettes, Fan Out, room-plane targeting, and clear-all operations to their fixtures' assigned outputs. Multi-fixture batches are separated by output and sent to the involved Picos concurrently. **Patch CSV** includes the output name and universe for every channel. Complete show export/import preserves the output definitions and fixture assignments; the current show format is version 5 so older controller software refuses unsupported multi-output and pixel-matrix data instead of silently losing it.

The other operating pages currently continue to use the first output as their single Primary Pico URL. Configure and verify multi-output fixtures on the Fixture Controller until those pages are migrated to the shared output routing.


## Pixel Matrices

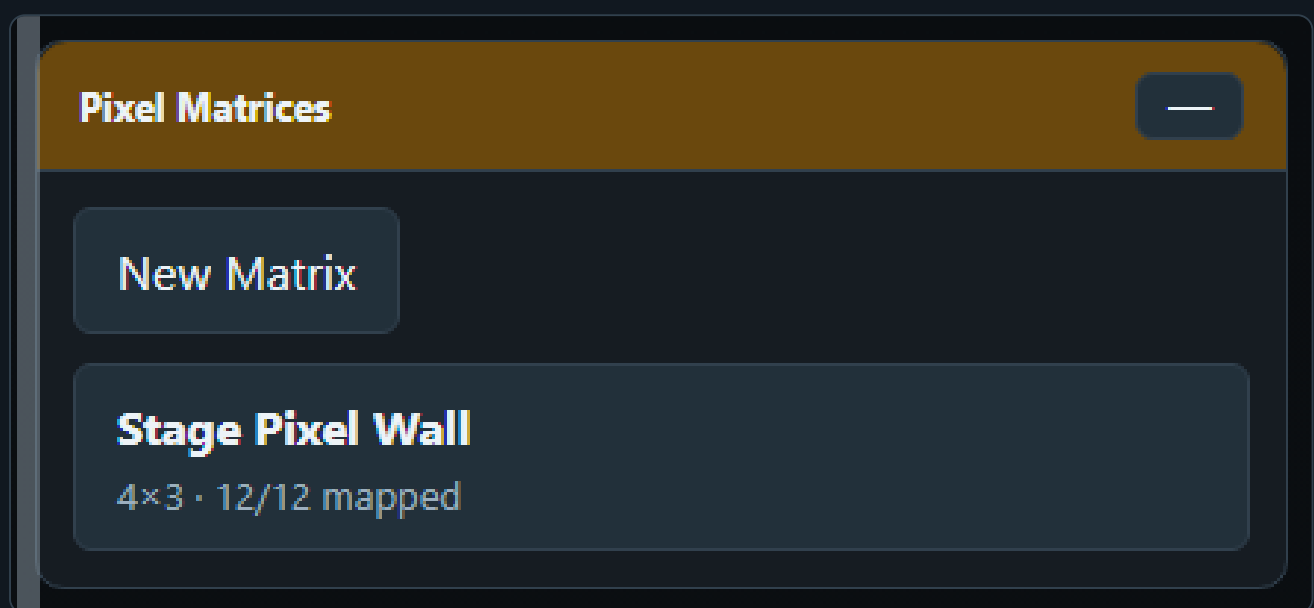

Use the **Pixel Matrices** toolbox on the Controller page to convert a still image into fixture colors. The toolbox can drive separate RGB-type fixtures, individual pixels inside a native **RGB pixel matrix** fixture control, or a mixture spread across multiple DMX outputs.

Before creating the visual matrix:

1. Add or import fixture profiles with RGB, RGBW, RGBWA, CMY, CMYK, or native RGB matrix controls.
2. Patch every physical fixture to the correct **DMX output**, universe, and address.
3. Arrange the compatible fixture color controls in the intended row-major order if you want to use **Auto Map**.

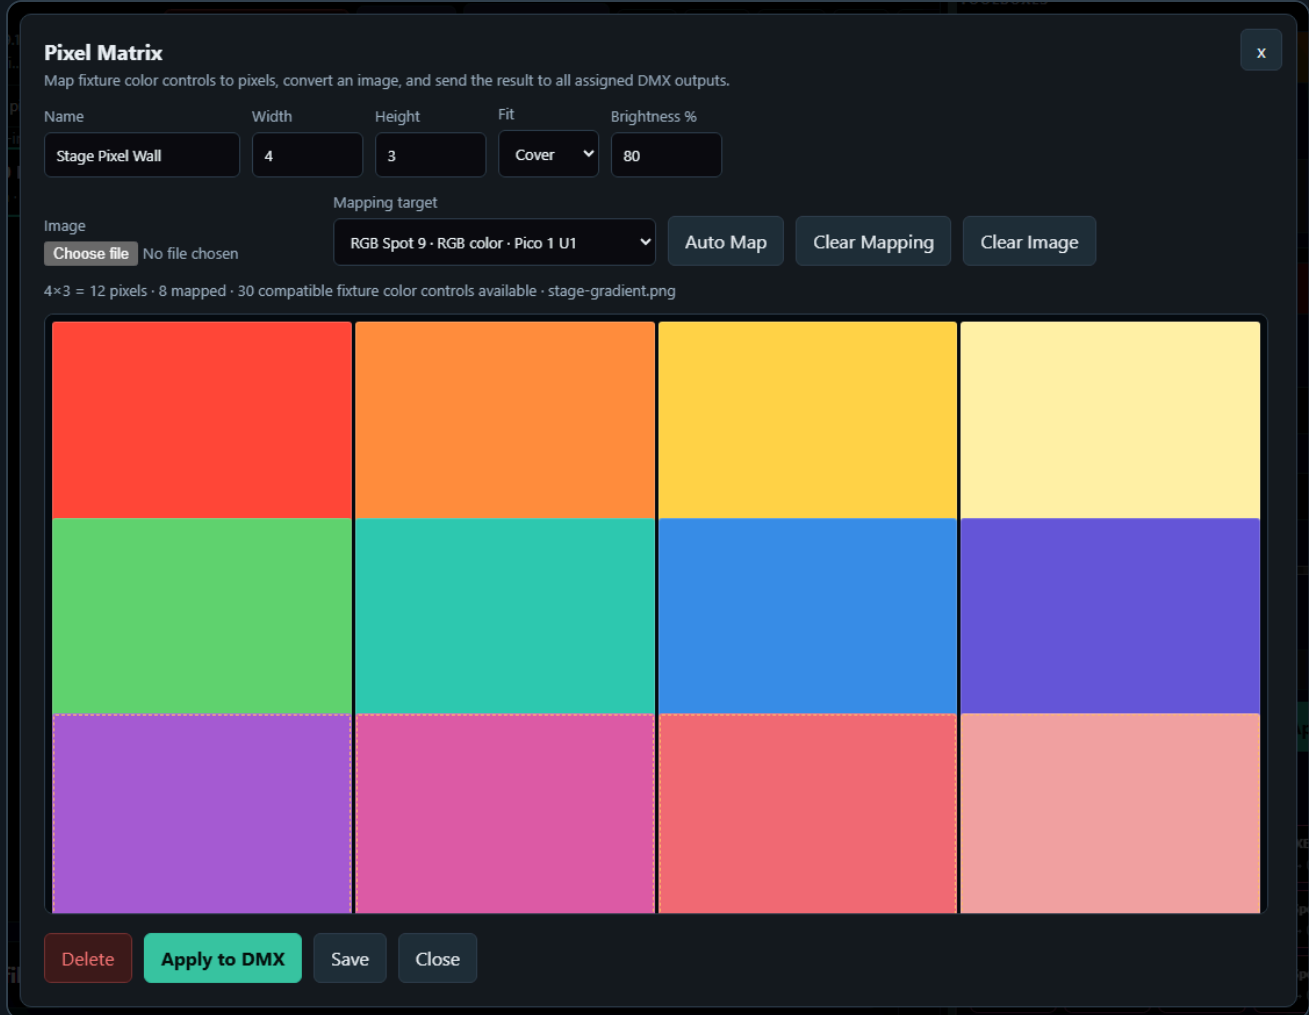


To create and test a matrix:

1. Open **Pixel Matrices** and click **New Matrix**.
2. Enter a name and the logical **Width** and **Height**. Matrices may contain up to 64×64 pixels.
3. Click **Auto Map** to assign the available compatible fixture controls from the top-left pixel across each row. If the physical order differs, select the first **Mapping target** and click its wanted pixel cell. The dropdown automatically advances to the next unused compatible fixture target, so continue clicking the physical pixel positions in sequence without reopening the dropdown each time. After the last available target it returns to **Unmapped**. Selecting the same target on another cell moves that target rather than duplicating it. Choose **Unmapped** and click a cell to clear only that assignment, or use **Clear Mapping** for the whole matrix.
4. Choose **Contain**, **Cover**, or **Stretch**, set a brightness limit, and select a PNG, JPEG, WebP, or GIF image. Conversion happens locally in the browser; the saved show stores the resulting pixel colors and image filename, not the original image file.
5. Click **Apply to DMX** to preview the converted image immediately. The Controller updates its live color values, separates the DMX bytes by assigned output, and sends the involved Pico batches concurrently.
6. Click **Save** to add the definition to the toolbox and the normal 800 ms fixture-setup autosave. Saved matrices are included in **Export Show** and restored by **Import Show**.

**Clear Image** makes every logical pixel black without changing its mapping. **Delete** removes the selected saved matrix. The first implementation handles one converted still frame; animation and video playback are not yet included.

# Fixture Library

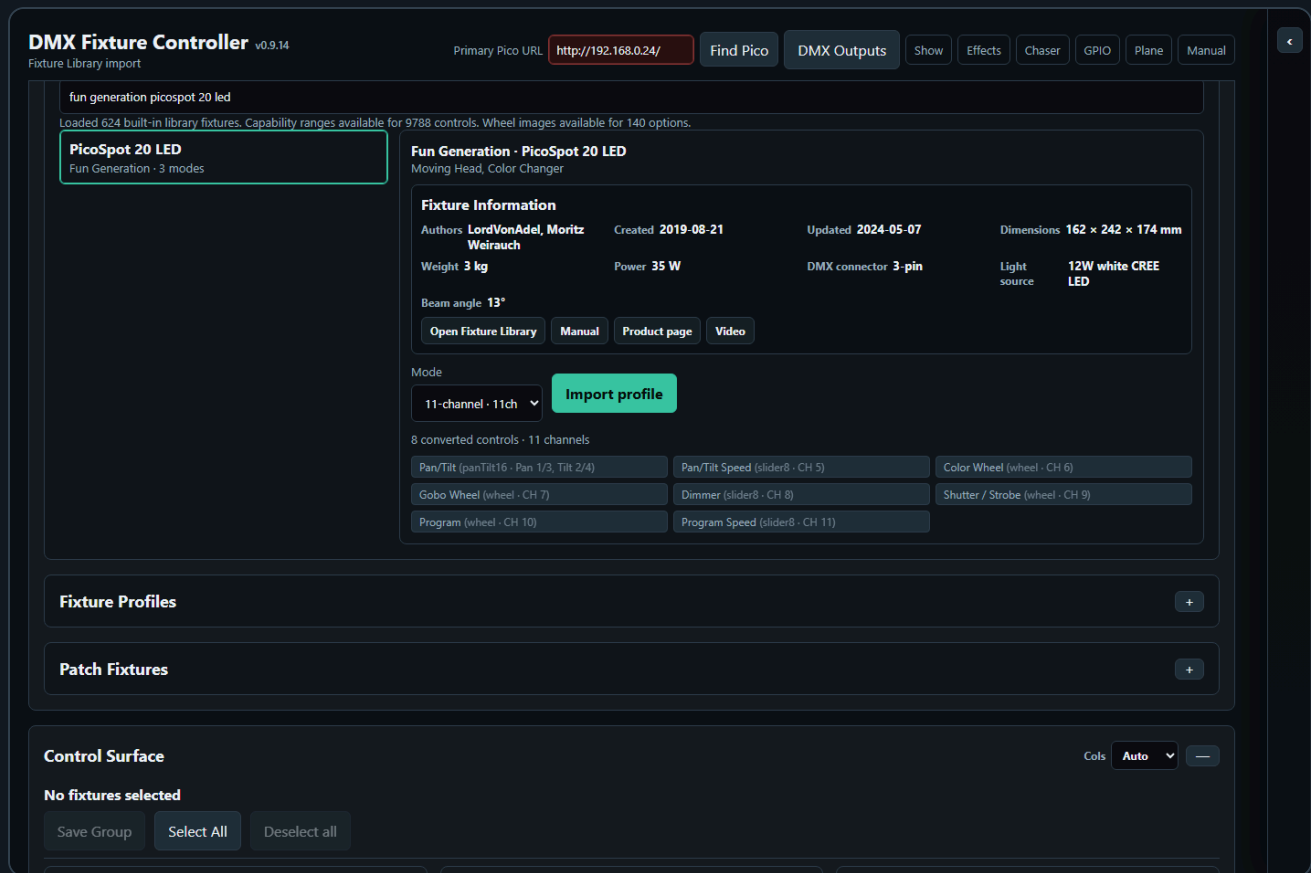

The **Fixture Library** panel imports fixture profiles from an export of the original [Open Fixture Library](#) project. Use it when you want to start from an existing fixture definition instead of building every channel by hand. Selecting a fixture shows **Fixture Information** when OFL provides it: authors, creation/update dates, dimensions, weight, power, DMX connector, light source, beam angle, and links to the OFL entry, manual, product page, or video. External information links open in a new tab and only HTTP/HTTPS links are accepted.

The library loads automatically when the controller page opens. While it is loading, the search field is disabled and the panel shows a loading status. If loading fails, the panel shows a **Retry** button.

Command buttons that save, import, export, or update setup data briefly show their result on the button itself. For example, **Update Library** changes to **Comparing...** while its merge dialog is open and then **Updated** when the chosen operation is complete.

Use **Export Library** to download the currently loaded fixture catalog as the compressed `pico_dmx_fixture_library.zip`; it contains `pico_dmx_fixture_library.json`. Use **Import Library** to upload that ZIP or an older uncompressed library JSON file to the XAMPP server. After import, the controller loads that custom library first; if no custom library is saved, it falls back to the built-in converted library asset. The development script `scripts/sync_fixture_library_from_xampp.ps1` can refresh that bundled fallback from the current XAMPP catalog after validating the library schema, fixture count, and fixture keys. When fixtures differ, the script asks whether to take each XAMPP change or keep the bundled copy; `-AcceptAllChanges`, `-KeepExistingChanges`, and `-DryRun` are available for intentional automated runs.

Older custom catalogs may not contain Fixture Information, normalized capability data, or OFL wheel-resource links yet. In that case, the Controller overlays matching information from the built-in `fixture-metadata.json`, `fixture-capabilities.json`, and `fixture-resources.json` sidecars in browser memory. The resource sidecar stores each offline SVG/PNG once and maps it to matching fixture wheel slots. This does not save, replace, or otherwise modify the custom catalog on the XAMPP server.

1. Type part of the manufacturer, fixture name, category, or mode in **Search manufacturer or fixture**.

2. Select the matching fixture from the results list.
3. Choose the desired DMX mode from the **Mode** dropdown.
4. Review the converted controls and channel count in the preview.
5. Click **Import profile**.

The imported fixture is added to **Fixture Profiles** and becomes the active profile. You can edit it like any manually created profile, including changing labels, defaults, blackout values, and wheel options. The imported profile remembers its library fixture key and mode, so later updates still find the correct reusable definition if you rename the show profile.

The converter keeps the richer Open Fixture Library data where the controller can use it:

- Pan/tilt channels are grouped as 8-bit or 16-bit pan/tilt controls when matching channels are present.
- Scalar coarse/fine pairs such as dimmer, focus, zoom, iris, and color temperature become one 16-bit control instead of separate coarse and fine sliders.
- RGB, RGBW, and RGBWA color intensity channels are grouped into color controls.
- Explicit OFL defaults are imported and scaled to the actual 8-bit or 16-bit control resolution.
- Compatible rectangular matrices using sequential RGB channels per pixel become native RGB matrix controls. Unsupported arrangements are left uncollapsed rather than mapped incorrectly.
- Wheel slots keep their OFL names, colors, and offline SVG/PNG images when the library provides them.
- Wheel DMX ranges are preserved. Normal slot buttons send the midpoint of the range.
- Adjustable wheel functions such as `WheelShake`, `WheelRotation`, and `WheelSlotRotation` show a bounded speed/range slider after you select that option.
- Segmented shutter/strobe, program, effect, prism, and maintenance channels become named option controls. Their buttons send a value safely inside the selected DMX range.
- Continuous capabilities retain their DMX range and speed information so the UI can provide a bounded control where the capability supports it.
- Explicit OFL highlight values enable a temporary **Highlight** / **Restore** action on the patched fixture card.
- Unsupported or ambiguous channels are kept as simple 8-bit sliders so no channel is silently lost.



# Create a Fixture Profile

**DMX Fixture Controller** v0.9.14  
Setup loaded from server

Primary Pico URL: <http://192.168.0.24/> **Find Pico** **DMX Outputs** **Show** **Effects** **Chaser** **GPIO** **Plane** **Manual**

### Fixture Library

### Fixture Profiles

Name:  Mode:  Channels:  **Add profile**

**Add / Edit Control**  
Choose type, label, and channel mapping here. Detailed settings open in the control modal. **Configure control**

**Type, Label & Channels**

| Type                                            | Label                                        | Pan coarse                     | Pan fine                       | Tilt coarse                    | Tilt fine                      |
|-------------------------------------------------|----------------------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|
| <input type="text" value="Pan/Tilt 16-bit XY"/> | <input type="text" value="Pan/Tilt 16-bit"/> | <input type="text" value="1"/> | <input type="text" value="3"/> | <input type="text" value="0"/> | <input type="text" value="0"/> |

Uses four channels: pan coarse, pan fine, tilt coarse, and tilt fine.

**Cancel edit**

### SAVED PROFILES

**Martin MAC XENON**  
Mode 14 · 13 channels · 6 controls

**Update Library** **Remove**

Used channels: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13

|                                                 |             |               |
|-------------------------------------------------|-------------|---------------|
| Dimmer (slider8) · CH 1                         | <b>Edit</b> | <b>Remove</b> |
| Pan/Tilt 16-bit (panTilt16) · Pan 2/3, Tilt 4/5 | <b>Edit</b> | <b>Remove</b> |
| Prisma (slider8) · CH 11                        | <b>Edit</b> | <b>Remove</b> |
| Gobo (wheel) · CH 12                            | <b>Edit</b> | <b>Remove</b> |
| RGBWA color (rgbwa) · R 6, G 7, B 8, W 9, A 10  | <b>Edit</b> | <b>Remove</b> |

A fixture profile describes the DMX personality of one fixture type. Use this section when the wanted fixture is not available in the **Fixture Library**, or when you want to fine-tune an imported profile.

1. Open **Fixture Profiles**.
2. Enter a profile name, mode name, and channel count. These fields update the selected profile automatically.
3. Click **Add profile**.
4. Select the profile.
5. In **Add / Edit Control**, choose the control type, label, and channel mapping.
6. Click **Configure control** to open the control details modal, then set default/blackout values and type-specific options.
7. Click **Add control** or **Save control** in the modal.

Each control stores its own DMX channel mapping. For example, a moving head can have:

- Dimmer on channel 1
- Pan/Tilt 16-bit on channels 2/3 and 4/5
- RGBWA color on channels 6-10
- Gobo wheel on channel 12

Simple 8-bit and 16-bit sliders only need channel mapping plus optional **Default** and **Blackout** values in the modal. Color controls add a color picker and any extra white, amber, or key channels. Wheel / indexed controls add the wheel editor and guided wheel editor so DMX ranges, colors, icons, and OFL-style function metadata can be entered without writing the raw text by hand.

Pan/Tilt controls also have fixture-profile mapping options in the control details modal:

- **Reverse Pan DMX** sends the logical Pan value as `max - value`.
- **Reverse Tilt DMX** sends the logical Tilt value as `max - value`.

- **Swap Pan/Tilt axes** sends logical Pan through the fixture's Tilt channels and logical Tilt through the fixture's Pan channels.

These options belong to the fixture profile, so every patched fixture using that profile follows the same mapping. The controller, chaser, and browser effect output keep showing logical Pan/Tilt values; only the physical DMX bytes are changed. This means scenes, palettes, chases, and effect centers remain readable even when a fixture is mounted backwards or rotated.

To change an existing control, click **Edit** in the Fixture Profiles list. The compact **Add / Edit Control** fields load the selected type, label, and channels, and the control details modal opens automatically. After editing, click **Save control** in the modal. If a Pico base URL is set, saving an existing control immediately resends the current live value for every patched fixture using that profile/control, so Pan/Tilt reverse or axis-swap changes are applied to the output right away. The **Fixture Profiles** collapse button hides the profile list and the compact Add / Edit Control box together.

Click **Update Library** to compare the selected show profile with its linked reusable fixture mode. The **Merge Fixture Profile** dialog shows both names, modes, channel counts, control counts, and a short difference summary. Choose **Use show in library** to update the reusable mode from the show, or choose **Use library in show** to refresh the existing show profile without adding a duplicate profile. A profile that has no library match can only be added with **Use show in library**.

The merge keeps data that belongs to only one side. Fixture Information, OFL capabilities, warnings, categories, unrelated modes, and richer wheel details remain in the library. Show profile/control IDs and Pan/Tilt reverse or axis-swap settings remain in the show because they describe patch references and how fixtures are mounted in this show. When **Use show in library** is selected, matching reusable controls retain their library IDs and metadata while editable names, channel mappings, defaults, and blackout values come from the show.

## Default and Blackout Values

Each control can store a **Default** value and a **Blackout** value.

Default values are useful for a normal starting look, for example:

- Dimmer open
- Pan/Tilt centered
- RGB white
- Gobo open

Blackout values are useful for quickly shutting down output, for example:

- Dimmer 0
- RGB black
- White and amber 0
- Pan/Tilt at a safe position if needed

For RGB, RGBW, and RGBWA controls, use the color picker for RGB. White and amber channels are edited separately when the fixture type has them.

## Patch Fixtures

Patch fixtures after the profile is ready.

1. Open **Patch Fixtures**.
2. Enter a fixture name.

3. Select the fixture profile.
4. Select the **DMX output** that physically drives the fixture.
5. Enter the DMX start address within that output's 512-channel universe.
6. Set **Count** to the number of fixtures you want to patch.
7. Click **Patch fixture**.


Use **Next free** to find the next available address on the selected output. The same address can be used on another output.

When **Count** is greater than 1, the controller creates a numbered run of fixtures. For example, name **RGB Spot** with count **10** creates **RGB Spot 1** through **RGB Spot 10**. The first fixture uses the start address you entered. The following fixtures are spaced by the channel count of the selected fixture profile.

After a multi-fixture patch, the controller asks whether to create a Saved Group for the newly patched fixtures. The suggested group name is the patch name. Press **Cancel** to skip group creation, or enter a name to save the new fixtures as a group.

The patched fixture list is shown as rows of compact cards. Each card shows its output, universe, profile, and channel range and provides a **DMX output** dropdown for repatching the fixture to another Pico. The controller checks the destination universe for an overlapping address range before accepting the move. Each row represents one consecutive run of the same fixture profile, so separate patch runs remain visually separate even when they use the same profile.

## Live Fixture Control

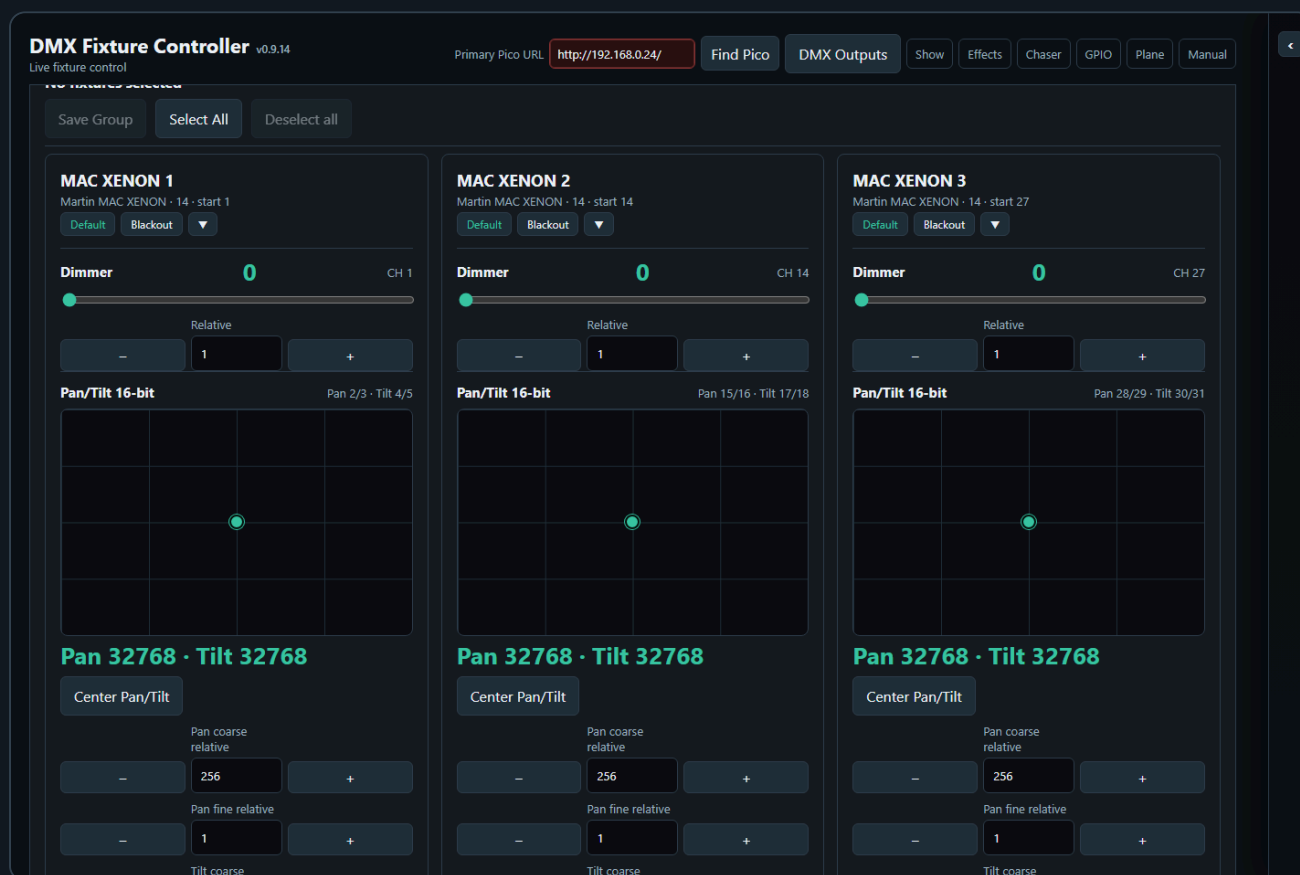

The **Control Surface** shows one card per patched fixture.

Each fixture card contains the controls from its profile:

- Sliders for dimmer and simple channels
- XY pads for absolute pan/tilt positioning

- Relative pan/tilt nudge controls for small position corrections
- Color pickers and swatches for color controls
- Wheel buttons, a DMX value slider, and a direct numeric DMX value field for indexed wheel values
- Coarse/fine relative nudges for 16-bit channels


For pan/tilt controls, drag inside the XY pad when you want to move directly to an absolute position. Use **Pan coarse relative**, **Pan fine relative**, **Tilt coarse relative**, and **Tilt fine relative** when you want to adjust from the current position without jumping to a new absolute value. The number field in each relative row sets how many DMX increments the next `-` or `+` click will move. The fine relative buttons move the combined 16-bit value by that many steps, including byte borrow and carry: for example `256 - 1` becomes coarse `0`, fine `255`, and `255 + 1` becomes coarse `1`, fine `0`. The value is clamped at the valid DMX range, so it cannot go below `0` or above `65535`. If the fixture profile reverses or swaps Pan/Tilt, the XY pad and relative controls still show logical Pan/Tilt movement while the DMX output is mapped for the physical fixture.

Wheel / indexed controls require unique DMX option values. If two wheel options use the same DMX value, the control details modal refuses to save the control. This prevents ambiguous wheel buttons where the UI could not know which option should be highlighted after recall or chase editing. On the Controller page and in Controller Group Edit, wheel controls can be changed with the option buttons, the DMX value slider, or the direct numeric DMX value field.

Use **Guided wheel editor** when creating or correcting indexed controls such as color wheels, gobo wheels, and shutter/strobe ranges. The guided table is the normal place to edit wheel rows, including option name, DMX range start/end, function type, slot number, speed labels, background color, uploaded icon, or drawn icon. A wheel option button can show a color swatch, an icon, or an icon on top of the chosen color. This is the recommended way to define rich functions such as `WheelShake`, `WheelRotation`, and `ShutterStrobe` without memorizing the raw text syntax.

The **Wheel options** text box remains editable for advanced use and accepts one option per line. Basic lines use `Name=DMX` or `Name=start-end`, for example `Open=0-15`. Richer OFL-style metadata can be added after pipe characters. Use `kind=WheelSlot` with `slot=2` for a named slot, `kind=WheelShake` with `shake=slow-fast` for a bounded shake speed range, `kind=WheelRotation` with `speed=slow CW-fast CW` for a bounded rotation range, and `kind=ShutterStrobe` with `speed=slow-fast` for a bounded strobe range. For example: `Gobo 2 shake=125-140|kind=WheelShake|slot=2|shake=slow-fast`.

Fixture profiles imported from the **Fixture Library** keep richer Open Fixture Library wheel information when it is available. Wheel slots use their real names and colors, for example `White`, `Red`, or `Gobo 2`. If an OFL wheel option covers a DMX range, the button sends the middle of that range so the value is safely inside the fixture function. Adjustable wheel ranges such as `WheelShake`, `WheelRotation`, `WheelSlotRotation`, and `ShutterStrobe` also show a bounded range slider after you select them. For example, the Fun Generation PicoSpot 20 LED in 11-channel mode imports `Gobo 2 shake` as a wheel button and shows a **Shake speed** slider limited to its real DMX range.

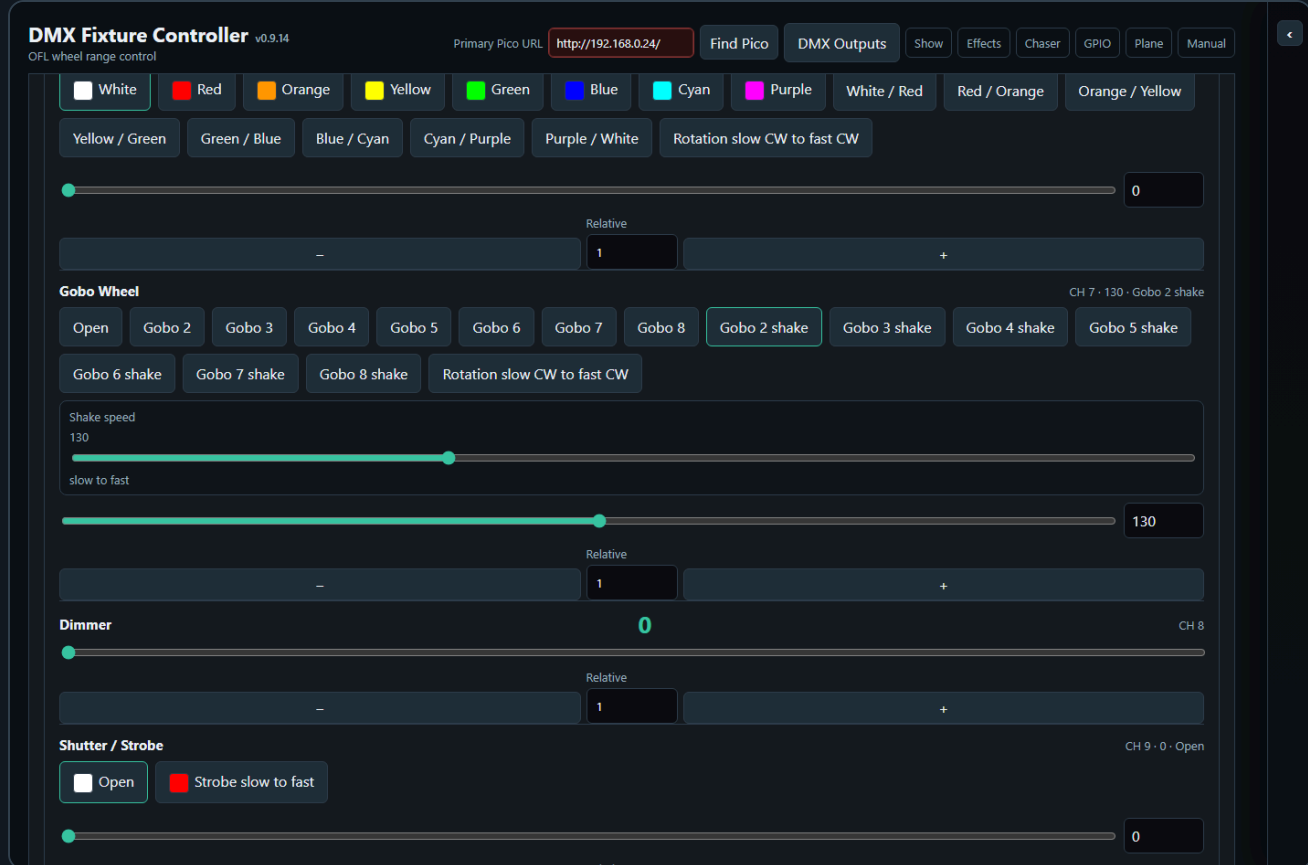

Use **Default** or **Blackout** on a fixture card to recall the stored values for that fixture only. A fixture-card recall takes manual control of the DMX output: it stops Pico Chaser and Pico Motion playback first, then sends the configured values so active playback cannot immediately overwrite the recalled look.

If an imported OFL profile provides explicit highlight values, its fixture card also shows **Highlight**. Click it to stop Pico playback, remember the current look, and send only the declared highlight values for fixture identification or focusing. The same button changes to **Restore**. The temporary highlight is not autosaved; click **Restore** to send back the exact remembered values and return to normal editing.

Use **Cols** in the **Control Surface** header to choose **Auto** or a preferred count from 1 to 4. Auto keeps the spacious responsive card width. A fixed preference can show three or four fixtures across on a wide desktop, but the Controller automatically reduces the effective count when the Toolboxes rail, available viewport width, or iPad layout would make sliders, buttons, readouts, or XY pads too narrow. The saved preference is stored in server UI state and is included in complete setup export/import.

Use the small button in the **Control Surface** header to collapse all visible fixture cards or expand them again. The button affects only the fixtures currently shown by the active group, scene, or palette filter.

Click a fixture card header or empty card area to include or exclude that fixture for group editing. The selected card uses the same accent outline style as other selectable tiles in the app. Clicking sliders, color controls, wheel buttons, Highlight/Restore, Default, Blackout, or collapse controls does not change fixture selection.

After a hard page reload, no fixture cards are selected automatically. This keeps Group Edit disabled until you deliberately choose the fixtures you want to edit.

Use **Select All** in the group bar above the control surface when you want to select every patched fixture. Use **Deselect all** to clear the current manual selection. When you manually select fixture cards, the control surface stays visible so you can keep building or adjusting the selection. Saved Groups can also be selected from the Groups toolbox to filter the control surface.

## Fixture Controller Toolboxes

The Fixture Controller uses the shared right-side **Toolboxes** sidebar.

## TOOLBOXES

Edit



Chaser

GPIO

Plan

## Groups

Group  
Edit

## MAC XENON Backdr...

6 fixtures

## RGB Spot Backdrop

12 fixtures

## MAC XENON Front

4 fixtures

## RGB Spot Front

8 fixtures

## FAL

6 fixtures

## Scenes



Scene 1

Scene 2

Scene 3

Chaser 1...

5

6

Scene 7

8

9

Scene 10

11

12

13

14

15

16

17

18

**Show** is the first Controller card and the project-level home for show setup. Edit the **Show name** field directly; changes use the normal 800 ms server autosave. Its top action bar displays **Export Show**, **Import Show**, **Export Library**, and **Import Library** together; the nested **Fixture Library**, **Fixture Profiles**, and **Patch Fixtures** cards follow below. Collapse Show to hide all of those setup tools at once. When Show is expanded again, each nested card returns with its own previous expanded or collapsed state. **New Show** confirms the reset and then asks for the required show name before clearing fixtures, live values, groups, scenes, palettes, chases, effects, saved room planes, GPIO mappings, Pico playback slots, Show Run layout, and saved toolbox layout while keeping the reusable fixture library. **Export Show** and **Import Show** handle the show backup; **Export Library** and **Import Library** independently handle the complete reusable catalog. **Patch CSV** exports the patched channel table.

**Groups** stores fixture groups and shares the selected group filter with other toolbox pages. Use it to select fixtures quickly, edit group tile names and visuals from the small pencil icon, delete groups from the small , import/export group JSON, reorder group tiles with **Move**, and open **Group Edit** when the current scope supports it.

## TOOLBOXES

[Edit](#)


### Scenes



|         |         |         |             |    |    |
|---------|---------|---------|-------------|----|----|
| Scene 1 | Scene 2 | Scene 3 | Chaser 1... | 5  | 6  |
| Scene 7 | 8       | 9       | Scene 10    | 11 | 12 |
| 13      | 14      | 15      | 16          | 17 | 18 |

### Groups



#### Group Edit

**MAC XENON Backdr...**

6 fixtures

**RGB Spot Backdrop**

12 fixtures

**MAC XENON Front**

4 fixtures

**RGB Spot Front**

8 fixtures

**FAL**

6 fixtures



**Scenes** stores complete looks for the current working scope. Empty slots save, filled slots recall, the small  deletes, **Move** reorders tiles, and the small top-left pencil icon opens **Edit Tile** for that slot's name, background, and optional drawing/upload.

Chaser

GPIO

Plan

x 174 mm

CREE

+

## TOOLBOXES

Edit



### Palettes





Merge

Scope

Position



Empty slot saves the selected scope. Filled slot recalls as an overlay.



5

6

7

8

9

10

11

12



13

14

15

16

### Scenes



5

6



8

9



11

12

13

14

15

16

17

18

### Groups



Group  
Edit

**Palettes** stores reusable value fragments such as positions, colors, gobos, dimmer looks, or Fan Out results. Palette recall applies only the stored controls and leaves unrelated values untouched. **Move** reorders palette tiles without recalling them.

**Planes** recalls room planes saved on the Room Plane page. Clicking a filled Plane tile opens the virtual room target modal and immediately recalls the Plane's fixture scope: every fixture saved in the Plane that still exists in the current Controller patch becomes selected, while an unrelated saved-group selection is cleared. Fixtures saved in the Plane but no longer patched are ignored. The modal applies the saved target's calibrated Pan/Tilt values to that recalled selection and sends them live when a Pico base URL is configured. Drag or click the red target, use the X/Y coarse and fine nudge controls, or pinch with two fingers to zoom the plot without moving the target. Closing the modal does not change the saved Plane definition.

Toolboxes **Edit** automatically enables tile movement in Groups, Scenes, Palettes, and Planes while showing their **Cols** and **Rows** layout dropdowns. Tap either dropdown to choose the matrix size with the native iPad picker. Drag a filled tile to a new position. While dragging, the source tile gets the same accent outline used when moving toolboxes, and the target position shows an accent insertion line. On touch screens, tap the filled source tile and then tap the destination. Dropping onto an empty slot moves the tile there; dropping onto another filled tile swaps the two slots. Click **Done** to return the tiles to their normal recall/use behavior. Groups use the same tile-slot behavior as Scenes and Palettes; the fixture order stored inside a group is not changed by moving the group tile.

## TOOLBOXES

[Edit](#)


### Fan Out



Affecting 18 fixtures in selected order

Control

Dimmer



Mode

Symmetric spread



Spread



0

Spread step

—

1

+

Save

Recall

Snapshot

Apply

Clear

MAC XE...

0 → 0

MAC XE...

0 → 0

MAC XE...

0 → 0

MAC XE...

0 → 0

MAC XE...

0 → 0

MAC XE...

0 → 0

RGB Spot 1

0 → 0

RGB Spot 2

0 → 0

RGB Spot 3

0 → 0

RGB Spot 4

0 → 0

RGB Spot 5

0 → 0

RGB Spot 6

0 → 0

RGB Spot 7

0 → 0

RGB Spot 8

0 → 0

RGB Spot 9

0 → 0

RGB Spot...

0 → 0

RGB Spot...

0 → 0

RGB Spot...

0 → 0

### Palettes



Merge

Scope

**Fan Out** shapes the currently selected fixtures or groups by spreading one compatible control through the selected order. It is documented in more detail below because its output can be saved as scenes or palettes.

## Fan Out Toolbox

The Fixture Controller includes a **Fan Out** toolbox in the shared Toolboxes sidebar. It shapes the current controller values for the selected group or selected fixture cards, so the result can immediately be saved as a scene.

1. Select one or more Saved Groups, or select fixture cards manually.
2. In **Fan Out**, choose the control to shape, for example Dimmer, Pan, Tilt, or another compatible single-value control.
3. Click **Snapshot** to use the current controller values as the fan base.
4. Adjust **Spread**, or use **Start to end** mode with From/To offsets.
5. In **Symmetric spread** mode,  is the center of the slider. Positive and negative Spread values run the same shape in opposite directions through the selected fixture order.
6. The Control Surface updates continuously while you change the fan values.
7. The affected fixture controls are highlighted in the Control Surface.
8. Save the resulting look with the Scene Toolbox if you want to keep the actual DMX look.

In **Symmetric spread** mode, the **Spread** slider is centered at  and can move into positive or negative values. Positive Spread sends the fan in one direction through the selected fixture order; negative Spread sends it in the opposite direction. The **Spread step** field and the  /  buttons provide fine adjustment of the signed Spread value. Set the step size to the number of DMX increments you want to add or subtract, then click  or . The buttons clamp at the valid signed range for the selected Fan Out control. **Start to end** mode hides the Spread nudge row because that mode is edited directly with the **From** and **To** number fields.

The current Fan Out working state is autosaved to the XAMPP server UI-state file. This includes the selected Fan Out control, mode, signed Spread, From/To offsets, and Spread step size, so the toolbox can restore the last working shape after a reload. Saved Fan Out presets are separate: use **Save** when you want to keep a named Fan Out recipe for later recall.

The Fan Out toolbox only shows controls that are available on every fixture in the selected set. For pan/tilt controls, Pan and Tilt appear as separate fan targets. Applying a fan writes the calculated values into the controller just like moving the controls by hand. When a Pico base URL is set, the changed DMX values are also sent to the Pico.

Fan Out calculates from a stored base value for each fixture, control, and axis. **Snapshot** stores those base values. In **Symmetric spread**, the spread is added around the base values:

```
final value = snapshotted base value + spread offset
```

For example, with five fixtures and a spread of , the offsets are , , , , and . If every fixture has a base value of , the result is , , , , and . With a spread of , the same offsets run in the opposite direction. If the fixtures have different base values, each fixture still keeps its own base as the starting point.

The offset is assigned by fixture position in the current Fan Out order:

```
fixture position = 0 ... fixture count - 1
```

$\text{offset position} = \text{fixture position} / (\text{fixture count} - 1)$

In **Symmetric spread**, the first fixture receives  $-\text{spread} / 2$ , the last fixture receives  $+\text{spread} / 2$ , and fixtures between them are spaced evenly. In **Start to end** mode, the first fixture receives the **From** offset, the last fixture receives the **To** offset, and fixtures between them are spaced evenly.

Fan Out order is important:

- If one or more saved groups are selected, the Controller uses the fixture order stored inside those groups. When several groups are selected, the groups are read in selected group order and duplicate fixtures are skipped after their first appearance.
- If no saved group is selected, the Controller uses the manual fixture selection order from the Control Surface.
- Negative **Spread** reverses the symmetric fan direction. It does not change the saved group, patch order, or fixture selection.

For a physical left-to-right fan, the saved group fixture order must match the physical fixture order. If a group was saved in a different order, the Fan Out math is still correct, but the visible stage result can look crossed or random.

Use **Save** in the Fan Out toolbox to store the fan setup itself: selected group or fixture IDs, selected control, mode, spread, and From/To offsets. Use **Recall** to restore that fan setup later. Recalling a Fan Out preset reapplies the fan to the controller values; it does not create a scene by itself. Use the Scene Toolbox when you want to store the resulting lighting look.

## Palette Toolbox

The Fixture Controller also includes a **Palettes** toolbox. Palettes are reusable value fragments, while scenes are complete looks for their saved scope.

Use palettes for building blocks such as:

- Positions
- Colors
- Gobos
- Dimmer levels
- Fan Out results that you want to reuse as an overlay

The small top-left pencil icon on a filled palette slot opens **Edit Tile** for that slot. Use **Name** to rename the tile text, and use the visual controls for a background color plus an optional drawn/uploaded visual on top. The visual is independent from the palette scope. The drawing canvas uses the selected background color, and the brush automatically switches between a light and dark stroke for readable contrast. Use **Default background** to restore the standard slot color, or **No icon** to keep only the colored button. Scope still decides which DMX values are saved; the name and visual are readable labels shown in the palette slot grid and stored inside the palette JSON.

Edit Tile

Target

Slot 1: Warm beam (Color)

Name

Warm beam

Background color

Default background

Upload visual

Choose file

No file chosen



No icon

Choose a background color, then draw or upload an optional visual on top. Both are saved inside the JSON.

Choose a background color and optionally draw/upload a visual. This is only a label; the Scope still decides which DMX values are saved.

Save tile

Close

Palette save rules:

- If Fan Out is active, the palette saves only the Fan Out affected controls.
- If Fan Out is not active and fixtures are selected, the palette saves only the selected **Scope** for those fixtures.
- **Position** saves pan/tilt or position controls.
- **Color** saves RGB, RGBW, RGBWA, CMY, CMYK, matrix RGB, and common fixture-library color channels such as red, green, blue, cyan, magenta, yellow, white, amber, UV, lime, hue, saturation, CCT, CTO, or tint.
- **Dimmer** saves controls labeled as dimmer, dimming, or intensity.
- **Shutter / Strobe** saves shutter, strobe, and flash controls.
- **Gobo** saves gobo wheels and gobo rotation/index controls.
- **Prism** saves prism and prism rotation controls.
- **Optics** saves focus, zoom, iris, frost, beam, diffuser, or lens controls.
- **Programs / Effects** saves program, macro, effect, auto show, chase, pattern, scene, or preset controls.
- **All controls** saves every control on the selected fixtures and should be used deliberately.
- If nothing is selected, the palette is not saved; select fixtures or apply Fan Out first.

When saving a **Gobo** palette, the Controller can fill the palette tile visual from the selected fixture's gobo wheel metadata. If all selected fixtures resolve to the same gobo image or color, that shared visual is used automatically. If selected fixtures use different gobos, the current source fixture supplies the tile visual. If no gobo visual metadata exists, the palette uses the normal default visual.

Palette recall rules:

- Recalling a palette applies only the stored values.
- Unrelated controller values are left unchanged.
- The active group filter is cleared.
- The Control Surface is filtered to the fixtures involved in the palette.
- When a Pico base URL is set, only the recalled palette controls are sent to the Pico.

Filled palette slots recall palettes. Merging is done with the separate **Merge** button so recall and edit actions stay distinct.

Use **Merge** when you have a current fixture selection or active Fan Out result:

- The controller opens a palette matrix picker, so you choose the saved palette tile visually instead of typing a slot number.
- Empty slots are shown for orientation but cannot be selected as merge targets.
- If the current scope matches the saved palette scope, the values are merged and the palette keeps its scope.
- This allows one **Color** palette to contain RGB controls, color wheels, and RGBWA controls from different fixture types while still remaining a Color palette.
- If the current scope differs from the saved palette scope, the controller asks whether to change the saved palette to **All controls** and merge.
- If you cancel a merge prompt, the palette is not changed.

Use **Move** when you want to reorder palette tiles. The same interaction is also available in the Groups and Scenes toolboxes:

- Click **Move** to enable palette move mode.
- Drag a filled palette tile to an empty slot to move it there; the tile shows the same drag outline and insertion marker used for moving toolboxes.
- Drag a filled palette tile onto another filled palette tile to swap their positions.
- On touch screens, tap a filled tile to select it, then tap the destination slot.
- While Move is active, clicking a palette tile does not recall or save it.
- Click **Move** again when you are done organizing the palette grid.



## 2. Scenes And Palettes

## TOOLBOXES

Edit



### Scenes



|         |         |         |             |    |    |
|---------|---------|---------|-------------|----|----|
| Scene 1 | Scene 2 | Scene 3 | Chaser 1... | 5  | 6  |
| Scene 7 | 8       | 9       | Scene 10    | 11 | 12 |
| 13      | 14      | 15      | 16          | 17 | 18 |

### Groups



#### Group Edit

**MAC XENON Backdr...**

6 fixtures

**RGB Spot Backdrop**

12 fixtures

**MAC XENON Front**

4 fixtures

**RGB Spot Front**

8 fixtures

**FAL**

6 fixtures

The Scene Toolbox is available on the Fixture Controller page.

Use scenes to store fixture/control looks. A scene stores controller values by fixture/control key, not a raw 512-channel DMX dump.

The small top-left pencil icon on a filled scene slot opens the same **Edit Tile** modal used by palettes. A scene can be renamed and can have a background color plus an optional drawn/uploaded visual in its slot. The canvas background follows the selected background color, and the brush color is calculated for contrast against it. **Default background** restores the standard slot color, and **No icon** removes the drawn/uploaded image. This name and visual are only labels for finding the scene quickly; scene save and recall still use the stored fixture values.

1. Set your desired fixture values.
2. Click an empty scene slot.
3. Enter a scene name.
4. Click a filled slot once to recall it.
5. Use the small  on a filled slot to delete it.

## Scene Save Rules

Scene saving uses the current working scope:

- If Fan Out is active, the scene saves only the fixtures affected by Fan Out.
- For each Fan Out fixture, the scene saves all controls of that fixture, not only the fanned control. This keeps related values such as Tilt stable when saving a Pan fan.
- If Fan Out is not active and fixtures are selected, the scene saves only the selected fixtures.
- Selected Saved Groups count as selected fixtures, so a group-filtered scene saves only the fixtures in the selected groups.
- If a scene was recalled and the control surface is filtered to that scene's involved fixtures, saving again uses those involved fixtures.
- If nothing is selected, the controller asks before saving all patched fixtures.
- If you cancel that prompt, no scene is saved.

This means a scene is normally scoped to the fixtures you are actually working with. It does not silently save unrelated fixtures unless you explicitly confirm the all-fixtures fallback.

## Scene Recall Rules

Scene recall loads the stored values back into the Fixture Controller, redraws the fixture cards, and updates the live-value snapshot used by the Chaser page.

When a Pico base URL is set, scene recall also sends the recalled DMX values to the Pico in one batch. To work browser-only, clear the Pico base URL before recalling or editing looks.

Recalling a scene clears the active group selection and shared group filter. It then selects the fixtures involved in the recalled scene and filters the Control Surface to only those fixtures. This makes the recalled scene visible without leaving an old group filter active, and without showing unrelated fixtures.

If a saved scene was created before fixtures were repatched, the controller tries to remap old fixture IDs to the current patch by matching the same fixture profile in DMX start-address order. This lets older scenes continue to recall after a fixture run was recreated, as long as the fixture profiles and control IDs still match.

The red **Clear all DMX channels** button clears controller values. When a Pico base URL is set, it also calls `/dmx/clear` on the Pico. This clears both live DMX output and the motion base buffer.

The Scene Toolbox sits in the shared **Toolboxes** sidebar. Its slot grid follows the configured rows and columns, and the tile size expands to the available sidebar width while keeping the old minimum slot size.

### 3. Groups

DMX Fixture Controller v0.9.14

Selected 1 group (0 fixtures found)

Primary Pico URL

http://192.168.0.24/

Find Pico

DMX Outputs

Show

Effects

Chaser

GPIO

Plane

Manual

PicoSpot 20 LED

Fun Generation · 3 modes

Fun Generation · PicoSpot 20 LED

Moving Head, Color Changer

Fixture Information

Authors LordVonAdel, Moritz Weirauch

Created 2019-08-21

Updated 2024-05-07

Dimensions 162 × 242 × 174 mm

Weight 3 kg

Power 35 W

DMX connector 3-pin

Light source 12W white CREE LED

Beam angle 13°

Open Fixture Library

Manual

Product page

Video

Mode

11-channel · 11ch

Import profile

8 converted controls · 11 channels

Pan/Tilt (panTilt16 · Pan 1/3, Tilt 2/4)

Pan/Tilt Speed (slider8 · CH 5)

Color Wheel (wheel · CH 6)

Gobo Wheel (wheel · CH 7)

Dimmer (slider8 · CH 8)

Shutter / Strobe (wheel · CH 9)

Program (wheel · CH 10)

Program Speed (slider8 · CH 11)

Fixture Profiles

+

Patch Fixtures

+

Control Surface

Cols Auto

No fixtures selected Groups: MAC XENON Backdrop

Save Group

Select All

Show all


Selected groups have no patched fixtures in this setup. Show all

Groups let you control multiple fixtures at once.

### Create a Group

1. Select two or more fixture cards.
2. Click **Save Group**.
3. Enter a group name.
4. The group appears in **Saved Groups**.

# Saved Group Selection

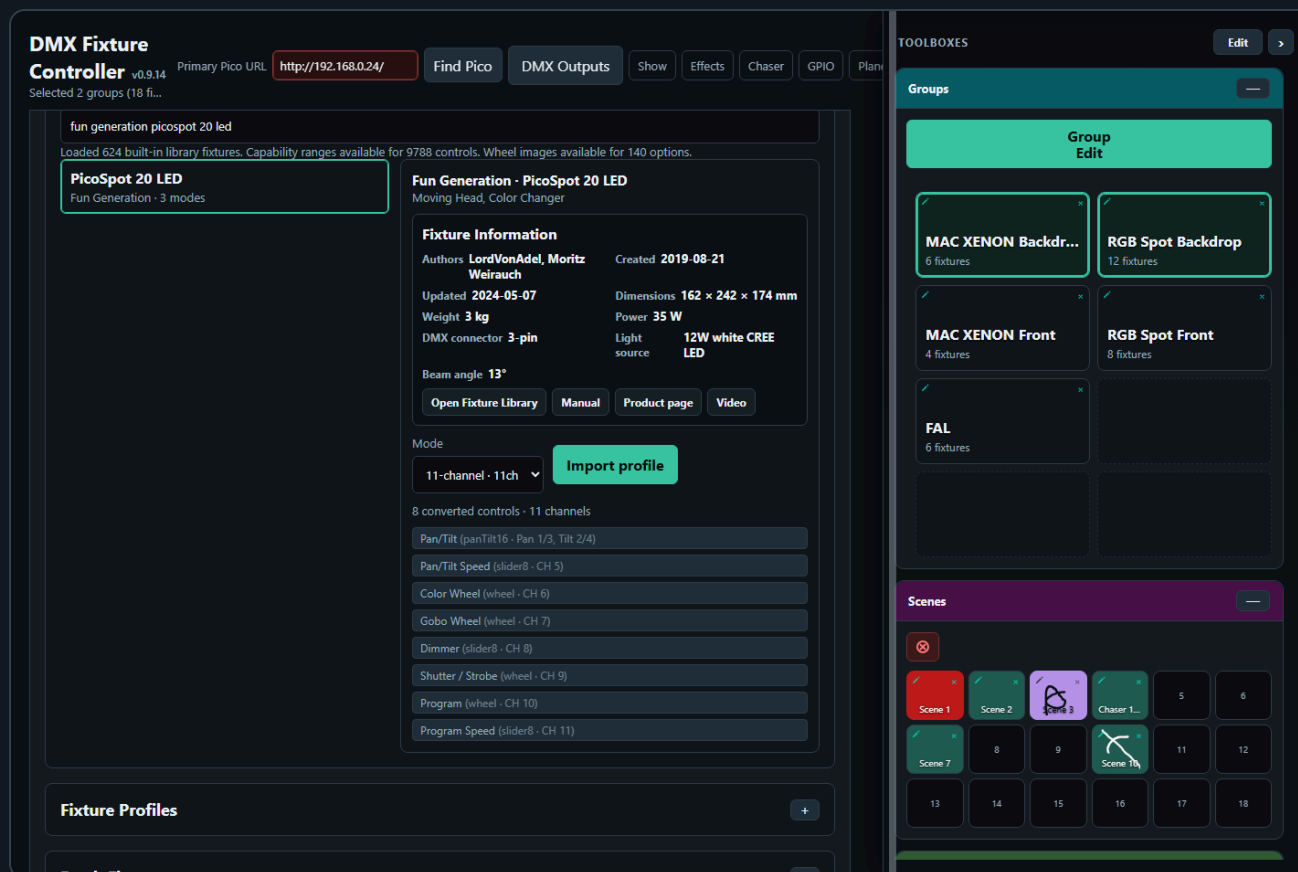

The Saved Groups card shows groups in a compact matrix. Each group has four actions:

- **Select** adds the group to the active group filter.
- **Deselect** removes only that group from the active filter.
- The small pencil on a group tile opens **Edit Tile** for that saved group's name, background color, and optional drawn/uploaded visual.
- The small **x** on a group tile removes that saved group after confirmation.

More than one saved group can be selected at the same time. The control surface shows the union of all fixtures from the selected groups. This makes it possible to work with several fixture groups together without editing the group definitions.

The group bar above the control surface shows how many fixtures are selected and which saved groups are active. Use **Select All** to select every patched fixture explicitly. Use **Deselect all** to clear a manual fixture selection. When a saved-group filter is active, the same button is shown as **Show all** and clears the saved-group filter to return to the full fixture list.

Group selection is shared across toolbox pages that use the Groups toolbox. It is a working filter: selecting groups limits the visible fixtures for controller editing, Fan Out targeting, and Chaser participating-control setup. Recalling a scene, editing a saved chase step, or loading a saved chase clears the group filter because the recalled data itself becomes the source of truth.

## Edit a Group

1. Load a saved group or select multiple fixtures.
2. Click **Group Edit**.
3. Adjust common controls in the modal.

On the Fixture Controller, **Group Edit** lives in the **Groups** toolbox. It requires an explicit fixture selection. If nothing is selected, Group Edit is disabled. Select individual fixture cards, load one or more saved

groups, or press **Select All** before opening Group Edit from the Groups toolbox.

The Group Edit modal shows controls that exist in the current edit scope. It can be used for one fixture or many fixtures where the page supports single-fixture editing. Mixed fixture types are allowed; each control is applied only to fixtures that actually have a matching control, so incompatible fixtures are ignored for that control.

The selected **Source** fixture is the template for the modal values. When you open Group Edit, the modal reads the Source fixture's current matching control values and shows those values in the sliders, wheel buttons, color controls, XY pads, and relative nudge controls. Opening the modal does not overwrite the other selected fixtures and does not send DMX by itself.

The source selection is automatic. Loading a saved group makes the first fixture stored in that group the Source. With manual fixture selection, the clicked/selected fixture becomes the Source; if that fixture is removed from the selection, the page picks the next selected fixture that can provide the control.

The values are applied when you actually edit a control in the modal. Moving a slider, typing a direct numeric DMX value, dragging an XY pad, choosing a wheel slot, changing a color, pressing Center, using relative nudges, or using Default/Blackout writes the change to every selected fixture that has the matching control. Absolute edits write the shown Source value to the matching fixtures. Relative nudges keep each selected fixture relative to its own current value, so a group pan/tilt nudge moves the selected fixtures together without forcing them all to the same absolute position. When a Pico base URL is set, each Group Edit change is sent to the Pico immediately. To use Group Edit browser-only, clear the Pico base URL first.

Group Edit remembers the relative step-size fields you set, for example **Pan fine relative** or **Tilt fine relative**. Controller, Show Run, Chaser, Effects, and Room Plane use the same autosave behavior. Each page stores its own step sizes in the XAMPP server UI-state file and restores them the next time Group Edit or the page opens, so your preferred nudge sizes survive reloads without forcing every workflow to use the same values.

If the controller is currently scoped by a recalled scene, recalled palette, or Fan Out result, **Group Edit** uses that scope. In that case it shows only controls that are part of the active scope and exist in the selected fixture scope. Editing a scoped control writes only to matching fixtures.

Use **Default** or **Blackout** to recall the stored default or blackout values for every fixture in the selected group.

## Group Edit Contract

Controller, Chaser, and Effects all use the same basic Group Edit idea: the modal is available when the current page scope contains at least one editable control. Controller and Effects can use the same modal for a single fixture or a group of fixtures; Chaser uses the current participating-control scope for step editing. The fixtures do not need to use the same fixture profile.

Keep these rules as the contract:

- Mixed fixture types are allowed.
- A control is editable only when the page can match it by control identity, such as type and label.
- Wheel / indexed controls are stricter: same-named wheels are kept separate when their option lists differ, so a MAC Gobo wheel and a Scanner Gobo wheel are not accidentally edited as one control.
- The modal shows the matching fixture/profile scope for each control.
- Opening the modal reads the Source fixture values into the modal but does not apply or send anything yet.
- Editing a control writes only to fixtures that actually have the matching control.

- The first edit in the modal is the moment the value is written to the group; on pages with live output, that edit is also sent to the Pico when a Pico base URL is set.
- Incompatible fixtures remain selected but are ignored for that specific control.
- Group selection is a filter. If groups are selected, Group Edit uses only compatible fixtures inside those groups.
- Direct scope changes, such as Select All, Participating Controls All, or Effects All, clear the saved-group filter and make the page scope the source of truth.

## 4. Show Run

The **Show Run** page is the operator page. Use it when the show has already been prepared on the Fixture Controller, Chaser, and Effects pages and you want fewer editing controls on screen.

The **Show Run** interface (v0.9.12) features a sticky header with the Pico base URL (<http://192.168.0.24/>) and navigation buttons: Find Pico, Controller, Show, Chaser, Effects, GPIO, Plane, Manual, Full Screen, and Edit.

The main content area is divided into several panels:

- Master:** Global show actions and dimmer masters. Includes buttons for Refresh Show Data, Stop All Playback, and Show All Fixtures. It features two dimmer sliders: Grand Master (set to 85%) and Group Master 1 (set to 75%), both with Blackout buttons.
- Groups:** Select one or more groups to limit scene, palette, and blackout recalls. Includes a Group Edit button and a summary: All Fixtures - 2 fixture(s).
- Fixtures:** Select individual fixtures to limit scene, palette, and blackout recalls without creating a group. Includes a summary: No individual fixtures selected.
- Scenes:** Recall full looks from the saved scene toolbox. 2 saved. Includes Warm Look and Blue Solo buttons.
- Palettes:** Recall saved position, color, beam, dimmer, and effect palettes. 2 saved. Includes Red Beam (Color) and Open Gobo (Gobo) buttons.
- Planes:** Recall calibrated room planes and move selected fixtures live in the virtual room. 2 saved. Includes Front stage plane (2 fixtures - 2 target matches) and Back wall plane (1 fixture - 1 target match) buttons.
- Pico Chaser Playback:** Start saved Pico chaser slots directly from the show page. Includes Stop Chaser button.
- Pico Effects Playback:** Start saved Pico effect slots directly from the show page. Includes Stop Effects button.
- Live Controls:** Operator faders, knobs, and buttons mapped directly to fixture controls.

Open it from the **Show** navigation link or directly:

[http://localhost/dmx/dmx\\_show.html](http://localhost/dmx/dmx_show.html)

On supported PC and iPad browsers, use **Full Screen** in the sticky header to give the operator controls the maximum available screen area. The same button changes to **Exit Full Screen** while active. Browsers require this action to start from a direct click or tap. The button is hidden when the browser does not provide a page fullscreen API; you can still use an installed Home Screen web app or the browser's own display controls in that case.

### Run Show Run as an iPad web app

The iPad Fullscreen API displays a system message and allows a downward swipe to exit fullscreen. For show operation without that fullscreen prompt, install the Show Run page on the iPad Home Screen and open it as a web app:

1. Open **Safari** on the iPad and load the Show Run page, for example `http://192.168.0.12/dmx/dmx_show.html`.
2. Tap **Share**, tap **More** if necessary, then tap **Add to Home Screen**.
3. Enable **Open as Web App**.
4. Tap **Add**.
5. Return to the Home Screen and open Show Run using the new icon instead of opening it from a Safari tab.

The Home Screen version uses an app-like window without Safari's normal toolbar. Do not tap the page's **Full Screen** button in this mode; the installed web-app window is the intended iPad display mode and does not need the browser Fullscreen API.

If you prefer the Home Screen app to open on the Fixture Controller, open `http://192.168.0.12/dmx/` before using **Add to Home Screen**. The installed app is named **DMX Controller** and uses the blue XAMPP icon; open **Show** from its navigation when you are ready to operate the show. If an older Home Screen icon still says **DMX Fixture Controller Prototype** or shows a page-preview tile, remove that icon and add the Controller page again so iPadOS reads the new name and icon metadata.

To prevent an operator from accidentally leaving the Show Run web app, you can additionally use iPad **Guided Access**:

1. Open **Settings > Accessibility > Guided Access**, turn it on, and configure **Passcode Settings**.
2. Open Show Run from its Home Screen icon.
3. Triple-click the iPad top button, or the Home button on an older iPad, and select **Guided Access** if the accessibility menu appears.
4. Review the session settings and tap **Start**.
5. To leave later, triple-click the same button, authenticate with the Guided Access passcode, Face ID, or Touch ID, then tap **End**.

Show Run loads the current XAMPP show data:

- Fixture profiles and patched fixtures from `fixture_setup.php`
- Saved groups from `group_setup.php`
- Saved scenes from `scene_setup.php`
- Saved palettes from `palette_setup.php`
- Saved room planes from `room_plane_setup.php`
- Mirrored Pico chaser slots from `chaser_setup.php?slots`
- Mirrored Pico effect slots from `motion_setup.php?slots`
- Current live values from `fixture_setup.php?livevalues`

Show Run automatically refreshes this show data when the page becomes active again, for example after switching back from the Controller, Chaser, or Effects page. This keeps the operator page current without needing to reload the browser tab. Automatic refresh is skipped while **Edit** is active so card moves, tile moves, Live Controls edits, and MIDI mapping edits are not overwritten. Use **Refresh Show Data** only when you want to force the same reload manually.

## Master Card

The **Master** card contains the global operator actions and dimmer masters. **Refresh Show Data** reloads the current XAMPP show files manually. **Stop All Playback** stops Pico chaser and effect playback. **Show All Fixtures** clears the current group and fixture target filter.



The **Grand Master** is a vertical fader. It does not overwrite stored live values; it multiplies dimmer output by a 0..1 factor, including 16-bit dimmer controls. **Blackout** below the Grand Master sets the Grand Master fader to **0%** and sends the scaled dimmer output immediately. **Group Master** faders work the same way, but only for fixtures assigned to that group master. The **Blackout** button below each Group Master sets only that Group Master to **0%**. When a master is below **100%**, Show Run also locks the affected dimmer channels on the Pico so running Pico chaser/effect playback cannot overwrite the master-limited dimmer output.

To assign a Group Master, first select one or more groups or fixtures, click **Edit**, then click **Assign** on the desired group master fader. **Add Group Master**, **Assign**, **Clear**, and the small tile  for deleting a Group Master are only available while **Edit** is active. Deleting a Group Master removes that fader and saves the updated master layout to server UI state. The **Grand Master** is protected and never has a delete . The Grand Master factor and Group Master assignments are saved to server UI state and restored on page load. The pencil at the upper-left of the Grand Master or a Group Master opens its MIDI mapping editor; use **Learn** and move a hardware fader or knob to assign it.

Refresh Show Data

Stop All Playback

Show All Fixtures

## Grand Master

Full



85%

All dimmers

Blackout

## Group Master 1

Full



75%

2 fixtures · Front Spot 1, Front Spot 2

Blackout

## Groups Card

The **Groups** card contains the saved groups from the Controller page. Select one or more groups when you want scene, palette, or Group Master assignment to affect only those fixtures. Selecting a group also highlights the fixtures stored inside that group in the **Fixtures** card, so you can immediately see what the group contains. With no group or fixture selected, Show Run uses all fixtures.


Group selection is an operator filter only. It does not edit the saved group definitions and it does not save setup data.

While **Edit** is active, the pencil on a saved group tile also includes its MIDI mapping. A mapped hardware button selects or deselects that group through the same path as clicking the tile.

The **Group Edit** button opens a Controller-style Group Edit modal for the current Show target. The modal shows matching controls from the selected group or fixture target and sends live-value changes through

the same Show Run output path as the other operator controls. Use it for quick grouped dimmer, color, wheel, or pan/tilt adjustments from the run page without opening the full Controller.


Relative nudge step sizes in this modal are autosaved to the Show Run UI state on the XAMPP server. Separate Pan/Tilt coarse and fine values are restored when the modal or page is reopened and remain independent from the step sizes used on the setup and playback-editing pages.

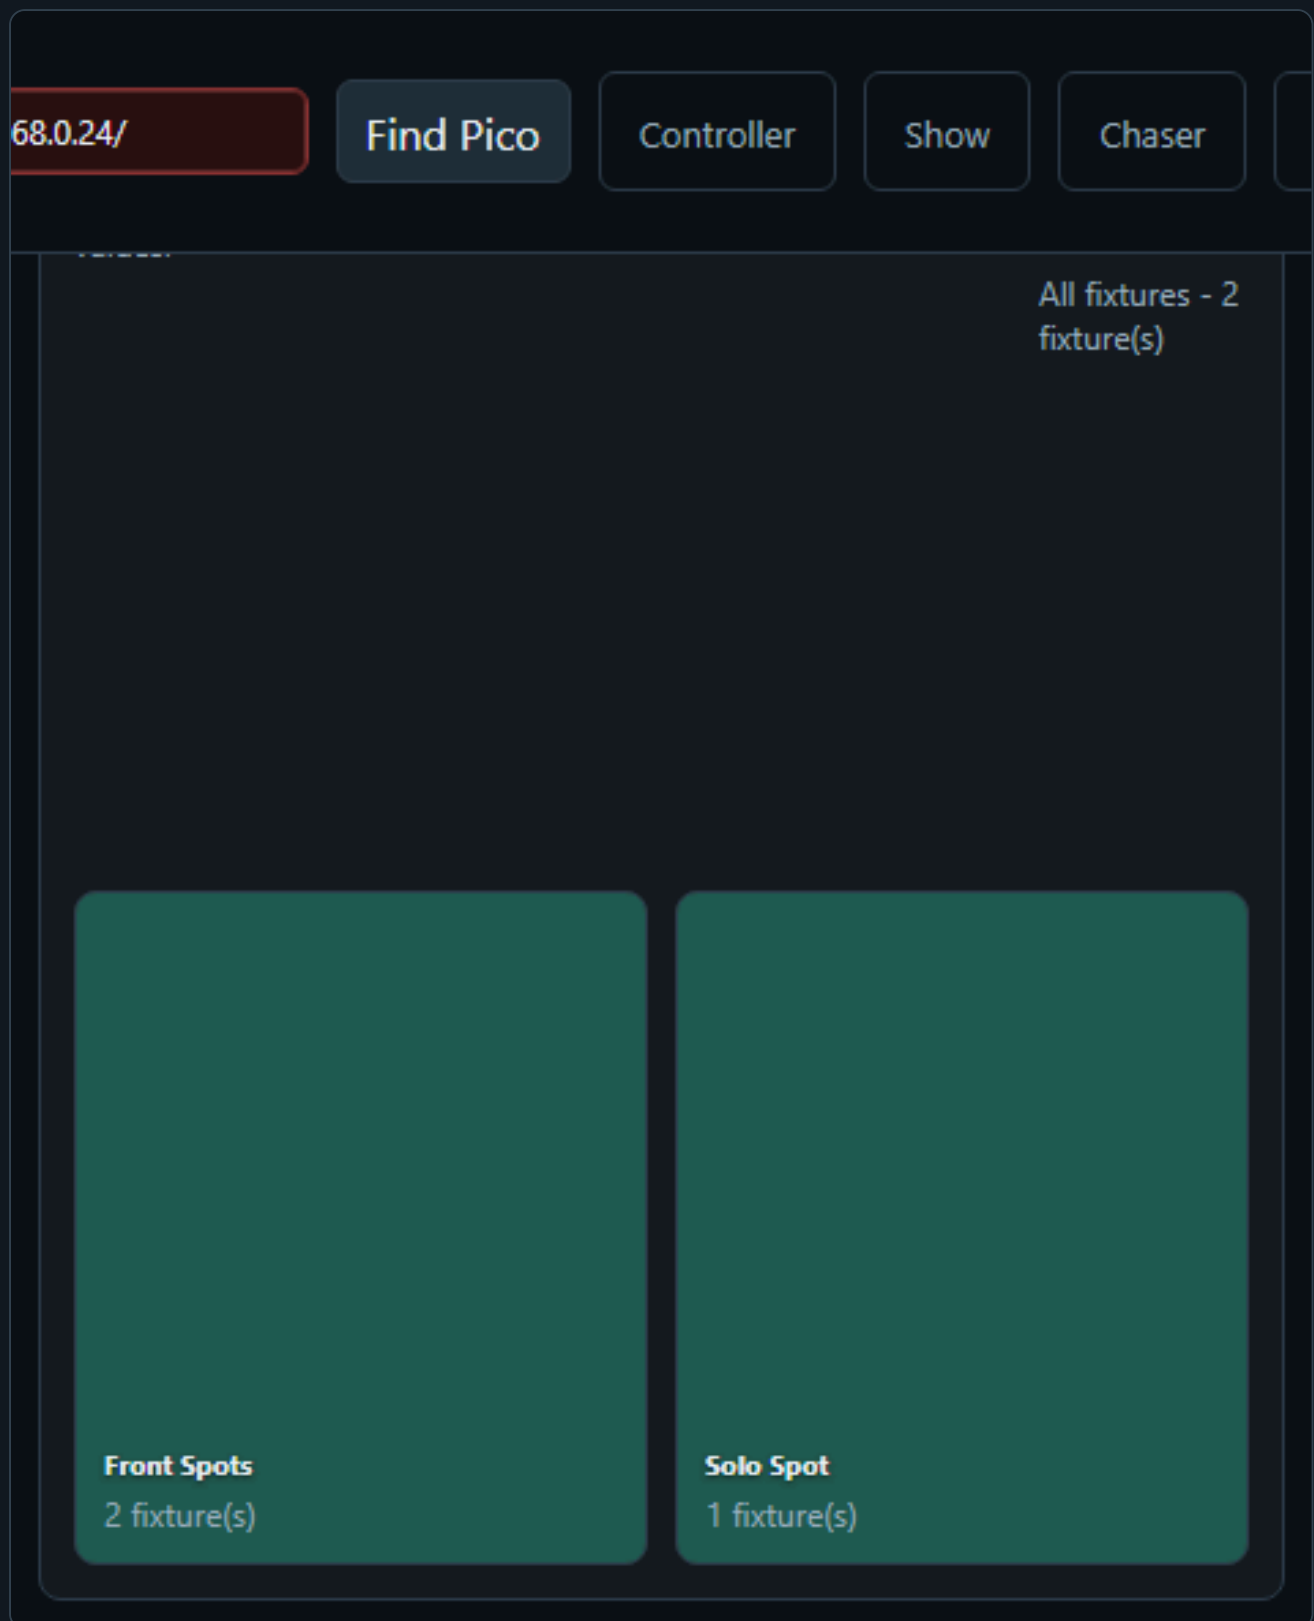

## Fixtures Card

The **Fixtures** card lets you target individual fixtures without creating a saved group. Click a fixture tile to select or deselect it. When a group is selected, its member fixtures are mirrored here; when you change the fixture selection manually, the group selection is cleared and the current show target becomes the explicitly selected fixtures.

Use this when a scene, palette, or Group Master should apply to one fixture or a temporary hand-picked set. If you manually select or deselect a fixture here, the active group selection is cleared because the target is now an explicit fixture selection.

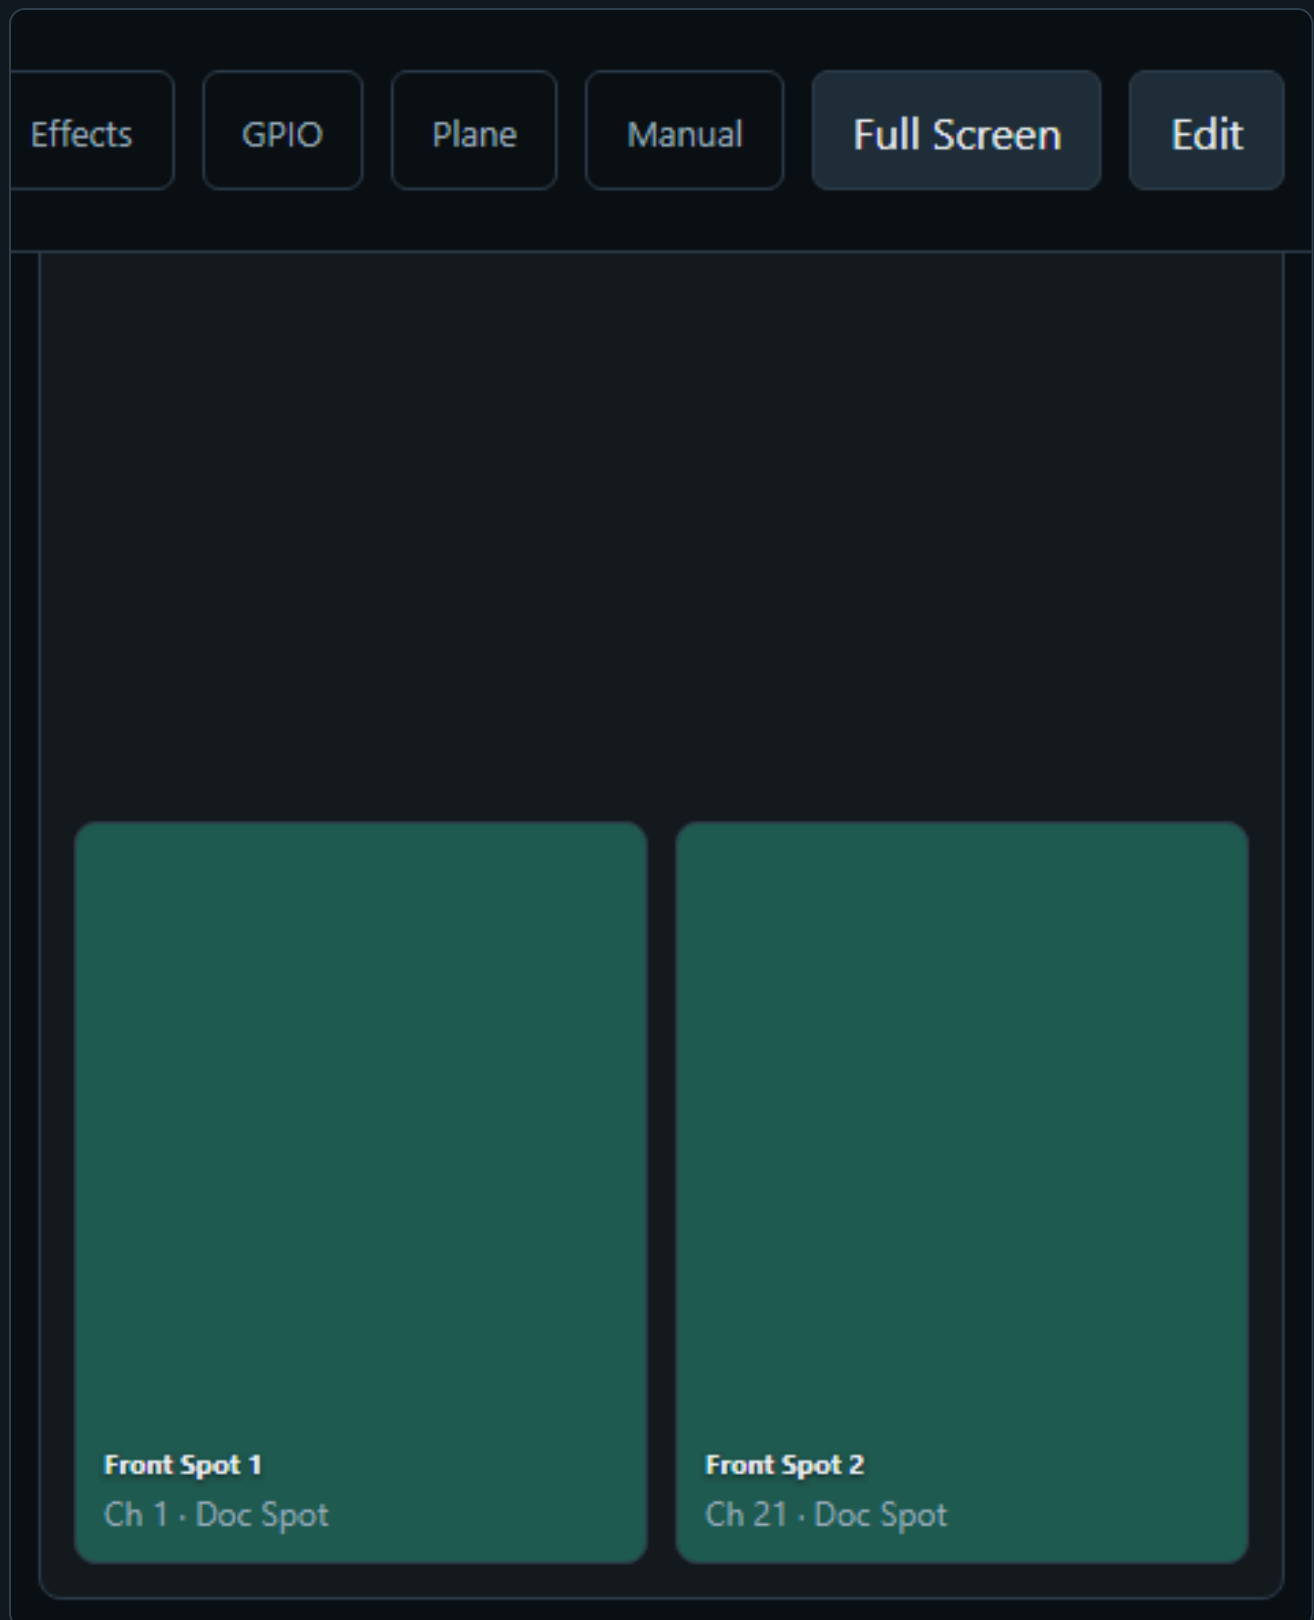

## Scenes Card

The **Scenes** card recalls saved scene tiles from the Controller page. Click a scene tile to recall that scene to the current target. Show Run writes the recalled values to the live-value snapshot and sends the matching DMX channels to the Pico in one `/dmx/b` batch when a Pico base URL is set.

While **Edit** is active, click the scene pencil, click **Learn** in the MIDI Mapping section, and press a hardware button. Pressing that button later recalls the scene.

# Show Run v0.9.12

Show Run demo ready

Pico base URL <http://192.16>

Warm Look

Blue Solo

## Palettes Card

The **Palettes** card recalls saved position, color, beam, dimmer, and effect palettes. If a group or fixture target is active, only stored values for the targeted fixtures are recalled. This lets one saved palette be reused for different parts of the rig.

Palette pencils expose the same MIDI Learn section while **Edit** is active. A mapped hardware button applies the palette to the current Show target.

68.0.24/

Find Pico

Controller

Show

Chaser

Red Beam  
Color

Open Gobo  
Gobo

## Planes Card

The **Planes** card recalls saved room planes from the Plane page. Click a plane tile to open a virtual room modal without leaving Show Run.

The modal uses the current Show target. Select Groups or Fixtures first when only part of the rig should move; with no target selected, Show Run targets all fixtures that match the recalled plane. Drag or click the red target point, use the X/Y coarse and fine nudge buttons, or use zoom and pan view controls to frame the room. The modal sends calibrated pan/tilt values live to the Pico and updates the shared live-value snapshot so the Controller, Chaser, and Effects pages can see the new position. Recalling a plane from Show Run does not edit the saved plane definition.

Effects

GPIO

Plane

Manual

Full Screen

Edit

**Front stage plane**  
 2 fixtures - 2 target matches

**Back wall plane**  
 1 fixture - 1 target match

Recall Plane: Front stage plane

Zoom in

Zoom out

Reset view

Pan view

Target nudge

-

X coarse

0.5

+

-

X fine

0.05

+

-

Y coarse

0.5

+

-

Y fine

0.05

+

Target X 2.800 / Y 1.500 - selected 2 fixtures - weights A 0.158 / B 0.467 / C 0.375

Front Spot 1

Front Spot 2

Close

## Pico Playback Cards

The **Pico Chaser Playback** card shows chaser slots uploaded from the Chaser page and mirrored to XAMPP. It also reads live Pico slot state, so a slot that is loaded on the Pico can still appear even when the XAMPP mirror is empty. Use the card controls to choose a slot, set speed, play, pause/resume, set speed, or stop.

In **Edit** mode, each loaded chaser tile has a pencil that opens its MIDI mapping editor. Choose the button's **Playback action** before learning it: start/stop toggle, start, stop, pause/resume toggle, pause, or

resume.

Edit MIDI - Pico Chaser: Dimmer Chase

MIDI Mapping

Mapped

Pico Chaser: Dimmer Chase

Note 73 · Channel 1 · Launch Control XL Emulator · Pause / Resume toggle

Playback action

Pause / Resume toggle

Learn

Clear mapping

Press the hardware button that should run the selected playback action.

Close

Show Run v0.9.12

Pico base URL http://192.16

Show Run demo ready

| Slot      | Speed | Mode      | Direction |
|-----------|-------|-----------|-----------|
| 1         | 1.0   | Loop      | Forward   |
| Play Slot | Pause | Set Speed | Stop Slot |

Pico slots:

Dimmer Chase

3 steps · mirrored

Stop

Pause

Tile 2

Empty

The **Pico Effects Playback** card shows effect slots uploaded from the Effects page. Choose a slot, set **BPM**, then start, set BPM, or stop the slot. Starting a mirrored slot reloads its payload before running it; starting a live-only Pico slot starts the already-loaded Pico slot without overwriting it.

Loaded effect tiles have the same MIDI edit pencil and playback-action choices, including dedicated pause and resume buttons or one pause/resume toggle.

68.0.24/

Find Pico

Controller

Show

Chaser

Slot

BPM

0

30

Start Slot

Pause

Set BPM

Stop Slot

Pico slots:

Circle Pan/Tilt

30 BPM · mirrored

Start

Tile 2

Empty

## MIDI Controller Card

The **MIDI Controller** card has two independent inputs:

- **Computer USB MIDI** connects a class-compliant controller, such as the Novation Launch Control XL, to Chrome or Edge on the XAMPP computer. Click **Connect MIDI**, allow browser MIDI access, and select the input and optional output ports. The page prefers a connected Launch Control XL automatically when available.
- **Pico UART diagnostics** keeps the original read-only Pico GPIO5/UART1 monitor. It shows the UART/baud configuration, byte and message counters, parse errors, and last decoded event. This Pico input is not used by the new Show mappings.

Click **Open MIDI Emulator** to test without the physical controller. It opens `dmx_midi_emulator.html` in a separate tab with 24 knobs, 8 faders, 16 channel buttons, and 8 utility buttons. The controls show the CC or note number they send. Keep Show Run and the emulator on the same XAMPP address; the connection indicators turn green when both tabs can see each other.





To learn with the emulator, enter **Edit** on Show Run, open a supported pencil, click **Learn**, switch to the emulator tab, and operate the desired control. Switch back to Show Run and click **Done**, then operate the emulator control again to test the mapped action. The emulator uses a same-origin browser channel and does not install or emulate a Windows MIDI device. Mappings learned from it are treated as Launch Control XL-family mappings so they can also match the physical controller later.

Open Show Run through `http://localhost/dmx/` on the XAMPP computer. Web MIDI requires a supported browser and a secure context; localhost qualifies for this local workflow. The browser asks for hardware MIDI access only after **Connect MIDI** is clicked. The emulator does not need Web MIDI permission.

MIDI mappings are edited only while **Edit** is active. Use the pencil on a supported tile or control, choose a playback action when editing a Pico Chaser or Effects tile, click **Learn**, then move a knob/fader or press a button. The first version supports Groups, Scenes, Palettes, Pico Chaser Playback, Pico Effects Playback, Grand Master, Group Masters, and Live Controls. Other Show cards remain unmapped until their desired behaviour is defined.

For Group, Scene, and Palette tiles, the MIDI Mapping section is part of the normal **Edit Tile** modal. The mapping summary shows the learned message type, number, channel, and device. **Clear mapping** removes only the MIDI assignment; it does not delete or change the tile.

Edit Tile

X

Target

scene 1: Warm Look

Name

Warm Look

Background color

Default background

Upload visual

Choose file

No file chosen

No icon

Choose a background color, then draw or upload an optional visual on top.

Choose a name, background color, and optional drawing/upload for this Show Run tile. The stored show data remains the same except for tile label/visuals.

MIDI Mapping

Mapped

Scene: Warm Look

Note 41 · Channel 1 · Launch Control XL Emulator

Learn

Clear mapping

Press the hardware button that should trigger this action.

Save tile

Close

Button mappings trigger on the press edge, so the release message does not repeat the action. Faders and knobs scale MIDI `0..127` to the complete target range. **Soft takeover** is enabled by default: if the physical control and Show value differ, output waits until the physical control reaches or crosses the current value. Continuous messages are coalesced before they use the normal Show/Pico output path.

## Edit MIDI - Live Control: Dimmer

X

### MIDI Mapping

Mapped

Live Control: Dimmer

CC 77 · Channel 1 · Launch Control XL Emulator

☒ Soft takeover

Learn

Clear mapping

Move a knob or fader. Values are scaled from MIDI 0–127.

Close

Mappings are stored with the server-side Show Run UI state and are included in setup export/import. The USB connection and selected computer ports are local to the browser; reconnect after opening a new browser session.

## MIDI Controller

Connect a USB MIDI controller to this computer and monitor the Pico UART MIDI input.

Waiting

Check MIDI

### Computer USB MIDI

Use Chrome or Edge on this XAMPP computer. MIDI access starts only after you click Connect.

Input

No input selected



Output

No output selected



Connect MIDI

Disconnect

Open MIDI Emulator

Not connected.

Emulator not detected. Open it in another tab to test MIDI Learn.

### Pico UART diagnostics

Hardware

-

Bytes

0

Messages

0

Parse errors

0

Last MIDI event


**No event yet**

Move a MIDI fader, knob, or button to verify the input wiring.


# Layout Editing

The sticky title bar has **Edit** on the right. Layout and MIDI mapping tools are hidden during normal operation. Click **Edit** to configure the Show page, then click **Done** to return to the cleaner operator view.

In layout edit mode, the top of Show Run has a page-level card matrix. Use **Card cols** and **Card rows** to choose how many operator cards fit in the page grid. Empty card positions show a **+** tile; click it to open **Add Card**, choose the card type, then add it at that matrix position. If the matrix is full, Show Run still shows one extra **+** tile at the next position so another card can be added. After a card is added, Show Run reports the matrix position where it was placed. Every card type can be added more than once, so you can keep separate palette, scene, playback, or Live Controls cards with different tile layouts. Each card has a small top-right **x** while layout editing is active. That **x** removes the card from the Show Run page only; it does not delete the saved scenes, palettes, groups, chases, effects, or fixture data behind it.

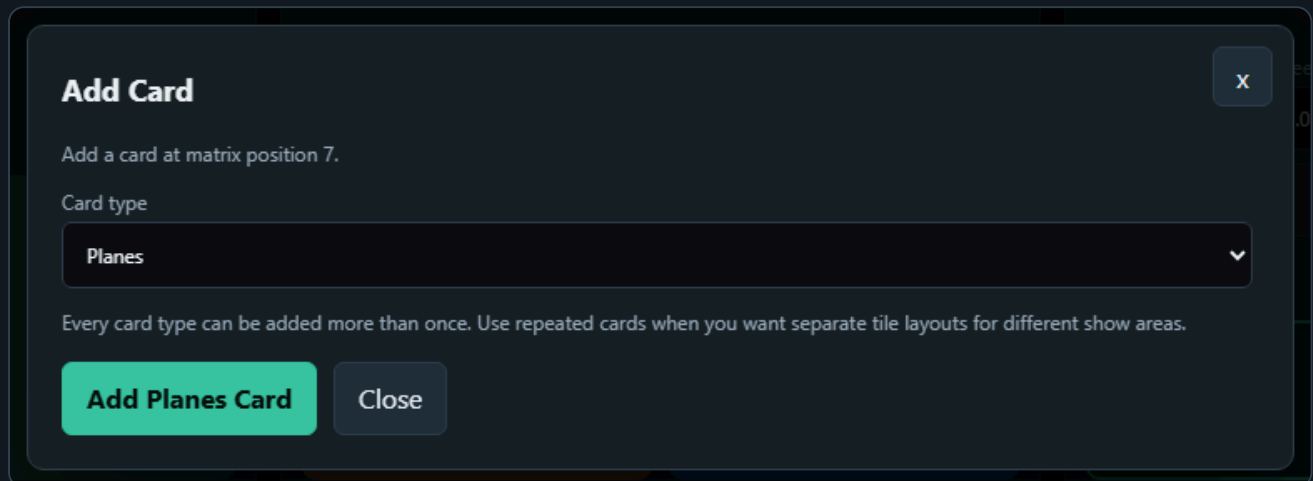


Drag a card by its title/header area to arrange whole cards, for example moving **Palettes** to the top-left and **Pico Effects Playback** to the top-right. Dragging a card to an empty matrix spot places it there and leaves the other card positions unchanged. Dragging a card onto another card swaps only those two cards. The card body remains available for tile editing and other configuration controls while **Edit** is active.

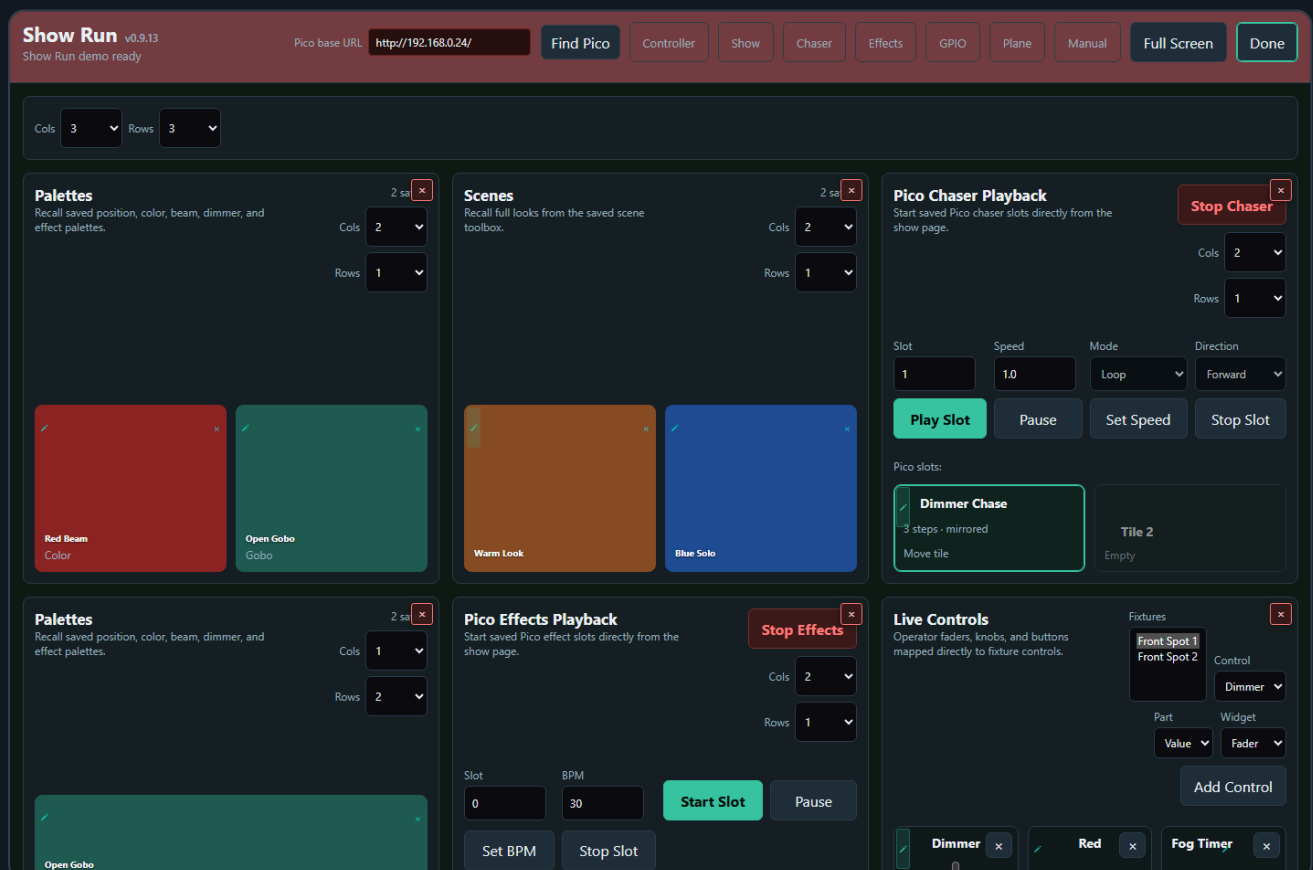

Each tile section on Show Run has native **Cols** and **Rows** dropdowns like the toolboxes, including the overall card matrix and any repeated cards. Tap a dropdown to use the native iPad picker. These controls shape the operator page layout for groups, fixtures, scenes, palettes, planes, Pico chaser slots, and Pico effect slots. While **Edit** is active, tile move mode is active automatically: drag a filled tile to another position, or on touch screens tap the filled tile and then tap the destination tile. Show Run saves card layout, tile layout, Live Controls configuration, and MIDI mappings to the XAMPP server UI state, so the same operator page is restored on another computer and included in **Export Show** / **Import Show**. The layout does not rewrite the saved toolbox setup itself.

If saved groups, scenes, palettes, planes, or loaded Pico playback slots are outside the visible matrix, Show Run opens **Hidden Show Items** and switches into **Edit**. Use **Expand** to increase that section's rows/columns until the hidden item is visible, or use **Place in Free Tile** when an empty visible tile is available. This prevents newly created palettes/scenes/planes or moved playback slots from being silently hidden on a row that is not currently displayed.



While **Edit** is active, saved group, scene, and palette tiles also show the small pencil and  actions. The pencil opens **Edit Tile**, where the tile name, background color, uploaded icon, or drawn icon can be changed and where the tile's MIDI mapping can be learned or cleared. These visual edits change the shared saved tile, so the updated name/color/icon appears on the setup page and in every Show Run card that uses that item. The small tile  only removes that item from the current Show Run card position. It does not delete the saved group, scene, or palette from the XAMPP setup files, and it does not remove that same item from another repeated Show Run card.

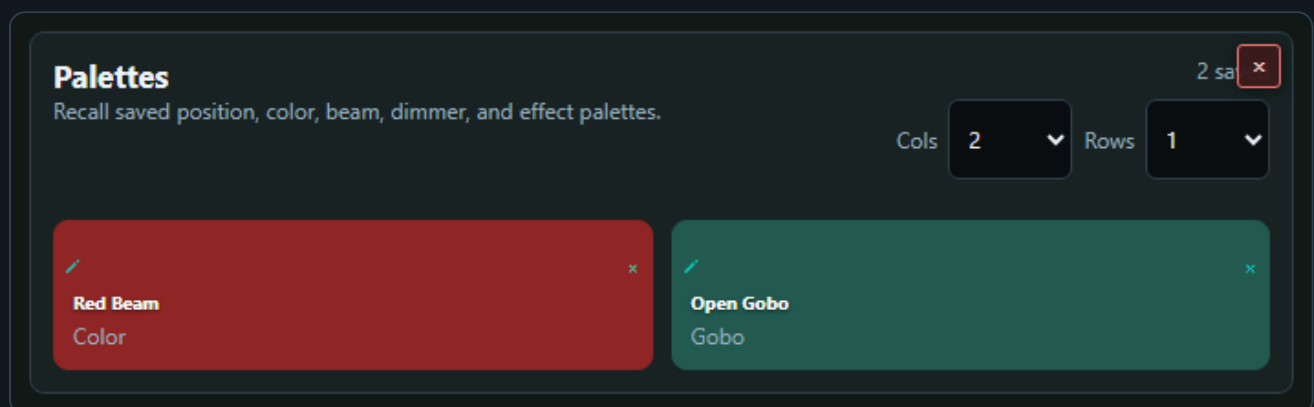


Pico chaser/effect playback tiles use the same tile move behavior during editing. Their playback buttons are replaced by **Move tile** while **Edit** is active, so a show cannot accidentally start or stop playback while you are arranging the operator page. Their upper-left pencil opens the MIDI mapping editor.

## Live Controls


The **Live Controls** card can hold operator faders, knobs, and buttons that write directly to fixture controls without opening the full Controller page. Click **Edit**, choose a patched fixture, control, control part, and widget type, then click **Add Control**. The setup controls are hidden when **Done** is active so the operator page keeps more space for the actual controls. Multiple Live Controls cards can be used to separate faders, buttons, and mixed show controls. Faders and knobs send their value while they are moved. Compound controls are split into clear parts such as Pan, Tilt, Red, Green, Blue, White, or Amber. These widgets update the live-value snapshot and send the matching DMX bytes to the Pico when a Pico base URL is set. Use the upper-left pencil on a Live Control to learn or clear its MIDI mapping.

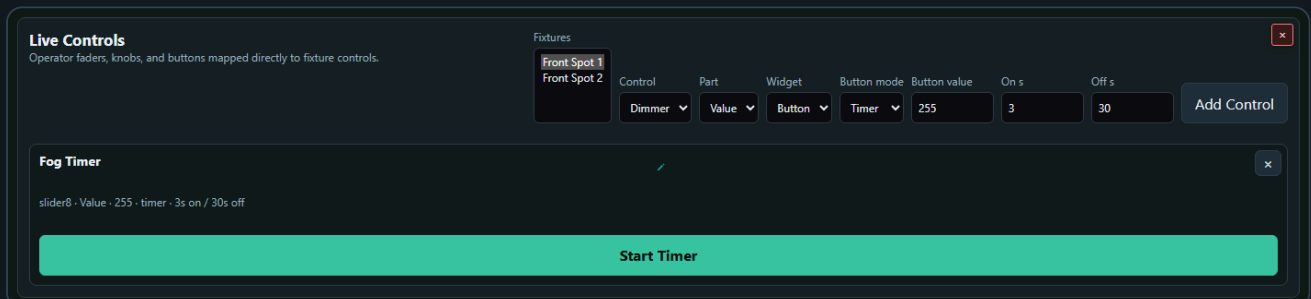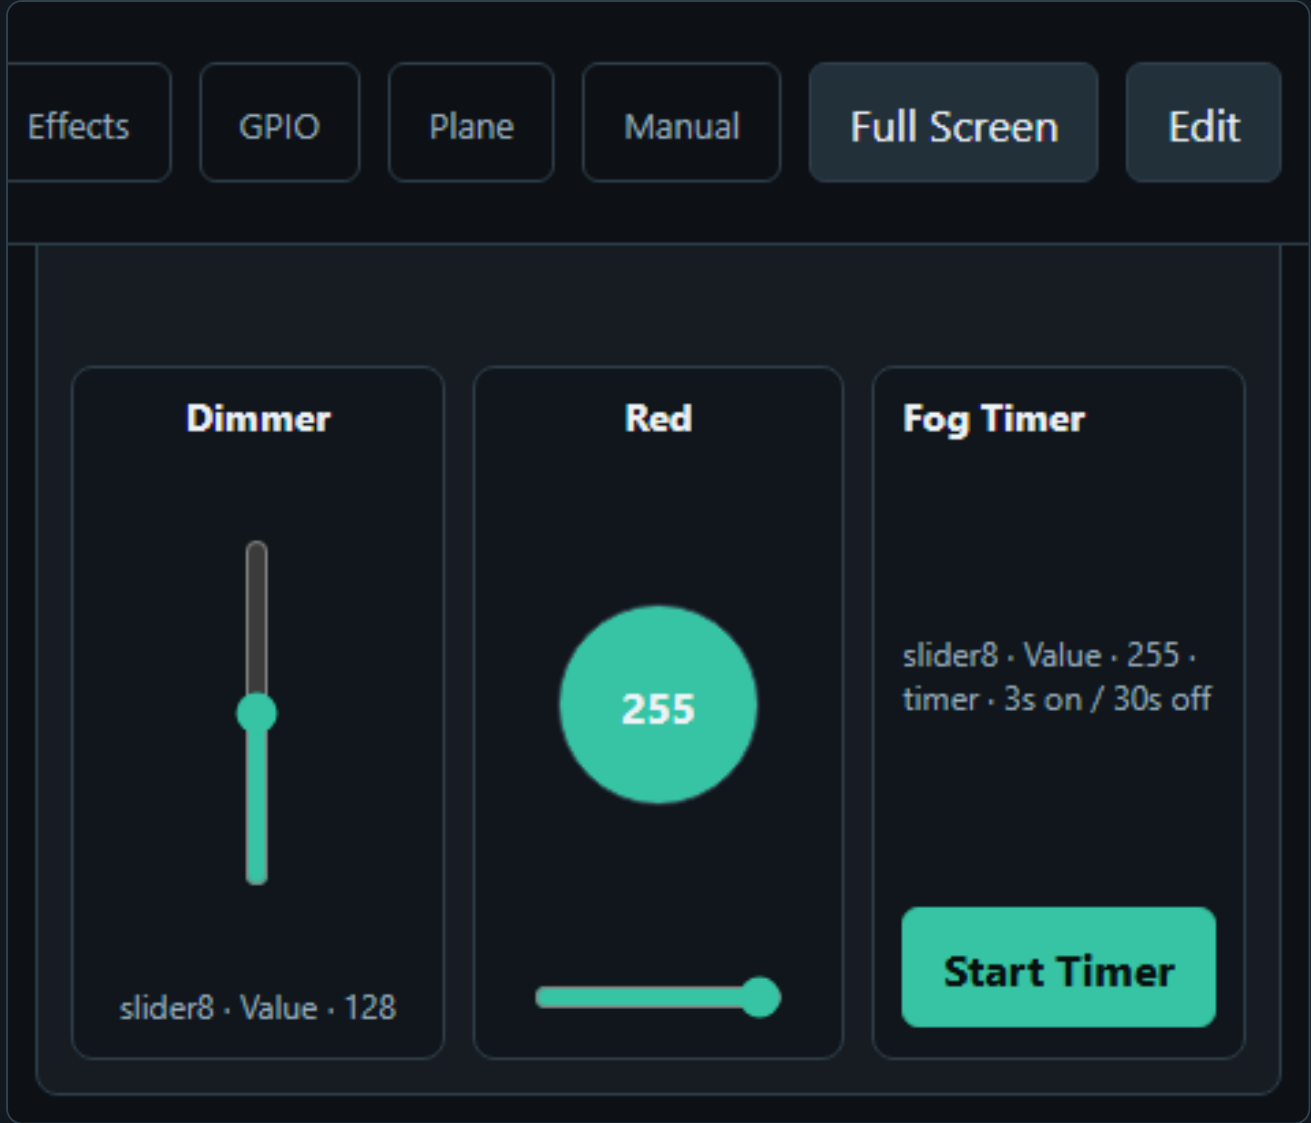

To create a momentary button, set **Widget** to **Button**, set **Button mode** to **Hold**, choose the value to send, then click **Add Control**. **Hold** sends the configured value only while the button is pressed. When the button is released, Show Run restores the value that was active before the press.

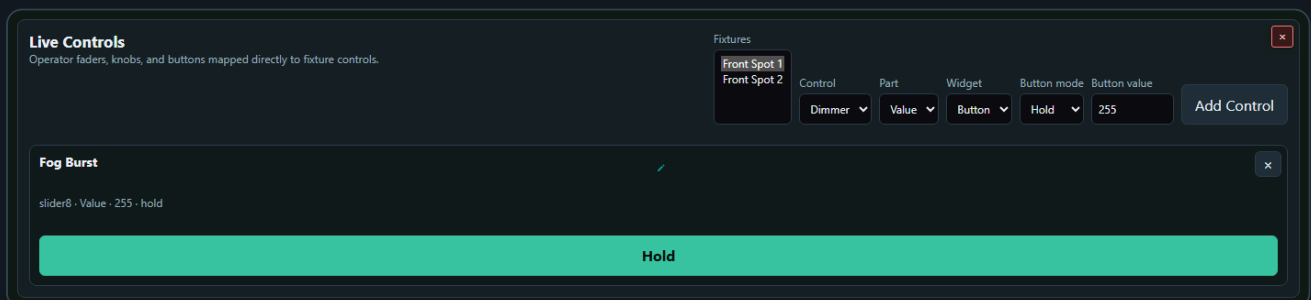

To create a fog or haze timer, set **Widget** to **Button**, set **Button mode** to **Timer**, choose the output value, then set **On s** and **Off s**. The timer sends the configured value for the On time, restores the previous/off value for the Off time, and repeats until stopped. While it is running, the widget shows the current On/Off phase, remaining seconds, and a progress bar similar to the Chaser timing display. Stopping or deleting a timer button restores the previous value.

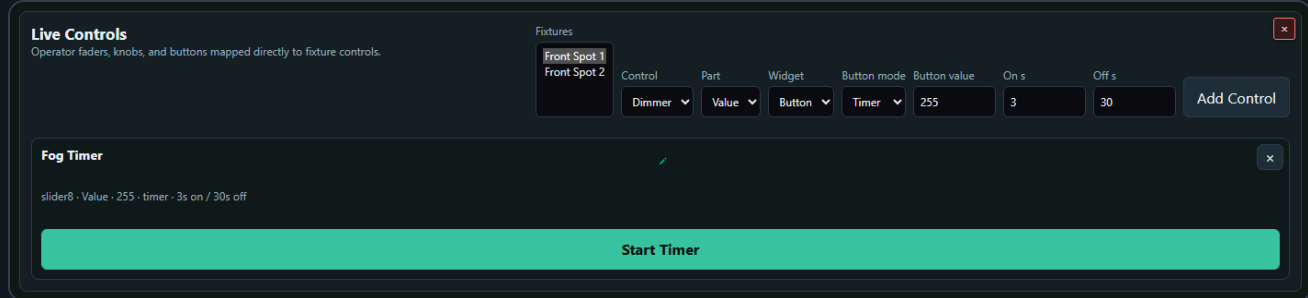

Use **Apply** mode for one-shot commands that should send the configured value once and stay there.

Live Control card configuration is stored with the server-side Show Run preferences. Use the small **x** on a live widget while **Edit** is active to remove it from the operator page.

## Output Behavior

Scene, palette, Live Control, Grand Master, and Group Master output all use the same current target rules. Selected Groups and Fixtures define the target. With no selection, all fixtures are targeted.


Show Run blackout is handled by the master faders. Click **Full** above a master fader to set that master to **100%**. Click **Blackout** below the Grand Master to set the Grand Master to **0%** for all dimmers. Click **Blackout** below a Group Master to set only that Group Master to **0%**. These buttons use the same master output path as moving the fader manually, so they do not overwrite stored live values. When any Grand Master or Group Master factor is below **100%**, Show Run sends affected dimmer channels to the Pico output-scaling endpoint as `channel1:scale` factors. The Pico keeps chaser and effect playback writing their normal raw values, then scales the transmitted DMX output, so a running dimmer sine effect remains visible but follows the Grand/Group Master level. When you enter Show Run, saved Grand Master and Group Master factors are restored to the Pico scaling layer. When you leave Show Run, the page clears the Pico master scale and restores dimmer output to the underlying live values without those multipliers, so setup pages do not inherit the temporary show-level dimming.

The global **Stop All Playback** button calls both Pico stop endpoints.

Show Run is intentionally read-mostly during normal operation. Outside **Edit** it does not create scenes, edit palettes, change fixture profiles, or overwrite the show setup files. In **Edit**, card placement, tile placement, Live Controls, MIDI mappings, and tile label/visual edits are saved intentionally.



## 5. Chaser

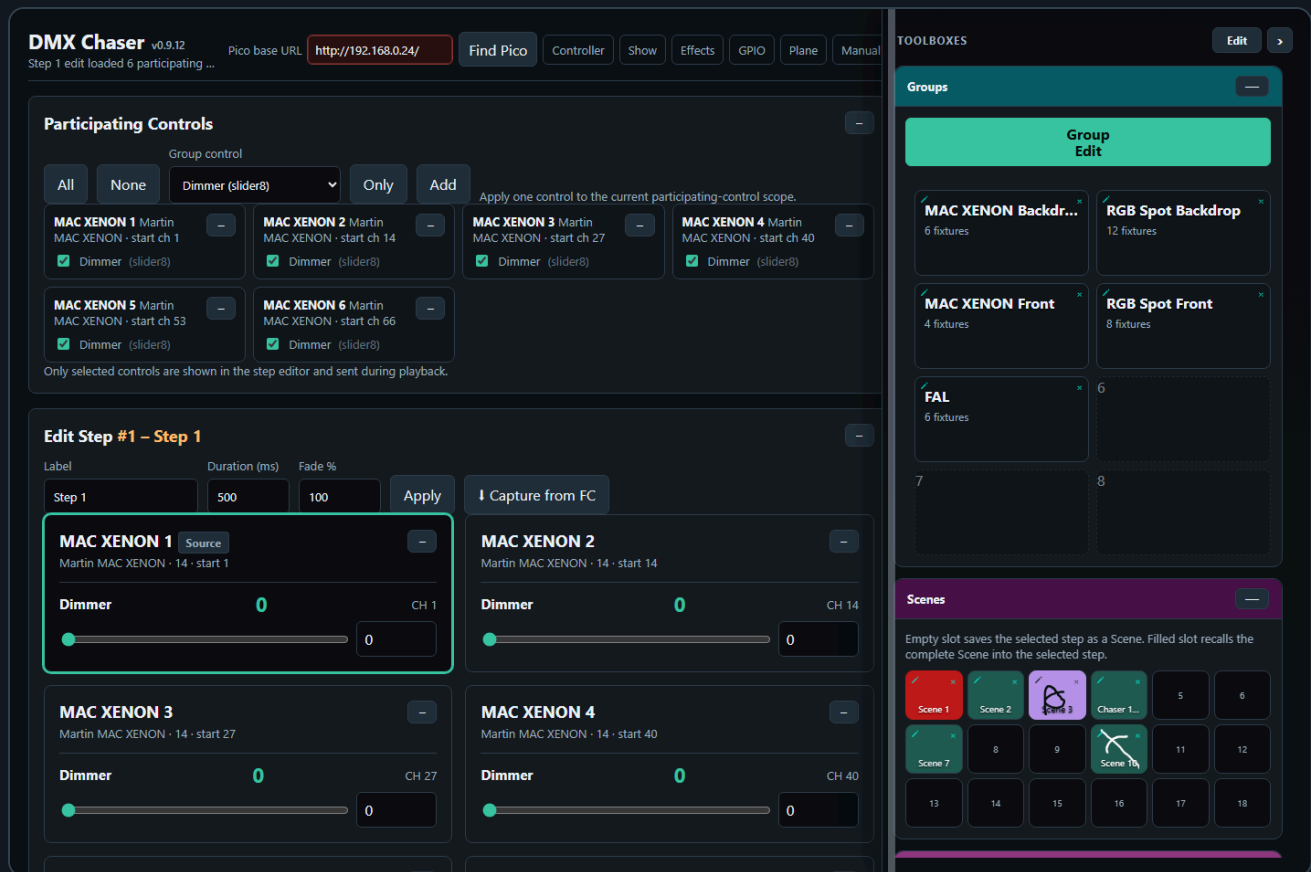

The Chaser page creates step-based sequences. The main page stays focused on **Participating Controls** and **Edit Step**, while the repeated working tools sit in the **Toolboxes** sidebar.

The Chaser screenshot is captured with the important boxes visible on purpose: **Groups**, **Chases**, **Chase Steps**, and **Chase Playback**. To reorder them, click **Edit** in the Toolboxes header, drag colored toolbox headers up or down, and click **Done**. The order is shared with the other pages: if a page does not use one of the toolbox types, the next available toolbox moves up.

### Basic Workflow

1. Open **Chaser**.
2. Select participating fixture controls.
3. Create steps with **Add step**, **Capture + Add**, or **Capture from FC**.
4. Set step duration and fade in **Edit Step**.
5. Store the chase in the **Chases** toolbox if you want quick recall.
6. Test timing in **Chase Playback**.
7. Click an empty Pico slot to upload the current chase to that slot.
8. Play the slot from the Pico.

### Main Work Area


The Chaser page is arranged from top to bottom as **Participating Controls**, **Edit Step**, and **Pico Playback**. Use the cards in that order when building a chase: choose the fixture controls that may participate, edit the selected step values, then upload or play Pico slots after the chase behaves correctly.

The **Toolboxes** sidebar sits beside the main work area on desktop-sized screens. It contains the repeated tools for Groups, Chases, Palettes, Chase Steps, Fan Out, and Chase Playback.

## Toolbox Sidebar

Controller, Chaser, and Effects use a shared right-side toolbox sidebar on desktop-sized screens.

- Drag the vertical resize line on the left edge of the sidebar to change its width.
- The sidebar width is shared across all toolbox pages.
- Double-click the resize line to reset the default width.
- The page content and the toolbox sidebar scroll independently. The page scrollbar sits beside the toolbox separation line, while the toolbox scrollbar stays inside the toolbox sidebar.
- Use the arrow button in the Toolboxes header to collapse or reopen the whole sidebar. The collapsed state is shared across toolbox pages.
- The Toolboxes header stays visible at the top of the sidebar while its toolbox tiles scroll, keeping **Edit** and the sidebar arrow within reach.
- Toolbox reordering is locked by default. Click **Edit** in the Toolboxes header, drag a toolbox by its colored header, and click **Done** when the order is correct. The toolbox body is never a drag handle. While Edit is off, dragging a colored header scrolls vertically instead of moving the toolbox, which prevents accidental rearrangement on iPad. While Edit is active, the app uses pointer dragging instead of Safari's native drag/drop.
- The **Cols** and **Rows** dropdowns in tile-based toolboxes are visible only while Toolboxes **Edit** is active. Their native pickers and 44-pixel touch targets make the matrix size easier to choose on iPad. Edit also enables movement in every tile matrix automatically, so no separate Move button is needed. Clicking **Done** hides the layout controls and restores normal tile actions.
- On narrow screens, the sidebar changes into a bottom toolbox drawer.

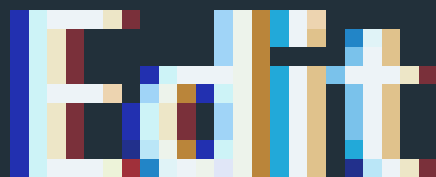

A pixelated 'Done' button. The button has a dark teal background and a thick cyan border. The word 'Done' is written in a pixelated, cyan-colored font in the center of the button.

The Chaser page uses several toolboxes:

- **Groups** filters the fixture list by one or more saved fixture groups. It uses the cyan header, like the group tools on the controller page.

## Groups

Group  
EditMAC XENON Backdr...

6 fixtures

RGB Spot Backdrop

12 fixtures

MAC XENON Front

4 fixtures

RGB Spot Front

8 fixtures

FAL

6 fixtures

6

7

8

## Scenes



Empty slot saves the selected step as a Scene. Filled slot recalls the complete Scene into the selected step.

|                                                                                                                                                                                    |                                                                                                                                                                                    |                                                                                                                                                                                    |                                                                                                                                                                                          |    |    |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|----|
|  <br>Scene 1 |  <br>Scene 2 |  <br>Scene 3 |  <br>Chaser 1... | 5  | 6  |
|  <br>Scene 7 | 8                                                                                                                                                                                  | 9                                                                                                                                                                                  |  <br>Scene 10    | 11 | 12 |
| 13                                                                                                                                                                                 | 14                                                                                                                                                                                 | 15                                                                                                                                                                                 | 16                                                                                                                                                                                       | 17 | 18 |

- **Chases** stores complete editable chases in a slot matrix. Clicking an empty slot saves the current chase. Clicking a filled slot loads that chase.
- The small top-left pencil icon on a filled **Chases** slot opens **Edit Tile** for the chase name, background color, and optional drawn/uploaded visual. **Default background** restores the standard slot color, and **No icon** removes the overlay image. This is only a label; loading a chase still uses the stored chase steps and playback settings.

GPIO Plane Manual

## TOOLBOXES

Edit



### Chases

-- all



|                                                                                                         |                                                                                                         |                                                                                                |                                                                                                 |
|---------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| <br>Chase 1            | <br>Chase 2            | <br>Chase 3   | 4                                                                                               |
| <br>move 1             | <br>Chase 6            | <br>Chase 7   | <br>Chase 8  |
| <br>Dimmer Fan         | <br>Chase 10           | <br>Chase 11  | <br>Chase 12 |
| <br>Tilt move Sprea... | <br>Tilt Move Sprea... | <br>Chase 15 | <br>Chase 16 |

### Groups



#### Group Edit

##### MAC XENON Backdr...

6 fixtures

##### RGB Spot Backdrop

12 fixtures

##### MAC XENON Front

4 fixtures

##### RGB Spot Front

8 fixtures

##### FAL

6 fixtures

6

7

8

ontrol scope.

ON 4 Martin  
N · start ch 40  
er (slider8)

CH 14

0

CH 40

0

- Close

ontrol scope.

ON 4 Martin  
N · start ch 40  
er (slider8)

CH 14

0

CH 40

0

## TOOLBOXES

Edit





## Palettes



## Merge

Empty slot saves the selected step values. Filled slot recalls compatible values into the selected step. Merge adds selected step values to an existing palette.



5

6

7

8

9

10

11

12

13

14

15

16

## Chase Steps (2/32)

-- all



+ Add step

↓ Capture + Add

Update chase

Clear Steps

Dupe

Up

Down

Delete

1

## Step 1

500ms · fade 100%

2

## Step 2

500ms · fade 100%



- **Scenes** uses the same saved Scene tiles as the Fixture Controller. Clicking a filled tile replaces the selected chase step with the complete Scene, makes the Scene controls the participating controls, clears an unrelated Groups filter, and sends those values live when a Pico base URL is set. Clicking an empty tile saves the selected step as a shared Scene. The pencil edits the shared Scene name/visual,  deletes it, and **Cols** and **Rows** update the shared Scene layout while Toolboxes Edit enables tile movement.
- **Planes** recalls saved room planes into the selected chase step. Select a group first if only part of the rig should be affected. Chaser uses the plane target and calibrated fixtures to write pan/tilt values into the step, rebuilds the participating controls for those pan/tilt channels, and sends the changed step values to the Pico when a Pico base URL is set. The Planes tile matrix uses the same **Cols**, **Rows**, and Toolboxes Edit movement behavior as the other saved tile toolboxes.

GPIO

Plane

Manual

## TOOLBOXES

Edit



## Planes



Recall a saved room plane into the selected chase step.

1

2

3

4

5

6

7

8

9

## Groups

Group  
EditMAC XENON Backdr...<sup>x</sup>

6 fixtures

RGB Spot Backdrop<sup>x</sup>

12 fixtures

MAC XENON Front<sup>x</sup>

4 fixtures

RGB Spot Front<sup>x</sup>

8 fixtures

FAL<sup>x</sup>

6 fixtures

6

7

8

## Scenes



trol scope.

ON 4 Martin  
N · start ch 40

er (slider8)

CH 14

190

CH 40

190

- **Chase Steps** contains the step list and step actions. Use it to add, capture, edit, duplicate, delete, and reorder steps. In the Toolboxes sidebar, drag the lower edge of the Chase Steps box to set its height. The top buttons remain visible while the step list scrolls inside the box.
- **Chases**, **Chase Steps**, and **Chase Playback** share one toolbox color and collapse together. Use -- **all** on any of those boxes to collapse the whole color group, and + **all** to reopen it.

GPIO Plane Manual

—

ontrol scope.

ON 4 Martin  
N · start ch 40  
er (slider8)

—

—

CH 14

0

CH 40

0

## TOOLBOXES

Edit



### Chase Steps (2/32)

-- all



+ Add step

↓ Capture + Add

Update chase

Clear Steps

Dupe

Up

Down

Delete

1 **Step 1**  
500ms · fade 100%

2 **Step 2**  
500ms · fade 100%

### Chases

-- all



Chase 1

Chase 2

Chase 3

4



move 1

Chase 6

Chase 7

Chase 8

Dimmer Fan

Chase 10

Chase 11

Chase 12

Tilt move Sprea...

Tilt Move Sprea...

Chase 15

Chase 16

### Groups



Group  
Edit

- **Fan Out** is a live step-shaping tool. It works on the currently selected step and writes directly into **Edit Step** as soon as you change the Fan Out mode, spread, or range values. There is no separate Snapshot or Apply action on the Chaser page.
- **Fan Out control selection** is filtered by the selected step. The control dropdown only shows compatible single-value controls that are actually part of the selected step's participating controls and exist on at least two fixtures. If one or more groups are selected, the same rule is applied inside the selected groups only.
- **Fan Out order** comes from the current participating fixture/control list. If a group filter is active, only fixtures inside the selected groups participate, but the calculation still follows the participating order that is shown for the current step/scope. In Symmetric spread mode, negative Spread runs the shape from the opposite side of the fixture row.
- **Fan Out base values** come from the values currently displayed in **Edit Step**. Selecting another step, loading another chase, capturing values, or using **Group Edit** refreshes the Fan Out base from the step values now shown on screen. This keeps spread calculations from drifting away from the edited step.
- **Clear** in the Chaser Fan Out toolbox resets the Fan Out shaping controls to neutral. It does not recall an older preset and it does not undo values that have already been written into the selected step.
- Editing **Edit Step**, using **Group Edit**, and changing **Fan Out** updates the selected step immediately. When a Pico base URL is set, those changed selected-step values are also sent to the Pico. Chase Playback sends the current chase continuously while it runs and therefore requires a Pico base URL.

## Fan Out



Affecting 6 fixtures from participating controls

Control

Dimmer



Mode

Symmetric spread



Spread



80

Spread step

-

1

+

Save

Recall

Snapshot

Apply

Clear

MAC XE...

0 -&gt; 0

MAC XE...

0 -&gt; 0

MAC XE...

0 -&gt; 0

MAC XE...

0 -&gt; 8

MAC XE...

0 -&gt; 24

MAC XE...

0 -&gt; 40

## Palettes




Merge


Empty slot saves the selected step values. Filled slot recalls compatible values into the selected step. Merge adds selected step values to an existing palette.



Step 1 palette



Step 1 palette



Step 3 palette



Step 3 palette st...

- **Chase Playback** runs the current chase from the browser for checking timing and fades before uploading to the Pico. **Mode** chooses **Single**, **Loop**, **Loop N**, or **Ping Pong**. **Direction** chooses whether playback starts at the first step and moves forward or starts at the last step and moves backward. **Loops** is only used by **Loop N**; normal **Loop** runs forever. **Ping Pong** reverses at the end of the chase instead of jumping back to the first or last step. The **Fade % (all steps)** field applies one fade value to every step immediately. Use **Edit Step > Fade %** when one step needs its own fade value.
- While Chase Playback runs, the currently playing step automatically becomes the selected step. This means **Edit Step** follows the chase visually and always shows the values of the last played step. Recalling a saved chase still selects Step 1 first, so playback starts from a predictable view.
- Selecting a step in **Chase Steps** stops browser Chase Playback and both Pico playback engines, then sends that step's programmed DMX values immediately. This lets you verify positions, colors, and other programmed values without starting the chase. Manually changing controls in **Edit Step** also stops browser Chase Playback so playback cannot immediately overwrite the values you are editing.

GPIO Plane Manual

Control scope.

ON 4 Martin  
N · start ch 40  
er (slider8)

CH 14

0

CH 40

0

## TOOLBOXES

Edit



### Chase Playback

-- all



▶ Play

■ Stop

◀ Prev

Next ▶

Mode

Loop



Direction

Forward



BPM

120

Beats/step

1



Tap tempo

Fade % (all steps)

0

Update rate (Hz)

25

Apply

Stopped

### Fan Out



Affecting 6 fixtures from participating controls

Control

Dimmer




Mode

Symmetric spread



Spread



80

Spread step

—

1

+

Save

Recall

Snapshot

Apply


Clear



On page load, the Chaser working area starts with no steps selected. Use the **Chases** toolbox to recall a saved chase. Loading a chase from the **Chases** box stops Pico Chaser and Pico Motion playback, updates the step list, selects Step 1, and rebuilds participating controls and the currently edited step together. If browser Chase Playback was already running, the recalled chase begins playing immediately; otherwise, Step 1 is sent to DMX as a static preview. If the chase contains steps, the participating controls are rebuilt from the values stored in the chase, so old fixture/group filters do not hide the controls used by that chase.

Saved chases also recall the playback controls that were saved with them, including browser mode, Loop N count, Ping Pong, direction, BPM, and Pico speed. The Chases toolbox tiles still show only the chase name and visual so they stay consistent with the other toolboxes. Uploading to a Pico slot uses the current **Chase Playback** playmode, loop count, and direction, so the Pico slot behaves like the chase you previewed in the browser. Per-slot playback details are shown in the **Pico Playback** slot tiles after a chase has been uploaded to a Pico slot. Each loaded Pico slot shows compact lines for loop state, direction, and Ping Pong state.

The collapse state, toolbox order, shared sidebar width, and the user-defined Chase Steps box height are stored by the server UI-state file, so the working layout survives reloads. Collapsing **Participating Controls** or **Edit Step** only hides that card body: the sticky page header keeps the same height, and the next card moves up to use the freed space.

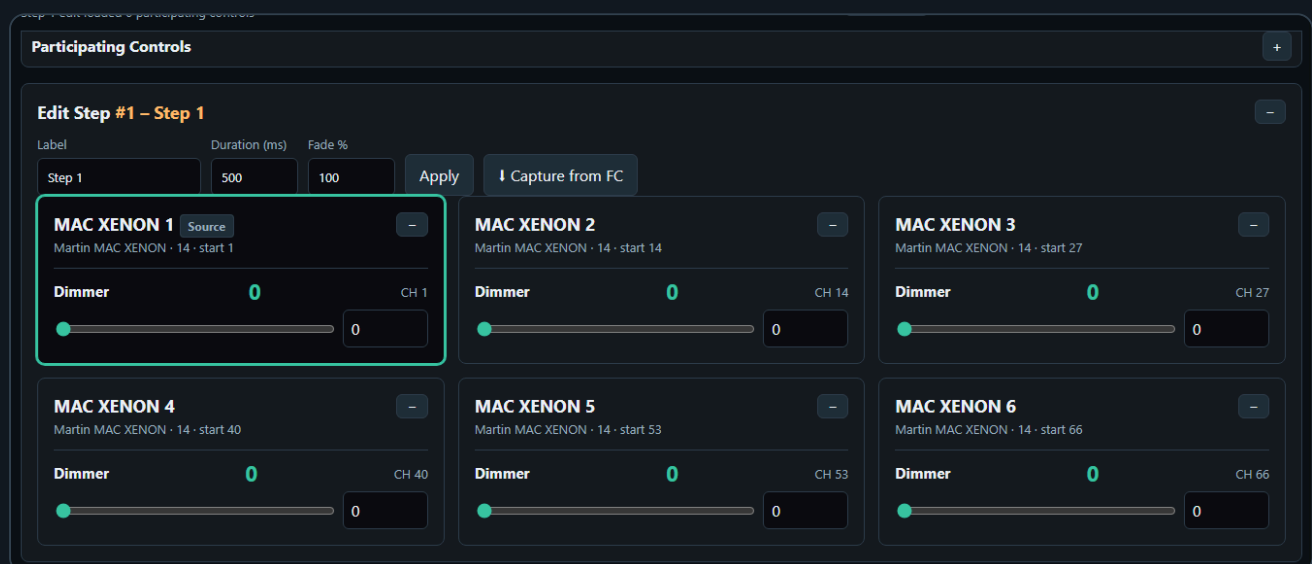

## Chase Steps Toolbox Buttons

The **Chase Steps** toolbox uses shared action buttons instead of per-step buttons. Click a step card to select the step first; the selected step is highlighted and loaded into **Edit Step**.

- **Add step** creates a new selected step from the stored default values of the currently participating controls. If a fixture profile has no custom default for a control, Chaser uses the control type fallback.
- **Capture + Add** creates a new selected step only when Fixture Controller live values exist for at least one currently participating control. If no matching live values are available, no empty step is created.
- **Clear Steps** deletes all current working steps after confirmation. It does not delete saved Chases toolbox entries or Pico slot payloads.
- **Dupe** duplicates the selected step directly after itself and selects the copy.
- **Up** and **Down** move the selected step in the step order and keep the same step loaded in **Edit Step**.
- You can also drag a step card with mouse or touch and drop it before or after another step card to reorder the chase. A short click still selects the step. The selected step and the currently playing step stay attached to the same step data after the move.
- **Delete** removes the selected step. If another step remains, it becomes the selected step.

# Participating Controls

Participating controls define which fixture controls belong to the chase. This keeps the chaser from editing unrelated channels.



For example, a dimmer chase might include only dimmer controls. A color chase might include only RGB or RGBWA controls.

If no group is selected, all patched fixtures are available. If one or more groups are selected in the Groups toolbox, only fixtures from those groups are shown while you are choosing the scope. Any direct change in **Participating Controls** then clears the group selection. This avoids mixing two different filters: after you press **All**, **None**, **Only**, **Add**, or tick an individual checkbox, the participating-control set becomes the source of truth.

The **Group control** dropdown is built from the fixtures currently visible in the participating-control scope, not from the controls that are already ticked. With no Groups filter, the dropdown stays based on all visible patched fixtures even after **Only** narrows the selected participating controls. With a Groups filter, the dropdown is based on the selected groups. When an edited step is active, the visible step fixtures define the dropdown scope.

**All** selects every valid participating control for all patched fixtures, clears the Groups filter, expands the participating fixture list, stops browser Chase Playback, clears the selected step, clears **Edit Step**, clears the Source fixture, and resets Fan Out bases. Existing steps in **Chase Steps** are not deleted. After **All**, use **Add step**, **Capture + Add**, or **Group Edit** to create or edit a step from the full participating-control scope.

**Group Edit** edits the current participating-control scope. It becomes available when the current scope contains at least one matching selected control on two or more participating fixtures, even when those fixtures use different fixture profiles. A step does not need to be selected first. If no step is selected, the first Group Edit value change creates a new step from the current participating controls and writes the edit into that step. If a step is selected, Group Edit edits that selected step.

The fixtures may use different profiles; the modal only shows matching controls that are actually selected as participating controls and exist on at least two fixtures. For example, if only Dimmer is selected, Group Edit opens with Dimmer only and applies a changed Dimmer value to every involved fixture that has a matching Dimmer control.

Group Edit uses the **Source** fixture from **Edit Step** as the reference value. Opening the modal reads the Source fixture's current selected-step values into the modal controls. It does not automatically overwrite the other fixtures, does not create a new step, and does not send output by itself.

The values are written when you change a control in the modal. If no step is selected, the first Group Edit value change creates a new step from the current participating controls and writes the edited value into that step. If a step is selected, the edit writes into that selected step. When a Pico base URL is set, changed selected-step values are also sent to the Pico.

## Chaser Selection Rules

The Chaser page has two different selection modes: defining a new participating-control set, and editing or recalling an existing step. They intentionally behave differently.

Keep these rules as the contract for the Chaser page:

- **Participating Controls** define the fixture/control scope for new steps and for Group Edit.
- **Edit Step** shows the currently selected step, not a separate preview copy.
- If a saved chase is recalled, Step 1 is selected immediately and becomes the visible **Edit Step**.
- If **Chase Playback** is running, playback overrules manual step rendering: every played step automatically becomes the selected step and redraws **Participating Controls** plus **Edit Step**.
- During fades, **Edit Step** updates the existing sliders, readouts, XY dots, colors, and wheel highlights continuously from the interpolated playback values. The full card is only rebuilt when the played step changes.
- When playback stops or pauses, the last played step remains selected.
- Manual previous/next playback also selects the stepped-to chase step and redraws **Edit Step**.
- Group filters are only temporary scope builders. Direct Participating Controls changes clear the group filter.
- **All** clears the selected step/edit context but keeps the existing step list unchanged.
- **Group Edit** does not require a selected step. If no step is selected, the first Group Edit value change creates a new step from the current participating controls. If a step is selected, Group Edit edits that step.
- Opening **Group Edit** loads the current Source fixture values into the modal only. The output or selected step changes only after you edit a modal control.

When you define participating controls manually:

- If no group is selected, the Participating Controls panel shows all patched fixtures.
- If one or more groups are selected, the panel is temporarily filtered to the fixtures in those groups.
- **All** selects every currently visible control and clears the group selection.
- **None** clears the participating-control selection, collapses the fixture list, and clears the group selection.
- The control dropdown lists controls from the selected groups while a group filter is active. If no group is selected, it lists controls from the current participating-control scope.
- The control dropdown plus **Only** selects one matching control type from the current scope, clears all other controls, and then clears the group selection.
- The control dropdown plus **Add** adds one matching control type from the current scope without clearing existing participating controls, then clears the group selection.
- Ticking or unticking an individual participating-control checkbox also clears the group selection.

When you click a step in the **Chase Steps** toolbox:

- Browser Chase Playback, Pico Chaser playback, and Pico Motion playback are stopped before the step is recalled.
- The step values are checked against the current fixture setup.
- Invalid fixture/control references are removed from the edited step.
- The Participating Controls panel is rebuilt from the chase values.
- If no group is selected, only fixtures and controls that are actually stored in the selected step are shown, and **Group Edit** becomes step-dependent.

- If a group is selected, the selected step is filtered to that group and **Group Edit** uses the grouped fixtures as its edit scope.
- The Edit Step card shows the same scoped fixture/control set, so editing Step 2 cannot accidentally show or edit unrelated controls from another group or old filter.
- The selected step's programmed values are sent to DMX immediately so the look can be verified without starting playback.

When you click a saved chase in the **Chases** toolbox:

- The selected Groups filter is cleared first.
- The saved steps, playback settings, and Chase Playback settings are loaded.
- The first step becomes the edited step.
- Participating Controls and Edit Step are rebuilt from that loaded step.
- If the saved chase was made before fixtures were repatched, the page tries to remap old fixture IDs to the current setup by matching the same fixture profile in DMX start-address order.
- If no valid step values can be found, the page falls back to the saved participating-control map stored with the chase.

This means group selection is a tool for building, filtering, and group-editing a step. Loading a saved chase clears the group filter because the recalled chase data becomes the source of truth. After recall, **Group Edit** can still become available without a selected group because it uses the fixtures participating in the selected step.

## Create Chase Steps

A chase step stores values for the selected **Participating Controls**. It does not store every patched fixture automatically.

To create a step manually:

The screenshot shows the 'Edit Step #1 - Step 1' interface. At the top, there are input fields for 'Label' (containing 'Step 1'), 'Duration (ms)' (500), and 'Fade %' (100). Below these are 'Apply' and 'Capture from FC' buttons. The main area contains six control cards for MAC XENON fixtures, each with a 'Dimmer' slider and a 'CH' label. The first card (MAC XENON 1) is highlighted with a red border. The cards are arranged in a 2x3 grid. The first card is labeled 'MAC XENON 1' with 'Martin MAC XENON · 14 · start 1' and 'CH 1'. The second card is labeled 'MAC XENON 2' with 'Martin MAC XENON · 14 · start 14' and 'CH 14'. The third card is labeled 'MAC XENON 3' with 'Martin MAC XENON · 14 · start 27' and 'CH 27'. The fourth card is labeled 'MAC XENON 4' with 'Martin MAC XENON · 14 · start 40' and 'CH 40'. The fifth card is labeled 'MAC XENON 5' with 'Martin MAC XENON · 14 · start 53' and 'CH 53'. The sixth card is labeled 'MAC XENON 6' with 'Martin MAC XENON · 14 · start 66' and 'CH 66'. Each card has a 'Dimmer' slider with a green dot and a numerical value '0'.

1. Select the controls that should participate in **Participating Controls**.
2. In the **Chase Steps** toolbox, click **Add step**.
3. Click the new step in the **Chase Steps** list.
4. In **Edit Step**, set **Label**, **Duration (ms)**, and **Fade %**.
5. Adjust the controls shown in **Edit Step**. Those control values are written into the selected step immediately. When a Pico base URL is set, they are also sent to the Pico.
6. Click **Apply** after changing the label, duration, or fade.

**Add step** starts from the stored default values of the selected participating controls. If a fixture profile has no custom default for a control, Chaser uses the control type fallback: centered pan/tilt, zero for sliders, wheels, and color channels.

After **Add step** or **Capture + Add**, the first fixture in the new step is automatically marked as the **Source** fixture in **Edit Step**. Click another fixture card in **Edit Step** to make it the Source fixture. Group Edit uses the Source fixture's current step values as its starting values before writing changes to the matching participating fixtures.

Use the **Palettes** toolbox when the selected step should become a reusable fragment. Empty palette slots save exactly the selected step's stored values, not the whole chase and not all DMX channels. Filled palette slots recall compatible palette values into the selected step and make the palette's stored controls the active participating-control scope. Other values already stored in the step remain stored, but **Edit Step** focuses on the recalled palette controls. If no step is selected, recalling a palette creates a new selected step from that palette.

To capture a new step from the Fixture Controller:

1. Open **Fixture Controller** in another browser tab or window.
2. Build the look there by moving controls, recalling a scene, or recalling a palette.
3. Return to **Chaser**.
4. Make sure **Participating Controls** contains the controls you want to capture.
5. In the **Chase Steps** toolbox, click **Capture + Add**.

**Capture + Add** creates a new step and copies the current Fixture Controller live values for the selected participating controls.

To capture into an existing step:

1. Click the step in the **Chase Steps** list.
2. Build the wanted look in **Fixture Controller**.
3. Return to **Chaser**.
4. In **Edit Step**, click **Capture from FC**.

**Capture from FC** updates the selected step with the current Fixture Controller live values for the selected participating controls.

## Capture From Fixture Controller

Use **Capture from FC** or **Capture + Add** to read the current Fixture Controller live values and use them as chase step values.

This is useful when you want to build a chase visually:

1. Create a look on the Fixture Controller.
2. Capture it into the Chaser.
3. Change the look.
4. Capture the next step.

If Chaser reports that no Fixture Controller values are available, open the Fixture Controller page and move a control or recall a scene first. Capture only reads controls that are selected as participating controls, so unselected controls are ignored.

# Pico Slot Playback

Chasers can be uploaded to 32 Pico slots. Each slot can run on the Pico without the browser staying open. The Pico slot strip is the upload target: click an empty slot to upload the current chase. Click a loaded slot once to select it for play, pause, resume, speed, or stop. Click the selected loaded slot again if you want to replace it with the current chase; the page asks before overwriting.

Starting a Pico slot with **Play Slot** stops browser Chase Playback first, so only one chase engine controls the DMX output.

Pico Playback

PICO PLAYBACK

Slot

0

Speed

1.0

x

Mode

Loop

Direction

Forward

▶ Play Slot

Pause

⏸ Set Speed

⏹ Stop Slot

■ Stop All

↶ Restore Saved Slots to Pico

Pico slots:

● Stopped (browser took over)

|                         |                         |                         |                         |                         |                         |                         |                         |                         |                         |                         |                         |                         |
|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|
| SLOT 0<br>—<br>◀ EMPTY  | SLOT 1<br>—<br>◀ EMPTY  | SLOT 2<br>—<br>◀ EMPTY  | SLOT 3<br>—<br>◀ EMPTY  | SLOT 4<br>—<br>◀ EMPTY  | SLOT 5<br>—<br>◀ EMPTY  | SLOT 6<br>—<br>◀ EMPTY  | SLOT 7<br>—<br>◀ EMPTY  | SLOT 8<br>—<br>◀ EMPTY  | SLOT 9<br>—<br>◀ EMPTY  | SLOT 10<br>—<br>◀ EMPTY | SLOT 11<br>—<br>◀ EMPTY | SLOT 12<br>—<br>◀ EMPTY |
| SLOT 13<br>—<br>◀ EMPTY | SLOT 14<br>—<br>◀ EMPTY | SLOT 15<br>—<br>◀ EMPTY | SLOT 16<br>—<br>◀ EMPTY | SLOT 17<br>—<br>◀ EMPTY | SLOT 18<br>—<br>◀ EMPTY | SLOT 19<br>—<br>◀ EMPTY | SLOT 20<br>—<br>◀ EMPTY | SLOT 21<br>—<br>◀ EMPTY | SLOT 22<br>—<br>◀ EMPTY | SLOT 23<br>—<br>◀ EMPTY | SLOT 24<br>—<br>◀ EMPTY | SLOT 25<br>—<br>◀ EMPTY |
| SLOT 26<br>—<br>◀ EMPTY | SLOT 27<br>—<br>◀ EMPTY | SLOT 28<br>—<br>◀ EMPTY | SLOT 29<br>—<br>◀ EMPTY | SLOT 30<br>—<br>◀ EMPTY | SLOT 31<br>—<br>◀ EMPTY |                         |                         |                         |                         |                         |                         |                         |


Supported playback options:

- Single run
- Loop
- Loop N times
- Ping Pong
- Forward or reverse direction
- Speed multiplier
- Pause and resume

Direction sets the first playback direction for the slot. In Ping Pong mode the Pico reverses direction whenever it reaches either end of the chase.

Each chaser slot supports up to 32 steps.

## 6. Effects

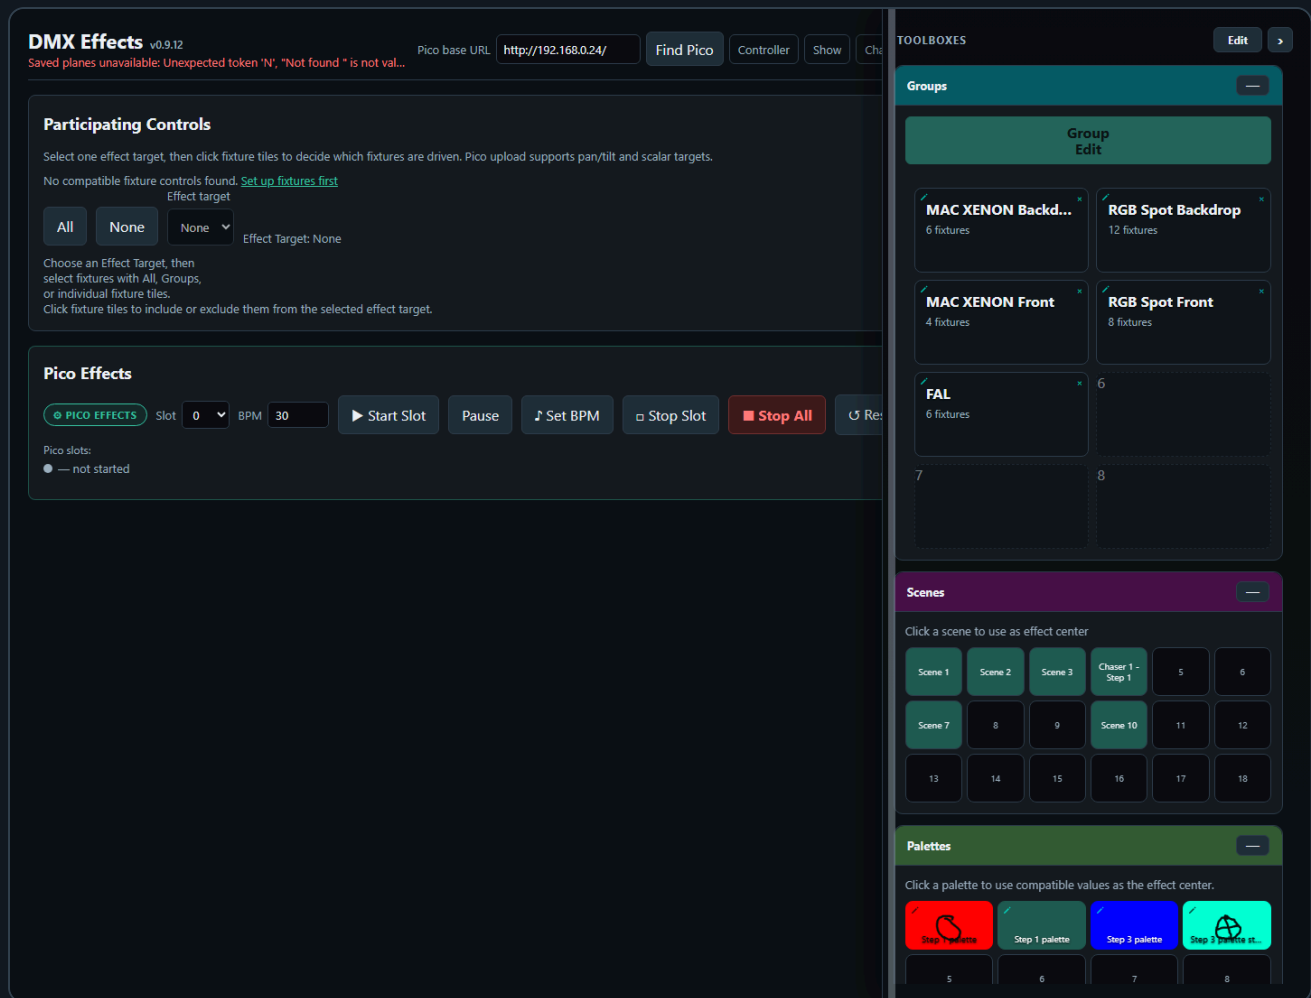

Effects creates continuous effects for one selected effect target at a time. It can drive a combined pan/tilt target, or one scalar DMX target such as dimmer, prism, gobo, zoom, or iris.

Supported effects include:

- Pan/tilt targets: Circle, Figure-8, Pan swing, Tilt swing
- Scalar targets: Sine, Pulse

Pan/tilt is treated as one combined two-axis target. Pan/tilt effects are relative to the current scene position, so the effect moves around the position that was last written into the Pico base buffer. Scalar controls are one-axis targets and use their displayed center value plus the **Amplitude** slider as the effect depth. Browser playback is only an overlay for testing; when you press **Stop**, Effects restores the stored base values to the output so the last moving effect position does not become the next center.

### Participating Controls

The **Participating Controls** panel uses an **Effect target** dropdown. The default target is **None**. With **None** selected, no fixture tiles are enabled, Group Edit is disabled, and no effect can be played or uploaded.

Hard reload, including Ctrl+F5, resets **Effect target** to **None** and clears playback participation. Normal navigation away from Effects and back in the same browser tab restores the current working target, fixture participation, and parameters from session state. The saved server preset is not auto-applied on page load; use **Load**, import an Effects JSON file, or recall a saved **Effect** tile when you want to explicitly restore saved target and participant data.

One effect can only target one control type at a time: either pan/tilt, or one scalar control type. Choosing an effect target filters the fixture matrix to compatible fixtures, but it does not automatically enable those fixtures. This keeps target choice separate from fixture participation and prevents mixed targets such as dimmer plus gobo plus pan/tilt in one effect.

The **Participating Controls** card can be collapsed when you only need the toolboxes. In collapsed mode it stays compact and does not change the sticky page-header height.



The fixture matrix is a selection and preview surface:

- Click a fixture tile to include or exclude it from the effect.
- Use **All** to clear any group filter and enable every fixture for the current target.
- Use **None** to disable every visible fixture for the current target.
- Selecting groups applies an additional filter and enables compatible fixtures inside the selected groups.
- Pan/tilt targets show a small XY plot with the current position.
- Scalar targets show a small value bar with the current value.

Center values come from the current base buffer or from recalling a scene as the effect center. Phase spread, amplitude, BPM, and effect shape are set in the **Effect Parameters** toolbox. The amplitude controls are target-aware and effect-aware. Circle and Figure-8 show **Pan amp** and **Tilt amp**. Pan Swing shows only **Pan amp**. Tilt Swing shows only **Tilt amp**. Scalar effects show one **Amplitude** slider. Hidden axes are forced to zero for preview and Pico upload, but their last two-axis values are remembered when you return to Circle or Figure-8.

The **Effect** dropdown is target-aware. It only shows effects that make sense for the selected **Effect target**.

The same target rules are used for Pico upload. Pan/tilt and scalar effects can be uploaded to one of the Pico effect slots, and the Pico reads the effect center from its base buffer while playing. Pan/Tilt profile mapping is included in the uploaded target: swapped axes use the swapped physical channels, and reversed axes invert the effect offset around the current base value.

The Effects page also includes the shared **Palettes** toolbox. Clicking a palette recalls any values that are compatible with Effects and uses them as the current effect center. For example, a position palette can set pan/tilt centers, while a dimmer or beam palette can set scalar centers. The small pencil opens **Edit Tile** so palette names and visuals can be adjusted from Effects too. Effects recalls, imports, exports, and saves the shared palette JSON.

The **Effects** toolbox stores reusable effect recipes. Click an empty effect slot to save the selected Effect target, participating fixtures, effect type, BPM, amplitudes, spread, and phase offsets. Effects do not store the current center/base values, so the same saved effect can be reused with different scene or palette centers. With the browser preview stopped and its button showing **Start**, clicking a saved effect only recalls the recipe. When the preview is already active and the button shows **Stop**, clicking another saved effect restarts the browser preview immediately with that recipe's saved timing and update rate, making it easy to audition several effects. Recall never uploads the recipe to a Pico slot. The small pencil opens **Edit Tile** for the effect name, background, and optional drawing/upload.



- If the target is pan/tilt, the uploaded slot stores pan and tilt channel addresses and plays two-axis effects.
- If the target is pan/tilt, one-axis effects still store the pan/tilt channel addresses, but unused amplitude axes are uploaded as zero: Pan Swing uses AMP1 and zero AMP2; Tilt Swing uses zero AMP1 and AMP2.
- If the target is scalar, the uploaded slot stores that one control's DMX channel address and plays one-axis effects such as sine or pulse. Scalar uploads use AMP1 for **Amplitude** and force AMP2 to zero.
- Click an empty Pico slot to upload the current effect to that slot.
- Click a loaded slot once to select it for start, stop, or BPM changes.
- Click the selected loaded slot again to replace it with the current effect; the page asks before overwriting.
- Slots store channel mappings, BPM, amplitude, spread, effect type, and target phase. They do not store fixed center values.
- The center value is read from the Pico base buffer during playback. This means a scene recall or live controller change can define the center before the slot starts.
- Up to 64 effect slots can be loaded on the Pico.

For scalar targets, set the current value first, then upload/start the slot. For example, set a dimmer to its desired base brightness and use Sine if you want the Pico to pulse above and below that base value.

## Effects Toolboxes

The Effects page uses five toolboxes in the shared sidebar.

Controller

Show

Chaser

## TOOLBOXES

Edit



### Groups



Group  
Edit

MAC XENON Backd...

6 fixtures

RGB Spot Backdrop

12 fixtures

MAC XENON Front

4 fixtures

RGB Spot Front

8 fixtures

FAL

6 fixtures

6

7

8

### Scenes



Click a scene to use as effect center

Scene 1

Scene 2

Scene 3

Chaser 1 -  
Step 1

5

6

Scene 7

8

9

Scene 10

11

12

13

14

15

16

17

18

Palettes



**Groups** filters the fixture matrix for the selected effect target. When **Effect target** is **None**, Group Edit is disabled. Choosing a real target does not automatically enable fixtures for playback, but it does make Group Edit available as soon as at least one fixture has that target. For example, after a hard reload, choosing **Dimmer** lets Group Edit work across every MAC and RGB Spot fixture that has a Dimmer control while playback participation remains off. Choosing **Pan/Tilt** can also open Group Edit for a single moving light. Pressing **All** clears the group filter and enables every fixture available for the current target. Selecting one or more groups enables compatible fixtures inside those groups. If some fixtures are already enabled, Group Edit uses that enabled subset; if none are enabled yet, Group Edit uses all fixtures compatible with the selected target.

The Effects fixture grid marks the current **Source** fixture with the same highlighted selection language used by the Controller. The Source fixture supplies the values shown in the Group Edit modal. Click another enabled fixture tile to make it the Source; click the current Source tile again when you want to remove that fixture from participation.

Effects Group Edit uses the Controller-style controls: pan/tilt edits use the XY pad for absolute center placement and relative nudge rows for movement from the current values. The modal no longer exposes separate absolute Pan/Tilt sliders. Use **Pan coarse relative**, **Pan fine relative**, **Tilt coarse relative**, and **Tilt fine relative** for 16-bit moving lights when you want to move one fixture or a selected group without forcing every fixture to the same absolute value. Relative nudges keep each fixture offset from its own current center, then send the changed center values to the Pico when a Pico base URL is set.

Effect Parameters

-- all

—

BROWSER

Start

Effect

None




BPM

30


Hz

25


Pan amp



Tilt amp



Phase spread



Effect preview



Groups

—

**Effect Parameters** is the live effect editor. It contains the target-aware effect dropdown, BPM, amplitude, phase spread, browser preview controls, and the Pico slot upload/play controls. The shown amplitude controls follow the selected effect: two-axis effects show both axes, Pan Swing and Tilt Swing show only the moving axis, and scalar targets show one **Amplitude** control.

Controller

Show

Chas

## TOOLBOXES

Edit



### Effects

-- all



Click an empty slot to save the current effect recipe. Click a filled slot to recall it.

### Effect Parameters

-- all



BROWSER

Start

Effect

None



BPM

30

Hz

25

Pan amp



20%

Tilt amp



15%

Phase spread



0°

Effect preview



**Effects** stores reusable effect recipes. It saves the selected target, fixture participation, effect type, BPM, amplitude, spread, and phase offsets. It does not store fixed center values.



TOOLBOXES

Edit



Scenes



Click a scene to use as effect center

Scene 1

Scene 2

Scene 3

Chaser 1 -  
Step 1

5

6

Scene 7

8

9

Scene 10

11

12

13

14

15

16

17

18

Effects

-- all



Click an empty slot to save the current effect recipe. Click a filled slot to recall it.

Effect Parameters

-- all



BROWSER

Start

Effect

None




BPM

30


Hz

25


Pan amp




Tilt amp



Phase spread



Effect preview

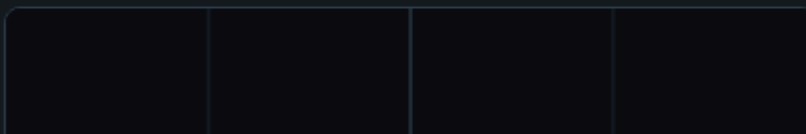

**Scenes** is read-only on Effects. Recalling a scene updates the effect center/base values used by effects. When a Pico base URL is set, the stored values are also sent to the Pico.

Controller Show Chaser

## TOOLBOXES

Edit




### Palettes




Click a palette to use compatible values as the effect center.



Step 1 palette



Step 1 palette



Step 3 palette



Step 3 palette st...

5

6

7

8

9

10

11

12

13

14

15

16

### Scenes



Click a scene to use as effect center

Scene 1

Scene 2

Scene 3

Chaser 1 -  
Step 1

5

6

Scene 7

8

9

Scene 10

11

12

13

14

15

16

17

18

### Effects

-- all



Click an empty slot to save the current effect recipe. Click a filled slot to recall it.

### Effect Parameters

-- all



BROWSER

Start

Effect

**Palettes** recalls compatible palette values into Effects. A position palette can set pan/tilt centers, while color, dimmer, or beam palettes can set scalar centers when the selected effect target matches.

Controller

Show

Chaser

## TOOLBOXES

Edit



### Planes



Recall a saved room plane as the effect center for calibrated pan/tilt fixtures.

1

2

3

4

5

6

7

8

9


### Palettes




Click a palette to use compatible values as the effect center.



Step 1 palette



Step 1 palette



Step 3 palette



Step 3 palette st...

5

6

7

8

9

10

11

12

13

14

15

16

### Scenes



Click a scene to use as effect center

Scene 1

Scene 2

Scene 3

Chaser 1 -  
Step 1

5

6

Scene 7

8

9

Scene 10

11

12

13

14

15

16

17

18

**Planes** recalls saved room planes as the current pan/tilt effect center. Select **Pan/Tilt** as the effect target, optionally select one or more groups, then click a filled plane tile. Effects interpolates the calibrated pan/tilt values for matching fixtures, enables those fixtures for the current target, sends the new center values to the Pico, and keeps the effect recipe itself separate from the recalled center. The Planes toolbox uses the same **Cols**, **Rows**, and Toolboxes Edit movement behavior as Groups, Palettes, and Effects.

## Recommended Workflow

1. Use the Fixture Controller to position the fixtures.
2. Save or recall a scene.
3. Open Effects.
4. Select one **Effect target**.
5. Set BPM, effect shape, amplitude, and spread in the **Effect Parameters** toolbox.
6. Optionally recall a palette from the **Palettes** toolbox to set the center for the selected target.
7. Optionally save or recall the recipe from the **Effects** toolbox.
8. Click an empty Pico slot to upload the effect, then start the slot when you want autonomous playback without browser timing jitter.
9. Use browser playback from the **Effect Parameters** toolbox when you want quick live testing before uploading.

The Effects page also has a read-only scene toolbox. Clicking a scene updates the effect center. When a Pico base URL is set, it also sends the position to the Pico.

## 7. GPIO Control

GPIO Control v0.9.11

Ready

Pico base URL

http://192.168.1.50

Find Pico

Controller

Show

Chaser

Effects

Monitor

Plane

Manual

GPIO Mappings

not connected

GPIO polling enabled

Add mapping

Add ADC speed/BPM

Push to Pico

Read from Pico

Mapping 1

Remove

GPIO pin

Pull

Trigger

Action

GPIO14

Pull-up

Falling

dmx clear

Slot

Debounce ms

0

30

Mapping 2

Remove

GPIO pin

Pull

Trigger

Action

GPIO15

Pull-up

Falling

chaser toggle

Slot

Debounce ms

0

30

Slot 0 playmode not read yet

Status

Pico GPIO status

No status yet.

Generated config body

ENABLE 1  
MAP 14 pullup falling dmx\_clear 0 30  
MAP 15 pullup falling chaser\_toggle 0 30

GPIO Control maps physical Pico inputs to lighting actions.

GPIO Control does not use the shared toolbox sidebar. Its setup is kept in normal page panels because GPIO mapping is configuration work, not a live fixture/scene/palette workflow.

The GPIO editor loads its mapping setup from the XAMPP server first, using `gpio_setup.php` and `data/gpio_setup.json`. Browser storage is only a fallback if the server file is not available. Adding, removing, or changing a mapping autosaves the setup back to the server, so a PC and iPad should show the same mappings after reload.

Chaser GPIO actions do not define their own playmode. They start, stop, pause, resume, toggle, or tap the selected Pico chaser slot. The playmode belongs to that slot, so the button follows whatever was uploaded from the Chaser page: **Single**, **Loop**, **Loop N**, or **Ping Pong**, plus forward/reverse direction. When a Pico base URL is set, the GPIO page reads the chaser slot status and shows the slot mode, direction, loop state, step count, and live/ready state beside chaser mappings and chaser speed ADC mappings.

Digital GPIO pins can trigger:

- DMX clear
- Output-only clear
- Stop all
- Chaser play, stop, toggle, pause, resume, pause toggle
- Chaser tap tempo
- Effects start, stop, toggle
- Effects tap tempo

ADC pins can control:

- Chaser speed multiplier
- Effects BPM

Only GPIO26, GPIO27, and GPIO28 support ADC input on the Pico 2 W.

## Add a Digital Button Mapping

1. Open **GPIO Control**.
2. Click **Add mapping**.
3. Select a free GPIO pin.
4. Choose pull mode and trigger edge.
5. Choose the action.
6. Set the slot number if the action needs one.
7. Upload the config to the Pico.

The page disables reserved pins and pins already used by other mappings.

Editing the mapping saves the setup on the XAMPP server, but the Pico only receives it after **Push to Pico**. Use **Read from Pico** when the Pico already has the mapping you want to bring back into the editor.

## Add an ADC Mapping

1. Add an ADC mapping.
2. Select GPIO26, GPIO27, or GPIO28.

3. Choose `chaser_speed` or `motion_bpm`.
4. Set the target slot.
5. Set the min and max value.
6. Upload the config.

ADC values are filtered on the firmware side with a short mean filter to reduce ripple.

## Tap Tempo

Tap actions use the time between button presses.

The beat divider can be set to:

- 1 beat
- 1/2 beat
- 1/4 beat
- 1/8 beat
- 1/16 beat

The firmware ignores very long gaps between taps so stopping for a while does not create an extremely slow tempo when tapping resumes.

## 8. Pico Performance Test

Pico Performance Test

v0.9.10

Configure and run a test.

Pico base URL

http://192.168.1.50

Find Pico

Controller

Show

Chaser

Effects

GPIO

Monitor

Plane

Manual

Connection & Core Timing

Check Pico

Run Full Test

Playback + Palette Stress

IDLE

Pico status

No check run yet.

IDLE

Free memory

No memory data yet.

IDLE

100 Hz headroom

No 100 Hz timing data yet.

IDLE

Core1 headroom

No Core1 timing data yet.

IDLE

Core0 DMX loop

No timing data yet.

IDLE

Core1 service loop

No timing data yet.

IDLE

HTTP callbacks

No HTTP timing data yet.

IDLE

DMX frame counters

No frame counter data yet.

IDLE

Buffer readback

No readback test run yet.

IDLE

DMX write load

No write benchmark run yet.

IDLE

MIDI-to-Pico POST timing

No MIDI timing measurement run yet.

Timing History

Clear

| Run | Time | Status | Memory | 100 Hz left | Core1 left | Core0 late | HTTP peak | DMX | Buffer | MIDI |
|-----|------|--------|--------|-------------|------------|------------|-----------|-----|--------|------|
|-----|------|--------|--------|-------------|------------|------------|-----------|-----|--------|------|

Buffer Readback

Start channel

Channels

Value

Read Back

1

512

73

Writes a known batch, reads live output and base buffer, then compares the tested channels.

MIDI-to-DMX Latency

Measures a real Web MIDI event through Pico acknowledgement, output-buffer verification, and a confirmed following DMX frame.

MIDI input

Mapping type

Test channel

Samples

Start measurement

No input connected

Connect MIDI

Open MIDI Emulator

Fader / knob (30 ms)

512

5

Stop

The Pico Performance Test page checks the full browser-to-Pico control path.



Pico Performance Test does not use the shared toolbox sidebar. It is a developer/test page for measuring request performance, buffer readback, and firmware timing health.

Use **Check Pico** to read Pico status and firmware performance telemetry. Current firmware exposes `/perf/status.json`, which reports free RAM, Core0 100 Hz playback-loop timing, Core1 service-loop timing, HTTP callback timing, and DMX frame counters. Older firmware falls back to parsing `/logs.txt`.

The **Free memory** check shows the firmware heap/stack gap. The **100 Hz headroom** check shows the minimum time left before the Core0 playback loop would miss its 10 ms update budget. The **Core1 headroom** check shows the minimum time left before the network/service loop would miss its 2 second service budget. Healthy runs should show no late Core0 or Core1 cycles and comfortable remaining slack.

Use **Buffer Readback** to write a known batch with `/dmx/b`, then compare the tested channels from both `/dmx/output.json` and `/dmx/base.json`.

Use **MIDI-to-DMX Latency** to measure a controller event through the browser and Pico. Click **Find Pico**, then click **Connect MIDI** for USB hardware or open the visible **MIDI Emulator** when you want to perform a standalone manual test. Select whether the Show Run target behaves as a **Fader / knob (30 ms)** or an immediate **Button**, choose an unused DMX test channel and sample count, then start the measurement. For a manual test, move one control and pause until **Move again** appears for each sample. USB and emulator events use the same measurement handler after ingestion; the emulator substitutes a same-origin `BroadcastChannel` hop for the physical USB/driver hop.

The primary result is **MIDI → POST**: time from the MIDI event until the browser starts the `/dmx/b` request to the Pico. This intentionally includes the 30 ms coalescing queue for faders and knobs. Fader/knob p95 is PASS at no more than 35 ms, WARN through 50 ms, and FAIL above 50 ms. An immediate button is PASS at no more than 5 ms, WARN through 15 ms, and FAIL above 15 ms. Post-coalescing transport, Pico acknowledgement, output-buffer visibility, and conservative confirmed-following-frame time are reported separately as diagnostics and do not determine the primary MIDI status. The page restores the original base value of the test channel when the measurement completes or is stopped. Do not use a channel currently controlled by playback, blackout, or a master.

**Run Full Test** needs no manual MIDI movement when the emulator is used. If no MIDI input is connected, the Performance page loads the emulator invisibly inside itself, keeps browser focus on the Performance page, and commands it to generate every configured sample through the normal emulator message path. No extra tab opens. If a physical USB MIDI input is already connected, Full Test uses it and waits for you to move the hardware control. If neither source can connect, the other checks still finish and the MIDI result shows a warning. The dedicated **MIDI-to-DMX timing** card and Timing History store the MIDI-to-POST median and p95.

Use **DMX Write Test** to compare:

- Single-channel updates
- Scene-sized batch updates
- Large batch updates
- Longer soak tests

The write-test result panel shows:

- Throughput
- Effective DMX channel updates per second
- Average latency
- Median latency
- p95 and p99 latency
- Jitter

- Errors

Use **Run Full Test** to run the Pico status/performance check, buffer readback, write test, automatic emulated MIDI-to-DMX samples (or interactive physical USB samples), and a final timing check in one sequence.

Use **Playback + Palette Stress** to stress playback without overwriting saved Pico slots. The page starts chaser/effect slots that are already loaded, adds temporary demo data only to slots that are currently empty, stores those temporary slot numbers in the server UI state, then sends repeated full 512-channel palette-style `/dmx/b` recalls while playback is running. When the run finishes, the page stops playback, clears only the temporary demo slots, and removes the temporary-slot marker from the server. If a browser session is interrupted, the next stress run first reads the marker and clears the previously recorded temporary slots.

The **Timing History** table records each Pico timing check. A manual **Check Pico** adds one row immediately. **Run Full Test** and **Playback + Palette Stress** record a final timing sample, so the row reflects Core0/Core1 slack after the selected checks have run. Full Test also records the latest MIDI-to-POST median and p95 in the MIDI column. The 100 Hz and Core1 columns use the same wording as the status cards, for example "Minimum 9419us left before missing the 10ms update budget".

Use **Export CSV** to save results for later comparison.

Pico Performance Test and GPIO Control link to the **DMX Buffer Monitor**.

## 9. DMX Buffer Monitor

DMX Buffer Monitor

v0.9.10

Set Pico base URL to monitor buffers

Pico base URL

http://192.168.1.50

Find Pico

Controller

Show

Chaser

Effects

Performance

Plane

Manual

Refresh

Buffer

DMX output

☒ Auto refresh

Refresh ms

50

Refresh Hz

20

Clear highlights

Clear all

Channels: —

Frame: —

Changed: —

Last update: —

|        |        |        |        |        |        |        |        |        |        |        |        |        |        |        |        |        |        |        |        |        |
|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| CH 1   | CH 2   | CH 3   | CH 4   | CH 5   | CH 6   | CH 7   | CH 8   | CH 9   | CH 10  | CH 11  | CH 12  | CH 13  | CH 14  | CH 15  | CH 16  | CH 17  | CH 18  | CH 19  | CH 20  | CH 21  |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 22  | CH 23  | CH 24  | CH 25  | CH 26  | CH 27  | CH 28  | CH 29  | CH 30  | CH 31  | CH 32  | CH 33  | CH 34  | CH 35  | CH 36  | CH 37  | CH 38  | CH 39  | CH 40  | CH 41  | CH 42  |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 43  | CH 44  | CH 45  | CH 46  | CH 47  | CH 48  | CH 49  | CH 50  | CH 51  | CH 52  | CH 53  | CH 54  | CH 55  | CH 56  | CH 57  | CH 58  | CH 59  | CH 60  | CH 61  | CH 62  | CH 63  |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 64  | CH 65  | CH 66  | CH 67  | CH 68  | CH 69  | CH 70  | CH 71  | CH 72  | CH 73  | CH 74  | CH 75  | CH 76  | CH 77  | CH 78  | CH 79  | CH 80  | CH 81  | CH 82  | CH 83  | CH 84  |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 85  | CH 86  | CH 87  | CH 88  | CH 89  | CH 90  | CH 91  | CH 92  | CH 93  | CH 94  | CH 95  | CH 96  | CH 97  | CH 98  | CH 99  | CH 100 | CH 101 | CH 102 | CH 103 | CH 104 | CH 105 |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 106 | CH 107 | CH 108 | CH 109 | CH 110 | CH 111 | CH 112 | CH 113 | CH 114 | CH 115 | CH 116 | CH 117 | CH 118 | CH 119 | CH 120 | CH 121 | CH 122 | CH 123 | CH 124 | CH 125 | CH 126 |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 127 | CH 128 | CH 129 | CH 130 | CH 131 | CH 132 | CH 133 | CH 134 | CH 135 | CH 136 | CH 137 | CH 138 | CH 139 | CH 140 | CH 141 | CH 142 | CH 143 | CH 144 | CH 145 | CH 146 | CH 147 |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 148 | CH 149 | CH 150 | CH 151 | CH 152 | CH 153 | CH 154 | CH 155 | CH 156 | CH 157 | CH 158 | CH 159 | CH 160 | CH 161 | CH 162 | CH 163 | CH 164 | CH 165 | CH 166 | CH 167 | CH 168 |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 169 | CH 170 | CH 171 | CH 172 | CH 173 | CH 174 | CH 175 | CH 176 | CH 177 | CH 178 | CH 179 | CH 180 | CH 181 | CH 182 | CH 183 | CH 184 | CH 185 | CH 186 | CH 187 | CH 188 | CH 189 |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 190 | CH 191 | CH 192 | CH 193 | CH 194 | CH 195 | CH 196 | CH 197 | CH 198 | CH 199 | CH 200 | CH 201 | CH 202 | CH 203 | CH 204 | CH 205 | CH 206 | CH 207 | CH 208 | CH 209 | CH 210 |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 211 | CH 212 | CH 213 | CH 214 | CH 215 | CH 216 | CH 217 | CH 218 | CH 219 | CH 220 | CH 221 | CH 222 | CH 223 | CH 224 | CH 225 | CH 226 | CH 227 | CH 228 | CH 229 | CH 230 | CH 231 |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 232 | CH 233 | CH 234 | CH 235 | CH 236 | CH 237 | CH 238 | CH 239 | CH 240 | CH 241 | CH 242 | CH 243 | CH 244 | CH 245 | CH 246 | CH 247 | CH 248 | CH 249 | CH 250 | CH 251 | CH 252 |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 253 | CH 254 | CH 255 | CH 256 | CH 257 | CH 258 | CH 259 | CH 260 | CH 261 | CH 262 | CH 263 | CH 264 | CH 265 | CH 266 | CH 267 | CH 268 | CH 269 | CH 270 | CH 271 | CH 272 | CH 273 |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |
| CH 274 | CH 275 | CH 276 | CH 277 | CH 278 | CH 279 | CH 280 | CH 281 | CH 282 | CH 283 | CH 284 | CH 285 | CH 286 | CH 287 | CH 288 | CH 289 | CH 290 | CH 291 | CH 292 | CH 293 | CH 294 |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      |

The monitor displays all 512 channels as tiles and reads one Pico buffer at a time.

Use **DMX output** to see the actual output frame currently held by the DMX engine, including values produced by Pico-side Chaser or Effects playback.

Use **Base / position** to inspect the scene base buffer used as the center for Effects.

Use **Refresh ms** to control the polling interval directly. Use **Refresh Hz** when you prefer rate instead. Both fields stay synchronized, so `500 ms` is shown as `2 Hz`. Longer intervals are calmer for observation; shorter intervals are useful when checking fast changes. **Auto refresh** starts or stops polling without changing the selected buffer.

Use **Clear all** when you want to clear both Pico buffers from the monitor page. It calls the Pico clear endpoint immediately, clears the DMX output buffer and the base/position buffer, and then refreshes the displayed tiles.

## 10. Room Plane

The **Room Plane** page is a calibration page for moving-light position mapping. It stores saved room planes, fixture mount positions, and A/B/C calibration values on the server.

Open it from the **Plane** navigation link or directly:

```
dmx_room_plane.html
```

**Room Plane** v0.9.12  
Manual screenshot room plane ready

Pico base URL: `http://192.168.0.24/` **Find Pico** Controller Show Chaser Effects GPIO Monitor Performance Plane

Manual

**Virtual Room Plane**  
Drag the red target, use the nudge tools, or pan and zoom the view while calibrated fixtures follow the target.

Weights: A 0.2 · B 0.4 · C 0.4  
Inside plane: yes

Zoom in Zoom out Reset view Pan view

Target nudge

**TOOLBOXES** Edit >

**Groups**

**Group Edit**

- MAC XENON Backdr... 6 fixtures
- RGB Spot Backdrop 12 fixtures
- MAC XENON Front 4 fixtures
- RGB Spot Front 8 fixtures
- FAL 6 fixtures
- 7
- 8

**Room Plane** -- all --

Three known points define the calibrated plane. Units can be meters, but the math only needs a consistent coordinate system.

A/B/C define the active coordinate plane. Use Planes to store and recall complete plane definitions.

|   | X | Y | Z |
|---|---|---|---|
| A | 0 | 0 | 0 |
| B | 6 | 0 | 0 |
| C | 0 | 4 | 0 |

The idea is to describe a real stage or room as a 2D coordinate plane. Points **A**, **B**, and **C** are measured points in that room. Each moving light is then calibrated by storing the pan/tilt values that hit A, B, and C. When the red target is moved in the virtual plane, the page calculates a weighted pan/tilt value for every selected fixture and sends the resulting DMX values.

### 10.1 Room Plane Workflow

1. Patch the moving lights on the Fixture Controller page.

2. Save groups if you want to select fixtures by group on the Room Plane page.
3. Open **Plane**.
4. In the **Room Plane** toolbox, enter the measured coordinates for A, B, and C.
5. Use **Load patched moving lights** in the **Fixtures** toolbox, or recall a saved plane that already contains fixtures.
6. Select fixtures directly in the fixture table, or use the **Groups** toolbox to select a whole fixture group.
7. Edit one fixture at a time. Move the real moving light to point A, store A, then repeat for B and C.
8. Move the red target in the virtual room plane. The selected fixtures update automatically.
9. In the **Planes** toolbox, click an empty tile to save the current plane definition and fixture calibration.

The target can be moved by dragging the red dot, by clicking in the plane, or by using the coarse/fine target nudge buttons below the plot. The view itself can be zoomed with the zoom buttons, mouse wheel, or a two-finger pinch on a touch screen. Pinch zoom is also available in the Controller and Show Run room-plane modals and does not move the live target when the gesture begins. Use **Pan view** when you want to drag the coordinate view instead of the target.



## TOOLBOXES

Edit



## Room Plane

-- all



Three known points define the calibrated plane. Units can be meters, but the math only needs a consistent coordinate system.

**A/B/C define the active coordinate plane. Use Planes to store and recall complete plane definitions.**

|   | X | Y | Z |
|---|---|---|---|
| A | 0 | 0 | 0 |
| B | 6 | 0 | 0 |
| C | 0 | 4 | 0 |

Target X

2.4

Target Y

1.6

Reset calibration

Demo values

## Groups

Group  
EditMAC XENON Backdr...<sup>x</sup>

6 fixtures

RGB Spot Backdrop<sup>x</sup>

12 fixtures

MAC XENON Front<sup>x</sup>

4 fixtures

RGB Spot Front<sup>x</sup>

8 fixtures

FAL<sup>x</sup>

6

The **Room Plane** toolbox contains the measured A/B/C points and the current target controls.

| Field             | Meaning                                                                         |
|-------------------|---------------------------------------------------------------------------------|
| A, B, C X/Y/Z     | Known physical points in the room. Use one consistent unit, for example meters. |
| Target X/Y        | Numeric target position in the plane.                                           |
| Reset calibration | Marks all fixture A/B/C calibration points as missing.                          |
| Demo values       | Loads the small built-in demo plane and demo fixtures.                          |

The Z value is stored with the plane and fixture mount positions. The current target interpolation uses X/Y coordinates on the plane. Z is kept so the same saved data can later support full 3D fixture-position calculations.

Use -- **all** in the Room Plane, Planes, or Fixtures toolbox header to collapse all five Room Plane page toolboxes together. Scenes and Palettes keep their standard single-toolbox collapse button, matching those toolboxes on the other pages. When all five toolboxes are collapsed, -- **all** changes to + **all**.





formance

Plane

A 0.2 · B 0.4 · C 0.4

Inside plane: yes

Pan view

## TOOLBOXES

Edit



### Planes

-- all



A saved plane includes A/B/C room points, target/view, fixture mount positions, and fixture A/B/C calibration. Click an empty tile to save the current plane.

|                                             |   |   |
|---------------------------------------------|---|---|
| Main stage plane<br>4 fixtures · calibrated | 2 | 3 |
| 4                                           | 5 | 6 |
| 7                                           | 8 | 9 |

### Room Plane

-- all



Three known points define the calibrated plane. Units can be meters, but the math only needs a consistent coordinate system.

**A/B/C define the active coordinate plane. Use Planes to store and recall complete plane definitions.**

|          | X | Y | Z |
|----------|---|---|---|
| <b>A</b> | 0 | 0 | 0 |
| <b>B</b> | 6 | 0 | 0 |
| <b>C</b> | 0 | 4 | 0 |

Target X

2.4

Target Y

1.6

Reset calibration

Demo values

### Groups



The **Planes** toolbox stores complete plane definitions as tiles, using the same visual language as scene, palette, group, and chase tiles.

| Field                                      | Meaning                                                                                                                                                                                                                  |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Filled plane tile                          | Recalls that saved plane, including A/B/C points, target, view, fixtures, mount positions, and fixture calibration.                                                                                                      |
| Empty <div>+ Save current plane tile</div> | Saves the current plane into that tile and opens <b>Edit Plane Tile</b> so it can be named and styled.                                                                                                                   |
| Pencil                                     | Opens <b>Edit Plane Tile</b> for the selected plane tile name, background color, uploaded icon, or drawn icon.                                                                                                           |
| <div>x</div>                               | Deletes the saved plane after confirmation.                                                                                                                                                                              |
| Cols / Rows                                | Shapes the Planes tile matrix.                                                                                                                                                                                           |
| Move                                       | Uses the same shared tile move behavior as the Controller, Chaser, Effects, and Show Run plane/toolbox matrices. Drag a filled plane tile to another slot, or tap a source tile and then a destination on touch screens. |

Edit Plane Tile

x

Plane

Slot 1: Main stage plane

Name

Main stage plane

Background color

Default

Choose file

No file chosen

Clear icon

Choose a background color and optionally draw/upload a visual. This is only a label for the saved plane tile; recall still loads the stored plane calibration.

Save tile

Close

Scenes and Palettes

The **Scenes** and **Palettes** toolboxes show the same shared tiles saved by Controller, Chaser, Effects, and Show Run. Click a filled Scene to send its complete stored look to the currently patched fixture controls. Click a filled Palette to send only that palette's stored controls, leaving unrelated live controls unchanged. Both recalls update the Room Plane's live fixture values so calibrated Pan/Tilt and Dimmer readings stay in step with the DMX output.

These two toolboxes are recall-only on Room Plane: clicking an empty tile never saves or overwrites data. While Toolboxes **Edit** is active, their **Cols** and **Rows** dropdowns and shared drag/tap tile movement remain available and are saved back to the shared Scene or Palette layout.



formance

Plane

A 0.2 · B 0.4 · C 0.4

Inside plane: yes

Pan view

## TOOLBOXES

Edit



### Fixtures

-- all



Mount X/Y/Z and A/B/C pan/tilt calibration are stored inside the active saved plane. Recalling another plane recalls its own fixture calibration.

Load patched moving lights

Add fixture

Remove last

| Edit | Select                              | Fixture     | Calibration | Live Pan | Live  |
|------|-------------------------------------|-------------|-------------|----------|-------|
| Edit | <input checked="" type="checkbox"/> | MAC XENON 1 | Calibrated  | 28400    | 38200 |
| Edit | <input checked="" type="checkbox"/> | MAC XENON 2 | Calibrated  | 32600    | 37400 |
| Edit | <input type="checkbox"/>            | MAC XENON 3 | Calibrated  | 37100    | 36900 |
| Edit | <input type="checkbox"/>            | MAC XENON 4 | Calibrated  | 41400    | 36500 |

### Planes

-- all



A saved plane includes A/B/C room points, target/view, fixture mount positions, and fixture A/B/C calibration. Click an empty tile to save the current plane.

✕

Main stage plane

4 fixtures · calibrated

2

3

4

5

6

7

8

9

### Room Plane

-- all



The **Fixtures** toolbox stores the relationship between each moving light and the room plane.

| Column                        | Meaning                                                                                                                                                                                         |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Edit                          | Opens the pan/tilt/dimmer editor for this fixture. Only one fixture is edited at a time.                                                                                                        |
| Select                        | Includes the fixture when the target point is applied.                                                                                                                                          |
| Calibration                   | Shows whether A, B, and C have been stored.                                                                                                                                                     |
| Live Pan / Live Tilt / Dimmer | Current fixture values used by the editor and output.                                                                                                                                           |
| Last send / channels          | The last DMX channels written for this fixture.                                                                                                                                                 |
| Mount X/Y/Z                   | The fixture's physical mounting position in room coordinates. Today this is used for the plot, saved plane context, and future 3D calibration. It is not yet used to calculate pan/tilt output. |
| A/B/C pan/tilt                | Stored calibration values for the three known points.                                                                                                                                           |

Edit MAC XENON 1

Pan 28400 · Tilt 38200

Center Pan/Tilt

Pan coarse relative

-

256

+

Pan fine relative

-

1

+

Tilt coarse relative

-

256

+

Tilt fine relative

-

1

+

Dimmer

Dimmer value

180

Pan 28400 / Tilt 38200 / Dimmer 180

Recall A

Recall B

Recall C

Close

Store A

Store B

Store C

Room Plane

In the fixture editor, **Recall A/B/C** loads an already stored calibration point into the editor. **Store A/B/C** writes the current pan/tilt editor value into that calibration point. Store buttons are separated from recall buttons and use the warning color because they overwrite calibration data.

The editor sends live DMX for patched fixtures. If the fixture profile has a 16-bit pan/tilt control, the full 0...65535 value is used. If the fixture profile only has an 8-bit pan/tilt control, the value range is 0...255.

The **Groups** toolbox on the Room Plane page is for selecting calibrated fixtures by saved group. Its **Group Edit** button opens the same Controller-style group edit workflow for the selected patched fixtures. This is separate from the fixture calibration editor: Group Edit changes live fixture controls such as dimmer, color, wheels, or pan/tilt for the selected group, while the fixture table **Edit** button is still used to recall/store A/B/C calibration points for one fixture at a time.

## 10.5 Coordinate Math

The three known room points define a triangle in the room plane:

$$\begin{aligned} A &= (A_x, A_y) \\ B &= (B_x, B_y) \end{aligned}$$

```
C = (Cx, Cy)
P = (Px, Py)    target point
```

The page calculates barycentric weights for the target point. The determinant is:

```
D = (By - Cy) * (Ax - Cx) + (Cx - Bx) * (Ay - Cy)
```

If `D` is very close to zero, A, B, and C are on one line and the plane is invalid.

The weights are:

```
wA = ((By - Cy) * (Px - Cx) + (Cx - Bx) * (Py - Cy)) / D
wB = ((Cy - Ay) * (Px - Cx) + (Ax - Cx) * (Py - Cy)) / D
wC = 1 - wA - wB
```

The readout shows these as **Weights: A / B / C**. The target is inside the triangle when all three weights are greater than or equal to zero:

```
wA >= 0 and wB >= 0 and wC >= 0
```

The page still allows positions outside the triangle. In that case the same formula extrapolates beyond the calibrated area, and the **Inside plane** readout changes to `no`.

## 10.6 Pan/Tilt Interpolation

For each fixture, the stored calibration values are:

```
panA, tiltA    values that hit point A
panB, tiltB    values that hit point B
panC, tiltC    values that hit point C
```

The target output is the weighted blend:

```
pan(P)  = wA * panA  + wB * panB  + wC * panC
tilt(P) = wA * tiltA + wB * tiltB + wC * tiltC
```

For 16-bit pan/tilt controls, this interpolation is done in the full 16-bit range:

```
0 ... 65535
```

The 16-bit value is then split into DMX coarse and fine bytes:

```
coarse = value >> 8
fine   = value & 255
```

For example, a pan value of `32768` becomes:

```
coarse = 128
fine   = 0
```



The final DMX channel numbers come from the fixture profile and the patched start address:

```
absoluteChannel = fixtureStart + relativeChannel - 1
```

The page sends selected fixtures as a batch update. While the target is being dragged or nudged, output is automatically applied after a short debounce so movement feels live without flooding the Pico with unnecessary requests.

## 10.7 Screen Transformation

The virtual room drawing uses the same room coordinates as the math, but it transforms them into screen pixels for display.

First the visible bounds are calculated from A/B/C, the target, and fixture mount positions. Then the page chooses one common scale for both axes:

```
scale = min(screenWidth / roomWidth, screenHeight / roomHeight)
```

Using one common scale is important. It means 1 meter in X and 1 meter in Y draw with the same visual length, so the room shape is not stretched on wide screens.

Room coordinates are converted to screen coordinates like this:

```
screenX = offsetX + (roomX - minX) * scale  
screenY = offsetY + (maxY - roomY) * scale
```

Y is inverted because screen coordinates grow downward, while room Y grows upward in the virtual plane.

The view zoom changes the visible bounds before this transformation. The pan view changes the center point of those bounds. The saved plane stores the current view, so a recalled plane opens with the same framing.

## 10.8 What Is Saved

Room Plane data is saved to the server in `room_plane_setup.json`. A saved plane contains:

- A/B/C room point coordinates
- Target position
- View zoom and pan center
- Fixture list for that plane
- Fixture mount X/Y/Z
- Fixture A/B/C pan/tilt calibration
- Active saved plane ID

This means you can create multiple room planes for different physical setups or stage areas. Recalling a plane recalls its own fixture calibration.

When a saved plane is loaded, its fixtures are matched to the current Fixture Controller patch by fixture ID. The saved mount position and A/B/C calibration remain plane-specific, while the current fixture name, profile, DMX start address, and live connection are used. Therefore **Fixtures > Edit > Recall A/B/C** moves the physical fixture even if its patch address changed after the plane was saved.

## 10.9 Current Limits

The current implementation is calibration-based. It does not yet calculate pan/tilt from fixture mount position, fixture orientation, beam length, and full 3D geometry. Mount X/Y/Z is saved and drawn, but the output is currently calculated from the measured A/B/C pan/tilt values.

Use three non-collinear points. If A, B, and C are on one line, the determinant becomes zero and the page cannot calculate a valid plane.

## 11. Backup and Import

Use **Fixture Controller > Show > Export Show** before large changes or before moving the show to another computer. Show and catalog backup are separate actions:

- **Export Show** downloads a show-name-specific file such as `pico_dmx_summer-gala_show.json`. It stores the show name and embeds the richer fixture-library entries and modes referenced by patched fixtures.
- **Export Library** downloads `pico_dmx_fixture_library.zip`, containing `pico_dmx_fixture_library.json` and preserving the complete reusable fixture catalog.

For a timestamped repository backup, run this command from the project folder:

```
.\scripts\backup_show.ps1 -BaseUri http://192.168.0.12/dmx/ -AllowProtectedEnvironment
```

The script is read-only toward XAMPP: it uses HTTP `GET` requests and does not post, restore, edit, or directly copy server data. It creates a timestamped folder under `show-backups/` with the same two importable files, diagnostic endpoint-response snapshots, restore instructions, and a SHA-256 integrity manifest. Without `-AllowProtectedEnvironment`, the script refuses to read `/dmx/`; its default target is the isolated `/dmx-test/` environment.

The exported setup file includes:

- Fixture profiles and patched fixtures
- Current live fixture values
- Groups
- Scenes
- Palettes
- Saved chases and saved Pico chaser slot payloads
- Effects settings, saved effects, and saved Pico effect slot payloads
- Saved room planes and fixture calibration
- GPIO mappings
- Toolbox layout, collapse state, grid sizes, and other saved UI state

The file also stores the project name, project version, export time, and setup format version. During import, the controller checks the setup format before writing anything to the server. Older supported formats are upgraded automatically to the current format. If a future setup file uses a newer format than the installed software understands, import stops and asks you to update the controller software first.

Use **Import Show** on the Fixture Controller to restore a show backup. Any `.json` filename is accepted, including renamed files and names containing spaces such as `xampp_setup.json`; the importer validates the JSON content, not the filename. Before replacing data, the confirmation identifies the

embedded show name, for example **Import xyz\_show?** Its saved show name, Controller profiles, patched fixtures, and embedded used definitions are sufficient to operate the restored show. Older backups without a show name load as **Untitled Show**.

Before the restore writes any data, **Resolve Fixture Updates** appears when a show fixture definition is missing from or differs from the current server library. Each table row shows the show fixture, the difference, and a library fixture/mode selector:

- Rows initially show **Keep show**. The embedded show definition is kept and merged into the catalog without removing unrelated fixtures or modes.
- Tap a row to highlight it and change its decision to **Use library**. The imported show profile then uses the selected library mode. Tap the row again to return to **Keep show**.
- Change the selector to map a show fixture to a different library fixture or mode; that row is highlighted automatically.
- **Use All Matches** highlights every row that already has a library mapping.
- **Cancel Import** closes the dialog without importing any setup data.

When a library profile is selected, matching show control IDs are preserved so existing saved values continue to refer to the corresponding controls. To restore the complete reusable catalog, import `pico_dmx_fixture_library.zip` through **Controller > Show > Import Library**. Existing uncompressed `pico_dmx_fixture_library.json` files remain supported. The separate **Export Library** button exports the same complete catalog without exporting a show.

## Using Multiple Browser Devices

You can keep the controller or operator pages open on more than one browser device. Chaser slots, Effects slots, and shared UI-state updates are saved as locked transactions, so two nearly simultaneous saves do not overwrite each other with an older copy of the setup file. Pico HTTP requests are also isolated per connection, allowing status polling and control or slot-upload requests to overlap safely.

When you expand the last toolbox on an iPad or another narrow portrait display, the toolbox rail automatically scrolls the expanded card into view. The card remains inside the toolbox rail; scroll the rail itself to reach the rest of its contents.

**Patch CSV** is separate. It exports the patched DMX channel table for documentation or troubleshooting, not for restoring the show.

---

## 11. Clear Functions

There are two different clear actions:

| Action            | What it clears                             | When to use                                             |
|-------------------|--------------------------------------------|---------------------------------------------------------|
| DMX clear         | Live DMX output and the motion base buffer | Full reset of output and base position                  |
| Output-only clear | Live DMX output only                       | Black out output while keeping the stored motion center |

Use output-only clear when you want Effects to resume around the same stored center after the blackout.

# Troubleshooting

## The UI does not control the Pico

- Check that the Pico is powered and connected to WiFi.
- Open the Pico URL directly in a browser, for example `http://192.168.0.24/`.
- Make sure the base URL in the UI ends with `/`.
- Make sure the Fixture Controller has the correct Pico base URL.

## Chaser capture does not contain the expected values

- Move or recall the values on the Fixture Controller first.
- Make sure the participating controls include the controls you want to capture.
- Save or reload the Fixture Controller setup if fixtures were changed recently.

## Effects move around the wrong center

- Recall the desired scene first.
- On the Effects page, click the same scene in the scene toolbox.
- Then start the effect slot.

## GPIO mapping does not react

- Check `/gpio/status` or the status panel on the GPIO page.
- Confirm that the selected pin is not reserved or already used.
- Check pull mode and trigger edge.
- For ADC, use only GPIO26, GPIO27, or GPIO28.

## A chaser has more than 32 steps

The firmware supports 32 steps per chaser slot. Keep the chase within this limit before uploading to the Pico.