

Chapter7 Engine Base System

Engine Proper System

Cylinder Head Parts

1. Intake Valves
2. Exhaust Valves
3. Valve Springs
4. Valve Seats
5. Valve Guide
6. Key Lock Cotter (Keeper)
7. Combustion Chamber
8. Spark Plug
9. Fuel Injectors
10. Spring Retainer
11. Cam Shaft
12. Cam Lock
13. Rocker Arm Tappet
14. Shim-Type Tappet
15. Fix-Type Tappet
16. Hydraulic Lifter Tappet
17. Cam Gauge
18. Cam Shaft Bearings
19. Push Rods
20. Head Gasket
21. Head Cover
22. Head Cover Seal
23. Head Cover Seating
24. Oil Filler Cap
25. Oil Passages
26. Coolant Passages
27. Intake Manifold
28. Exhaust Manifold
29. Cam Rail

30. Center Grip



31. Ignition Cable

32. High Tension Wire

Intake Valves

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts


[View pictures ↗](#) [↻ Reload pictures](#)

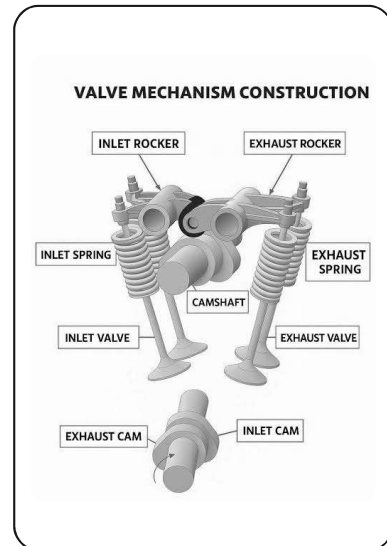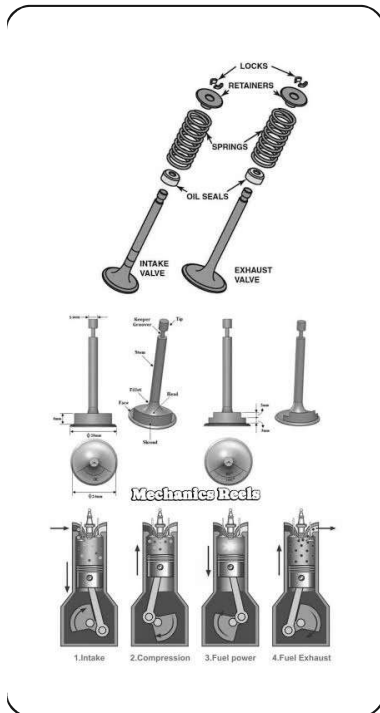

Exhaust Valves

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts


[View pictures ↗](#) [↻ Reload pictures](#)

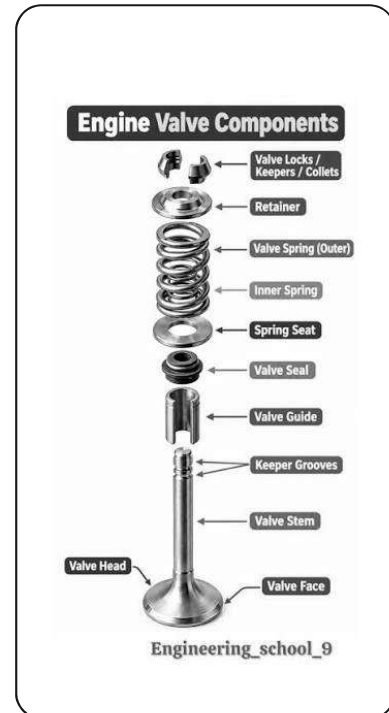

Valve Springs

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts




[View pictures ↗](#) [↻ Reload pictures](#)

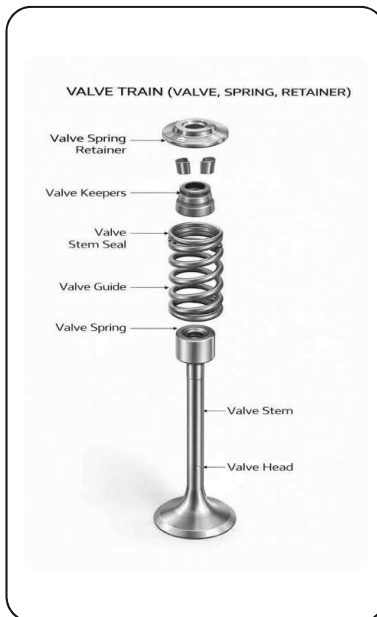

Valve
Seats

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts


[View pictures ↗](#) [↻ Reload pictures](#)

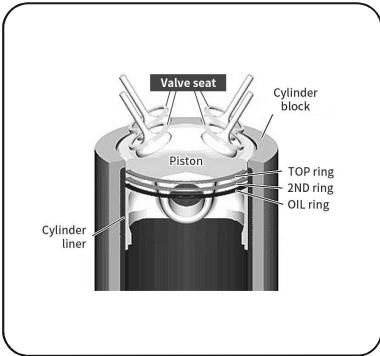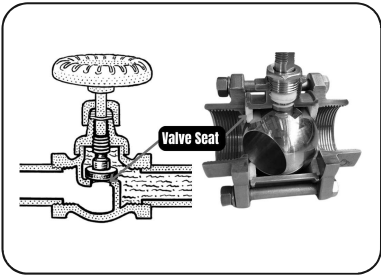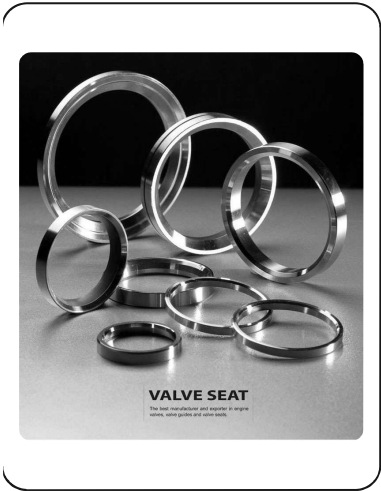

Valve
Guide

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

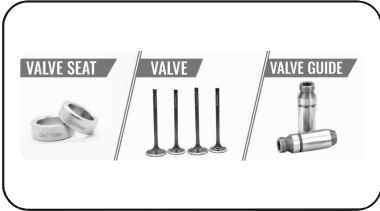



Key Lock Chapter6_Engine_Base_System >
Cotter Engine_Proper_System >
(Keeper) Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)



Combustion Chamber Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

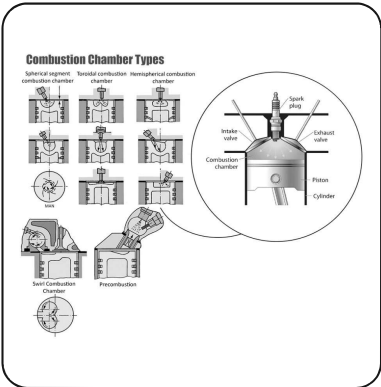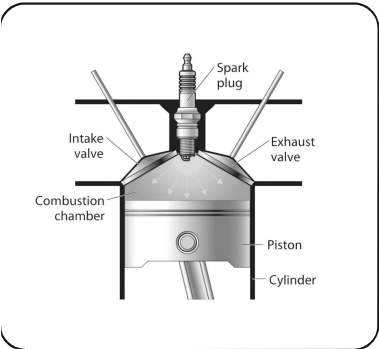

Spark Plug

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts



[View pictures ↗](#) [↻ Reload pictures](#)



Fuel Injectors

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts


[View pictures ↗](#) [↻ Reload pictures](#)

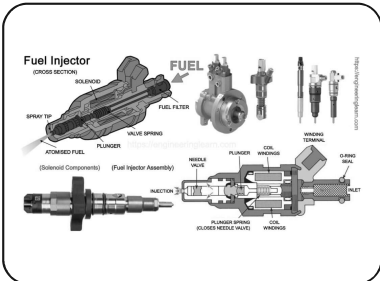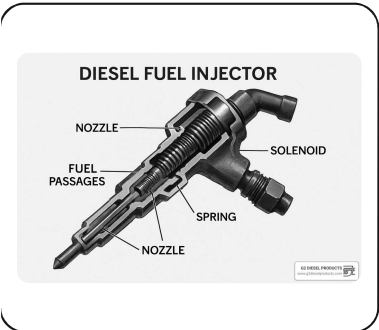

Spring Retainer

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

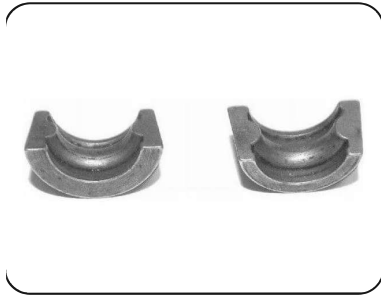

Cam Shaft

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)



Cam
Lock

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts


[View pictures ↗](#) [↻ Reload pictures](#)



Rocker
Arm
Tappet


Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

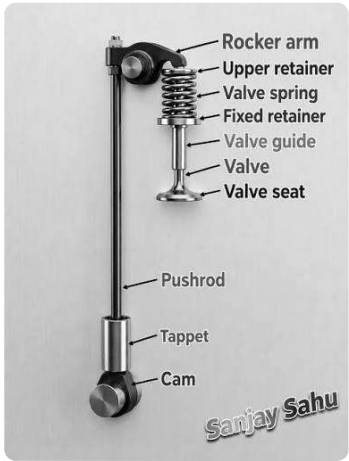


Shim- Chapter6_Engine_Base_System >
Type Engine_Proper_System >
Tappet Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

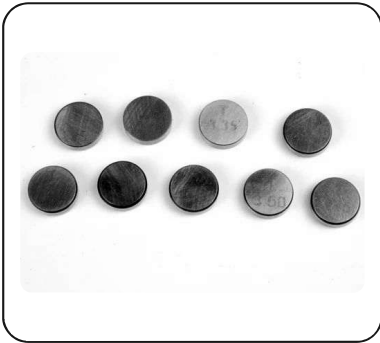

Fix- Chapter6_Engine_Base_System >
Type Engine_Proper_System >
Tappet Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

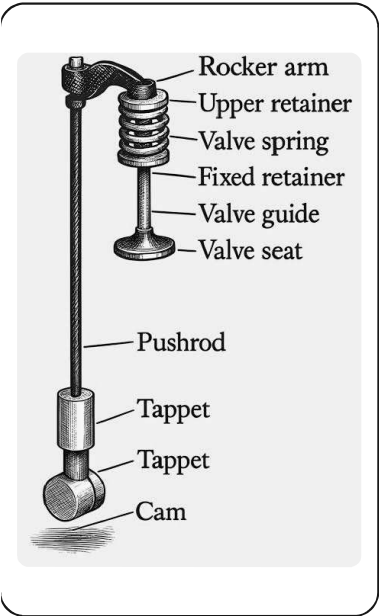

Hydraulic

Chapter6_Engine_Base_System >


Lifter

Engine_Proper_System >

Tappet

Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

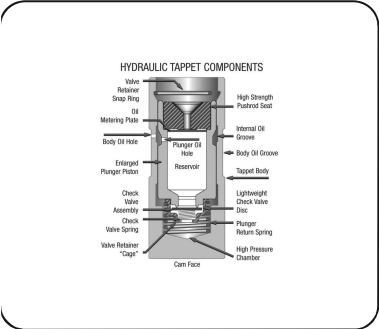

Cam


Chapter6_Engine_Base_System >

Gauge

Engine_Proper_System >

Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

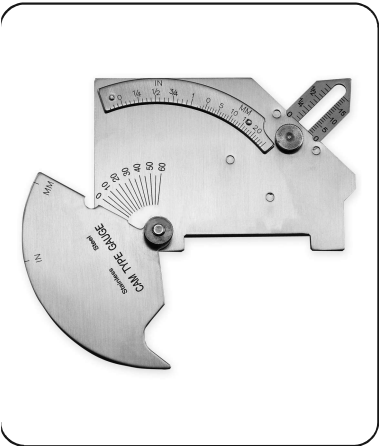


Cam Chapter6_Engine_Base_System >

Shaft Engine_Proper_System >

[View pictures ↗](#) [↻ Reload pictures](#)

Bearings Cylinder_Head_Parts


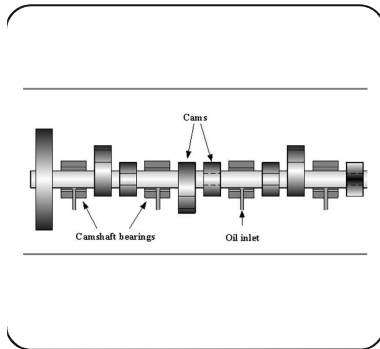


Push Chapter6_Engine_Base_System >

Rods Engine_Proper_System >

[View pictures ↗](#) [↻ Reload pictures](#)

Cylinder_Head_Parts


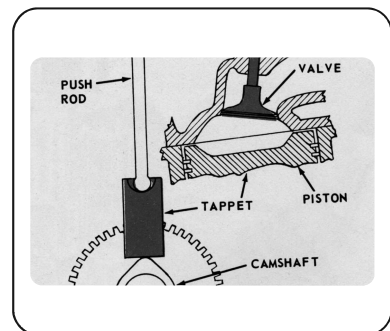
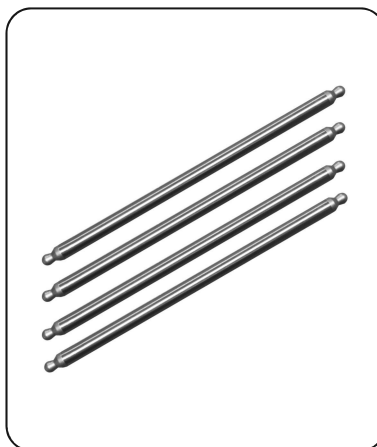


Head Chapter6_Engine_Base_System >

Gasket Engine_Proper_System >

[View pictures ↗](#) [↻ Reload pictures](#)


Cylinder_Head_Parts

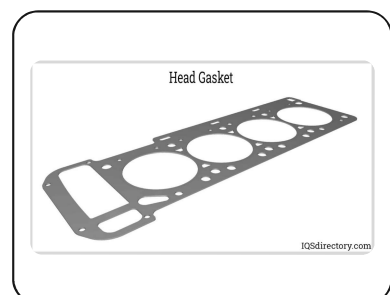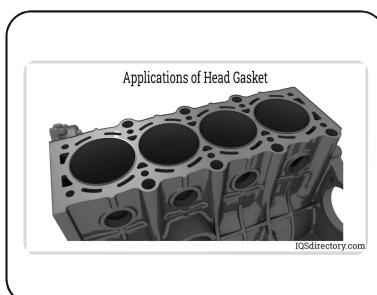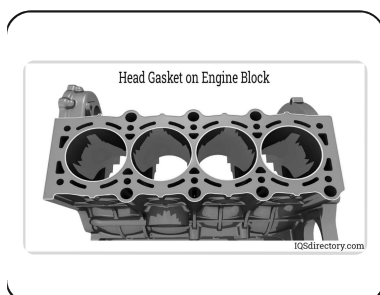

**Head
Cover**


Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

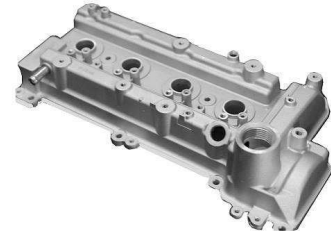**Head
Cover
Seal**

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

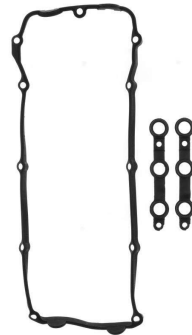


Head Chapter6_Engine_Base_System >

Cover Engine_Proper_System >

[View pictures ↗](#) [↻ Reload pictures](#)

Seating Cylinder_Head_Parts

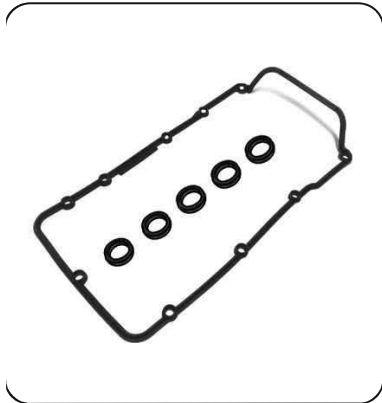

Oil Chapter6_Engine_Base_System >

Filler Engine_Proper_System >

[View pictures ↗](#) [↻ Reload pictures](#)




Cap Cylinder_Head_Parts



Oil
Passages

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts



[View pictures ↗](#) [↻ Reload pictures](#)

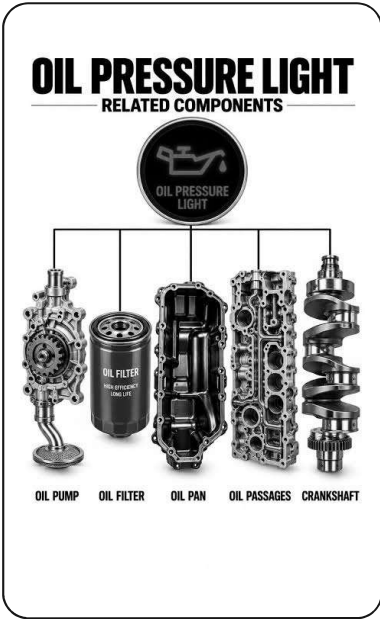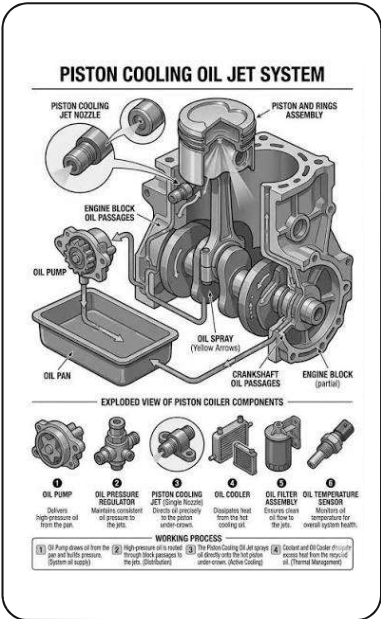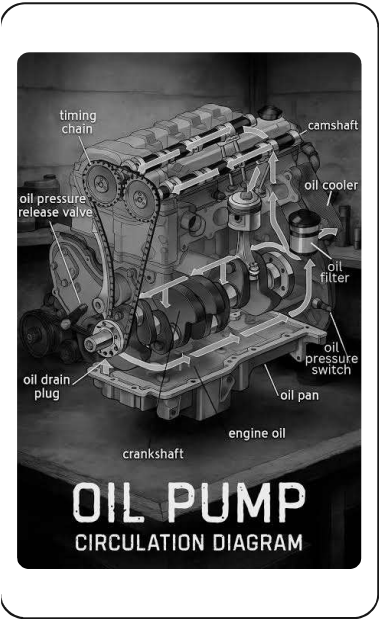

Coolant
Passages

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts


[View pictures ↗](#) [↻ Reload pictures](#)

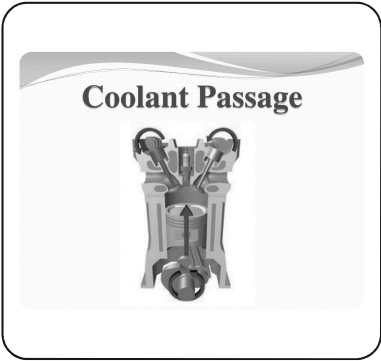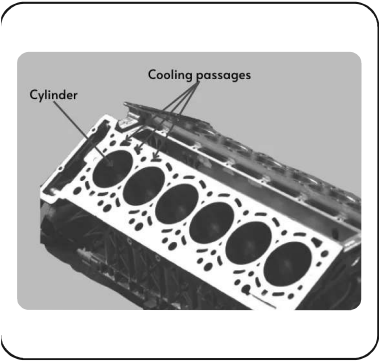

Intake Manifold

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

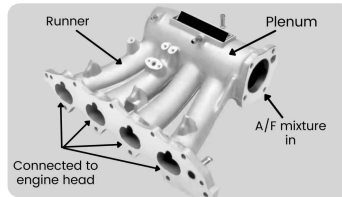

Exhaust Manifold

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts



[View pictures ↗](#) [↻ Reload pictures](#)



Cam
Rail

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts


[View pictures ↗](#) [↻ Reload pictures](#)

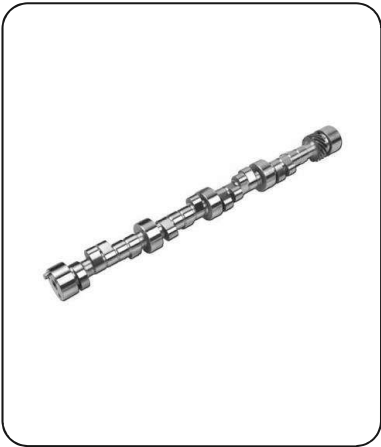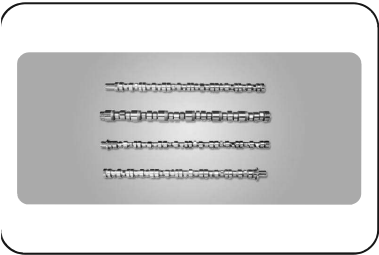

Center
Grip

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts


[View pictures ↗](#) [↻ Reload pictures](#)

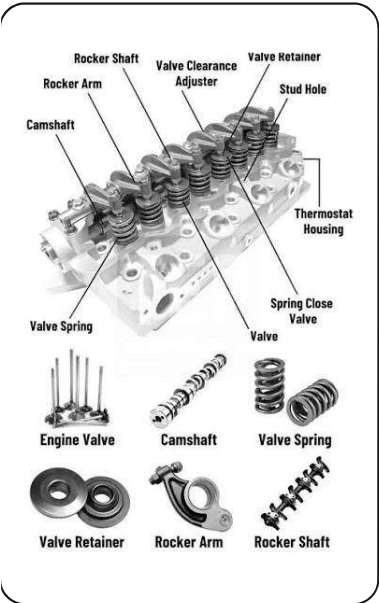

Ignition
Cable

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

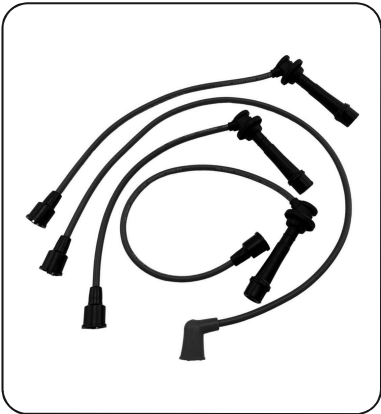

High
Tension
Wire

Chapter6_Engine_Base_System >
Engine_Proper_System >
Cylinder_Head_Parts

[View pictures ↗](#) [↻ Reload pictures](#)

