

Getting Started with Seeed Studio XIAO nRF52840 Series

XIAO nRF52840	XIAO nRF52840 Sense	XIAO nRF52840
		
Get One Now 	Get One Now 	Get One Now

As the first wireless product in the Seeed Studio XIAO family, **Seeed Studio XIAO nRF52840** is equipped with a powerful **Nordic nRF52840 MCU** which integrates **Bluetooth 5.0** connectivity. Meanwhile, it has a **small and exquisite form-factor** which can be used for wearable devices and Internet of Things projects. The **single-sided surface-mountable design** and the onboard **Bluetooth antenna** can greatly facilitate the rapid deployment of IoT projects.

In addition, there is an advanced version of this board, **Seeed Studio XIAO nRF52840 Sense**. It is integrated with two extra onboard sensors. One of them is a **Pulse Density Modulation (PDM) Digital Microphone**. It can receive audio data in real-time which allows it to be used for audio recognition. The other one is a **6-axis Inertial Measurement Unit (IMU)**, this IMU can be very useful in TinyML projects like gesture recognition. These onboard sensors provide a great convenience for users while the board is ultra-small.

The newly upgraded **XIAO nRF52840 Plus** and **XIAO nRF52840 Sense Plus** provide considerable increases in functionality and usability. The number of multifunctional pins has been increased to **20**, **I2S** and **SPI** resources have been added to support more complex projects, **NFC pins** have been exposed for easier integration into IoT and smart card applications, and the **BAT pin** has been repositioned for better soldering convenience, resulting in a more user-friendly hardware experience.

Compared to Seeed Studio XIAO RP2040, Seeed Studio XIAO nRF52840 contains **richer interfaces**. The first thing to note is that the **Near Field Communication (NFC) interface** is functional on the board. Secondly, there is a tiny **reset button** on the side of the Type-C interface. On the other side, there is a **3-in-one LED (User LED)** along with a **Charge LED** to indicate the charging status when a battery is connected. There are **11 digital I/O** that can be used as **PWM pins** and **6 analog I/O** that can be used as **ADC pins**. It supports all three common serial interfaces such as **UART, I2C, and SPI**. Same as Seeed Studio XIAO RP2040, it has an **onboard 2 MB flash** which means it can also be programmed using **Arduino, MicroPython, CircuitPython, or other programming languages**.

Seeed Studio XIAO nRF52840 Sense is compatible to the Seeed Studio XIAO expansion board.

Get One Now 

Features

- Powerful wireless capabilities: Bluetooth 5.0 with onboard antenna
- Powerful CPU: Nordic nRF52840, ARM® Cortex®-M4 32-bit processor with FPU, 64 MHz
- Ultra-Low Power: Standby power consumption is less than 5µA
- Battery charging chip: Supports lithium battery charge and discharge management
- Onboard 2 MB flash
- Onboard PDM microphone (only in Seeed Studio XIAO nRF52840 Sense)
- Onboard 6-axis LSM6DS3TR-C IMU (only in Seeed Studio XIAO nRF52840 Sense)
- Ultra Small Size: 21 x 17.8mm, Seeed Studio XIAO series classic form-factor for wearable devices
- Rich interfaces: 1xUART, 1xI2C, 1xSPI, 1xNFC, 1xSWD, 11xGPIO(PWM), 6xADC in

XIAO nRF52840 (Sense); and 2xUART, 1xI2C, 2xSPI, 1xI2S, 1xNFC, 1xSWD, 18xGPIO(PWM), 6xADC in XIAO nRF52840 (Sense) Plus

- Single-sided components, surface mounting design

Specifications comparison

Item	Seeed Studio XIAO nRF52840	Seeed Studio XIAO nRF52840 Sense	Seeed Studio XIAO nRF52840 Plus	Seeed Studio XIAO nRF52840 Sense Plus
Processor	Nordic nRF52840, ARM® Cortex®-M4 32-bit processor with FPU, 64 MHz			
Wireless Connectivity	Bluetooth Low Energy 5.4/ Bluetooth Mesh/NFC			
Memory	256 KB RAM,1MB Flash 2MB onboard Flash			
Built-in Sensors	N/A	6 DOF IMU (LSM6DS3TR-C), PDM Microphone	N/A	6 DOF IMU (LSM6DS3TR-C), PDM Microphone
Interfaces	1xI2C, 1xUART, 1xSPI		1xI2C, 2xUART, 2xSPI, 1xI2S	
PWM/Analog Pins	11/6		20/6	
Onboard Buttons	Reset Button			
Onboard LEDs	3-in-one LED/ Charge LED			
Battery Charge Chip	BQ25101			


Programming Languages	Arduino/ MicroPython/ CircuitPython
------------------------------	-------------------------------------

Hardware overview


XIAO nRF52840/XIAO nRF52840 Sense

XIAO nRF52840 Plus/XIAO nRF52840 Sense Plus


XIAO nRF52840 Plus front indication diagram

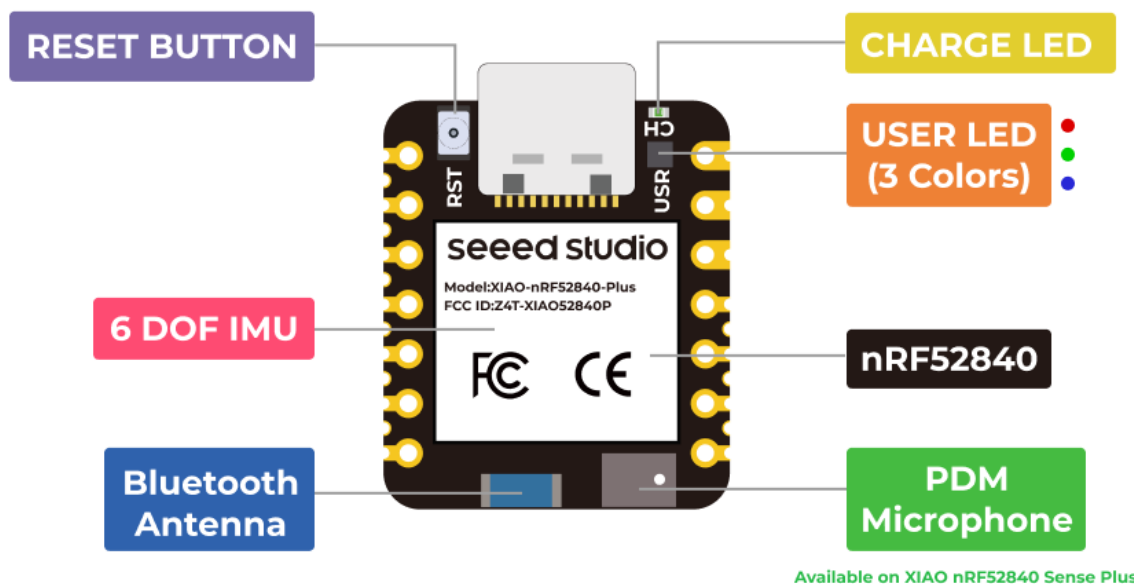


XIAO nRF52840 Plus back indication diagram

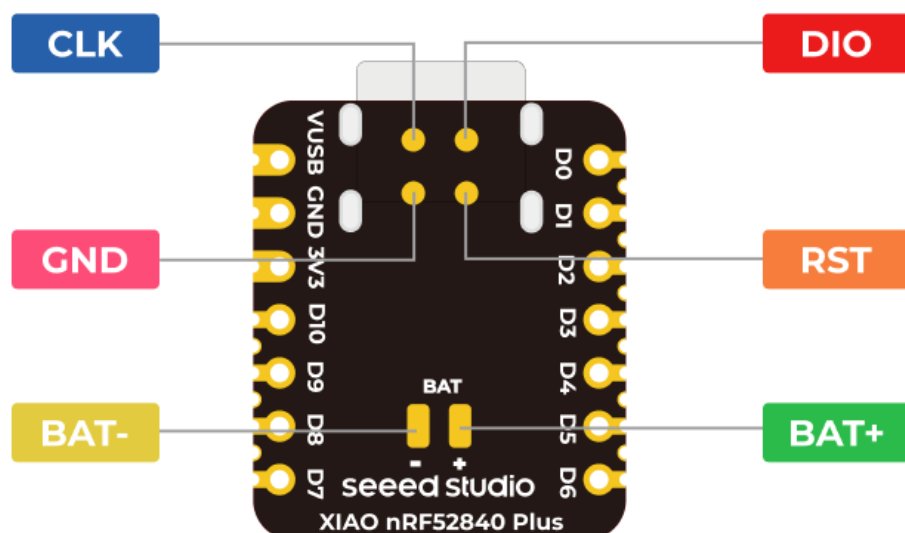

XIAO nRF52840 Plus Pin List

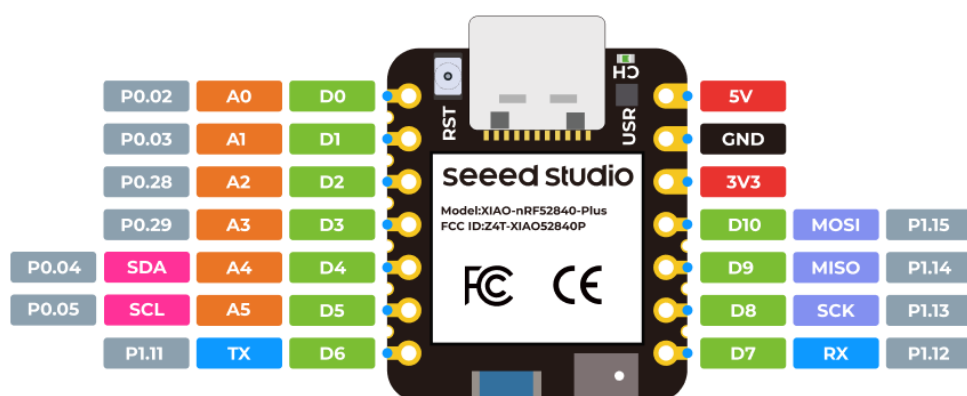

Analog
Digital
BAT
Power
GND
NFC
SPI
UART
Pin No.
I2S
I2C

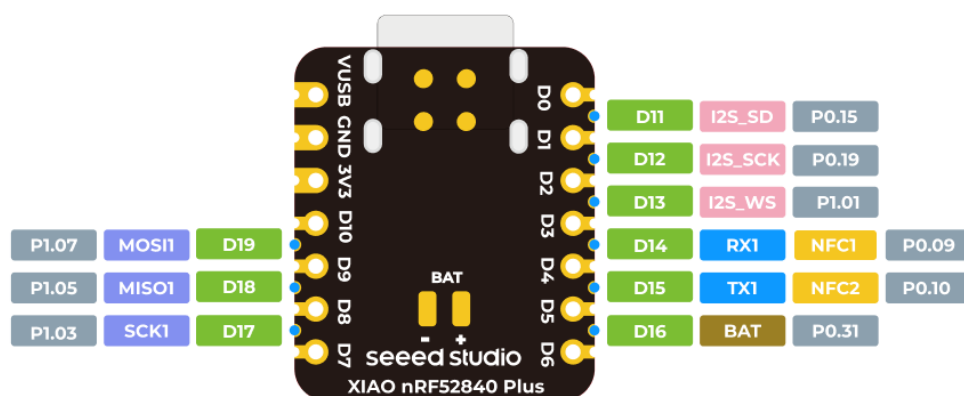

XIAO Pin	Function	Chip Pin	Alternate Functions	Description	Arduino Pin
5V	VBUS			Power Input/Output	
GND					
3V3	3V3_OUT			Power Output	
D0	Analog	P0.02		GPIO, ADC	0
D1	Analog	P0.03		GPIO, ADC	1
D2	Analog	P0.28		GPIO, ADC	2
D3	Analog	P0.29		GPIO, ADC	3
D4	Analog,SDA	P0.04		GPIO, I2C Data, ADC	4
D5	Analog,SCL	P0.05		GPIO, I2C Clock, ADC	5
D6	TX	P1.11		GPIO, UART Transmit	7/6
D7	RX	P1.12		GPIO, UART Receive	8/7
D8	SPI_SCK	P1.13		GPIO, SPI Clock	9/8
D9	SPI_MISO	P1.14		GPIO, SPI Data	10/9

XIAO Pin	Function	Chip Pin	Alternate Functions	Description	Ardui Nanr
D10	SPI_MOSI	P1.15		GPIO, SPI Data	11/1
D11	I2S_SD	P0.15		GPIO, I2S, ADC	
D12	I2S_SCK	P0.19		GPIO,I2S, ADC	
D13	I2S_WS	P1.01		GPIO, I2S ADC	
D14	RX1	P0.09	NFC1	GPIO, UART Receive, ADC	
D15	TX1	P0.10	NFC2	GPIO, UART Transmit, ADC	
D16	AIN7_BAT	P0.31		Battery voltage ADC read pin	
D17	SCK1	P1.03		GPIO, SPI	
D18	MISO1	P1.05		GPIO, SPI	
D19	MOSI1	P1.07		GPIO, SPI	
ADC_BAT	READ_BAT_ENABLE	P0.14		Enable control for battery voltage reading	

XIAO Pin	Function	Chip Pin	Alternate Functions	Description	Ardui Nanr
				(output LOW to enable)	
6 DOF IMU_PWR		P1.08		power switch of the 6D module	
6 DOF IMU__INT1		P0.11		Interrupt signal pin of the 6D module	
PDM Microphone_DATA		P0.16		PDM audio data input pin	
PDM Microphone_CLK		P1.00		PDM audio clock output pin	
Reset		P0.18		RESET	
RF Switch Port Select		P2.05		Switch onboard antenna	
RF Switch Power		P2.03		Power	
CHARGE_LED		P0.17		CHG- LED_Red	
USER_LED_R		P0.26		User- controlled red RGB	11

XIAO Pin	Function	Chip Pin	Alternate Functions	Description	Ardui Narr
				LED pin	
USER_LED_B		P0.06		User-controlled blue RGB LED pin	13/1
USER_LED_G		P0.30		User-controlled green RGB LED pin	12/1

Two Arduino Libraries

Seeed Studio XIAO nRF52840 assembles many functions in one tiny board and sometimes may not perform the best of them. Hence, Seeed has published two Arduino libraries to let it **maximum the power of each function**. Therefore:

- It is recommended to use the `Seeed nRF52 Boards` library if you want to apply **Bluetooth function** and "**Low Energy Cost Function**".
- It is recommended to use the `Seeed nRF52 mbed-enabled Boards` library if you want to use it in **embedded Machine Learning Applications** or apply "**IMU & PDM advanced function**".
- Both libraries support very well when it comes to the basic usage, such as **LED, Digital, Analog, Serial, I2C, SPI**.

The Pin definition supported by these two libraries might be a little different and Seeed will keep update the wiki until it is clear.



TIP

1. If you use the onboard package of Seeed nRF52 Boards, the Serial function may not compile. The solution is to add the line `#include <Adafruit_TinyUSB.h>` in your code. You can download this package from: <https://github.com/>

[adafruit/Adafruit_TinyUSB_Arduino](#)

2. If you prefer a simpler approach, you can choose Seeed nRF52 mbed-enabled Boards from the beginning. It supports the compilation of the Serial function without the need for additional modifications.

Getting started

First, we are going to connect the Seeed Studio XIAO nRF52840 (Sense) to the computer and upload a simple code from Arduino IDE to check whether the board is functioning well.

Hardware setup

You need to prepare the following:


- 1 x [Seeed Studio XIAO nRF52840](#) or [Studio XIAO nRF52840 Sense](#)
- 1 x Computer
- 1 x USB Type-C cable



TIP

Some USB cables can only supply power and cannot transfer data. If you don't have a USB cable or don't know if your USB cable can transmit data, you can check [Seeed USB Type-C support USB 3.1](#).

Connect the Seeed Studio XIAO nRF52840 (Sense) to your computer via a USB Type-C cable.

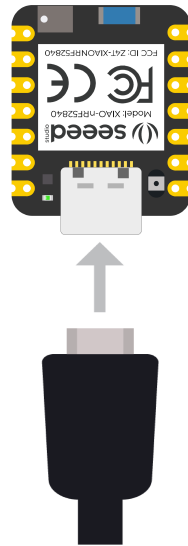


Software setup

- **Step 1.** Download and Install the latest version of Arduino IDE according to your operating system


Download Arduino IDE

- **Step 2.** Launch the Arduino application
- **Step 3.** Add Seeed Studio XIAO nRF52840 (Sense) board package to your Arduino IDE

Navigate to **File > Preferences**, and fill "**Additional Boards Manager URLs**" with the url below: https://files.seeedstudio.com/arduino/package_seeeduino_boards_index.json

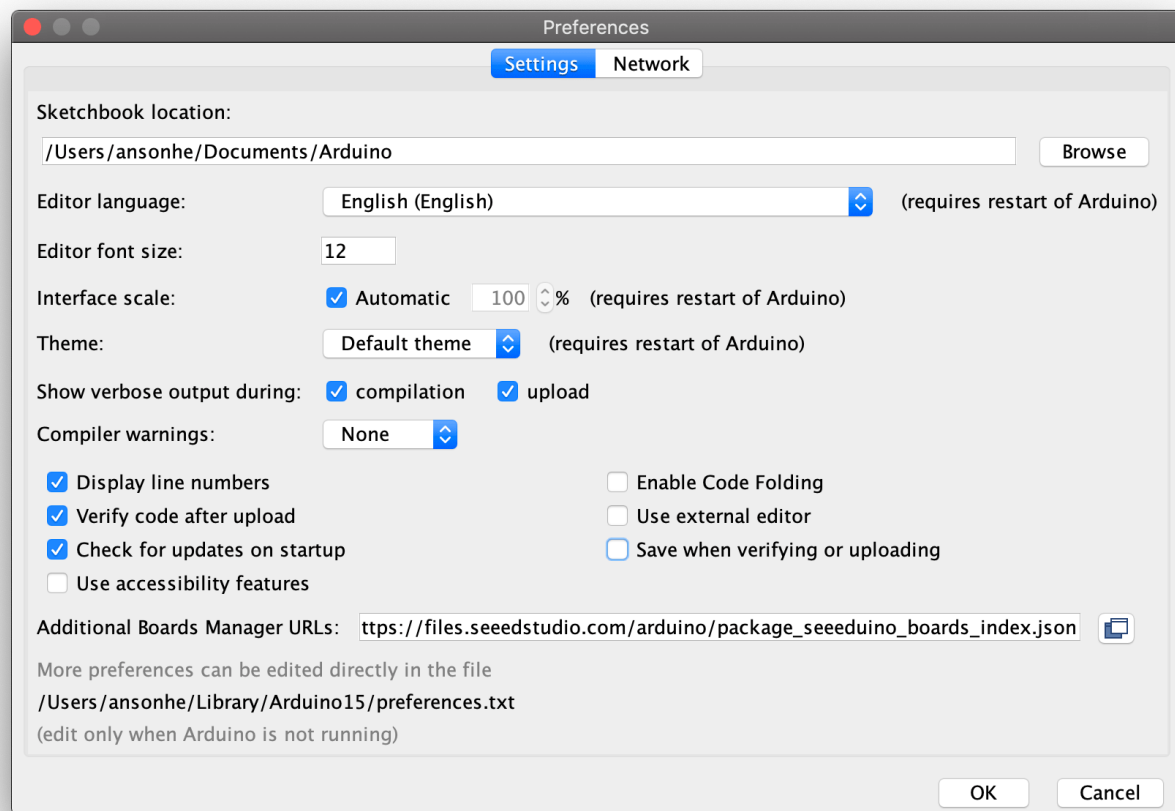


Navigate to **Tools > Board > Boards Manager...**, type the keyword "**seeed nrf52**" in the search box, select the latest version of the board you want, and install it. You can install both.

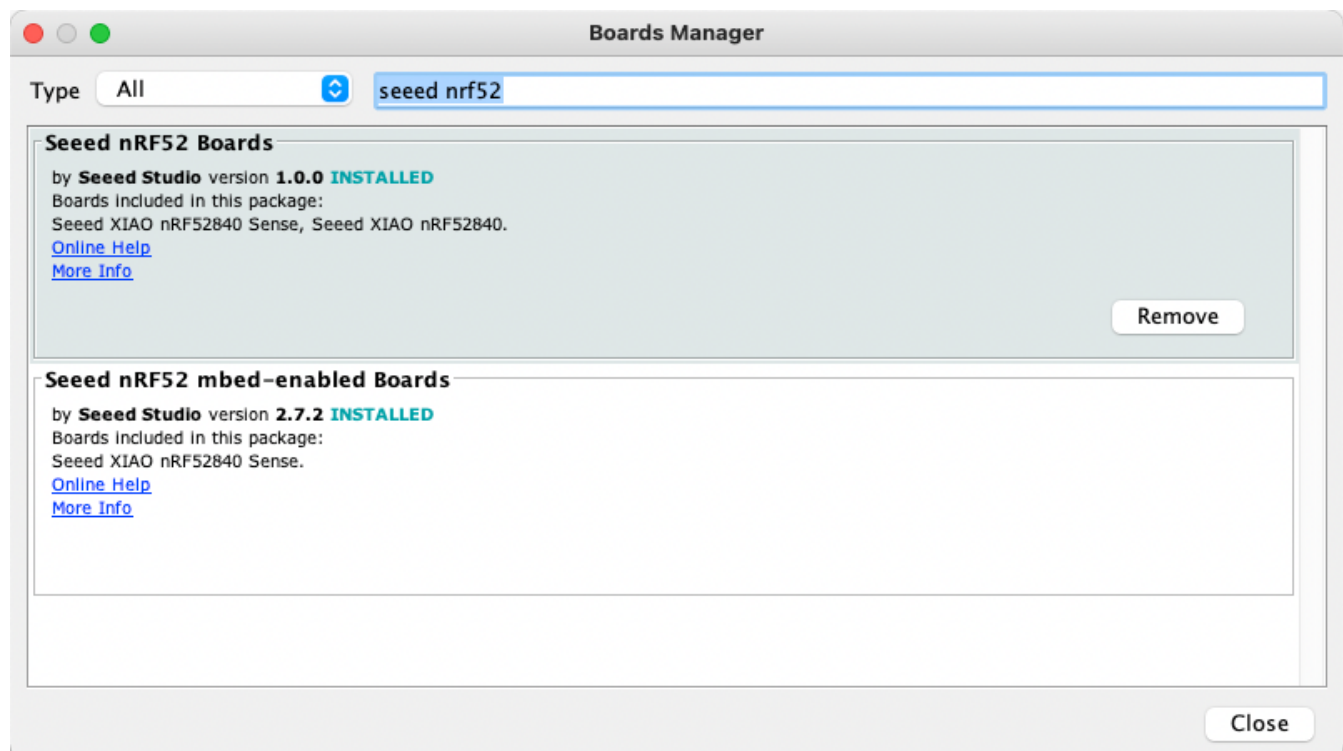

- **Step 4.** Select your board and port

Board


After installing the board package, navigate to **Tools > Board** and choose the board you want, continue to select "**Seeed XIAO nRF52840 Sense**". Now we have finished setting up the Seeed Studio XIAO nRF52840 (Sense) for Arduino IDE.

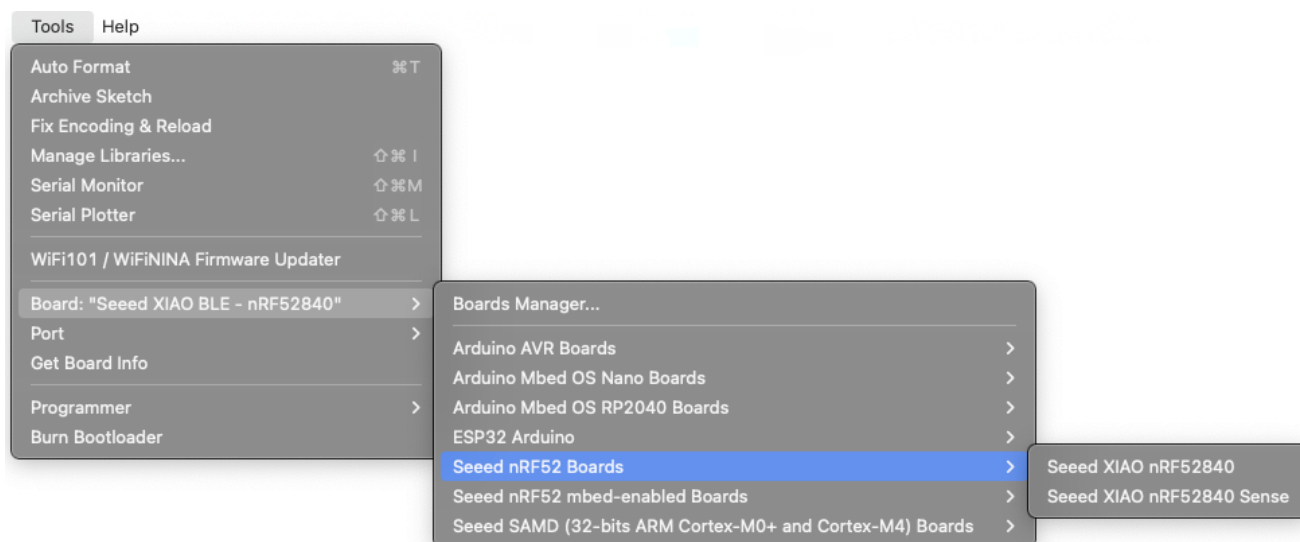


Port

Navigate to **Tools > Port** and select the serial port name of the connected Seeed Studio XIAO nRF52840 (Sense). This is likely to be COM3 or higher (**COM1** and **COM2** are usually reserved for hardware serial ports). The serial port of the connected Seeed Studio XIAO nRF52840 (Sense) usually contains parentheses that are written **Seeed Studio XIAO nRF52840** for **Seeed Studio XIAO nRF52840** or **Seeed Studio XIAO nRF52840 Sense** for **Seeed Studio XIAO nRF52840 Sense**.


rometer | Arduino 1.8.15

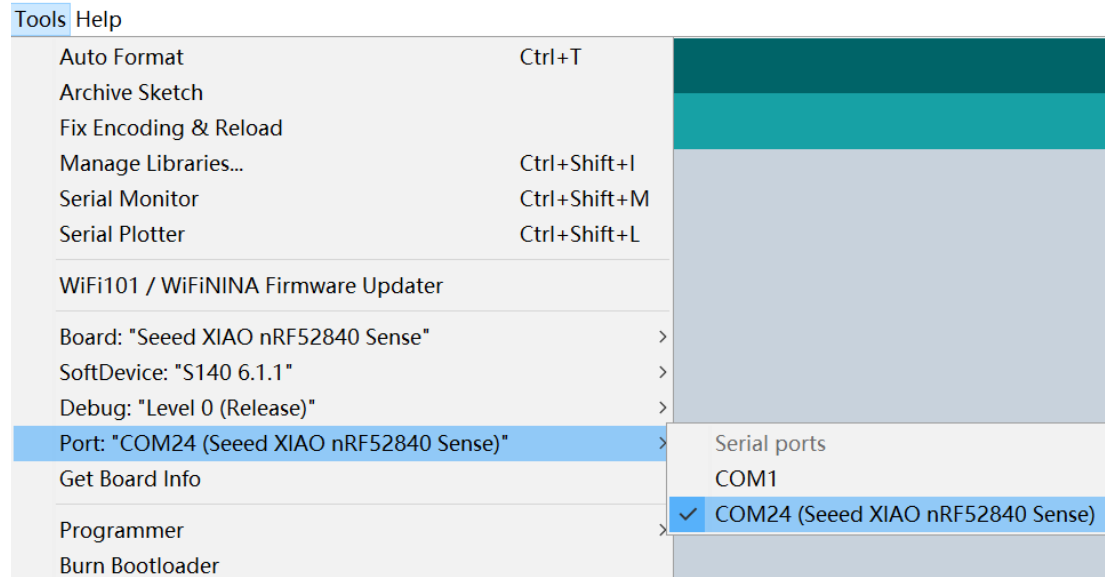

- **Step 5.** Navigate to **File > Examples > 01.Basics > Blink** to open **Blink** example

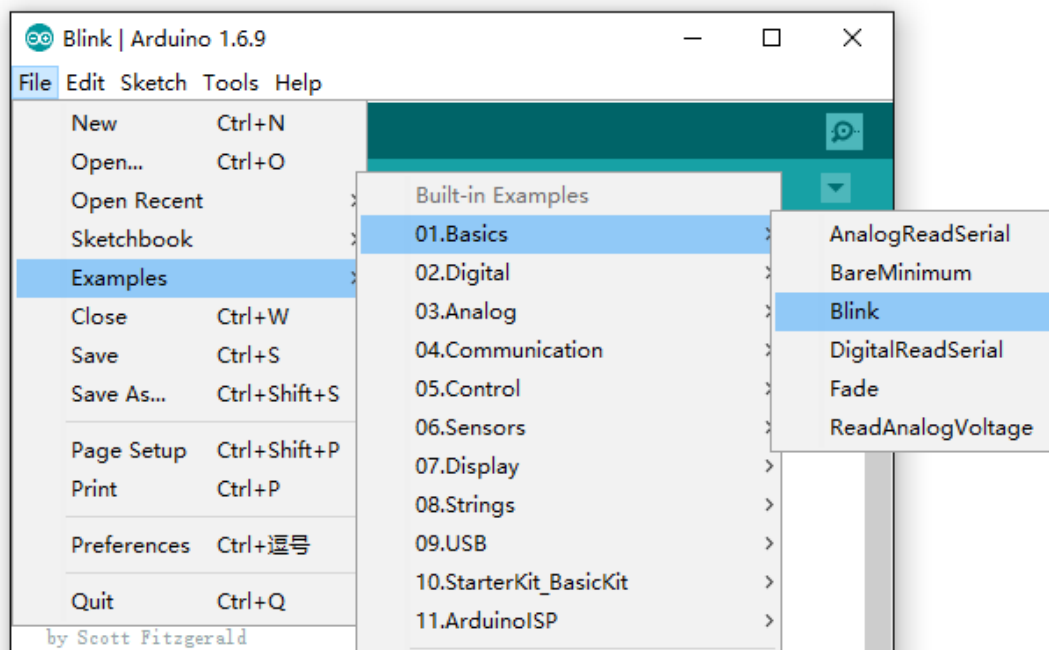

- **Step 6.** Click the **Upload** button to upload the Blink example code to the board

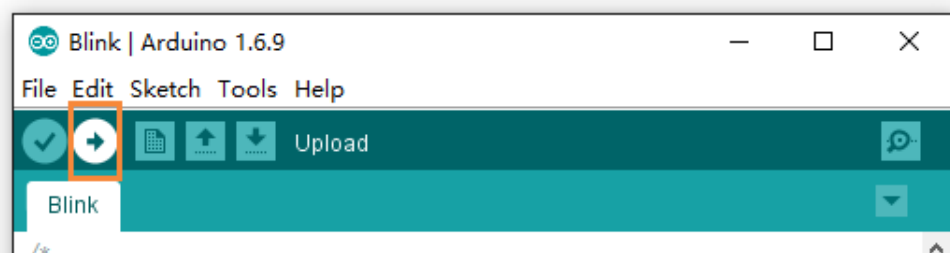

Once uploaded, you will see the built-in red LED blinking with a 1-second delay between each blink. This means the connection is successful and now you can explore more

projects with the Seeed Studio XIAO nRF52840 (Sense)!

Playing with the built-in 3-in-one LED

Seeed Studio XIAO nRF52840 (Sense) has an **onboard 3-in-one LED** which is user-programmable. Now you will learn how to control the RGB colors one-by-one using Arduino!

You first have to understand that the behavior of this LED is not as usual when controlled by the code. The **LED turns ON** when we give a **LOW signal** and it **turns OFF** when we give a **HIGH signal**. This is because this LED is controlled by a common anode and will light up only with a low-level signal.

An example code would be:

```
void setup() {  
  pinMode(LED_BUILTIN, OUTPUT);  
}  
  
void loop() {  
  digitalWrite(LED_BUILTIN, HIGH);  
}
```

Here, even though **HIGH** is used, the LED will be **OFF**. You need to replace **HIGH** with **LOW** to turn **ON** the LED.

Refer to the following pin mappings of the LEDs and use them in your codes:

- Red LED = LED_BUILTIN or LED_RED
- Blue LED = LED_BLUE
- Green LED = LED_GREEN

Power Consumption Verification

The Seeed Studio XIAO nRF52840 is low power consumption and here we provide a method to verify. It is highly recommend to use the [Seeed nRF52 Boards](#) library here.


- **Step 1.** Use **JLink** Downloader to flash the **bootloader firmware** for Seeed Studio

XIAO nRF52840 (Sense).

NOTE

If you are using the factory firmware of the Seeed Studio XIAO nRF52840 or have never made changes to the firmware of the Seeed Studio XIAO nRF52840, you can skip this step.

- **Step 2.** Use the `Seeed nRF52 Boards` library here.

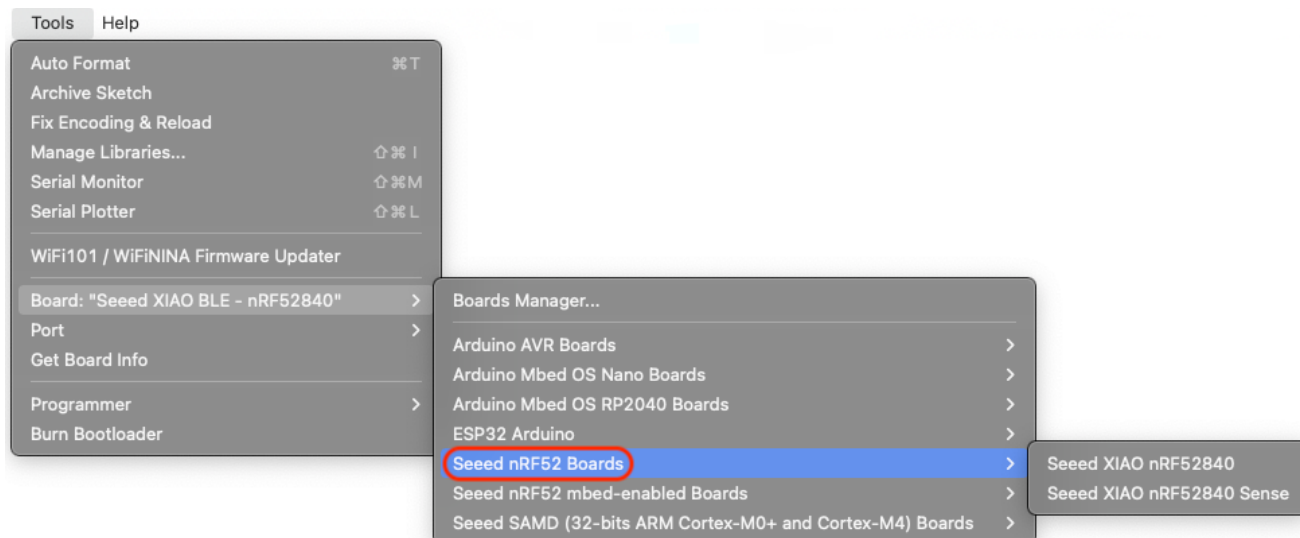

- **Step 3.** Upload the `deep_sleep` demo here and run it with **Arduino**

```
// The MIT License (MIT)
// Copyright (c) 2019 Ha Thach for Adafruit Industries

#include "SdFat.h"
#include "Adafruit_SPIFlash.h"

// Uncomment to run example with custom SPI and SS e.g with FRAM
// breakout
// #define CUSTOM_CS    A5
// #define CUSTOM_SPI    SPI

#if defined(CUSTOM_CS) && defined(CUSTOM_SPI)
  Adafruit_FlashTransport_SPI flashTransport(CUSTOM_CS, CUSTOM_SPI);

#elif defined(ARDUINO_ARCH_ESP32)
  // ESP32 use same flash device that store code.
  // Therefore there is no need to specify the SPI and SS
  Adafruit_FlashTransport_ESP32 flashTransport;
```

```
#else
// On-board external flash (QSPI or SPI) macros should already
// defined in your board variant if supported
// - EXTERNAL_FLASH_USE_QSPI
// - EXTERNAL_FLASH_USE_CS/EXTERNAL_FLASH_USE_SPI
#if defined(EXTERNAL_FLASH_USE_QSPI)
    Adafruit_FlashTransport_QSPI flashTransport;

#elif defined(EXTERNAL_FLASH_USE_SPI)
    Adafruit_FlashTransport_SPI flashTransport(EXTERNAL_FLASH_USE_CS,
EXTERNAL_FLASH_USE_SPI);

#else
    #error No QSPI/SPI flash are defined on your board variant.h !
#endif
#endif

Adafruit_SPIFlash flash(&flashTransport);

/* If you want to use a specific flash device, for example for a
custom built board, first look for it in
Adafruit_SPIFlash\src\flash_devices.h
* If it isn't in there you need to create your own definition like
the W25Q80DLX_EXAMPLE example below.
* These definitions need to be edited to match information on the
data sheet of the flash device that you want to use.
* If you are not sure what the manufacture ID, memory type and
capacity values should be, try running the sketch anyway and look at
the serial output
* The flash device will report these values to you as a single
hexadecimal value (the JDEC ID)
* For example, the first device on the list - the W25Q80DLX - will
report its JDEC ID as 0xef4014, which is made of these three values:
* manufacturer_id = 0xef
* memory_type      = 0x40
* capacity         = 0x14
* With this macro properly defined you can then create an array of
device definitions as shown below, this can include any from the list
of devices in flash_devices.h, and any you define yourself here
* You need to update the variable on line 71 to reflect the number
of items in the array
* You also need to uncomment line 84 and comment out line 81 so
this array will be passed to the flash memory driver.
*/
```

```

//Example of a user defined flash memory device:
//#define W25Q80DLX_EXAMPLE
\
// {
\
//     .total_size = (1 << 20), /* 1 MiB */
\
//     .start_up_time_us = 5000, .manufacturer_id = 0xef,
\
//     .memory_type = 0x40, .capacity = 0x14, .max_clock_speed_mhz =
80,
\
//     .quad_enable_bit_mask = 0x02, .has_sector_protection = false,
\
//     .supports_fast_read = true, .supports_qspi = true,
\
//     .supports_qspi_writes = false, .write_status_register_split =
false,
\
//     .single_status_byte = false, .is_fram = false,
\
// }

/*
 * Create an array of data structures and fill it with the settings
we defined above.
 * We are using two devices, but more can be added if you want.
 */
//static const SPIFlash_Device_t my_flash_devices[] = {
//    W25Q80DLX_EXAMPLE,
//};
/*
 * Specify the number of different devices that are listed in the
array we just created. If you add more devices to the array, update
this value to match.
 */
//const int flashDevices = 1;

#include <bluefruit.h>

bool deepPowerDown(Adafruit_SPIFlash& flash, Adafruit_FlashTransport&
transport) {
    uint32_t id_before = flash.getJEDECID();

    transport.begin();
    transport.runCommand(0xB9); // SPI deep power-down command
    delay(10);

```

```
uint32_t id_after = flash.getJEDECID();

return (id_after == 0xFFFFFFFF || id_after == 0xFFFFFFFFFF);
}

void setup() {
  flash.begin();
  Bluefruit.begin();

  if (!deepPowerDown(flash, flashTransport)) {
    pinMode(LED_BUILTIN, OUTPUT);
    digitalWrite(LED_BUILTIN, LOW);
    while (1) {
      yield();
    }
  }

  flash.end();

  sd_power_system_off();
}

void loop() {
  // nothing to do
}
```

**TIP**

Here , We would like to express our special thanks to the author for providing the code → **daCoder** ←

If you want to know about this example more detail information , Click [Here](#)

Battery Charging current

The battery charging current is selectable as 50mA or 100mA, where you can set **Pin13** as high or low to change it to 50mA or 100mA. The low current charging current is at the input model set up as HIGH LEVEL and the high current charging current is at the output model set up as LOW LEVEL.

Low Charging Current

```
void setup(){  
  pinMode (P0_13, OUTPUT);  
}  
void loop() {  
  digitalWrite(P0_13, HIGH);  
}
```

High Charging Current

```
void setup(){  
  pinMode (P0_13, OUTPUT);  
}  
void loop() {  
  digitalWrite(P0_13, LOW);  
}
```

Access the SWD Pins for Debugging and Reflashing Bootloader

Hardware Required

- [Seeed Studio XIAO nRF52840](#)
- Jlink


Software Required

It is required to download the [Segger](#) software from the website.


- **Step 1.** Use Jlink to connect pins below:



- **Step 2.** Start the J-Flash and search nRF52840, creating a new project:

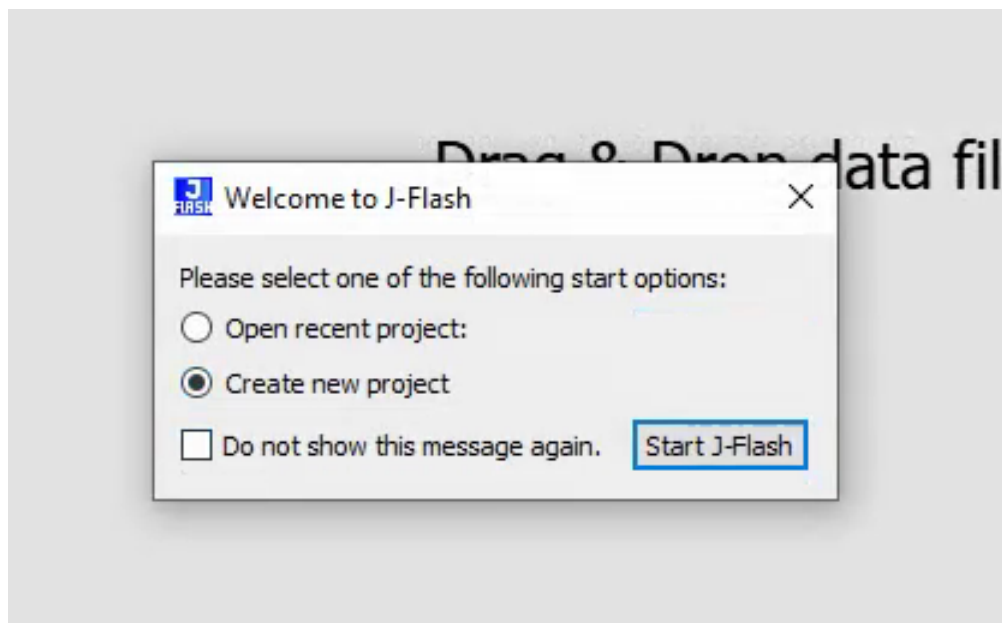

- **Step 3.** Click "Target" and then select "Connect".

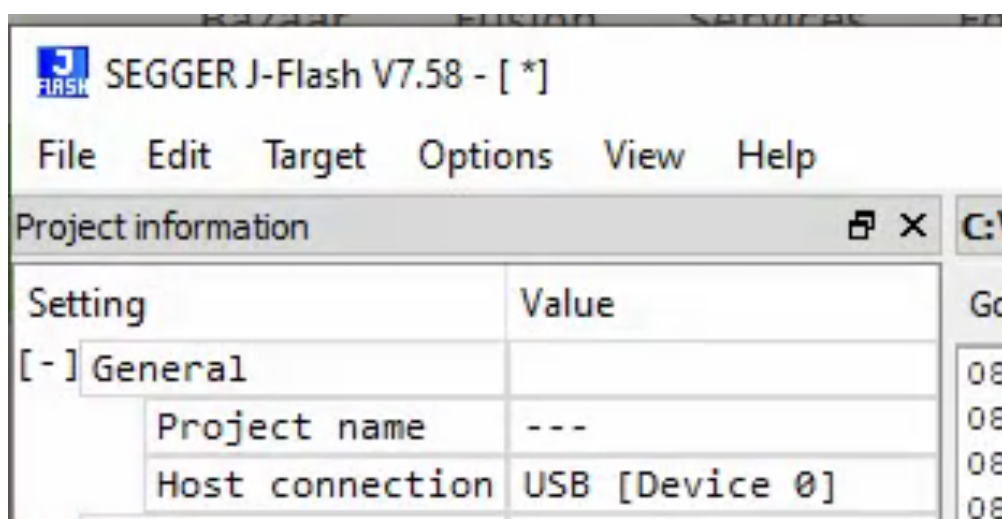

- **Step 4.** Draw the bin or **hex file** to software. Then press F4 and F5 in that order. The reflashing is done.

FAQ

Q1: My Arduino IDE is stuck when uploading code to the board

You can first try to **reset** the board by clicking the "Reset Button" once. If that does not work, rapidly click it twice to enter **bootloader mode**. If that also doesn't work, disconnect the board from the PC, and connect the board again.

Q2: My board is not showing up as a serial device on Arduino IDE


You can first try to **reset** the board by clicking the "Reset Button" once. If that does not work, rapidly click it twice to enter **bootloader mode**.

Q3: What are the considerations when using XIAO nRF52840 (Sense) for battery charging?


In the XIAO nRF52840 Sense battery circuit, **P0.14** is the **READ_BAT_ENABLE** control pin and **P0.31** is the **AIN7_BAT** ADC read pin for measuring battery voltage.

When P0.14 is set HIGH, the battery voltage reading path is disabled and P0.31 may reach the input voltage limit of 3.6V, posing a risk of damaging the P0.31 pin. To safely read battery voltage, set P0.14 LOW (to enable the reading path) and then read the ADC value on P0.31.

We recommend that users always keep P0.14 set LOW when reading battery voltage, and avoid setting P0.14 HIGH during battery charging.

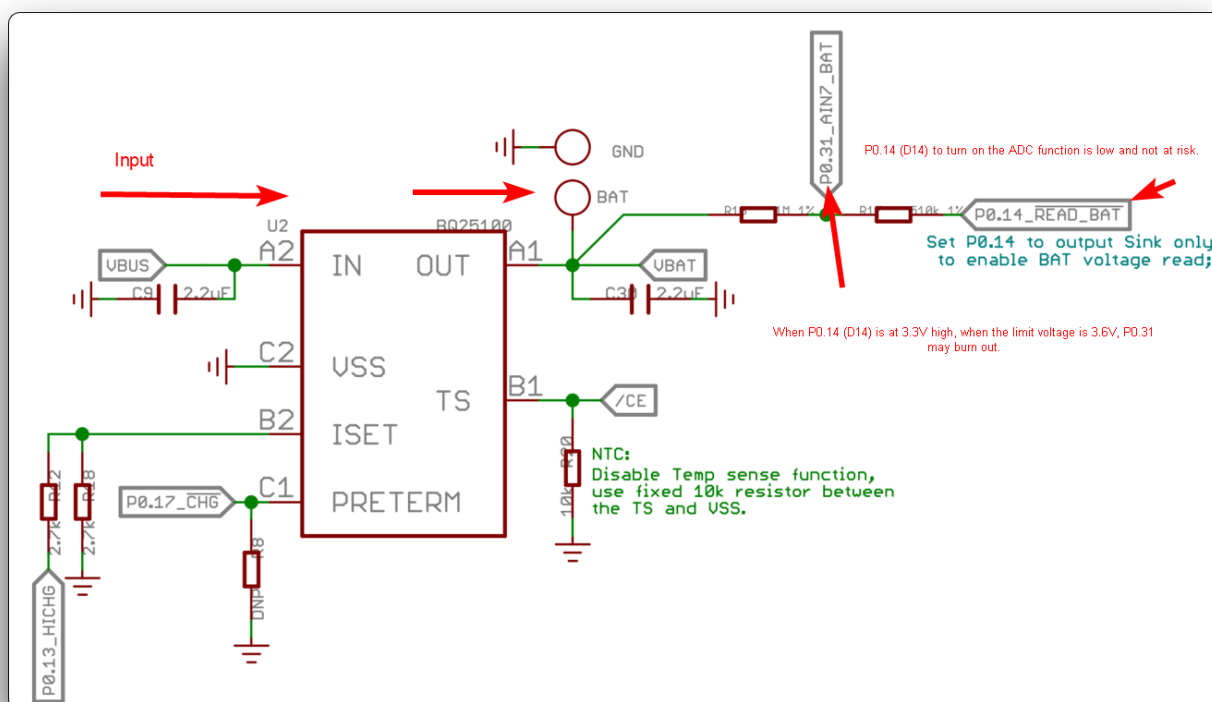

Q4: How does the green light behave when powered on?

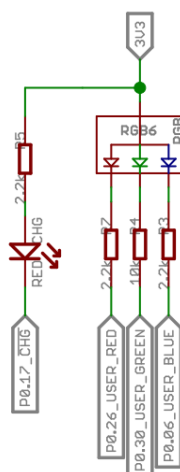

The P0.17 pin is used to control the green indicator light behavior, indicating the charging status:

- Low level: when **charging** is in progress.
- High level: when the battery is either **not charging** or **fully charged**.

When it is at a low level, the RED_CHG LED will light up.

For more details, check the PMIC datasheet: [BQ25100](#) and [XIAO nRF52840 datasheet](#).

Resources

Seeed Studio XIAO nRF52840

Hardware Design

-  [\[Datasheet\] Nordic nRF52840 Datasheet](#)
-  [\[Datasheet\] Flash P25Q16H-UXH-IR Datasheet](#)
-  [\[Schematic\] XIAO nRF52840 Schematic](#)
-  [\[PCB Design Files\]](#)
 - [XIAO nRF52840 KiCad Project](#)
-  [\[PCB Design Libraries\]](#)
 - [XIAO Series KiCad Footprints](#)
 - [XIAO Series KiCad SCH Symbols](#)
-  [\[Pinout Diagram\] XIAO nRF52840 Pinout Sheet](#)

Mechanical Design

-  [\[2D Dimensions\] XIAO nRF52840 Dimension in DXF](#)
-  [\[2D Dimensions\] XIAO nRF52840 Bottom Pad Data](#)

Seeed Studio XIAO nRF52840 Sense

Hardware Design

-  [\[Datasheet\] Nordic nRF52840 Datasheet](#)
-  [\[Datasheet\] Flash-P25Q16H-UXH-IR Datasheet](#)
-  [\[Datasheet\] Charger IC-BQ25101 Datasheet](#)
-  [\[Datasheet\] IMU-LSM6DS3TR Datasheet](#)
-  [\[Datasheet\] Mic-MSM261D3526H1CPM Datasheet](#)
-  [\[Schematic\] XIAO nRF52840 Sense Schematic](#)
-  [\[PCB Design Files\]](#)
 - [XIAO nRF52840 Sense KiCad Project](#)
-  [\[PCB Design Libraries\]](#)

- [XIAO Series KiCad Footprints](#)
- [XIAO Series KiCad SCH Symbols](#)
- [\[Pinout Diagram\] XIAO nRF52840 Sense Pinout Sheet](#)

Mechanical Design

- [\[2D Dimensions\] XIAO nRF52840 Sense Dimension in DXF](#)
- [\[2D Dimensions\] XIAO nRF52840 Bottom Pad Data](#)
- [\[3D Model\] XIAO nRF52840 Sense 3D Model](#)

Others

- [\[Document\] XIAO nRF52840 Sense BLE Communication Distance Test Report](#)

Seeed Studio XIAO nRF52840 (Sense) Plus

Hardware Design

- [\[Datasheet\] Nordic nRF52840 Datasheet](#)
- [\[Datasheet\] Flash-P25Q16H-UXH-IR Datasheet](#)
- [\[Schematic\] XIAO nRF52840 \(Sense\) Plus Schematic](#)
- [\[PCB Design Files\]](#)
 - [XIAO nRF52840 \(Sense\) Plus KiCad Project](#)
 - [XIAO Plus Base \(with bottom pad lead out\) KiCad Project](#)
 - [XIAO Plus Base \(without bottom pad lead out\) KiCad Project](#)
- [\[PCB Design Libraries\]](#)
 - [XIAO Series KiCad Footprints](#)
 - [XIAO Series KiCad SCH Symbols](#)

Mechanical Design

- [\[2D Dimensions\] XIAO nRF52840 Sense Dimension in DXF](#)

**Seeed Studio XIAO,
Tiny, Powerful**

[Explore Now](#)

[Request Quote of Customization →](#)



Course Resources



- [Ebook] [XIAO: Big Power, Small Board Mastering Arduino and TinyML](#)

Tech Support & Product Discussion

Thank you for choosing our products! We are here to provide you with different support to ensure that your experience with our products is as smooth as possible. We offer several communication channels to cater to different preferences and needs.

 [Edit this page](#)

*Last updated on **Apr 17, 2025** by **Clara***