



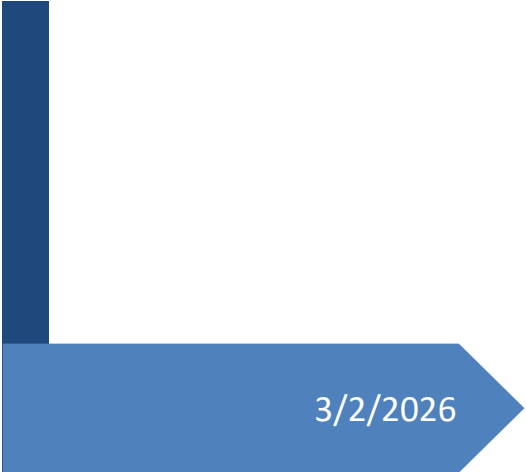

3/2/2026

User Guide

GBDP-MPI Online System

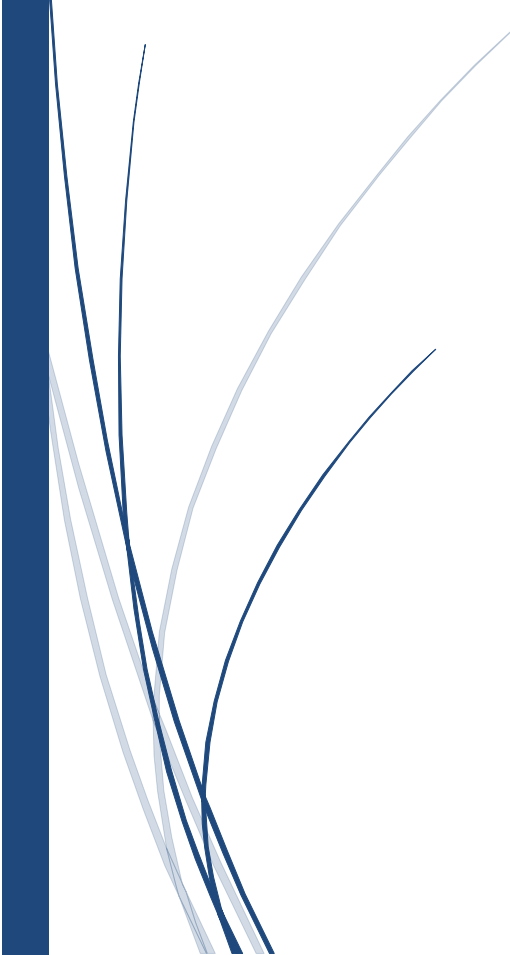

Automation Engineering Department
SHIN-ETSU MAGNETIC PHILIPPINES

Table of Contents	Pages
Getting Started	
A. Registration.....	1
B. Logging in.....	1
C. Introduction/Access Overview.....	1
D. Visual for Access Types.....	1
E. For Proxy Approvers: Granting Access.....	1
F. Quick Interface Orientation.....	2
G. System Requirements.....	3
User Operations / Functionalities	
1. Initial Process.....	4
1.1 Overview.....	4
1.2 Control Sheet Input.....	4
1.3 Coating Summary Input.....	7
1.4 Film Pasting Summary Input.....	8
2. Heat Treatment.....	9
2.1 Navigation.....	9
2.2 Mass Production Control Sheet Allocation.....	9
2.3 Heat Treatment Information.....	10
2.4 Heat Treatment Graph Upload.....	10
2.5 Detailed Encoding Scenarios – Mass Production Control Sheet Allocation.....	10
2.5.1 Scenario 1 – Lot / Model with ≤ 10 Boxes (Non-Breaklot)	10
2.5.2 Scenario 2 – More than 10 Boxes.....	10
2.5.3 Scenario 3 – Breaklot Allocation.....	10
2.6 Heat Treatment Input Validations.....	11
2.6.1 Layer Occupied.....	11
2.6.2 No Mass Prod Data.....	11
2.6.3 Show Data First.....	11
2.7 Heat Treatment Input – 1st & 2nd GBDP.....	11
2.7.1 2ND GBDP Input page.....	11
2.7.1.1 Auto Fetch Feature.....	11
3 Coating.....	12
3.1 Scenario 1 – Basic Input Process.....	12
3.2 Scenario 2 – 1st & 2nd GBDP layers.....	12
3.2.1 2nd GBDP Encoding.....	12
3.2.2 1st GBDP Encoding.....	12
3.2.3 Finalize.....	12
3.3 Scenario 3 – Breaklot Input Process.....	12
4 Film Pasting.....	13
4.1 Scenario 1 – Basic Input Process.....	13
4.2 Scenario 2 – Breaklot Input Process.....	13
5 Mass Production Registration.....	13
5.1 Navigation.....	13
5.2 Create New.....	13


6. Furnace Registration.....	14
6.1 Navigation.....	14
6.2 Create New.....	14
7. 1st & 2nd GBDP (Models) Registration.....	14
7.1 Navigation.....	14
7.2 Create New.....	14
8 View 1st & 2nd GBDP.....	14
8.1 Navigation.....	14
9 HT Graph Patterns.....	14
9.1 Navigation.....	14
9.2 Register New Pattern data.....	14
9.3 Editing Graph Pattern.....	14
10 JH Curve.....	15
10.1 File Preparation Requirements.....	15
10.2 Basic JH Curve Generation Process.....	15
10.3 Breaklots.....	15
11 MPI Report.....	16
11.1 Basic Process.....	16
11.2 Stamp Approval Process.....	16
11.3 Undo Stamp Approval.....	16
11.4 Judgement Handling.....	16
11.5 Apply Additional.....	16
11.6 SEG0A03G Model Format Special Case.....	17
11.7 Change Judgement.....	17
12 Special Instructions.....	17
12.1 Register Model.....	17
13 Mias Factor Emp.....	17
13.1 Register Employee data.....	17
14 Inspection.....	17
14.1 Add New Model.....	17
15 Send Email.....	17
15.1 Sending Email.....	17

Getting Started

A. Registration

Step 1: Open your browser and navigate to the system registration page <http://172.17.2.147:8080/mpi-online-system>

Step 2: Below the Login button click "[Register here](#)".

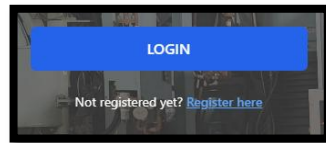

Step 3: Fill in required fields (Username, Employee ID, Department, etc.). Click "Register"

Notes: After registration, the user is automatically assigned the Basic User access type.

B. Logging in

Step 1: Open your browser and navigate to the system registration page <http://172.17.2.147:8080/mpi-online-system>

Step 2: Enter your registered username and password. Click "Login"

Notes: Basic Users can only see the Home page initially.

C. Introduction/Access Overview

Upon initial registration, all users are assigned the "Basic User" access type.

- Basic Users can log in and view the Home page only.

- They cannot access other pages or perform encoding tasks.

To begin work in the system, users must be authorized by a Proxy Approver or the Automation Engineering Department, which changes their access type to the appropriate module (e.g., "Heat Treatment").


Once access is granted, users can perform actions according to their role.

D. Visual for Access Types


Role Instructions (Navbar Access)	
• Basic User (default) → Home (Cannot stamp)	
• Heat Treatment → Home, Heat Treatment, Coating, Film Pasting, MPI Reports, 1st & 2nd GBDP, Furnace, HT Graph Patterns (Cannot stamp)	
• Coating → Home, Heat Treatment, Coating, Film Pasting, MPI Reports, 1st & 2nd GBDP, Furnace, HT Graph Patterns (Cannot stamp)	
• Preparation Approver → Home, Mass Production JH Curve, MPI Reports, View List, Inspection, Special Instructions, Send Email, Mias Factor Emp (Prepared By Stamping only)	
• Checking Approver → Home, Mass Production JH Curve, MPI Reports, View List, Inspection, Special Instructions, Send Email, Mias Factor Emp (Checked By Stamping only)	
• Proxy Approver → Home, Mass Production, JH Curve, MPI Reports, View List, Inspection, Approval, Special Instructions, Send Email, Mias Factor Emp, Admin (Approved By Stamp only)	
• Final Approver → Home, Mass Production, MPI Reports, Approval, View List, Admin (Approved By Stamp only)	


E. For Proxy Approvers: Granting Access

Step 1: Navigate to the Admin page of the website.




Step 2: Search the name of the employee




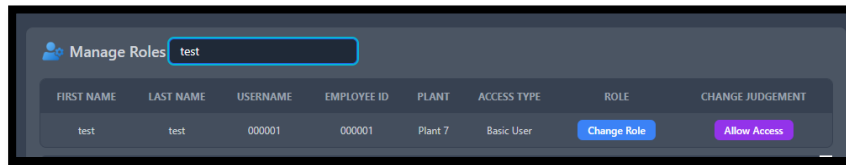

Step 3: Click the "Change Role" button, select the appropriate access type, then click "Save" to apply the change.

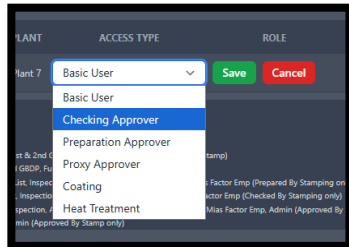


Step 4: The user has now access type of Checking Approver.

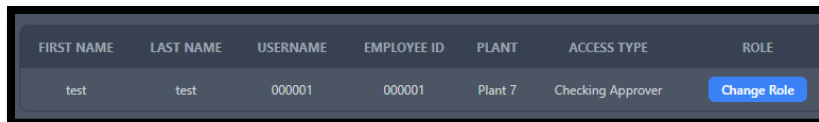

Notes: Only Proxy Approvers and Automation Engineering can change access types.

F. Quick Interface Orientation



Navigation Bar

At the top of the website, users will see the main navigation bar. The menu items are:

- **Home** – the landing page after logging in.
- **Mass Production** – Access Mass Production Control Sheets, Heat Treatment Graphs, and SMP Data.
Users can:
 - Upload HT Mass Pro Files
 - Download Heat Treatment Monthly Summary data
 - View and filter estimated time finished for production data
- **Input Forms** – contains forms for initial encoding and allocation of production data. Access depends on user type:
 - Heat Treatment, Coating users – can see Heat Treatment, Coating, Film Pasting and Initial Process.
 - Preparation Approver, Checking Approver, Proxy Approver – can also see JH Curve and MPI Reports

Module Descriptions:

- Initial Process – users encode initial control sheet data, coating summary and film pasting summary.
- Heat Treatment – allocates data from Initial Process (Control Sheet Data) into Mass Production, Furnace and Layers.
- Coating – allocates data from Coating Summary (Control Sheet Data) into Mass Production, Furnace and Layers.
- Film Pasting – allocates data from Film Pasting Summary (Control Sheet Data) into Mass Production, Furnace and Layers.
- JH Curve – generate JH Curve graphs and property data.
- MPI Report – view JH Curve data, encode additional information, perform stamp approvals, and finalize PDFs.
- **Options** – contains forms for initial encoding and allocation of production data. Access depends on user type:
 - Heat Treatment, Coating users – can see Furnace, 1st & 2nd GBDP (Models), View 1st & 2nd GBDP, HT Graph Patterns, and Mass Prod Status.
 - Preparation Approver, Checking Approver, Proxy Approver – can see Inspection, View List, Approval, Special Instructions, Send Email, Send Email (Manual), Mias Factor Emp, and Mass Prod Status.

Module Descriptions:

- Furnace – add and view furnace records registered in the system.
- 1st & 2nd GBDP (Models) – register new magnet models dedicated to 2nd GBDP format data.
- View 1st & 2nd GBDP – view all registered GBDP model records.
- HT Graph Patterns – register Heat Treatment graph patterns by uploading standard graphs associated with specific furnace numbers and pattern numbers.
- Mass Prod Status – track the current stage of the production encoding process. Users can verify if previous processes are completed before proceeding.
- Inspection – register magnet models including their specifications.
- View List – view all data generated under MPI Reports.
- Approval – approve Preparation, Checking, or Approved By stamps efficiently using bulk selection.
- Special Instructions – register models that require special formats when encountering NG IHC (rejects).
- Send Email – send finalized reports directly through the system.
- Send Email (Manual) – send finalized reports by manually selecting specific files.
- Mias Factor Emp – register MIAS and Factor employees used in property data encoding.
- **Admin** – contains user management and system monitoring functions. Access is restricted to Proxy Approvers and the Automation Engineering Department.

G. System Requirements

- Supported browser (e.g., Google Chrome recommended)
- Stable connection to company network / local server

User Operations / Functionalities

1. Initial Process

1.1 Overview

The Initial Process module is where users encode primary production data.

This serves as the source for the allocation in Heat Treatment, Coating, and Film Pasting modules.

There are three main input forms:

- Control Sheet
- Coating Summary
- Film Pasting Summary

1.2 Control Sheet Input

1.2.1 Navigation

Step 1: Navigate to Input Forms → Initial Process.

Step 2: Select Control Sheet Input.

1.2.2 E

C

Procedure

Step 1: Select Start Box (e.g., A).

Step 2: Select End Box (e.g., K).

If Start Box = A and End Box = K,

→ The system automatically recognizes this as 10 boxes.

The number of generated box entries depends on the selected range.

Shared Fields (Encoded Once Only)

The following fields only need to be filled once. The system automatically repeats these values across all generated boxes within the selected range:

- Model
- Coating M/C No
- Raw Material Code
- Lot No
- Coating Frequency
- Magnet Prepared By
- Box Prepared By

These values will be replicated across all box entries.

Quantity Encoding Logic

To speed up encoding, the system provides shortcut fields:

- Qty (PCS)
 - This value is automatically repeated across all selected boxes.
- Qty (PCS) – Last Box
 - This value overrides the quantity for the final box in the selected range.

These fields only need to be filled once.

Example:

If Start Box = A and End Box = K (10 boxes):

Qty (PCS) = 500

Qty (PCS) – Last Box = 480

Result:

Boxes A–J → 500 PCS

Box K → 480 PCS

Per-Box Unique Fields

The following fields must be encoded individually per box:

- Box No
- Box Weight
- Box with Magnet Weight

These values are not auto-replicated and must be entered per generated box row.

Edit Qty per Box Feature

Below the Box with Magnet Weight input field, there is a button labeled:

Edit Qty per Box

Purpose:

This feature allows users to manually modify the quantity per box.

This is useful when:

The repeated quantity from Qty (PCS) and Qty (PCS) – Last Box needs further adjustment.

Individual boxes have different quantities.

When clicked:

The quantity field per box becomes editable.

Users may manually adjust values as needed.

More Than 10 Boxes (Extended Range Feature)

If production requires encoding more than 10 boxes, the system provides an extended range function.

How It Works

When the "> 10 Boxes" button is clicked:

Two additional select fields will appear:

- Excess Start Box
- Excess End Box

These fields use the same box letters:

A, B, C, D, E, F, G, H, J, K

(Note: Letter "I" is not used.)

Encoding Example – 15 Boxes

If total boxes = 15:

Primary Range:

- Start Box: A

- End Box: K
→ 10 boxes

Excess Range:

- Excess Start Box: A
- Excess End Box: E
→ Additional 5 boxes

Total = 15 boxes

Another valid configuration:

Primary Range:

- A to K → 10 boxes

Excess Range:

- F to K → 5 boxes

Total = 15 boxes

The system calculates the total number of boxes based on both ranges combined.

Less Than 10 Boxes

If total required boxes are fewer than 10:

Users only need to use:

- Start Box
- End Box

Example:

- Start Box: A
- End Box: E
→ 5 boxes

No need to click "> 10 Boxes".

Breaklot Mode

Breaklot Mode is required when:

- Total boxes are less than 10
- Box allocation is not continuous
- There is a gap between box letters

Example Scenario

Required boxes:

A–C

F–K

This results in 8 total boxes:

- A, B, C
- F, G, H, J, K

To encode this:

Step 1: Click Breaklot Mode button

Step 2: Set Primary Range

Start Box: A

End Box: C

Step 3: Set Excess Range

Excess Start Box: F

Excess End Box: K

The system will combine both ranges into a single entry.

Breaklot Restrictions

- Breaklot Mode is only allowed when total boxes are less than 10.
- Breaklot Mode cannot be activated if the "> 10 Boxes" feature is enabled.
- Users must disable "> 10 Boxes" before activating Breaklot Mode.
- The "> 10 Boxes" button can be toggled off by clicking it again.

This prevents logical conflict between:

- Continuous extension (>10 Boxes)
- Discontinuous allocation (Breaklot Mode)

1.3 Coating Summary Input

1.3.1 Navigation

Step 1: Navigate to Input Forms → Initial Process.

Step 2: Select Coating Summary

1.3.2 Encoding Procedure

Coating Summary

Coating Information

Coating Date * Coating Machine No * Slurry Lot No *

MIN TB CONTENT ($\mu\text{g}/\text{mm}^2$) * Sample Quantity (pcs) * Total Magnet Weight (KG) *

Loader Operator * Unloader Operator * Checker Operator *

Model * Lot no * Time Start * Time Finished *

Remarks *

Additional Slurry

MODULE	NEW	HOMO	TIME	LITERS
M-01				
M-02				
M-03				
M-04				
M-05				
M-06				

All fields must be manually encoded per entry. The only assisted feature in this form applies to:

Coating Data (Unit μ/mm^2)

Step 1: Prepare coating values vertically (e.g., from Excel).

Step 2: Copy the vertical list of values.

Step 3: Paste into the **Paste Coatings** text panel.

Coating Data (Unit: μ/mm^2)

Paste Coatings (one per line)

No.	Coating	No.	Coating	No.	Coating	No.	Coating
1		11		21		31	
2		12		22		32	
3		13		23		33	
4		14		24		34	
5		15		25		35	
6		16		26			
7		17		27			
8		18		28			
9		19		29			
10		20		30			

Concentration Amount

	M-01	M-02	M-03	M-04	M-05	M-06
1-5						
6-10						
11-15						
16-20						
21-25						
26-30						
31-35						

Maximum Minimum Average

1.4 Film Pasting Summary Input

1.4.1 Navigation

Step 1: Navigate to Input Forms → Initial Process.

Step 2: Select Coating Summary

1.4.2 Encoding Procedure

All Film Pasting information fields must be manually encoded. The Hourly Checking section is structured using **data blocks**. Each block represents one hourly inspection record.

Adding Hourly Blocks: Users can create additional hourly entries by clicking “Add Block”

Each click generates a new inspection block. Each block functions independently but contributes to overall calculated results. The system automatically computes final average values from all encoded hourly blocks.


The computed averages are reflected in:

- H-Line Parameters
- T-Line Parameters

These final values represent the summarized result of all hourly checking entries.

1.5 Finalize Preview Checking (Control Sheet, Coating Summary & Film Pasting)

Step 1: After completing the required data entry in the respective module, click the **Finalize** button.



Step 2: The system will display a preview of all encoded data for verification.

 A screenshot of a modal dialog box titled 'Review everything carefully before submitting.' with a close button (X) in the top right. It contains a table with 6 columns (A-F) and 10 rows of data. Below the table, it shows 'Total Qty: 3139' and 'Total WT (KG): 121.1'. At the bottom are 'Cancel' and 'Proceed' buttons.

	A	B	C	D	E	F
Model:	AAW0934G	AAW0934G	AAW0934G	AAW0934G	AAW0934G	AAW0934G
Coating M/C No:	C-32	C-32	C-32	C-32	C-32	C-32
Lot No:	232	232	232	232	232	232
Qty (PCS):	323	323	323	323	323	323
WT (KG):	12.11	12.11	12.11	12.11	12.11	12.11
Box Weight:	4.234	4.234	4.234	4.234	4.234	4.234
Box with Magnet Weight:	16.343	16.343	16.343	16.343	16.343	16.343
Box No.:	UBP85172	UBP85172	UBP85172	UBP85172	UBP85172	UBP85172
Coatings:	323	323	323	323	323	323
Magnet Prepared By:	232	232	232	232	232	232
Box Prepared By:	32	32	32	32	32	32

Total Qty: 3139 Total WT (KG): 121.1

Cancel Proceed

Step 3: Once confirmed, click **Proceed** to finalize the entry.

Notes:

- Once finalized, data cannot be edited to maintain system integrity.
- Users are responsible for reviewing all details; mistakes should be caught during the **Preview / Finalize** step.
- If a mistake is discovered after finalization, the **Delete** feature is available under the **Overall Summary** tab in the Initial Process page. This allows removal of the entire entry, encouraging careful double-checking before proceeding rather than editing individual fields.
- Preview ensures operators catch mistakes early, minimizing downstream errors in Mass Production allocation.

2. Heat Treatment

2.1 Navigation

Step 1: Navigate to Input Forms → Heat Treatment.

2.2 Mass Production Control Sheet Allocation

Step 1: Ensure the required Mass Production and Furnace entries exist. (See Mass Production registration on page 13.)

Step 2: Select the following: Mass Prod. Name, Furnace Name and Layer

Step 3: Select Lot No. and Model, then click Show Data (This loads the corresponding data from the Initial Process.)

 A screenshot of the 'Mass Production Control Sheet' interface. On the left, there are dropdown menus for 'Furnace Name', 'Mass Prod. Name', 'Layer', 'Lot No.', and 'Model', along with a 'Change Data' button. Below these are 'Derived Total Rows: 10' and 'Apply HT and LT' buttons. On the right, there is a table with 11 columns (A-K) and 10 rows of data. At the bottom, it shows 'Total Qty: 2080' and 'Total WT (KG): 25.84'. There are also two buttons: 'CURRENT BATCH TOTAL WEIGHT: 1223.02 (Kgs)' and 'APPROXIMATE BATCH TOTAL WEIGHT: 1248.88 (Kgs)'.

	A	B	C	D	E	F	G	H	I	K
Model:	EEG1760	EEG1760	EEG1760	EEG1760	EEG1760	EEG1760	EEG1760	EEG1760	EEG1760	EEG1760
Coating M/C No:	C-11	C-11	C-11	C-11	C-11	C-11	C-11	C-11	C-11	C-11
Lot No:	1761-02	1761-02	1761-02	1761-02	1761-02	1761-02	1761-02	1761-02	1761-02	1761-02
Qty (PCS):	200	200	200	200	200	200	200	200	200	200
WT (KG):	3.21	3.21	3.21	3.21	3.21	3.21	3.21	3.21	3.21	3.21
Box No:	1761-02	1761-02	1761-02	1761-02	1761-02	1761-02	1761-02	1761-02	1761-02	1761-02
Coating:	2	2	2	2	2	2	2	2	2	2
Magnet Prepared By:	JAMES	JAMES	JAMES	JAMES	JAMES	JAMES	JAMES	JAMES	JAMES	JAMES
Box Prepared By:	ECN1	ECN1	ECN1	ECN1	ECN1	ECN1	ECN1	ECN1	ECN1	ECN1

Derived Total Rows: 10 Apply HT and LT

Manual Layer Allocation

Click Change Data button to enable Manual Allocation

Manual Layer Allocation

Total Qty: 2080 Total WT (KG): 25.84

CURRENT BATCH TOTAL WEIGHT: 1223.02 (Kgs) APPROXIMATE BATCH TOTAL WEIGHT: 1248.88 (Kgs)

2.3 Heat Treatment Information

2.3.1 Fields Overview

Batch Cycle No – Automatically populated by the system.

Machine No – Automatically populated by the system.

Cycle Pattern – Optional; can be updated later using the Overwrite feature.

Current Pattern – Optional; can be updated later via Overwrite.

Unloader – Optional; editable via Overwrite.

Date Finish – Optional; editable via Overwrite.

Time Finish – Optional; editable via Overwrite.

Date Start – Editable within 24 hrs of Mass Production creation via Overwrite feature.

Pattern No – a pattern no associated with the selected furnace must be registered within HT Graph Patterns. (see HT Graph Patterns Page 14)

The rest of the input fields are all required.

Note: Heat Treatment Information fields only need to be filled once per Mass Production.

2.4 Heat Treatment Graph Upload

Next to the Heat Treatment Information fields, users can upload HT Graphs.

- Graphs can be uploaded immediately after creating Mass Production or at a later time.
- Standard Graphs are automatically used based on registered Graphs on HT Graph Patterns. (see HT Graph Patterns Page 14.)
- If changes are needed, graphs can be replaced using the **Overwrite** feature.

Notes:

- Users must first create **Mass Production** and **Furnace** records before allocating data.
- All optional fields can be updated later via **Overwrite** to reflect actual necessary process changes.

2.5 Detailed Encoding Scenarios – Mass Production Control Sheet Allocation

The following scenarios explain how Initial Process data is allocated into Mass Production, Furnace, and Layers, depending on the total number of boxes and allocation type.

2.5.1 Scenario 1 – Lot / Model with ≤ 10 Boxes (Non-Breaklot)

Step 1: Select Mass Prod Name, Furnace and Layer

Step 2: Select Lot No and Model

Step 3: Check Detected Total Boxes (≤ 10)

Step 4: Click Show Data to preview data from Initial Process

Step 5: Confirm/Verify the loaded data.

Step 6: Click submit in the Control Panel to allocate the data.

2.5.2 Scenario 2 – More than 10 Boxes

Step 1: Select Mass Prod Name, Furnace and Layer

Step 2: Select Lot No and Model

Step 3: Check Detected Total Boxes (>10)

Step 4: Click Show Data (A new select input appears: Excess Layer)

Step 5: Select the appropriate layer for excess boxes.

Step 6: Click Submit in the Control Panel to finalize allocation.

2.5.3 Scenario 3 – Breaklot Allocation

Step 1: Select Mass Prod Name and Furnace.

Step 2: Click Manual Layer Allocation button.

Step 3: In the Manual Allocation Selection Grid, select the appropriate slots

for each box range. (Ensure the main lot is selected as the main layer)

Step 4: Review Selection Summary below the grid to confirm correct main layer and box slots.

Step 5: In General Information, select the Lot No and Model

Step 6: Click Validate, then Show Data to preview the allocated data.

Step 7: Click Finalize, review all data carefully, and confirm before proceeding.

2.6 Heat Treatment Input Validations

The Heat treatment Input page performs system validations before allowing data submission. If the Submit Data button does not appear, it indicates that one or more validations have failed. The following labels help identify the reason:

2.6.1 Layer Occupied

- Meaning: The selected layer already contains allocated data.
- Notes: This can occur even if the layer is not completely filled.
- Action: To allocate data to partially occupied layers, refer to Breaklot Allocation (Step 3 – 7, page 10 – 11).

2.6.2 No Mass Prod Data

- Meaning: The selected Lot No + Model contains a total weight that would exceed the grand total weight limit for the mass production.
- Action: Adjust/Change input lot data or allocate to a different layer.

2.6.3 Show Data First

- Meaning: The selected layer is available but the system requires the user to preview the data before submission.
- Action: Click the Show Data button in the Control Panel to load the data.

2.7 Heat Treatment Input – 1st & 2nd GBDP

Step 1: Ensure the model selected is registered for 2nd GBDP

Step 2: Select the following: Furnace Name, Mass Prod Name, Layer, Lot No and Model.

Step 3: In the Control Panel, click Apply 1st 2nd GBDP. (Note: this button is enabled only if the selected model is registered. See 1st & 2nd GBDP model registration, page 14)

2.7.1 2ND GBDP Input page

2nd GBDP data are automatically populated by the system. 1st GBDP can be manually encoded in the input fields.

2.7.1.1 Auto Fetch Feature

Step 1: In the Auto Fetch panel, type the Mass Prod Name and Furnace.

Step 2: Click the Auto Fetch button. (The system retrieves 1st GBDP data and populates the input fields automatically.)

Step 3: Verify all 1st and 2nd GBDP data for accuracy.

Step 4: Click Submit to finalize the entry.

3 Coating

The Coating Input page allows users to allocate Coating Summary data from the Initial Process into the selected Mass Production, Furnace and Layer.

The screenshot shows the 'Coating Information' form with the following fields: Furnace Name (K-40), Mass Prod. Name (214TH), Layer (3), Lot no (2123), and Model (FAN0875G). A 'Cancel' button is present. Below the form is a table with 3 columns of data (Lot No., Coating, Concentration) and a 'MODULE' column. The table contains 30 rows of data. At the bottom, there are summary statistics: Maximum: 53.54, Minimum: 32.35, Average: 45.34. Below the table is a section for 'Coating Date: 2026-01-16', 'Coating Machine No: C-23', 'Slurry Lot No: 24123-3123213', 'MIN TB CONTENT: 234', 'Sample Quantity: 53423', 'Total Magnet Weight: 881.00', 'Loader Operator: RICK', 'Unloader Operator: DARYL', 'Checker Operator: GLEN', 'Time Start: 13:36:00', and 'Time Finished: 13:37:00'.

Lot No.	No.	Coating	Concentration	Lot No.	No.	Coating	Concentration	Lot No.	No.	Coating	Concentration	MODULE
2123	1	43.23	-	M-01	2123	11	-	M-01	2123	21	-	M-01
2123	2	53.54	24.54	M-02	2123	12	-	M-02	2123	22	-	M-02
2123	3	42.32	64.43	M-03	2123	13	-	M-03	2123	23	-	M-03
2123	4	53.33	53.43	M-04	2123	14	-	M-04	2123	24	-	M-04
2123	5	32.35	-	M-05	2123	15	-	M-05	2123	25	-	M-05
		-	-	M-06			-	M-06			-	M-06
		-	-	M-06			-	M-06			-	M-06
2123	6	53.24	-	M-01	2123	16	-	M-01	2123	26	-	M-01
2123	7	-	-	M-02	2123	17	-	M-02	2123	27	-	M-02
2123	8	-	-	M-03	2123	18	-	M-03	2123	28	-	M-03
2123	9	-	-	M-04	2123	19	-	M-04	2123	29	-	M-04
2123	10	-	-	M-05	2123	20	-	M-05	2123	30	-	M-05
		-	-	M-06			-	M-06			-	M-06
		-	-	M-06			-	M-06			-	M-06

Maximum: 53.54 Minimum: 32.35 Average: 45.34

Coating Date: 2026-01-16 Coating Machine No: C-23 Slurry Lot No: 24123-3123213
 MIN TB CONTENT: 234 Sample Quantity: 53423 Total Magnet Weight: 881.00
 Loader Operator: RICK Unloader Operator: DARYL Checker Operator: GLEN
 Time Start: 13:36:00 Time Finished: 13:37:00

3.1 Scenario 1 – Basic Input Process

Step 1: Select Furnace Name, Mass Prod. Name and Layer. (**Lot No** and **Model** will automatically appear.)

Step 2: Click Show Data. (The system fetches data from Coating Summary in the Initial Process)

Step 3: Review the loaded data.

Step 4: Click Submit to allocate the data to the selected layer.

Notes: If no layer appears in the select input, it means that no valid layer data exists for the selected Furnace + Mass Production combination. This usually indicates that the Heat Treatment Input has not been encoded for the selected layer.

3.2 Scenario 2 – 1st & 2nd GBDP layers

3.2.1 2nd GBDP Encoding

Follows the Basic Input Process Exactly (Step 1 – 3). Data is automatically fetched from Coating Summary.

3.2.2 1st GBDP Encoding

Fields must be manually encoded or use the Auto Fetch feature. To use Auto fetch feature input furnace name, mass prod name and layer then Click Auto Fetch button.

3.2.3 Finalize

Review the data for accuracy and then click Submit to finalize allocation.

3.3 Scenario 3 – Breaklot Input Process

Step 1: Follow Basic Input Process steps (Step 1 – Step 4). This process is to allocate the initial lot data.

Step 2: After submission, select the same layer again. A new button appears: Change Lot.

Step 3: Click Change Lot

Step 4: In the Lot No select input, choose the additional lot to allocate.

Step 5: Click Set New Lot.

Step 6: Click Show Data to preview the additional lot data.

Step 7: Review the loaded data carefully.

Step 8: Click Submit to finalize allocation for the new lot

4 Film Pasting

The Film Pasting Input page allows users to allocate Coating Summary data from the Initial Process into the selected Mass Production, Furnace and Layer.

4.1 Scenario 1 – Basic Input Process

Step 1: Select Furnace Name, Mass Prod. Name and Layer. (**Lot No** and **Model** will automatically appear.)

Step 2: Click Show Data. (The system fetches data from Film Pasting Summary in the Initial Process)

Step 3: Review the loaded data.

Step 4: Click Submit to allocate the data to the selected layer.

Notes: If no layer appears in the select input, it means that no valid layer data exists for the selected Furnace + Mass Production combination. This usually indicates that the Heat Treatment Input has not been encoded for the selected layer.

4.2 Scenario 2 – Breaklot Input Process

Step 1: Follow Basic Input Process steps (Step 1 – Step 4). This process is to allocate the initial lot data.

Step 2: After submission, select the same layer again. A new button appears: Change Lot.

Step 3: Click Change Lot

Step 4: In the Lot No select input, choose the additional lot to allocate.

Step 5: Click Set New Lot.

Step 6: Click Show Data to preview the additional lot data.

Step 7: Review the loaded data carefully.

Step 8: Click Submit to finalize allocation for the new lot

5 Mass Production Registration

5.1 Navigation

Step 1: Navigate to Mass Production.

5.2 Create New

Step 1: In the mass production records page, Click + Create New.

Step 2: Input Mass Production name and select Furnace No. (If Furnace not exists see Furnace registration on page 14)
Step 3: Click Submit.

6 Furnace Registration

6.1 Navigation

Step 1: Navigate to Options → Furnace

6.2 Create New

Step 1: Use the search bar, check if furnace to be added does not exists yet.
Step 2: Click +Create New Furnace
Step 3: Enter Furnace No and encoded by.
Step 4: Click Submit

7 1st & 2nd GBDP (Models) Registration

7.1 Navigation

Step 1: Navigate to Options → 1st and 2nd GBDP (Models)

7.2 Create New

Step 1: Use the search bar, check if model to be added does not exists yet.
Step 2: Click + Create New Model
Step 3: Enter model name.
Step 4: Click Submit.

8 View 1st & 2nd GBDP

8.1 Navigation

Step 1: Navigate to Options → View 1st and 2nd GBDP

8.2 View Mass Production Double GBDP Data

Step 1: Select Furnace name, Mass Production Name and Layer.
Step 2: Verify data.

9 HT Graph Patterns

9.1 Navigation

Step 1: Navigate to Options → HT Graph Patterns

9.2 Register New Pattern data

Step 1: Use search bar to check if pattern already exists.
Step 2: Click Create New Pattern.
Step 3: Fill out all the fields. The graph to be uploaded here will serve as the standard graph. Time (hours) refers to the calculation of the estimated time finish of the mass production.
Step 4: Click Submit.

9.3 Editing Graph Pattern

Step 1: Across the list of graph patterns hover on the desired pattern, and then click the Edit button below the descriptions.
Step 2: Proceed to edit data.
Step 3: Click Save Changes.

Heat Treatment Graph Patterns

Manage, review, and encode industrial furnace configurations and target model rules.

Create New Pattern

Create New Rule

Pattern Registers

Model Configurations

Pattern Registry Directory

Search and filter registered furnace configurations

Search by pattern number...

All Furnaces


PATTERN	FURNACE	ENCODED BY	ACTIONS
65	K-40	Joshua Bellocchio	Edit
22	K-42	Joshua Bellocchio	Edit
123	K-45	AE	Edit
123	K-42	AE	Edit
123	K-47	AE	Edit

Showing 1 to 5 of 5 patterns

1 / 1


9.4 Register New Rule data

Step 1: Click Model Configurations tab beside the Pattern registers.

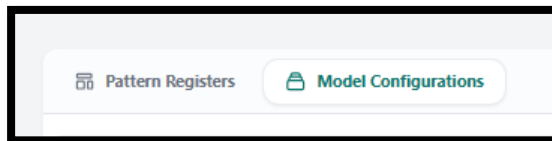

Step 2: Use search bar to check if model rule already exists.

Step 3: If the desired rule does not exists or must be renewed, click **Create New Rule button** above the table beside the Create New Pattern button.



Step 4: All fields are required here, select the desired model and configurations.

Create New Rule

Configure your target model specifications, active pattern parameters, and mechanical layer alignments.

TARGET MODEL

Select Model

PATTERN CONFIGURATIONS

Select Pattern

Add

LAYER ALIGNMENTS

Select Layer


Add

All Layers

Layers 1 to 9 Only

Submit Configuration

Note: The system will proceed provide an **overwrite mode** when submitting existing model rule.

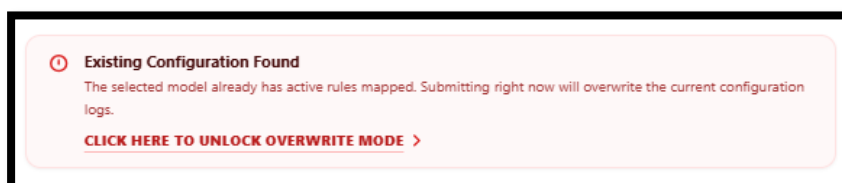

10 JH Curve

This page is used to generate JH Curve and Property Data. It is important to note that, user cannot upload JH Curve until Heat Treatment, Coating or Film Pasting encoding process is not finished.

Furnace Name *
K-40

Mass Prod. Name *
6342234TH

Layer *

Please select and upload TPM files:

Upload TPM Files
Select your .tpm files for processing

Drop files here or click to browse
Select multiple .tpm files for upload
Only .TPM files

Clear Files

Upload Instructions:
• Multiple file selection supported
• Only .tpm file format accepted
• Drag and drop or click to select

Selected Files
Preview of uploaded files

No Files Selected
Upload some .tpm files to see them listed here for processing.

MODEL
AAW0934G
LOT NO
1711-1

Upload Property Data CSV
Select a CSV file to upload:

Choose File No file chosen

Clear File

Only CSV files are supported

Generate Graph

10.1 File Preparation Requirements

Before accessing the JH Curve page, ensure:

- TPM data files are complete and properly formatted.
- Property data file is in CSV Format.

Incorrect or incomplete files may prevent proper graph generation.

10.2 Basic JH Curve Generation Process

Step 1: Select Furnace, Mass Production name and Layer. Upon selection, the corresponding Model and Lot no will automatically appear.

Step 2: Upload the required files: TPM Data files and Property Data (CSV)

Step 3: Proceed with generation. Click Generate Graph.

10.3 Breaklots

If the selected layer contains multiple lots, the system will detect this condition. A Set List select input will appear. To generate JH Curve for another lot in the same layer:

Step 1: Keep the same Furnace, Mass Production and Layer selected.

Step 2: In the set list dropdown, select the desired Lot No + Model combination

Step 3: Upload the corresponding TPM and Property Data files.

Step 4: Click Generate Graph.

11 MPI Report

Magnetic Property Inspection Information

Pulse Tracer Machine No.: P0 Date: mm/dd/yyyy Shift: Operator:

STANDARD SAMPLE DIMENSION and Material Grade 標準サンプル寸法および材料グレード		MAGNETIC PROPERTY DATA (磁気特性データ)					
		ITEMS	STANDARD	ACTUAL DATA			
				AVERAGE	MAXIMUM	MINIMUM	VARIANCE (max-min)
LENGTH (mm)	7 mm	Br (G)	13800 ~ 14400	13629	13753	13542	211
WIDTH (mm)	7 mm	IHc (Oe)	21363	24918	25240	24683	557
THICKNESS (mm)	2 mm	IHk (Oe)	18000	23528	23874	23277	597
MATERIAL GRADE	N50SH-GF						
MPI SAMPLE QTY.	5 pcs/Lot						

Remarks: With Additional Samples

SMP Judgement:

Prepared By: Checked By: Approved By:

Note: Reason of REJECT/HOLD:

Change Judgement:

This page is where data generated from JH Curve is processed and finalized.

11.1 Basic Process

Step 1: Encode required fields.

Step 2: Save Report. Click Save. If the report has already been saved once, the save button changes to "Overwrite".

11.2 Stamp Approval Process

The MPI report requires three sequential stamp approvals: Prepared By, Checked By and Approved By. Each approval is applied through its respective stamp panel.

Prepared By – Once approved, the report can no longer be saved or overwritten. Editing is locked to preserve integrity.

Checked By – Confirms review of computed data and judgement

Approved By – Once approved, the MPI Report is generated into a PDF File. The report becomes officially finalized.

Reports can be stamp approved within the report itself but also on Options → Approval. On the approval page, users can stamp approve multiple reports at once by selection.

11.3 Undo Stamp Approval

Users may undo an applied stamp approve if necessary:

Step 1: Click the Undo button below the respective stamp panel.

Step 2: Enter the required reason for undo.

Step 3: Click Confirm Undo.

11.4 Judgement Handling

Judgement is based on computed results and evaluation: PASSED, HOLD, REJECT.

If the report results in REJECT or includes NG IHC remarks, users may apply additional testing data. Users can also apply additional even if not REJECT depending on the situation.

11.5 Apply Additional

Step 1: Click Apply Additional (located beside the Save/Overwrite button)

Step 2: Upload TPM Files. Click Submit

Step 3: Enter remarks/description. Click Proceed to Upload CSV.

Step 4: Upload the Property Data CSV. Click Submit.

Step 5: Click Proceed (Show Data).

11.6 SEG0A03G Model Format Special Case

For SEG0A03G Model, a special format can be toggled on and off regardless of judgement. This feature will only be activated when the model is SEG0A03G. Located beside Stamp Undo History Button.

Step 1: Click Apply SEG format.

Step 2: Enter required fields and then Click Save.

11.7 Change Judgement

SMP Judgement can be changed by authorized users. Located below the SMP Judgement stamp panel.

Step 1: Click the select dropdown list.

Step 2: Select the new judgement. This will be saved instantly.

12 Special Instructions

Formats for VT Models, CPK IHC Models, GX Models, 1x1x1 Models (No Corner), BH Models and ROB BH Tracer Models must have a registered models assign in order for it to be reflected in the MPI Reports page.

12.1 Register Model

Step 1: Go to Options → Special Instructions

Step 2: Choose which format the model is associated to.

Step 3: Enter Model name and Encoded By.

Step 4: Click Add.

13 Mias Factor Emp

Property data contains ID no for mias and factor employees. They must be first registered or it will cause an error in the system.

13.1 Register Employee data

Step 1: Go to Options → Mias Factor Emp

Step 2: Enter Employee Name, Employee No and User No.

Step 3: Click Add.

14 Inspection

All models within the system are recorded in this page. This list is also interconnected with Heat Treatment, Coating and Film Pasting.

14.1 Add New Model

Step 1: Go to Options → Inspection.

Step 2: Use search bar to check if model already exists.

Step 3: Click Insert New Record.

Step 4: Fill out all the fields.

Step 5: Click Register.

15 Send Email

Finalized reports can be emailed through this page. All data associated to the entered mass production will be sent in group along with txt data files and other attachment if there's any.

15.1 Sending Email

Step 1: Go to Options → Send Email.

Step 2: Enter Mass Production name. In this case it must be the combination of Furnace and Mass Production Ex: K40 541ST

Step 3: Enter Recipients

Step 4: Upload Additional Excel files (Optional)

Step 5: Enter a message (Optional)

Step 6: Click Send Email.