
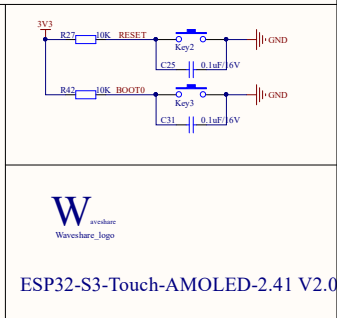
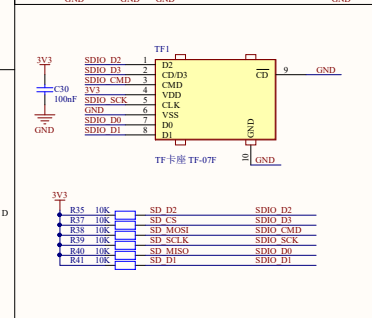
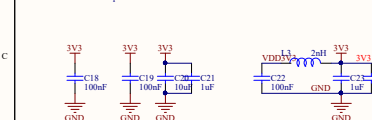
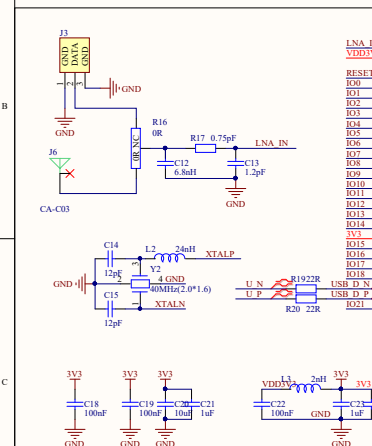
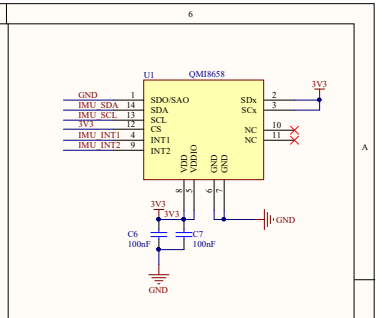
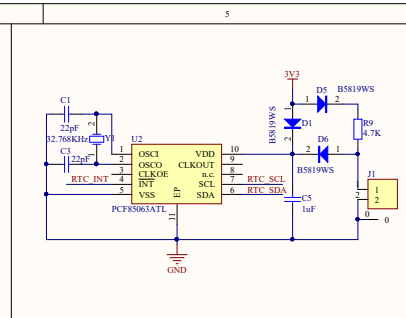
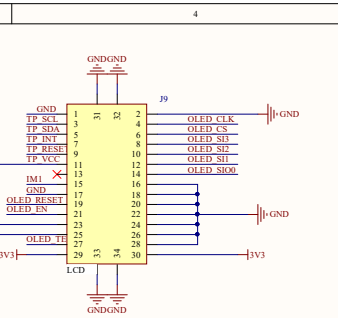
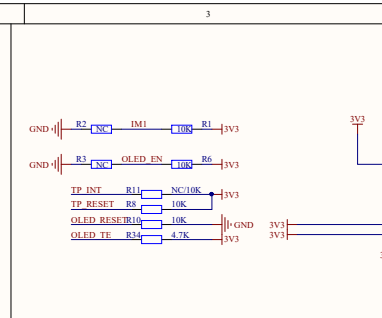
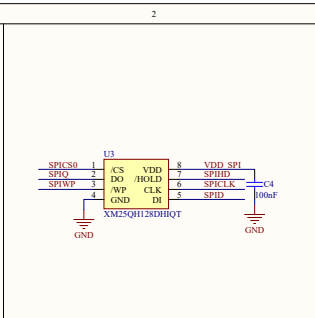
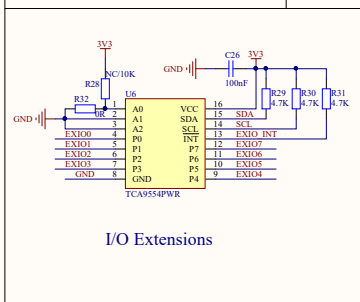
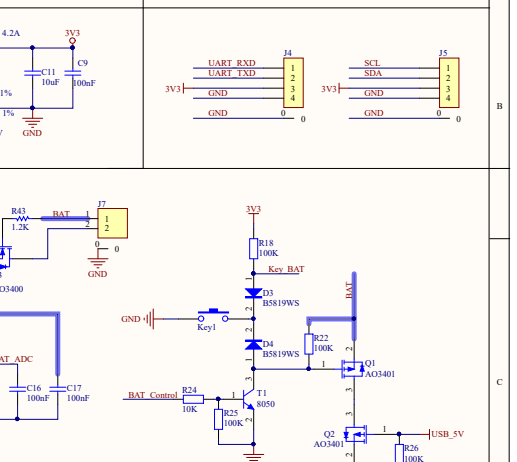


[illegible]

ESP32-S3-Touch-AMOLED-2.41 V2.0

GPIO	LCD	SD Card	IMU	RTC	Other	OUTPUT
I00					BOOT0	
I01						I01
I02		SD CS				I02
I03	TP_INT					
I04		SD SCLK				I04
I05		SD MOSI				I05
I06		SD MISO				I06
I07						I07
I08						I08
I09	OLED CS					
I010	OLED CLK					
I011	OLED SH00					
I012	OLED S11					
I013	OLED S12					
I014	OLED S13					
I015					Key_BAT	
I016					BAT_Control	
I017					BAT_ADC	
I018					EXIO_INT	I018
I019						USB_D_N
I020						USB_D_P
I021	OLED_TE					
I033						
I034						
I035						
I036						
I037						
I038						I038
I039						I039
I040						I040
I041						I041
I042						I042
TXD					UART_TXD	TXD
RXD					UART_RXD	RXD
I045						I045
I046						I046
I047	TP_SDA	IMU_SDA	RTC_SDA		ESP32_SDA	SDA
I048	TP_SCL	IMU_SCL	RTC_SCL		ESP32_SCL	SCL
EXIO0	OLED RESET					
EXIO1	TP_RESET					
EXIO2				RTC_INT		
EXIO3			IMU_INT2			
EXIO4			IMU_INT1			
EXIO5						EXIO5
EXIO6						EXIO6
EXIO7						EXIO7

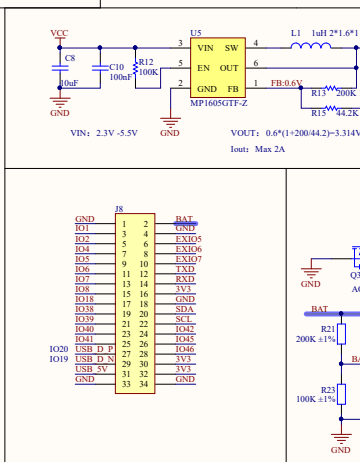

TCA9554PWR

I/O Extensions

