

TCMax® Services

Installation and Operating Manual

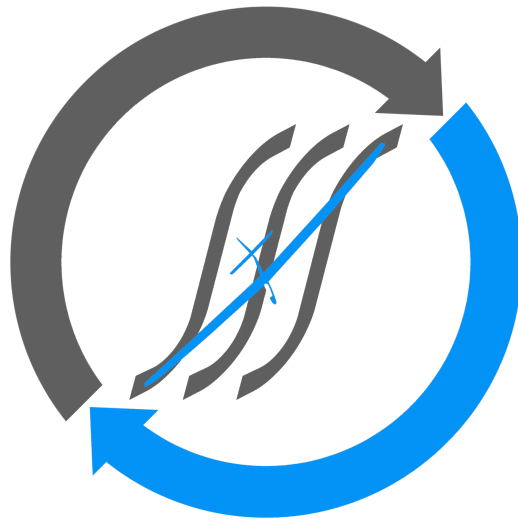


Table of contents:

Getting Started

-  [Installation](#)

Installation

Email Service

-  [Introduction](#)
-  [Configuring SMTP Settings](#)
-  [Email Settings](#)

Introduction

- [Menu Options](#)
 - [File](#)
 - [Options](#)

Configuring SMTP Settings

- [TCMax Services® Version 9.8.8279.19555 or Older](#)
- [TCMax Services® Version 9.8.9165.18119 or Newer](#)

Email Settings

- [Recipient Message Settings](#)
- [Choosing Recipients](#)
 - [Adding New Emails](#)
- [Options](#)
 - [Part Numbers](#)
 - [Schedule](#)
- [Categories](#)

ATC Sync Service

-  [Architecture and Synced Events](#)
-  [Installation of ATC Web Services Certificates](#)
-  [Licensing the Sync Service](#)
-  [Configuring the Sync Service](#)

Architecture and Synced Events

- [ATC to TCMax® Log Records](#)

Installation of ATC Web Services Certificates

Licensing the Sync Service

Configuring the Sync Service

Sync Service Troubleshooting

Accessibility

-  [Accessibility](#)

Version: 9.x

Getting Started



Installation

Within the Product Downloads section on our website, select the TCMa^x® Services tab and download the setup fil...

Version: 9.x

Installation

Within the **Product Downloads** section on our [website](#), select the **TCMax® Services** tab and download the setup file by selecting **Download**.

Product Downloads


TCMAX	TCMax Services
TCMAX SERVICES	Add-on services for enhancing the TCMax Asset Management Software Suite.
	Version 9.x
	Additional services that enhance the TCMax Asset Management Software Suite for version 9.

Save the file to your computer and once the download is complete, browse to the file and **double-click** to begin the setup.

! INFO


Installing the **TCMax® Service Installer** will require the logged-in user to have Windows Administrative Privileges.

Select **Next** on the welcome screen of the installation wizard.

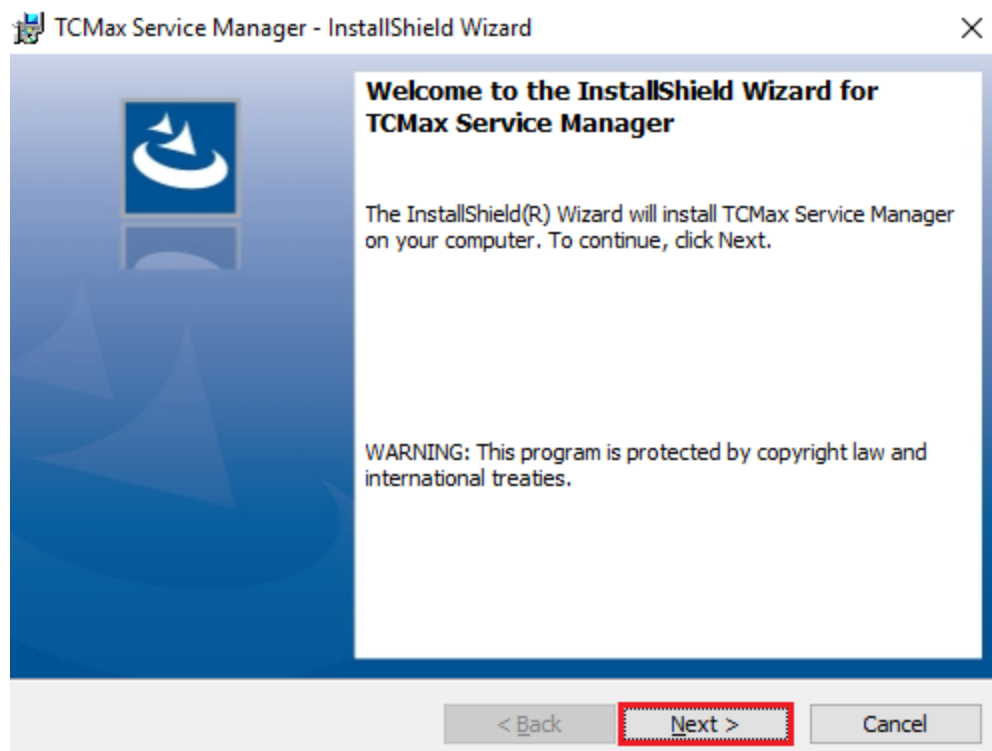


Read the Software License Agreement carefully. If you accept the terms in the License Agreement, select **I accept the terms in the license agreement**, and select **Next**; otherwise, click **Cancel**.


If you do not agree to the terms of the Software License Agreement, you will not be able to install this software.

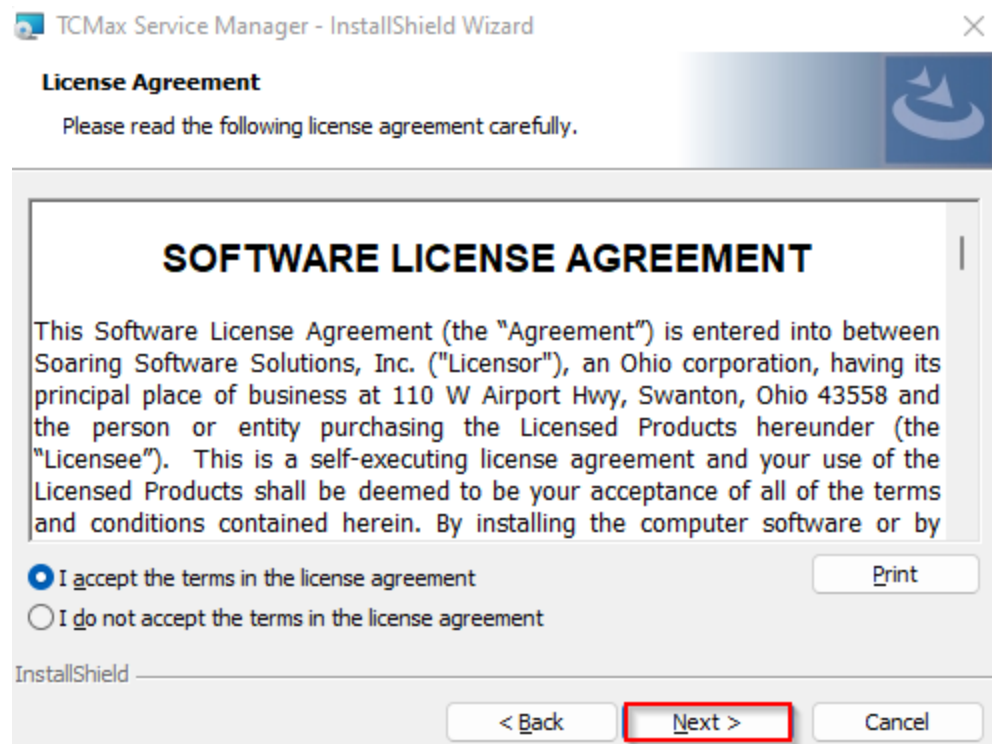

Click **Install**. The Installer will require that you grant it permission after clicking install. Please be patient as the software installs.

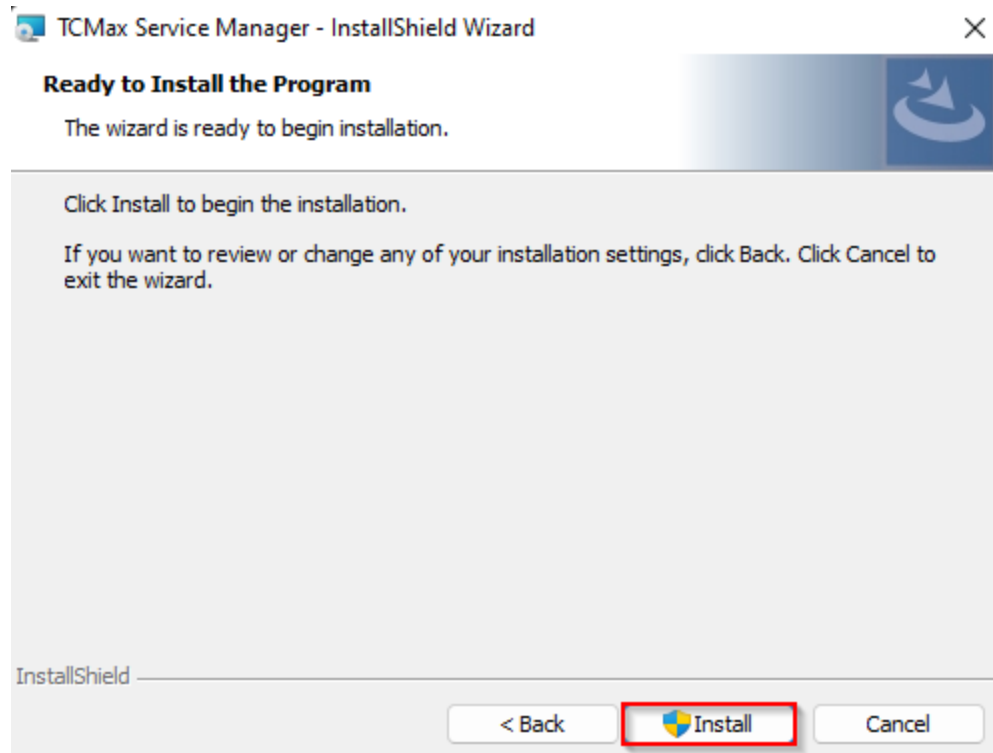

When the installer finishes, click **Finish** to conclude the installation of the Service Manager.

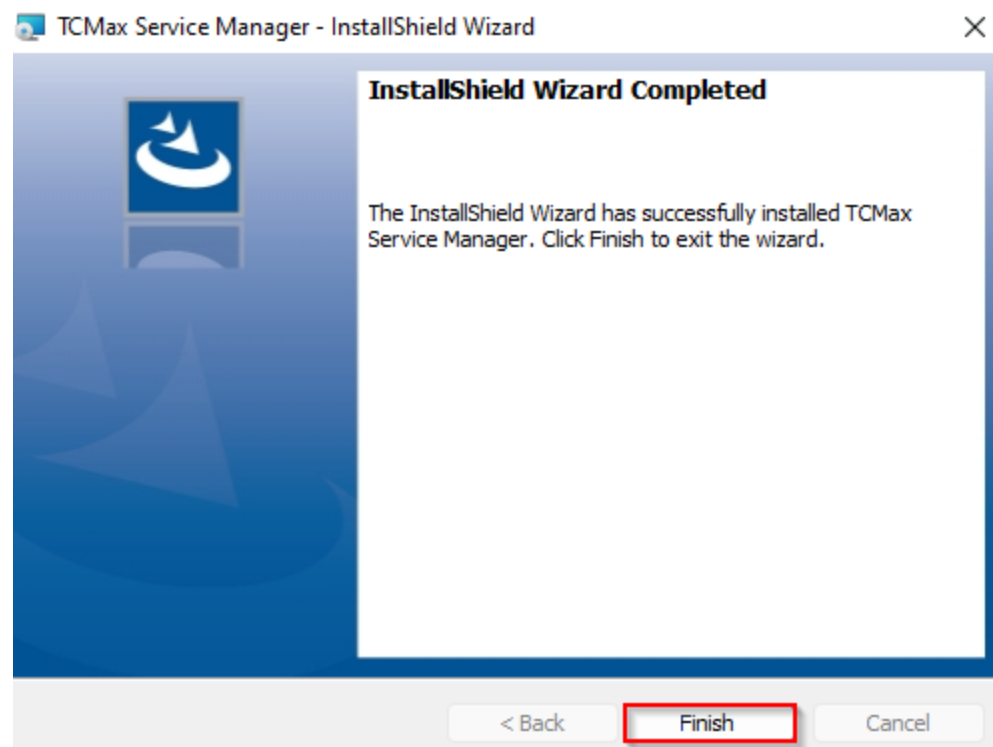

On your first run of the TCMAX® Service Console, you will be presented with a Connection Properties window where you will connect to the Database that the Service Console will monitor.

Connection Properties

Data source:
Microsoft SQL Server (SqlClient) Change...

Server name:
localhost Refresh

Log on to the server

☐ Use Windows Authentication

☒ Use SQL Server Authentication

User name: sa

Password: *****

☐ Save my password

Connect to a database

☒ Select or enter a database name:
TCSDemo

☐ Attach a database file:
C:\Users\Public\Documents\TCMax\TCSDem Browse...

Logical name:
TCSDemo

Advanced...

Test Connection OK Cancel

Once you have successfully established the connection to the Database, proceed to the [Introduction](#) section.

Email Service



Introduction

The TCMa^x® Service Console sends emails based on specific triggers in the TCMa^x® Database. The emailer will ...



Configuring SMTP Settings


The Service Console does not support two factor authentication (2fa). If you use two factor authentication for you...



Email Settings

Email Settings can be configured from the Service Console or from within TCMa^x® by navigating to Settings > Em...


Introduction

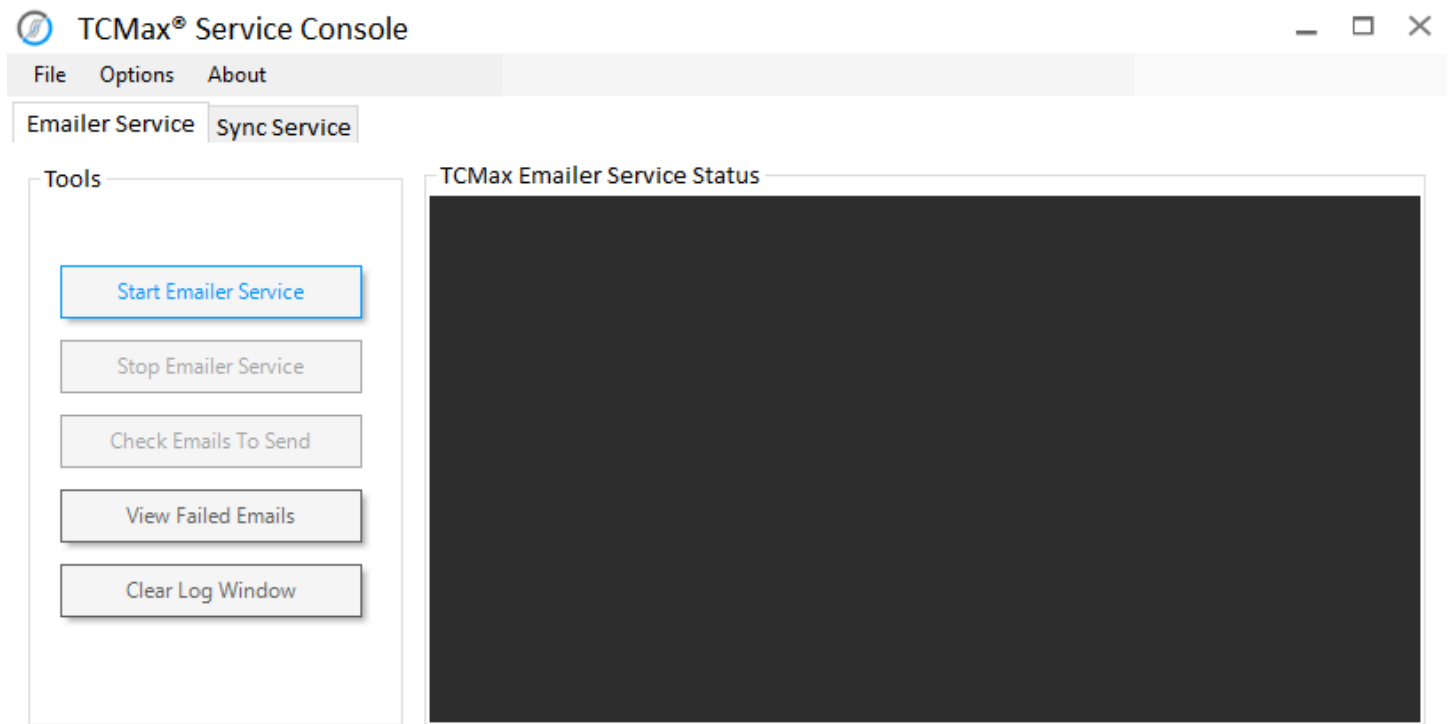

The **TCMAX® Service Console** sends emails based on specific triggers in the TCMAX® Database. The emailer will send triggered emails every five minutes. The interface above shows you the options you have available to manage the service. Once the service is configured you can start or stop the emailer service by clicking either the **Start Emailer Service** or **Stop Emailer Service** buttons.

The **Check Emails to Send** button will display any queued emails that will be sent out upon the next 5 minute interval in the Status window.


The **View Failed Emails** button will display any emails that were unable to be sent.

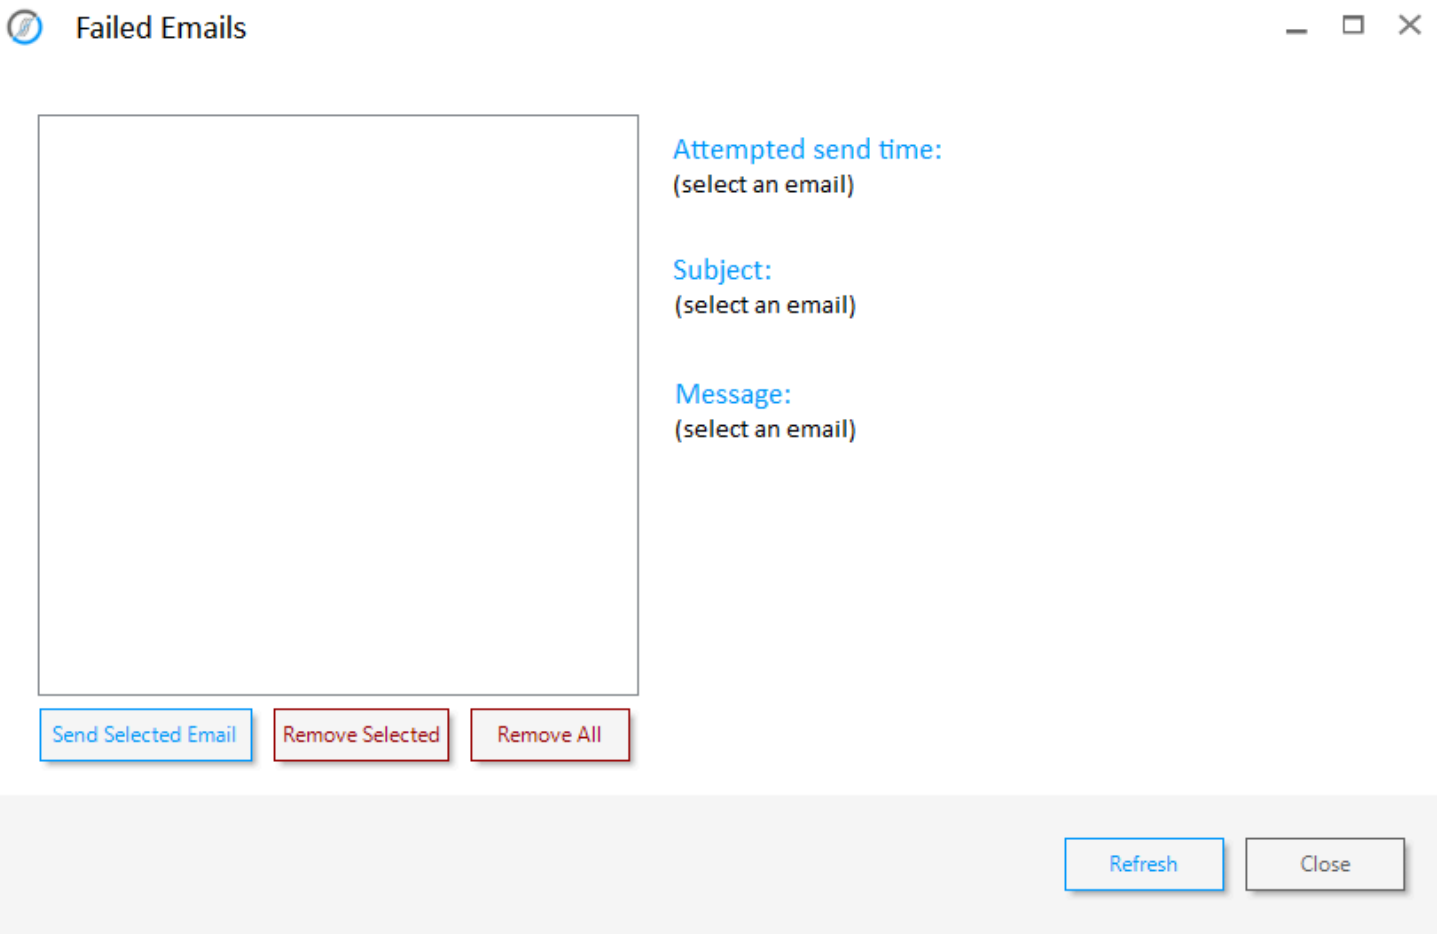

The **Clear Log Window** button will clear any of the current entries out of the TCMAX® Emler Service Status window.


Menu Options

File

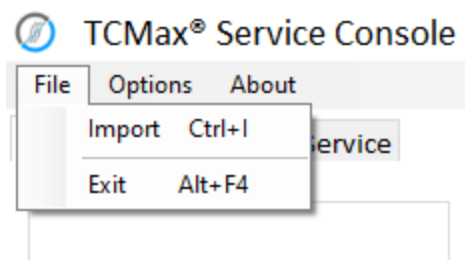


The **File Menu** will allow you to **Import** your ATC Certificate when utilizing the Service Console for the ATC Sync Service. The **Import** tool can also be accessed by press **Ctrl + I** on your keyboard. The **File Menu** also allows you to **Exit** the Service Console.

Options

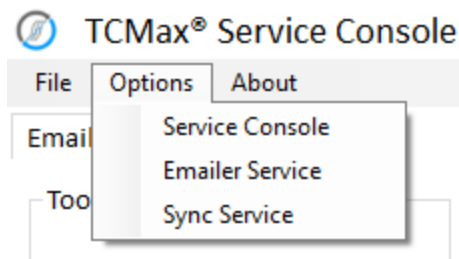

Selecting **Service Console** will allow to change your Database Connection.

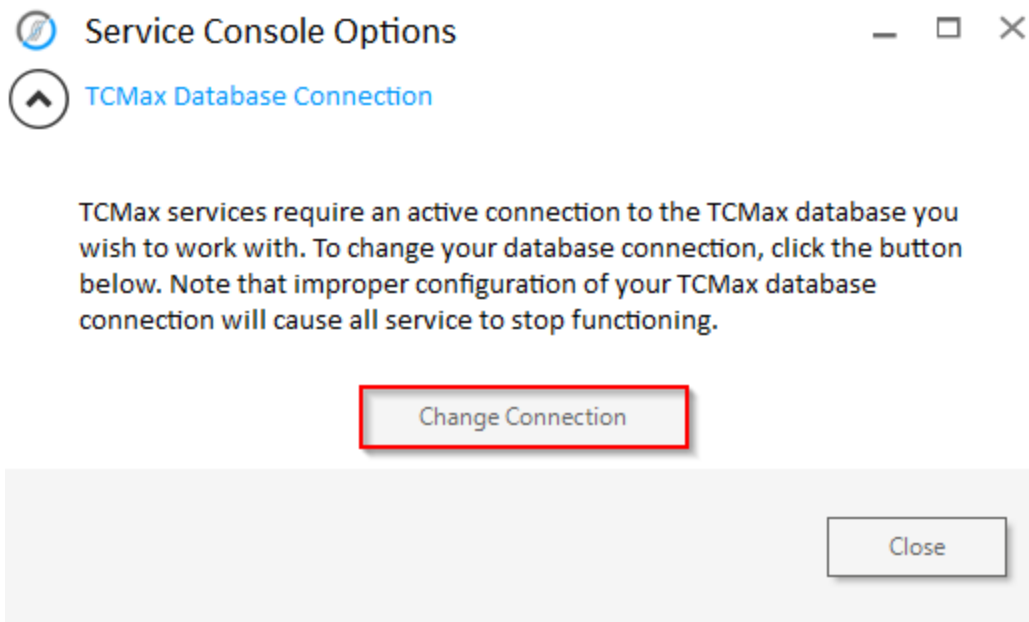

Selecting **Emailer Service** will allow you to setup your email triggers along with your SMTP Settings. Take a look at our [Configuring SMTP Settings](#) sections for information on this.

Selecting **Sync Service** will allow you to configure your settings for the ATC Sync Service.

ATC Web Service Connection

To sync data between ATC and TCMax, the TCMax ATC Sync Service must have a connection to the ATC Web Service. Please enter the connection details for the ATC Web Service below. If you encounter issues while connecting to the ATC Web Service, please refer to the documentation provided with your ATC Box to ensure that your ATC Web Service is properly configured to serve requests.

Computer name:

Service port:

Encoding method

☒ MTOM☐ Text[Test Connection](#)

Clear

Save

Close


Configuring SMTP Settings

2FA

The Service Console does not support two factor authentication (2fa). If you use two factor authentication for your email, you will need to generate an app password to use for the Emailer Service. Once you generate your app password, copy the password and that will be the password input for the email.


Before using the Emailer Service, it must be configured to send emails from your Email Server.

This process usually involves assistance from your IT staff or whoever oversees your Email Servers. To configure the emailer service, navigate to **Options > Emailer Service** from the Service Console.

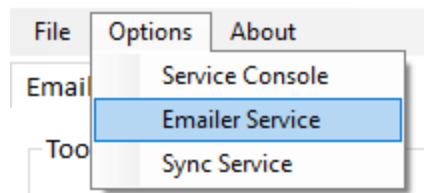

After selecting Emailer Service, an **Emailer Configuration** window will display. Refer to the **SMTP Settings** tab.

TCMax Services® Version 9.8.8279.19555 or Older

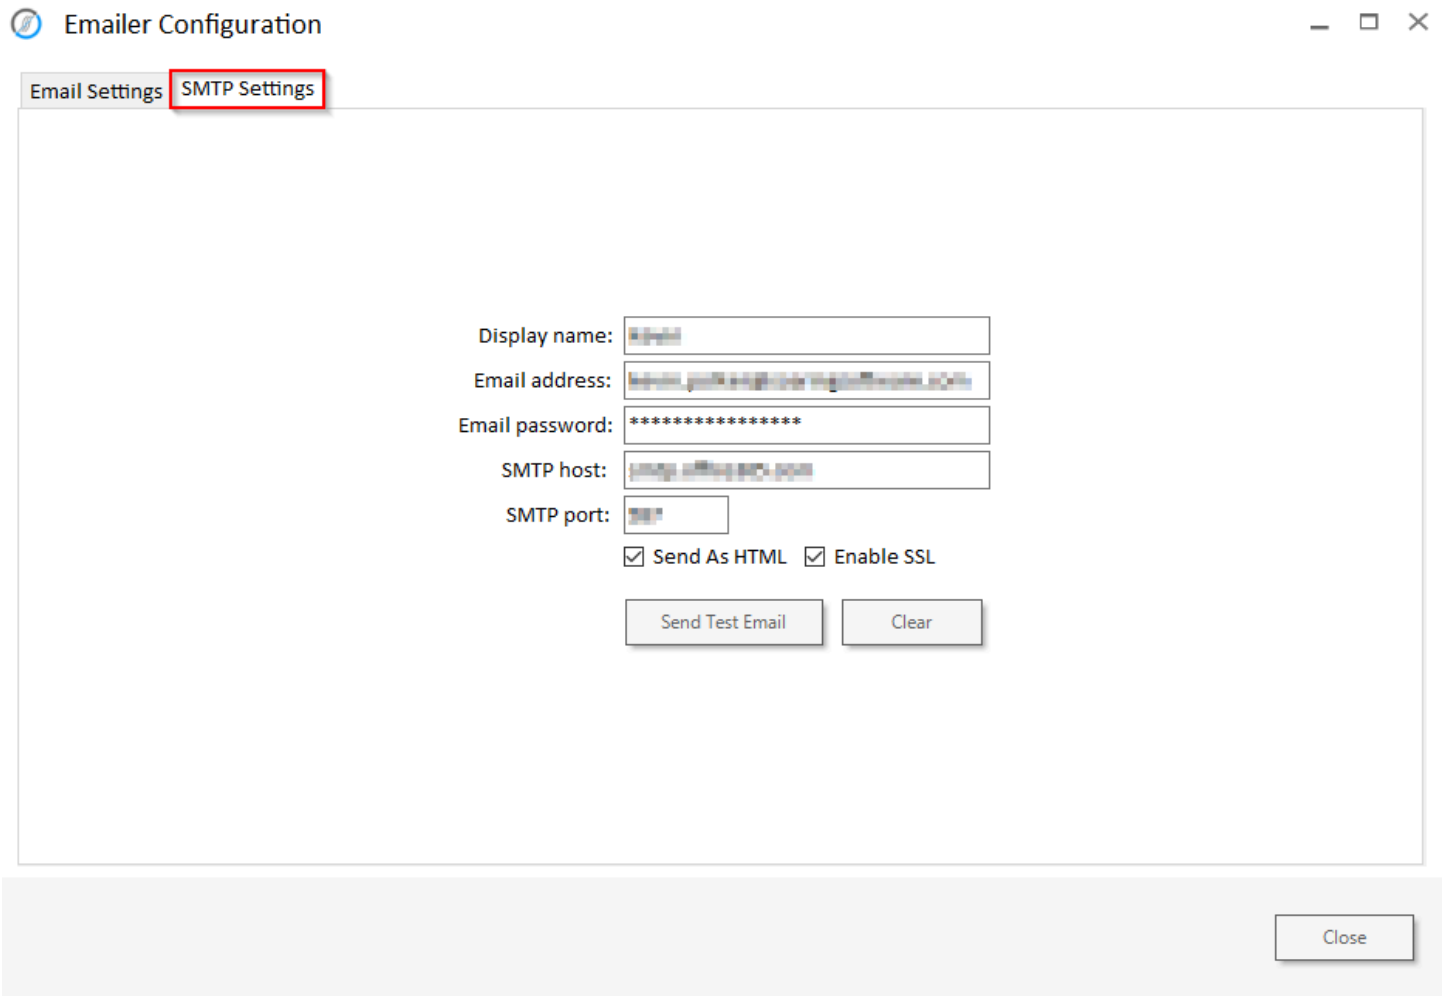

The screenshot shows a window titled "Emailer Configuration" with standard window controls (minimize, maximize, close) in the top right. Inside the window, there are two tabs: "Email Settings" and "SMTP Settings". The "SMTP Settings" tab is selected and highlighted with a red border. The form contains the following fields and controls:

- Display name:** A text input field containing "John" with a small icon to its left.
- Email address:** A text input field containing "john.doe@company.com".
- Email password:** A text input field containing "*****".
- SMTP host:** A text input field containing "smtp.office365.com".
- SMTP port:** A text input field containing "587".
- Send As HTML:** A checkbox that is checked.
- Enable SSL:** A checkbox that is checked.
- Buttons:** Two buttons at the bottom: "Send Test Email" and "Clear".

A "Close" button is located in the bottom right corner of the window's frame.

Display Name is the name of the sender for each of the emails that get generated.

Email Address and **Email Password** are where you enter the credentials for the email account you would like the emailer to use.


SMTP Host and **SMTP Port** is where you enter your email server's address (you can enter the IP or the domain address as the host) and the port over which you're outgoing emails are served.

Send As HTML will send the email as HTML as opposed to plain text.

Enable SSL will cause the emails to be sent out encrypted using SSL.

The **Send Test Email** button will send a test email using the SMTP Settings you have configured from the Emailer Configuration window. You will be prompted to enter the email you would like to send the

test to.

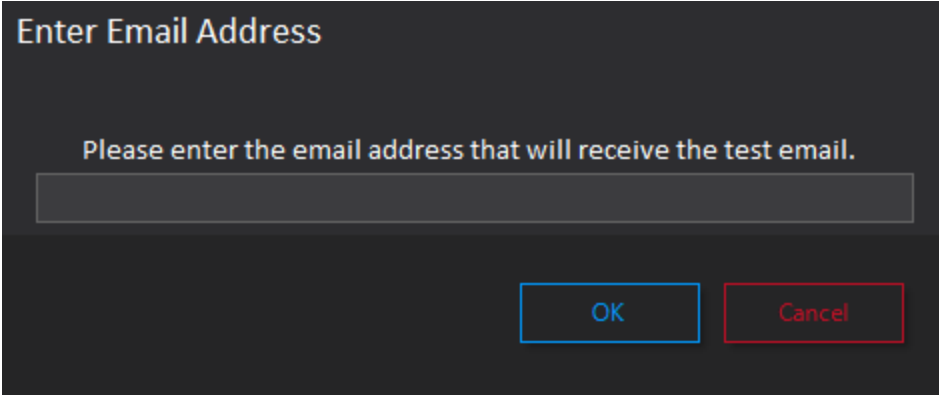
A dark-themed dialog box titled "Enter Email Address". Below the title is a line of instructional text: "Please enter the email address that will receive the test email." Underneath this text is a horizontal text input field. At the bottom right of the dialog are two buttons: "OK" with a blue border and "Cancel" with a red border.

Enter Email Address


Please enter the email address that will receive the test email.

OK Cancel

Upon selecting **OK**, you will receive a popup displaying if the test was successful or not.

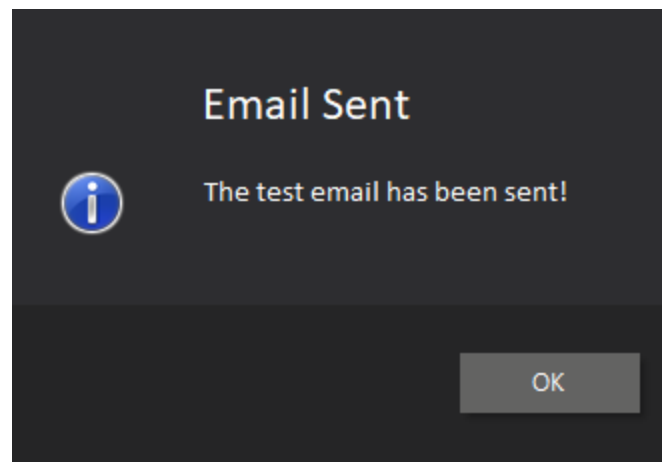

TCMax Services® Version 9.8.9165.18119 or Newer

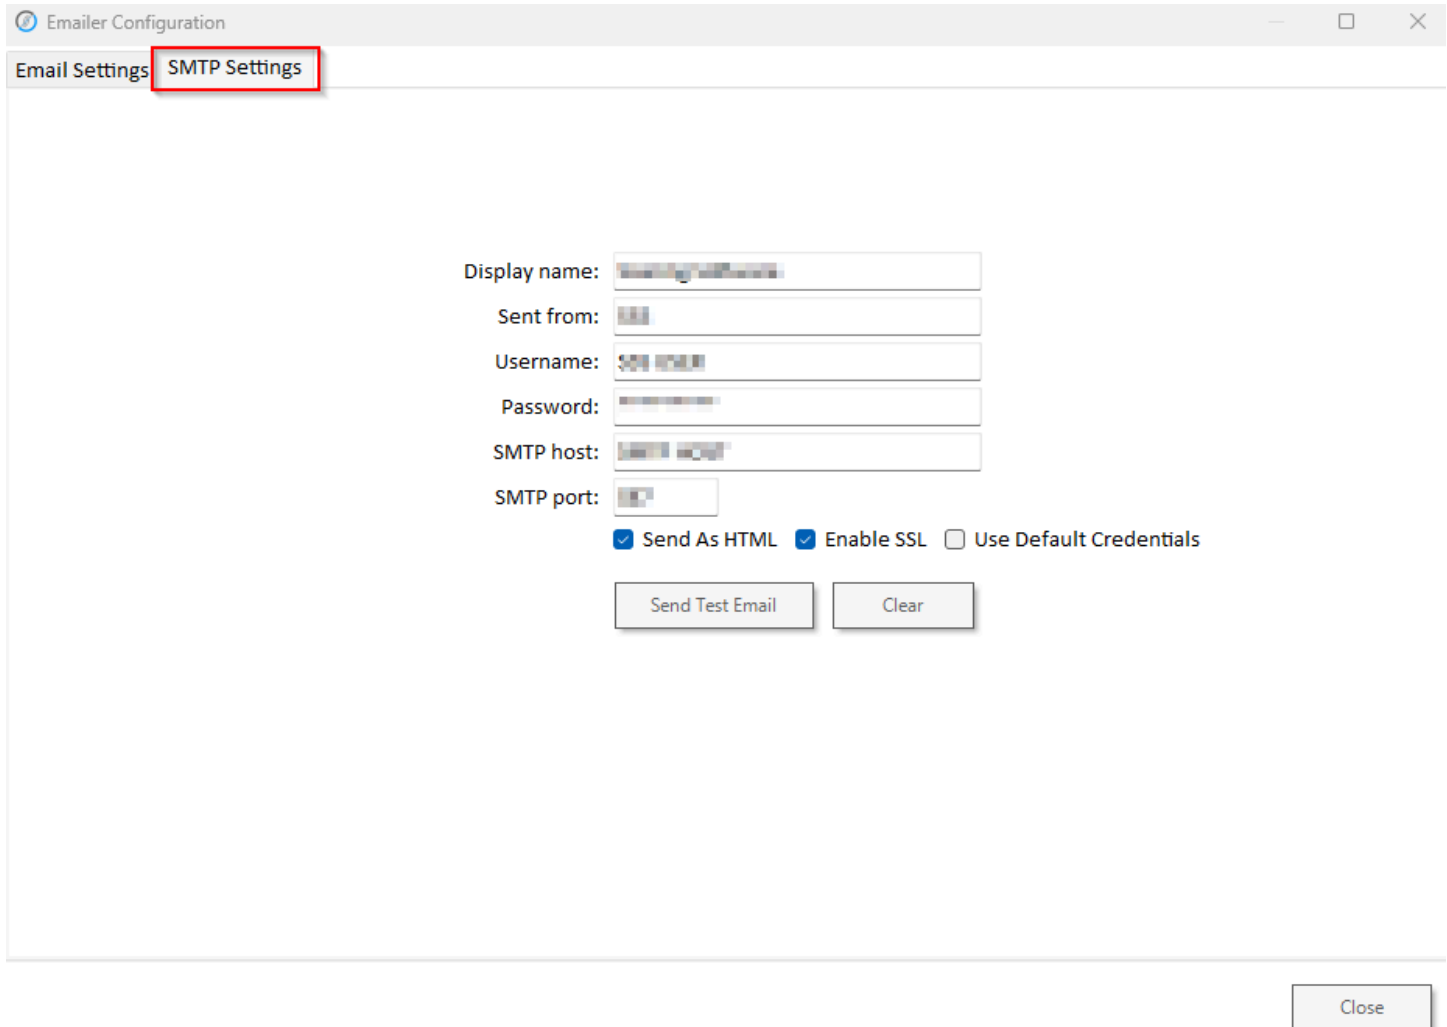

The screenshot shows a window titled "Emailer Configuration" with a tab labeled "SMTP Settings" highlighted by a red rectangle. The window contains the following fields and options:

- Display name: [Text field]
- Sent from: [Text field]
- Username: [Text field]
- Password: [Text field]
- SMTP host: [Text field]
- SMTP port: [Text field]
- ☒ Send As HTML
- ☒ Enable SSL
- ☐ Use Default Credentials
- [Send Test Email] button
- [Clear] button
- [Close] button (bottom right)

Display Name is the name of the sender for each of the emails that get generated.

Sent From is the address that emails will appear to be sent from. This is optional and if not set we will use the provided Username. If this is configured, ensure the credentials used to authenticate to the Server has permissions to send with this address.

Username and **Password** is the username and password used to authenticate to the Server. Username will also be used as "Sent From" if sent from is not set. Password is optional and ignored if use default credentials is selected.


SMTP Host and **SMTP Port** is where you enter your email server's address (you can enter the IP or the domain address as the host) and the port over which you're outgoing emails are served.

Send As HTML will send the email as HTML as opposed to plain text.

Enable SSL will cause the emails to be sent out encrypted using SSL.


Use Default Credentials will determine if emails should use the users default credentials.

The **Send Test Email** button will send a test email using the SMTP Settings you have configured from the Emailer Configuration window. You will be prompted to enter the email you would like to send the test to.

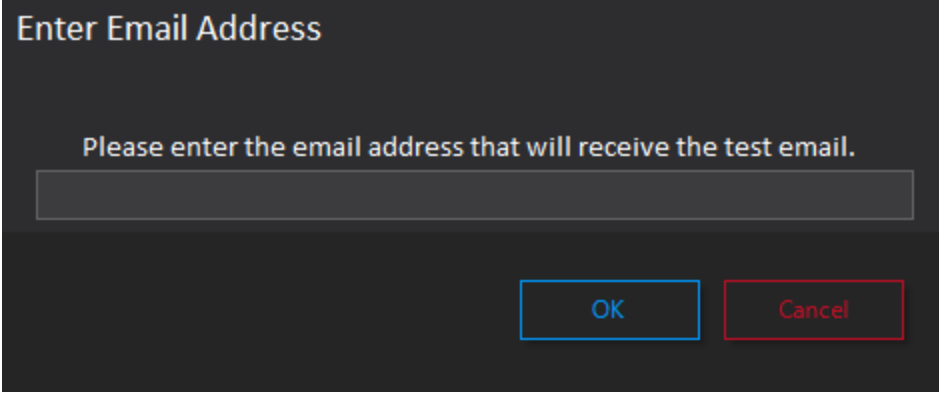

A dark-themed dialog box titled "Enter Email Address". Below the title is a prompt: "Please enter the email address that will receive the test email." followed by a text input field. At the bottom right are two buttons: "OK" with a blue border and "Cancel" with a red border.

Upon selecting **OK**, you will receive a popup displaying if the test was successful or not.

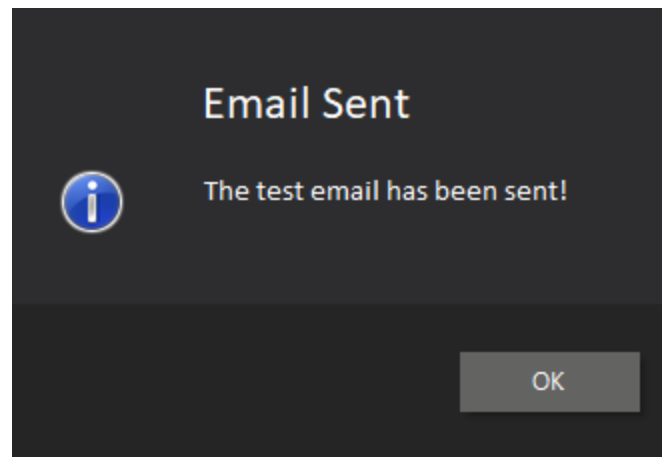

Email Settings

Email Settings can be configured from the Service Console or from within TCMMax® by navigating to **Settings > Email Options**. All the listed triggers will allow you to enter a **Subject** which will be the subject of the email and a **Message** which will be the message in the body of the email along with details related to the trigger.

Recipient Message Settings

Start by selecting the category you would like to setup automatic emails for. When expanding the category you will see the settings for the recipients along with other options such as **Subject line**, **Message**, **Occurrence**, **Part Number**, **Report**, etc.

The image provided below will show the details and options within the **Calibration** category.

 Emailer Configuration

Email Settings

Shop Code: TCMAX Demo Shop

Calibration

Subject: Calibration Report

Message: The following items are due for calibration this week.

Select Email Recipient(s)

Email about items 7 days before they require calibration.

Email sending schedule

Send date: 9/26/2022Send time: 7:00:00 AM

Occurrence: Weeks

Repeat every: 1

Schedule on: ☐ S ☒ M ☐ T ☐ W ☐ T ☐ F ☐ S

Next Email Attempt: Weekly on Monday


Inspection

Transfer Alert

Close

Choosing Recipients

To choose the recipient(s), click the box **Select Email Recipient(s)** button and the Email Selection window will display, allowing you to select from Email Addresses added to your users.

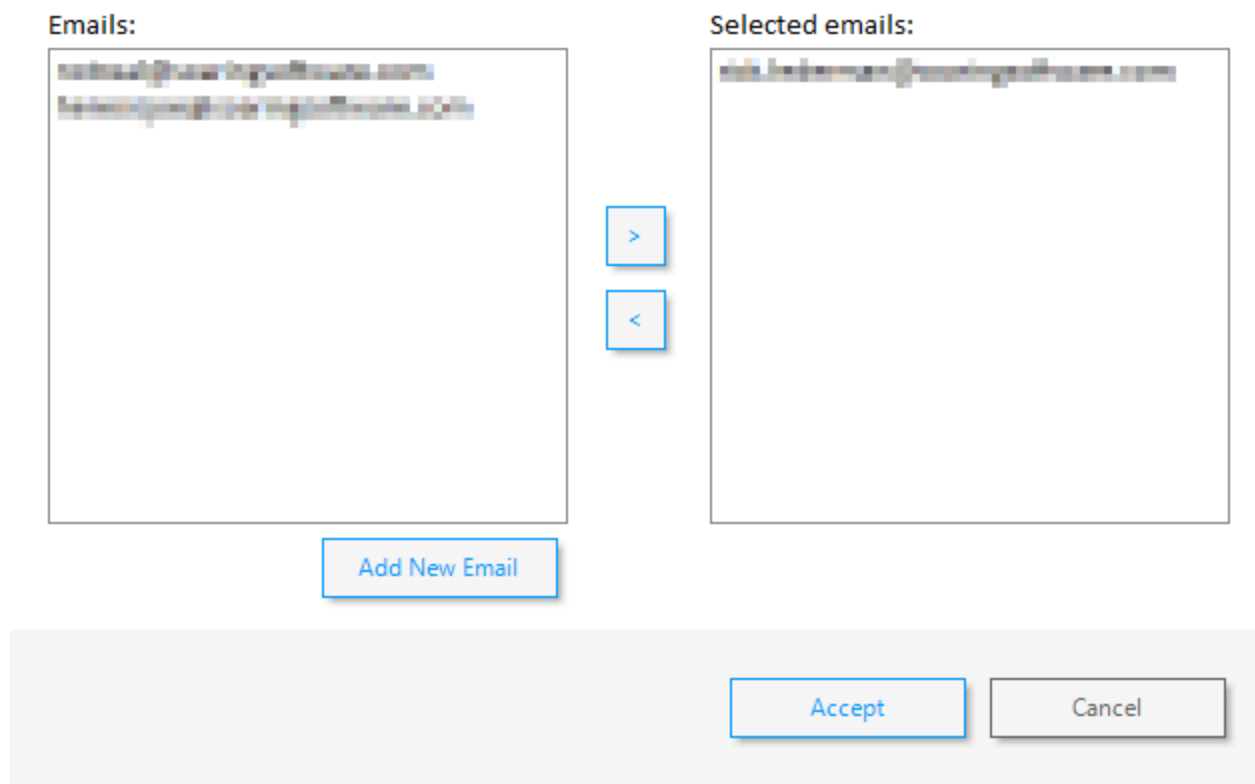


The dialog box is titled "Email Selection". It features two main list boxes. The left list box, labeled "Emails:", contains two email addresses: "testmail@newlogistics.com" and "testmail@oldlogistics.com". The right list box, labeled "Selected emails:", is currently empty. Between these two boxes are two small square buttons with blue borders and blue text: a right-pointing arrow ">" on top and a left-pointing arrow "<" on the bottom. Below the "Emails:" list box is a button labeled "Add New Email". At the bottom right of the dialog are two buttons: "Accept" (with a blue border) and "Cancel" (with a grey border).

Simply select the email(s) you wish to assign to to the trigger and move them to the right box by selecting the  button.

Adding New Emails

If you would like to provide an email that is not a current user in the Database, you can do so by selecting the **Add New Email** button.

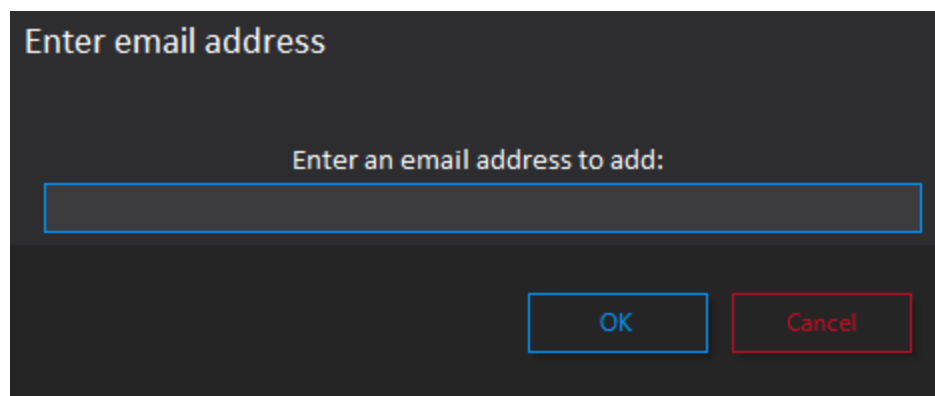

This is a dark-themed dialog box titled "Enter email address". It contains a label "Enter an email address to add:" above a single-line text input field. At the bottom right, there are two buttons: "OK" (with a blue border) and "Cancel" (with a red border).

Click **Accept** when finished to return to the Emler Configuration window.

Options

Part Numbers

Several of the email triggers have Part Number settings that can be implemented. In the grids that contain the Part Number and warning level, you can set it so that the email will only be sent if the number of items with the Part Number entered has reached the warning level.

The **Only send an email for the following part numbers** checkbox will set a threshold for the emails to be sent out only for the Part Numbers entered into the grid that exceed the warning level.

Items with the part numbers listed below will only be emailed when the quantity of lost items with this part number has reached the specified warning level.

☐ Only send an email for the following part numbers:

	PartNumber	WarningLevel
*		

i NOTE

Part Numbers are not required, and if the checkbox to **Only send an email for the following part numbers** is left unchecked than an email will be triggered for all items being marked as lost, broken, etc.

Schedule

Several of the email triggers have a schedule that can be set. In the **Email sending schedule**, you can configure when and how often an email gets sent regarding the trigger.

Email sending schedule

Send date: 9/ 5/2022  Send time: 7:00:00 AM 

Occurrence: Months 

Repeat every: 1

Schedule by: ☐ Day of the month ☒ Day of the week

Next Email Attempt: Monthly on the first Monday



TIP

By not providing an **Occurrence**, you can configure an email to be sent one time on the date and time of your choice.

Categories

Lost Status will send out emails concerning items that get marked as Lost.

Broken Status will send out emails concerning items that get marked as Broken.

Unserviceable Status will send out emails concerning items that get marked as Unserviceable.

Long Term Status will send out emails concerning items that get marked as Long Term.

Reorder Status will send out emails concerning items that have dropped below their reorder quantities. The emails can be sent out either at a specific time of day or periodically, depending on which option you select.

Issued Items At End of Shift will send out emails concerning items that remain issued out to a user once the end of their shift has elapsed. For this report to be effective you must be using the shift feature in TCMMax® found by going to **Settings > Shift Setup** from the Main Screen. You must have the shifts created and assigned times and the employees must be assigned to a shift.

You can set the amount of time after the end of the shift to send a warning email to the relative user and the amount of time after the end of shift to send out emails to the designated recipient(s).

Calibration will send out emails concerning items that are overdue for calibration or becoming overdue within a window of days.

Inspection Status will send out emails concerning items that are overdue for inspections or becoming overdue within a window of days.

Transfer Alert will send out emails concerning items that have been transferred either into or out of the Shop Code that the email has been set up for.

Secure Inventory will send out emails concerning items that work in conjunction with CompX® locks provided by ekProtrack to notify the user about unauthorized access and unsecured closures of the lock system.

Custom Reports can send user generated reports as emails if the report requires no input from the user (parameters). You can select the report you would like emailed from the list on the left side of this section and input the recipient and email information in the appropriate areas. You can then set the date and time for the initial email as well as the schedule for the email.

This section also allows you to Add Event(s) for the trigger. Allowing you to have a set schedule along with immediate attention after a specific trigger occurs.

 WARNING

Any report that requires user input will not be able to be sent via the emailer. This includes mandatory barcodes, dates, or any additional parameters that TCMMax® has built in or users have included in custom reports.

ATC Sync Service



Architecture and Synced Events

The ATC Sync Service has been deprecated and is no longer available for purchase. The information provided in th...



Installation of ATC Web Services Certificates

The ATC Sync Service has been deprecated and is no longer available for purchase. The information provided in th...



Licensing the Sync Service

The ATC Sync Service is deprecated and is no longer available for purchase. This documentation is retained for re...



Configuring the Sync Service

1 item

Architecture and Synced Events

! INFO

The **ATC Sync Service** has been deprecated and is no longer available for purchase. The information provided in this section is retained for reference and support purposes for existing installations.


ATC to TCMax® Log Records

The following table provides the equivalent log records from ATC to TCMax®

ATC Event	ATC Action ID	TCMax® Event	TCMax® Event ID
Tool Issued	6144	Issue	5003
Tool Returned	6145	Turn In	5004
Calibration Change	8196	Updated Cal Date	6011
Status Set	8204	--	--
--	--	Lost	6004
--	--	Broken	6000
--	--	Unserviceable	6002
--	--	Item Not Available	6014
Status Cleared	8205	--	--

ATC Event	ATC Action ID	TCMax® Event	TCMax® Event ID
--	--	Found	6005
--	--	Returned From Broken	6001
--	--	Returned From Unserviceable	6003
Tool Custody Change	8200	Turn in QT	5005
Inspection Change	8197	Completed Inspection	7000
Tool Name Change	8193	Item Modified	5001
Part Number Change	8194	Item Modified	5001
Employee Badge Changed	10247	User Modified	2001
Employee Added Change	10240	User Added	2000
Employee Name Change	10241	User Modified	2001

TCMax ATC Sync Service Architecture

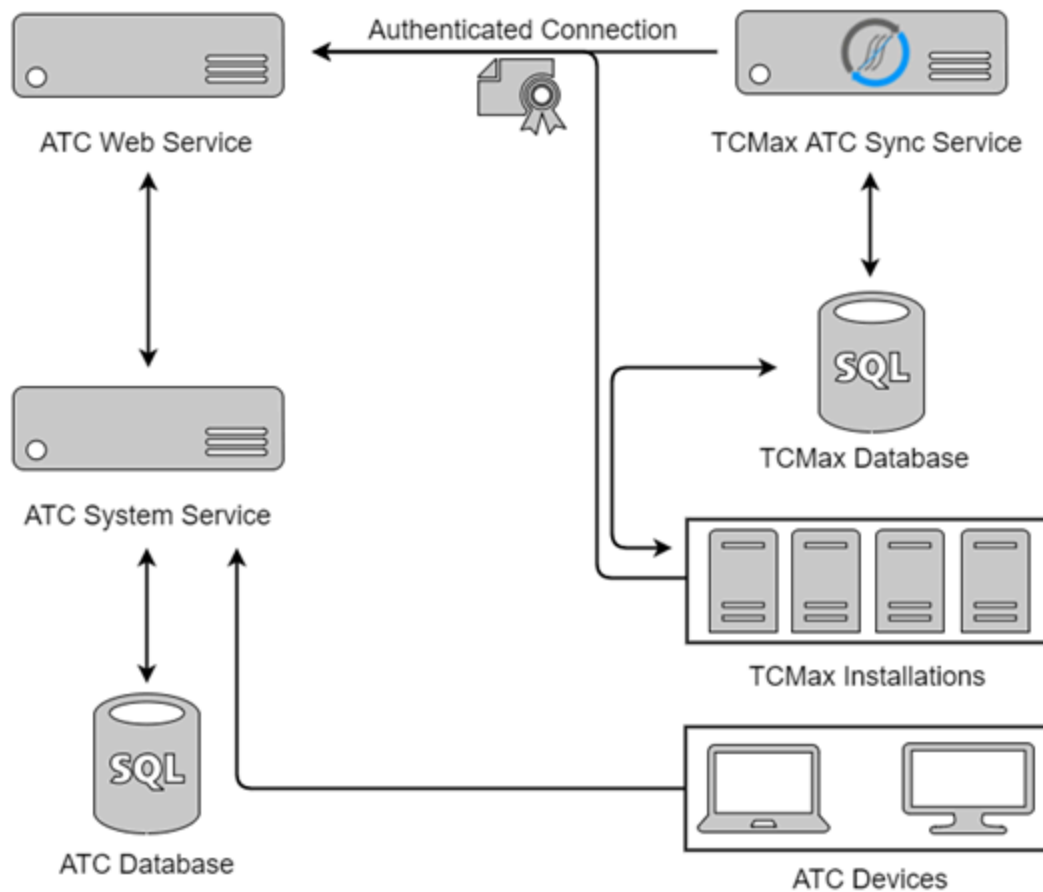

Before installing the TCMax® Service Console, we must address important information regarding user permissions. The TCMax® ATC Sync Service is installed to run under the Local System built in user account. For the Sync Service to communicate with your TCMax® Database, you must choose one of the following installation options:

Option 1: Install the service on the same machine as your Microsoft SQL Server®, and grant read/write permissions to the **NT AUTHORITY/SYSTEM** user account.

(Windows Authentication must be used for the Database connection)

Option 2: Install the service on the machine of your choosing and use SQL Authentication for the Database connection.

Option 3: Install the service on the machine of your choosing. Create/choose a Windows user, and grant read/write permissions to your Database, then manually change the service to run as that user (Windows Authentication).

Installation of ATC Web Services Certificates

! INFO

The **ATC Sync Service** has been deprecated and is no longer available for purchase. The information provided in this section is retained for reference and support purposes for existing installations.


Before installing the TCMa^x® Service Console, be prepared to have the following resources ready:

1. Access to a user account with administrative privileges
2. A TCMa^x® Database that is of the latest version, or has been previously migrated to at least version 9.x.
3. The TCMa^x® Service Console installer package.
4. The ATC Web Service certificate file provided with your ATC software (AtcWsCert.pfx), and the certificate's password.


To begin installation, navigate to the location of the ATC Web Service certificate (the directory shown in the image below may not match the location of your certificate file). In the File Explorer, right click the file **AtcWsCert.pfx**, and click **Install PFX**.

! INFO


The certificate file "AtcWsCert.pfx" is provided by Snap-On. Please contact Snap-On for assistance in obtaining a copy of this file.

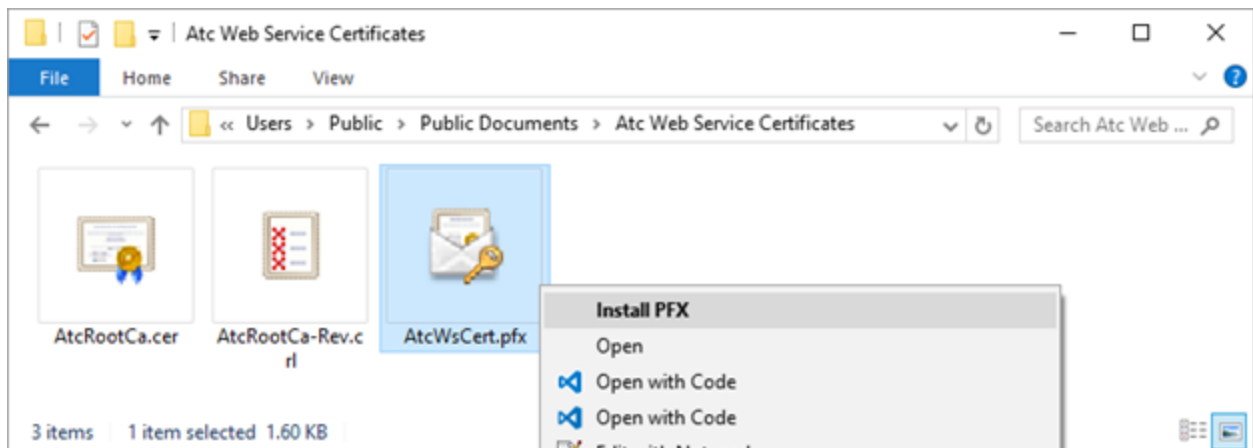

The Certificate Import Wizard will open. For the Store Location of the certificate, click **Local Machine**, and click **Next**.

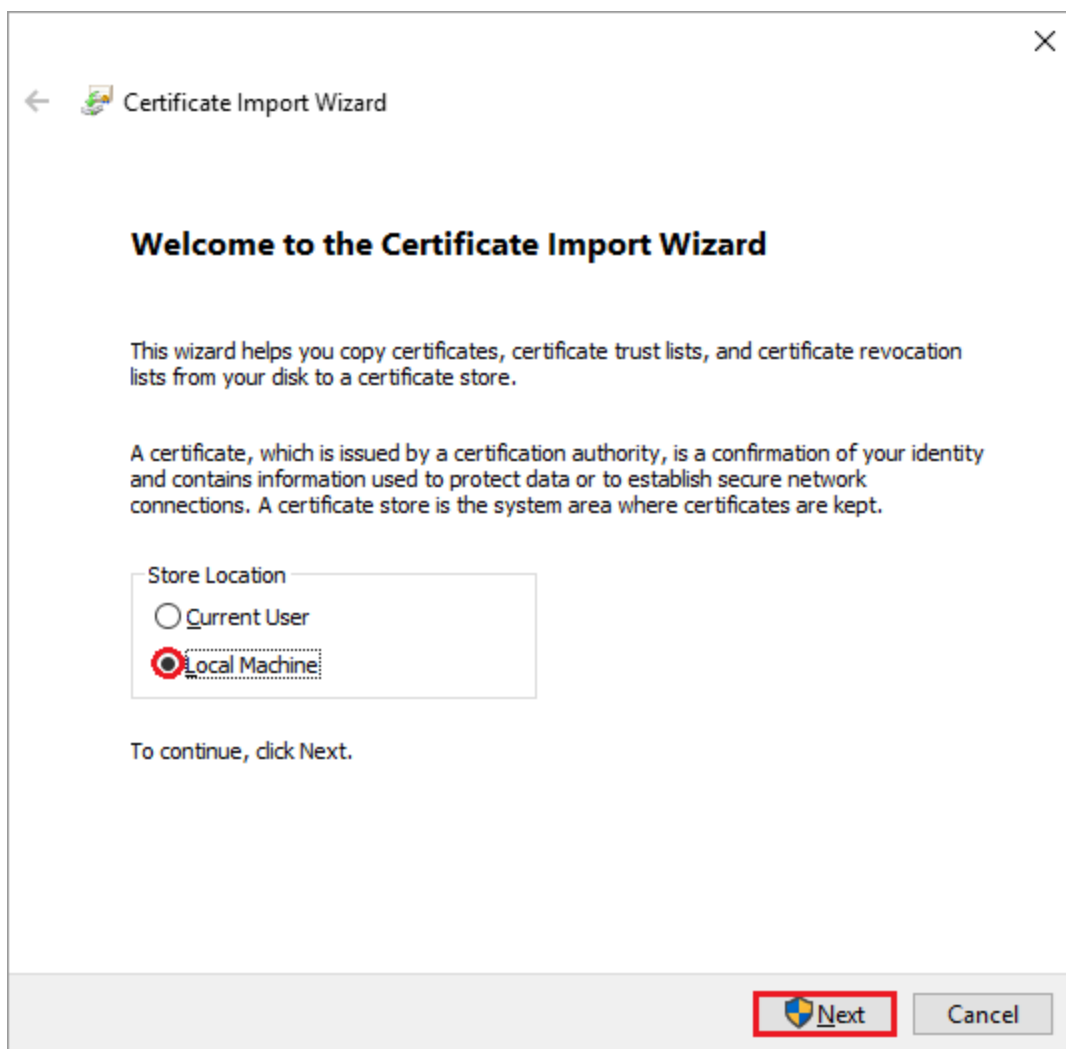

Do not tamper with the file name text box, as it is populated with the location of the file you chose to install. Click **Next**.

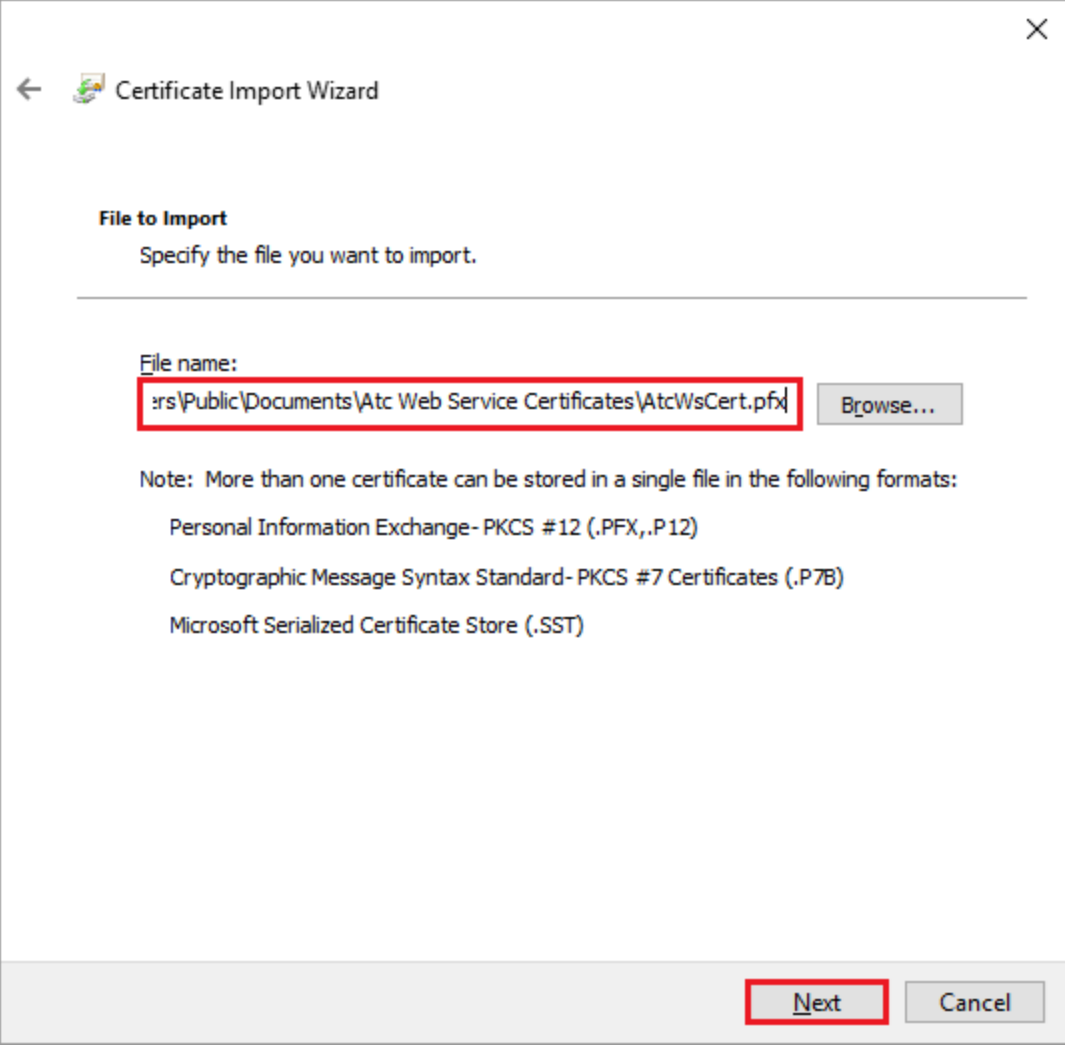

The image shows a Windows 'Certificate Import Wizard' dialog box. At the top, there is a back arrow, a small icon, and the title 'Certificate Import Wizard'. Below this, the section 'File to Import' is followed by the instruction 'Specify the file you want to import.' A horizontal line separates this from the input area. The 'File name:' label is followed by a text box containing the path 'rs\Public\Documents\Atc Web Service Certificates\AtcWsCert.pfx', which is highlighted with a red rectangle. To the right of the text box is a 'Browse...' button. Below the text box, a 'Note' states: 'More than one certificate can be stored in a single file in the following formats:'. This is followed by three bullet points: 'Personal Information Exchange- PKCS #12 (.PFX,.P12)', 'Cryptographic Message Syntax Standard- PKCS #7 Certificates (.P7B)', and 'Microsoft Serialized Certificate Store (.SST)'. At the bottom right, there are two buttons: 'Next' (highlighted with a red rectangle) and 'Cancel'.

← Certificate Import Wizard

File to Import
Specify the file you want to import.


File name:
rs\Public\Documents\Atc Web Service Certificates\AtcWsCert.pfx Browse...

Note: More than one certificate can be stored in a single file in the following formats:

- Personal Information Exchange- PKCS #12 (.PFX,.P12)
- Cryptographic Message Syntax Standard- PKCS #7 Certificates (.P7B)
- Microsoft Serialized Certificate Store (.SST)

Next Cancel

Enter the password provided to you with your certificate file, and click **Next**.

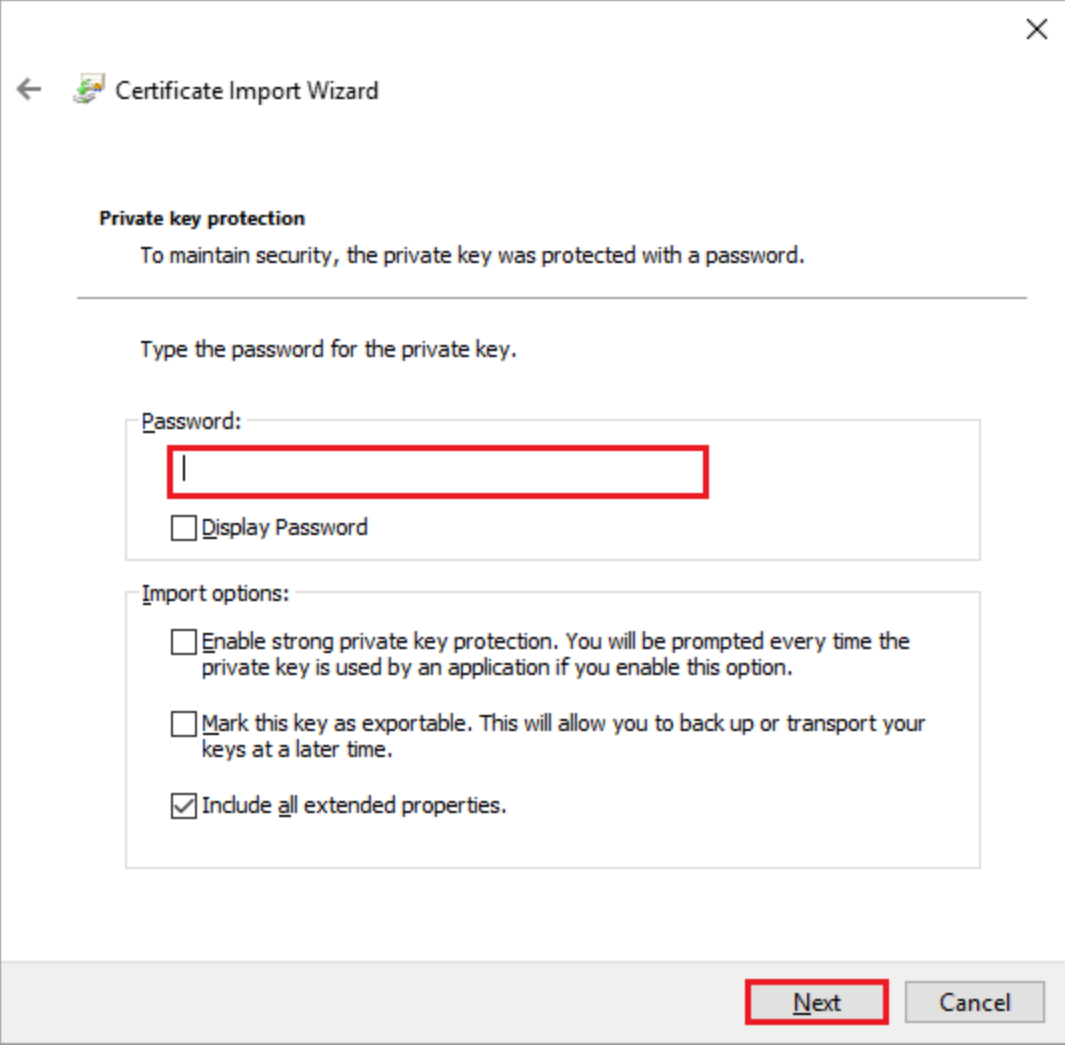

The image shows a Windows dialog box titled "Certificate Import Wizard". It has a back arrow icon on the left and a close "X" icon on the right. The main content area is titled "Private key protection" and contains the text "To maintain security, the private key was protected with a password." Below this is a horizontal line and the instruction "Type the password for the private key." There is a "Password:" label followed by a text input field with a red border and a single vertical line cursor. Below the input field is a checkbox labeled "Display Password". Below the password section is an "Import options:" section containing three checkboxes: "Enable strong private key protection. You will be prompted every time the private key is used by an application if you enable this option." (unchecked), "Mark this key as exportable. This will allow you to back up or transport your keys at a later time." (unchecked), and "Include all extended properties." (checked). At the bottom right, there are two buttons: "Next" (highlighted with a red border) and "Cancel".

← Certificate Import Wizard

Private key protection

To maintain security, the private key was protected with a password.

Type the password for the private key.

Password:

|

☐ Display Password

Import options:


☐ Enable strong private key protection. You will be prompted every time the private key is used by an application if you enable this option.

☐ Mark this key as exportable. This will allow you to back up or transport your keys at a later time.


☒ Include all extended properties.

Next Cancel


When prompted for the certificate store to install the certificate to, click **Place all certificates in the following store**, then click **Browse**.

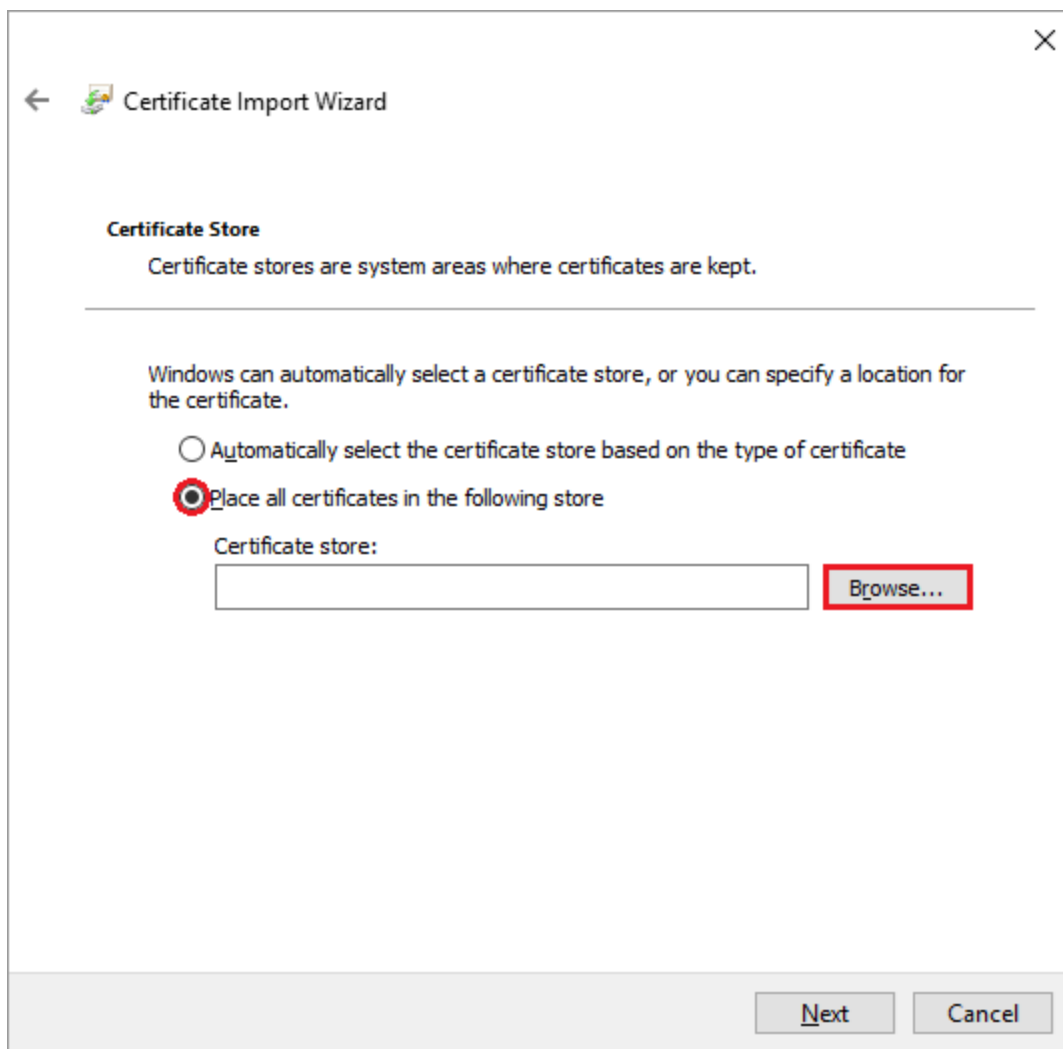


Leave the selected certificate store as **Personal**, then click **OK**.

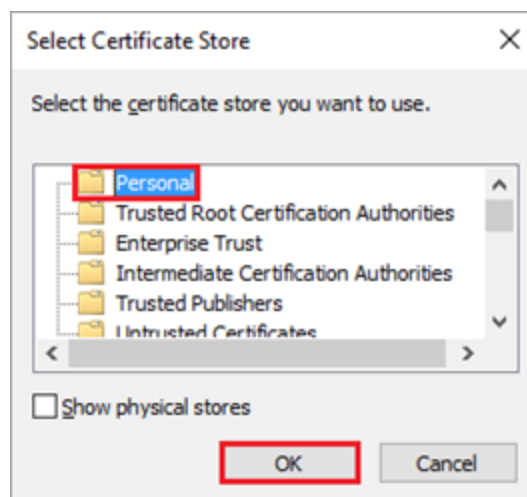


After selecting the certificate store, confirm that the certificate store is set to **Personal**, and click **Next**.

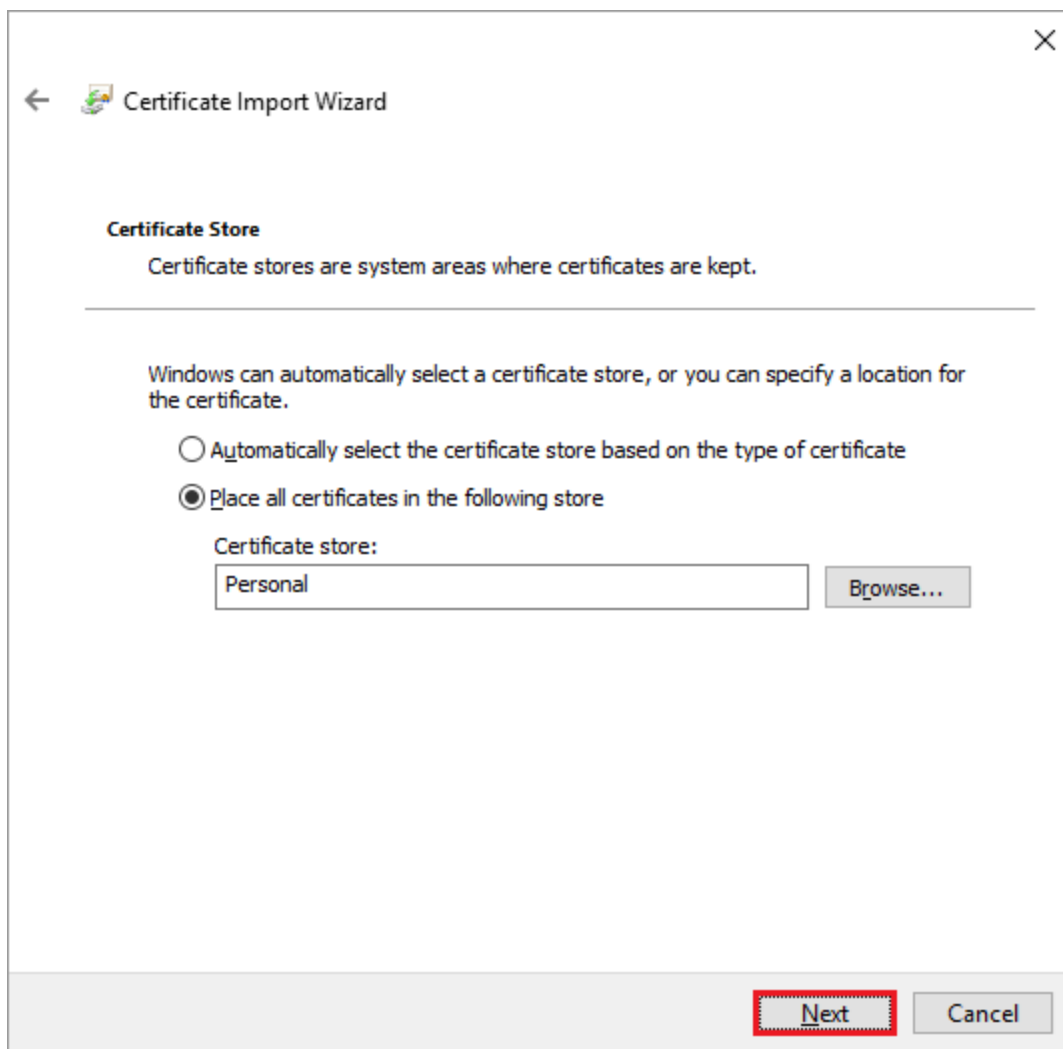

After the wizard has completed importing the certificate, click **Finish**.

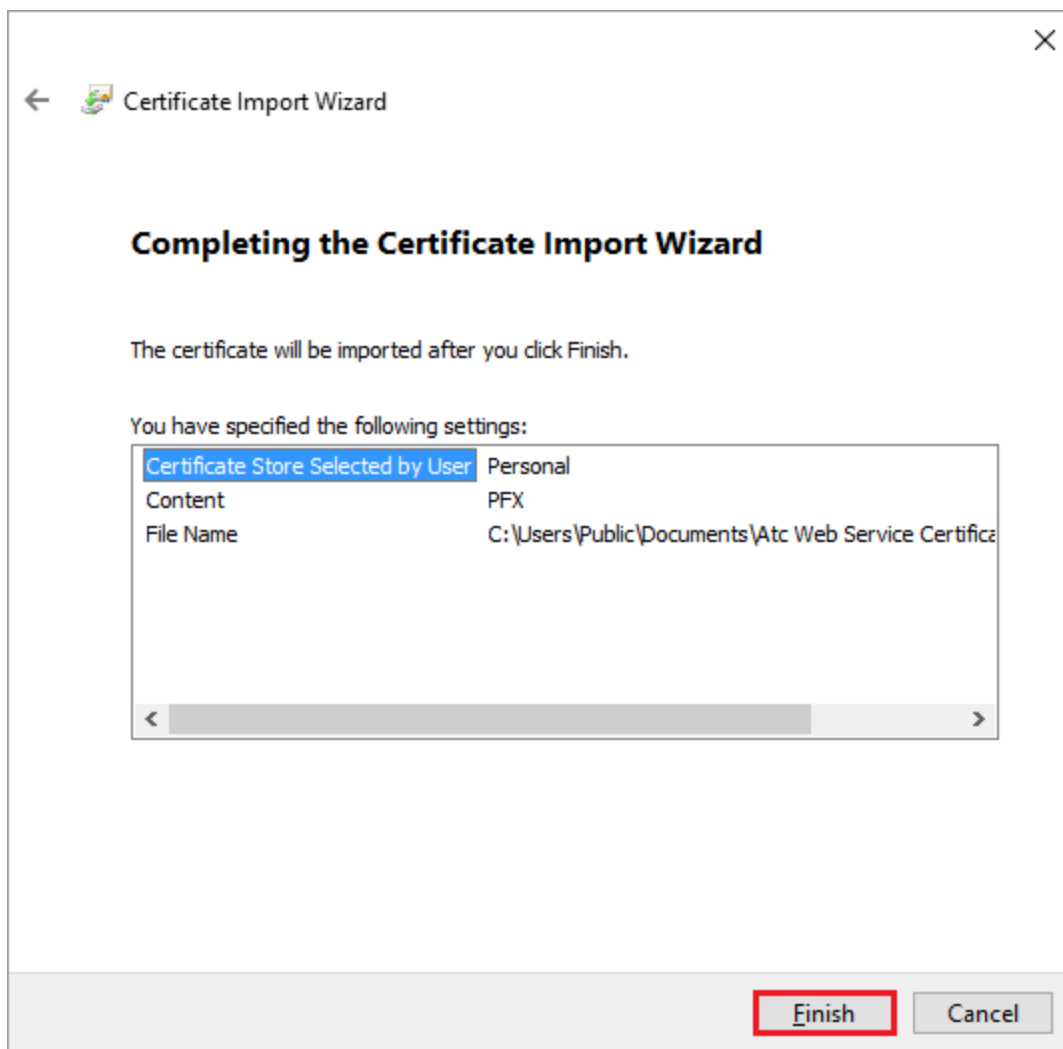

The certificate has completed the installation process. Click **Finish**.

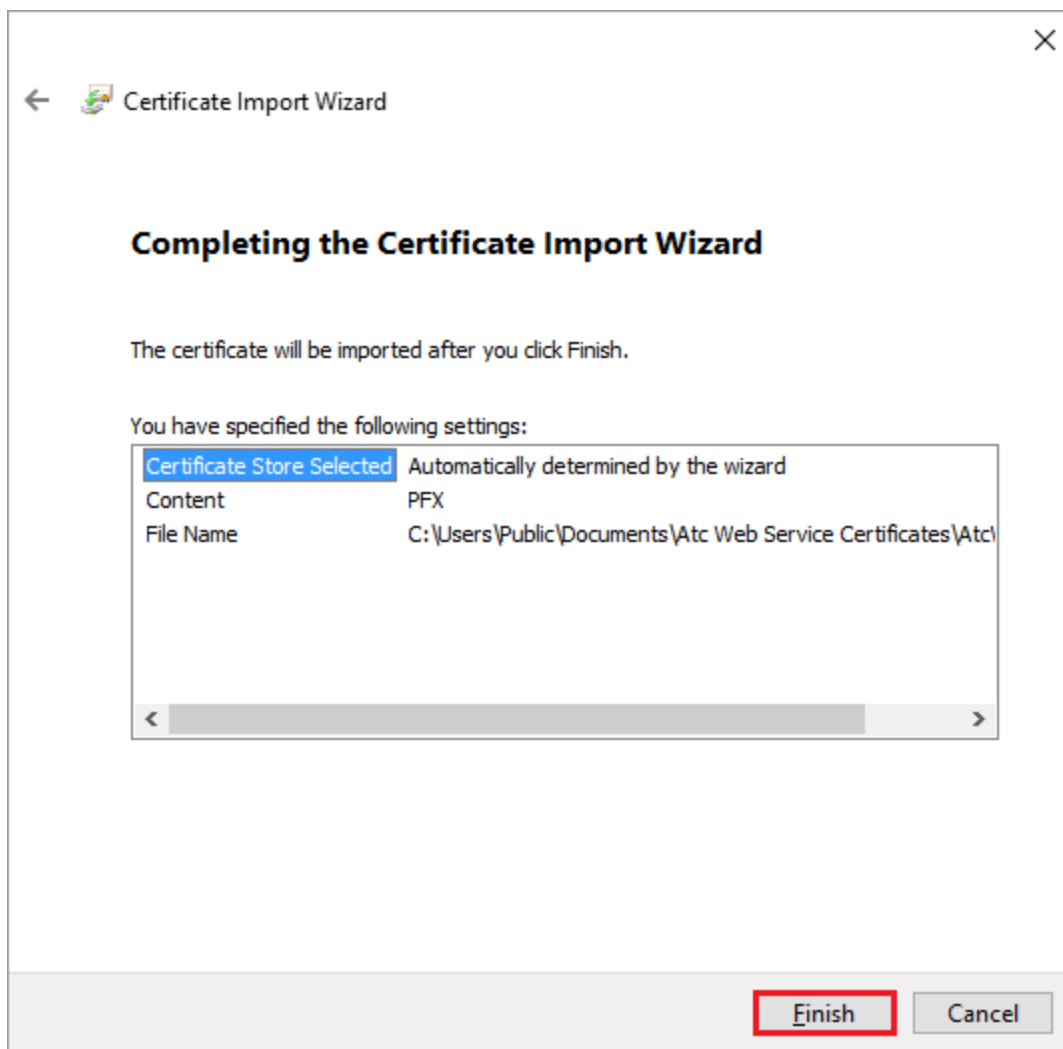

You have successfully installed the certificate required for your machine to contact the ATC Web Service.

Licensing the Sync Service

! INFO

The **ATC Sync Service** is deprecated and is no longer available for purchase. This documentation is retained for reference and support purposes for existing installations.

To license an existing Sync Service installation, the logged-on Windows user **must** have full administrative permissions, as the licensing process creates or modifies registry entries.

To license the Sync Service, launch the Soaring License Manager by clicking on your **Start Menu > TCMax® > Soaring License Manager**. The machines UAC may request to allow this application to make changes to your computer. You need to allow this to be able to proceed (if prompted).

License Manager



	Application	Support Id	License Key	Deauthorize

[Coming from version 8? Click Here!](#)

Add / Modify

Close

Click on the **Add / Modify** button to add or modify a license entry.

Select Software To License:

- ☐ TCMMax
- ☒ TCMMax Sync Service

OK

Cancel

Select **TCMax® Sync Service** under Select Software to License and click **OK**.

License Manager - ATC Sync

✕

Company Name:

Support Id:

License Key:

Select License

Activate

Cancel

If you have not licensed TCMMax® yet you will need to enter the **Company Name**, **Support Id**, and **your Sync Service License Key**. If you have already licensed your TCMMax® software you will only need to enter your **Sync Service License Key**.

License Manager - ATC Sync



Company Name:

Support Id:

License Key:



Select License

Activate

Cancel

Once you have entered your information a **green** checkmark should appear next to the license key entry area and you can click the **Activate** button to complete the licensing process. If a green checkmark does not appear, double check your information to make sure it has been entered accurately, the licensing credentials are case and space sensitive.

Configuring the Sync Service

! INFO


The **ATC Sync Service** has been deprecated and is no longer available for purchase. The information provided in this section is retained for reference and support purposes for existing installations.

The **Service Console** allows you to start, stop, and manage the services that are installed on your machine.

i NOTE

You may not manage services on another machine over the network using the Service Console.

Upon running the TCMa[®]x Service Console for the first time, you will be prompted with a message asking you to configure your ATC connection settings.

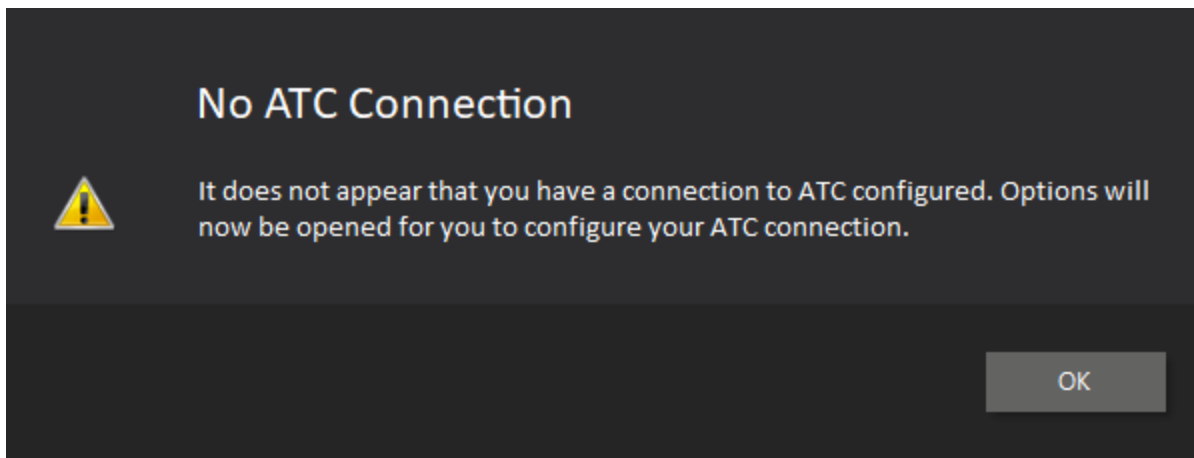

The **Options** screen allows you to configure connection settings to the ATC service, as well as your TCMa[®]x Database.

 Options _ □ ×

 ATC Connection

To sync data between ATC and TCMax, ATC Sync must have a connection to the ATC service. Please enter the connection details for the ATC service below. If you encounter issues while connecting to the ATC service, please refer to the documentation provided with your ATC box.

Server name: 1 Service port: 2 58010

Encoding method

☐ MTOM ☒ Text

Test Connection Clear


 TCMax Database Connection 3

4

Save Close

1. The **Server Name** is the name of the Server that hosts the ATC Web Service.
2. The **Service Port** is the port that the ATC Web Service is running on (this will be set to a default value of 58010, as it is the default port for the ATC Web Service).
3. **Test Connection** will test the connection to the ATC using the provided connection information.
4. The **Save** button will save all changes that have been made in the Options screen.

This interface is everything you will need to configure your TCMax® ATC Sync Service. When started, the TCMax® ATC Sync Service will communicate with this console via the log window to the right.

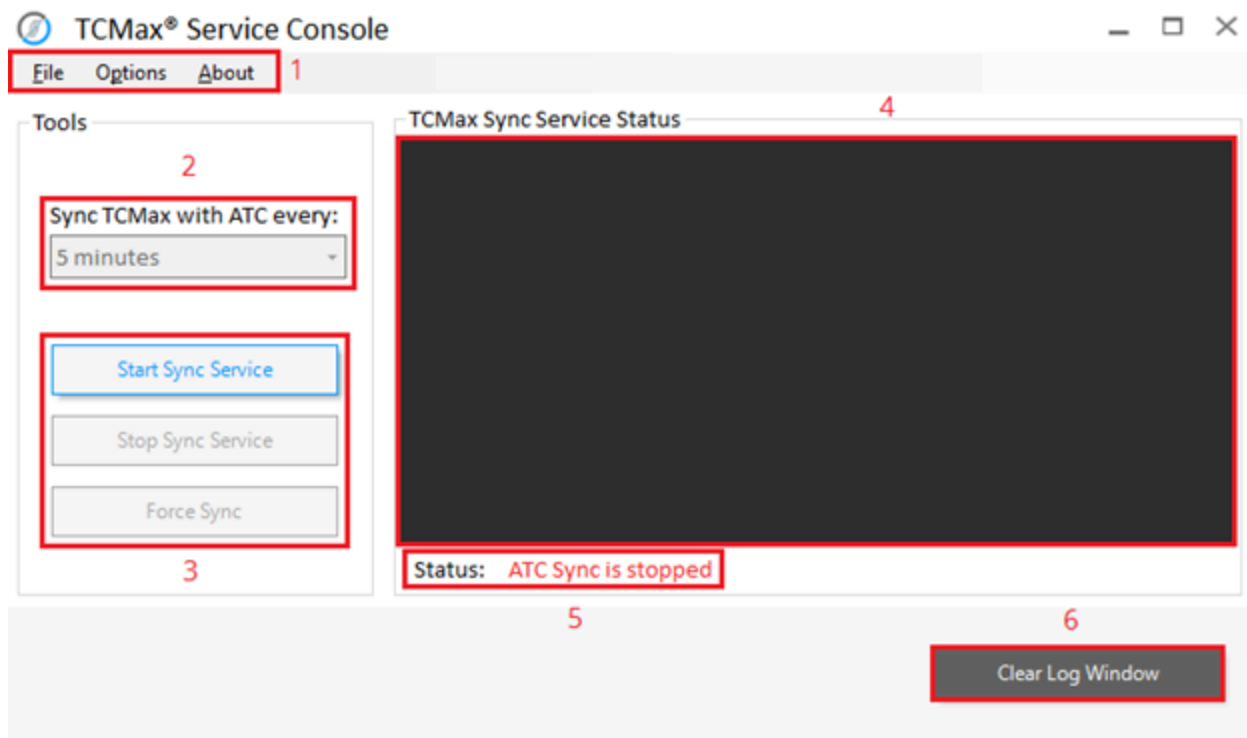

1. **File**, **Options**, and **About** are different menu options that allow you to access different tools and options.
2. The **Sync TCMMax® with ATC every** __ section allows you to configure the time in-between syncs.
3. The **Start Sync Service**, **Stop Sync Service**, and **Force Sync** buttons are utilized for starting, stopping, or forcing the TCMMax® ATC Sync Service to sync.
4. The **TCMax® Sync Service Status** section is a live log output from the TCMMax® ATC Sync Service containing important runtime information such as errors and sync times.
5. The **Status** section is used to view the current status of the TCMMax® ATC Sync Service (not to be confused with the status of the ATC service).
6. The **Clear Log Window** button is used for clearing the log window.

On the Main Screen of the Service Console, click **File > Import**. The import tool allows you to import ATC boxes and log records into your TCMMax® Database. You may also view your imported boxes and retool ATC boxes.

Import

Import ATC Boxes

Step 1: Check ATC Boxes to Import:

☒ Z01HC005

Check All Un-check All

Step 2: Shop Code to Import Box(es):

ATC

Import Log Records

☒ Import Event Logs

Step 3: Import log records for all selected ATC Boxes that have occurred after the following date:

Friday, September 01, 2000

Import


Imported ATC Boxes

Update ATC Box(es)

Close

1. In Step 1, **Check ATC Boxes to Import**, you can select un-imported ATC boxes for import.
2. In Step 2, **Select a Shop Code to Import Box(es)**, you can select the specific Shop Code you wish to import the ATC boxes into.
3. In Step 2, **Import Log Records**, you can import log records from a specified start date, this is optional and not required.
4. The **Import** button is utilized to start the import process for the ATC Box(es).
5. The **Imported ATC Boxes** section displays all previously imported ATC boxes and their Shop Code.
6. The **Update ATC Box(es)** button allows you to update ATC boxes after they have been re-tooled.

Once the **Import** button has been selected a set of progress bars will appear indicating the status of the import. Please be patient, as this process may take a long time to finish on large installations of ATC.

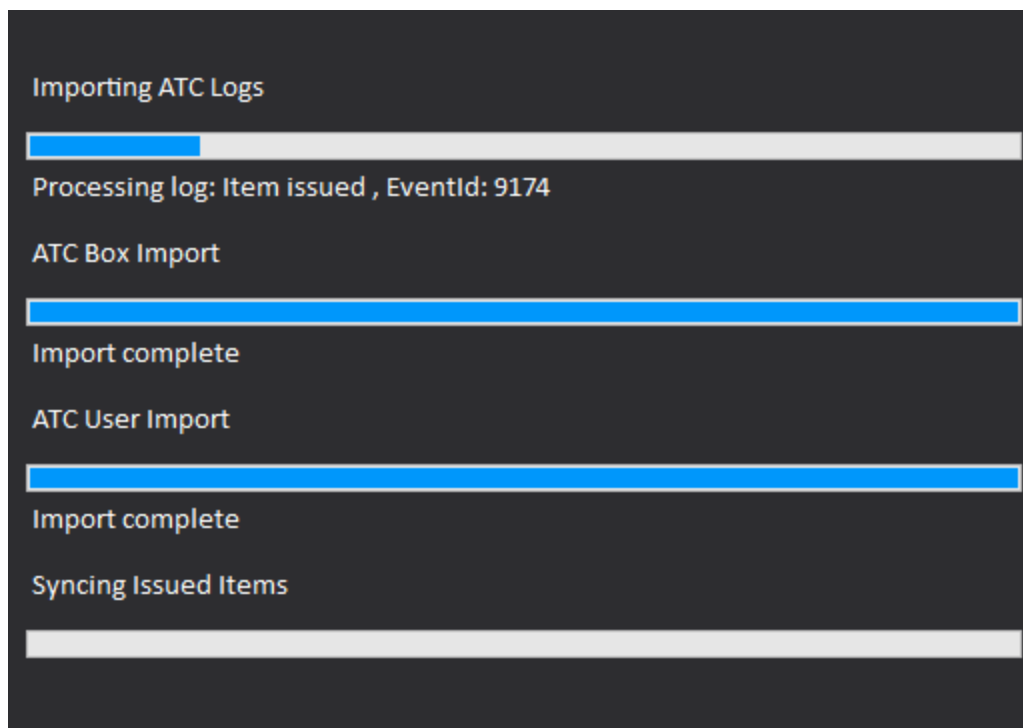

After the import process is complete, you will receive a message indicating that the import was successful and you will be returned to the Main Screen. You are now ready to start the Sync Service.

To start the TCMa[®]x ATC Sync Service, click the **Start Sync Service** button. You should notice that the log window to the right will begin to fill with log Data. If settings for the Database connection and ATC connection are properly configured, you should see that the service responds with a successful connection message.

A sync will automatically occur when the service is initially brought online. If at any time you require that a sync occur immediately, you may click the **Force Sync** button to manually start a sync.

Tools

Sync TCMax with ATC every:

10 minutes

Start Sync Service

Stop Sync Service

Force Sync

TCMax Sync Service Status

8:44:34 AM: You have successfully connected to the ATC Sync service!

Status: The TCMax ATC Sync Service is running


Clear Log Window

Sync Service Troubleshooting

! INFO

The **ATC Sync Service** has been deprecated and is no longer available for purchase. The information provided in this section is retained for reference and support purposes for existing installations.

The **Sync Service Troubleshooting** is a flow chart to follow when running into any issues to make sure all configurations are correctly in place.

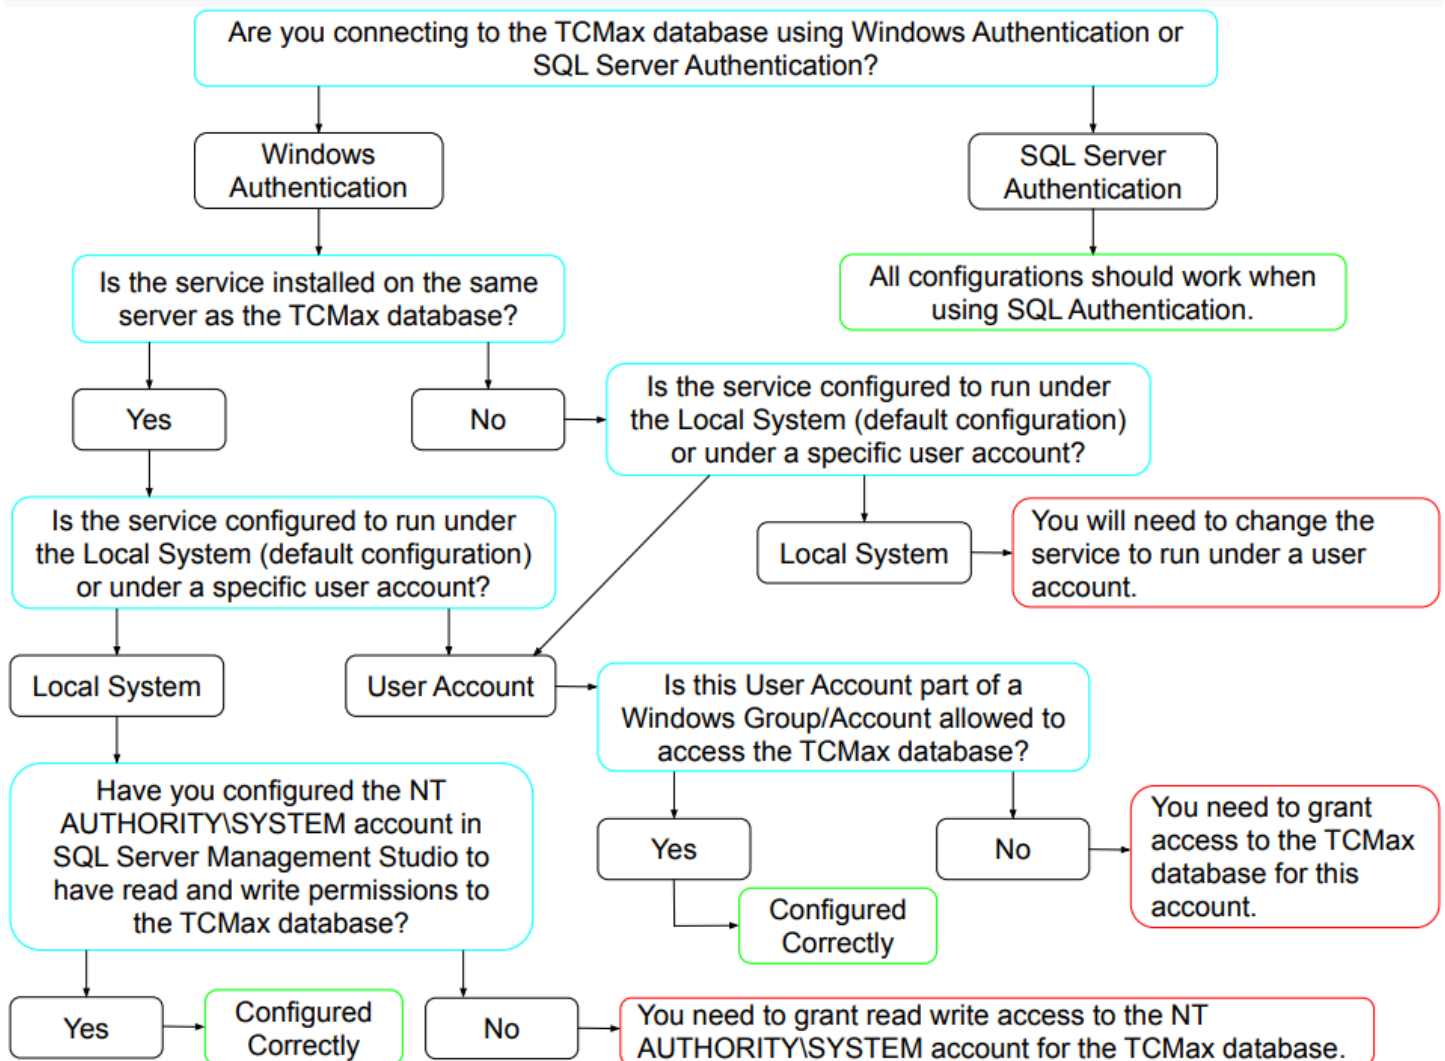

Accessibility



Accessibility

Per Section 508 compliance criteria - 602.2 Accessibility and Compatibility Features:

Accessibility

Per Section 508 compliance criteria - 602.2 Accessibility and Compatibility Features:

Documentation shall list and explain how to use the accessibility and compatibility features required by Chapters 4 and 5. Documentation shall include accessibility features that are built-in and accessibility features that provide compatibility with assistive technology.

INFO

Software is exempt from Chapter 4. Chapter 5 still applies.

To access accessibility features on your machine, type "accessibility" into your search bar and click the "Ease of Access Settings" option. Applications such as Magnifier and Narrator are among these features. From this screen, you can select and enable the feature(s) you need to use.

Windows-based accessibility features are compatible with TCMax®. It is worth noting that the use of such features is not always practical.

For example, the Narrator application will read everything on the main screen of TCMax® but in no discernable order. The Narrator also will not read graphs and charts within TCMax®, nor will it read trackers within the Dashboard.

As another example, increasing the size of the text on screen will only increase the size of the menus at the top of the screen in TCMax®. However, a workaround for this is to simply use the Magnifier.