



SIM Card Replacement and APN Setup Procedure



Author: DIDI SOFIAN

Organization: LOGIMATIQ Système

Document Version: 1.0

Issue Date: 16/04/2026



(+33) 7.45.28.44.83



[site web](#)



sofiand@logimatiq.com

Table

1. Purpose and Scope.....	3
2. SIM Card Replacement	4
3. Manual Setup (Router Interface).....	5
4. Setup via LOGIMATIQ Software	7
5. Verification and Troubleshooting.....	12

1. Purpose and Scope

This document provides a step-by-step procedure for configuring the industrial modem installed on LOGIMATIQ machines.

It covers the following operations:

- SIM card replacement
- Manual APN configuration via the router interface (192.168.1.1)
- Configuration using the LOGIMATIQ software tool
- Automatic APN recovery setup

The purpose of this procedure is to ensure reliable network connectivity and proper communication between the machine and remote services.

This guide is intended for technicians and authorized personnel responsible for installation, maintenance, or troubleshooting of the equipment.



2. SIM Card Replacement

This section describes the procedure for safely replacing the SIM card in the modem.

Procedure

1. Power Off the Equipment

- Turn off the machine or disconnect the power supply to the modem.

2. Access the Modem

- Open the machine and locate the modem unit.

3. Remove the SIM Card

- Carefully remove the existing SIM card from its slot with a pen for example.



4. Insert the New SIM Card

- Insert the new SIM card in the correct orientation.



5. Power On the Equipment

- Restore power to the machine and allow the modem to start.


3. Manual Setup (Router Interface)

This section explains how to manually configure the modem using its web interface.

Procedure

1. Access the Web Interface

- Open a web browser
- Enter: <http://192.168.1.1>
- Log in with the credentials

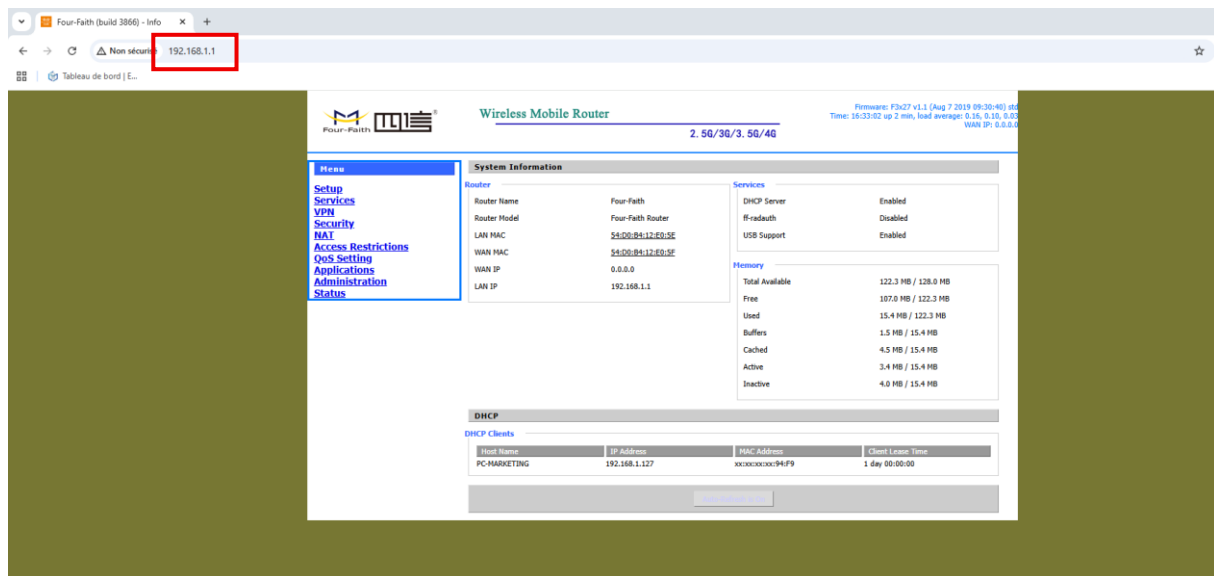


Login Credentials

- **Username:** admin
- **Password:** admin

Alternative credentials:

- **Username:** logimatiq
- **Password:** mazaltov

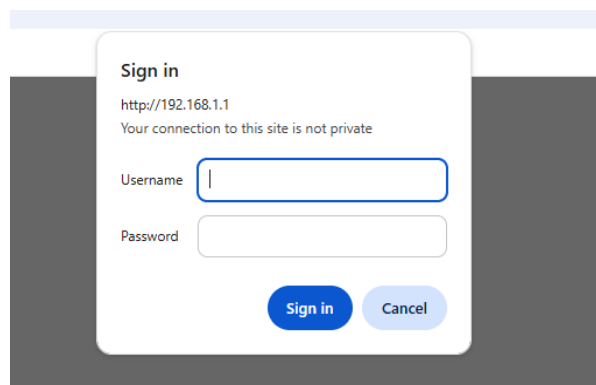


2. Navigate to Network Settings

- Go to the **SETUP** section

3. Configure the APN

Enter the parameters provided by your mobile operator:

- APN:** (e.g., orange etc.)
- PIN** (if applicable)

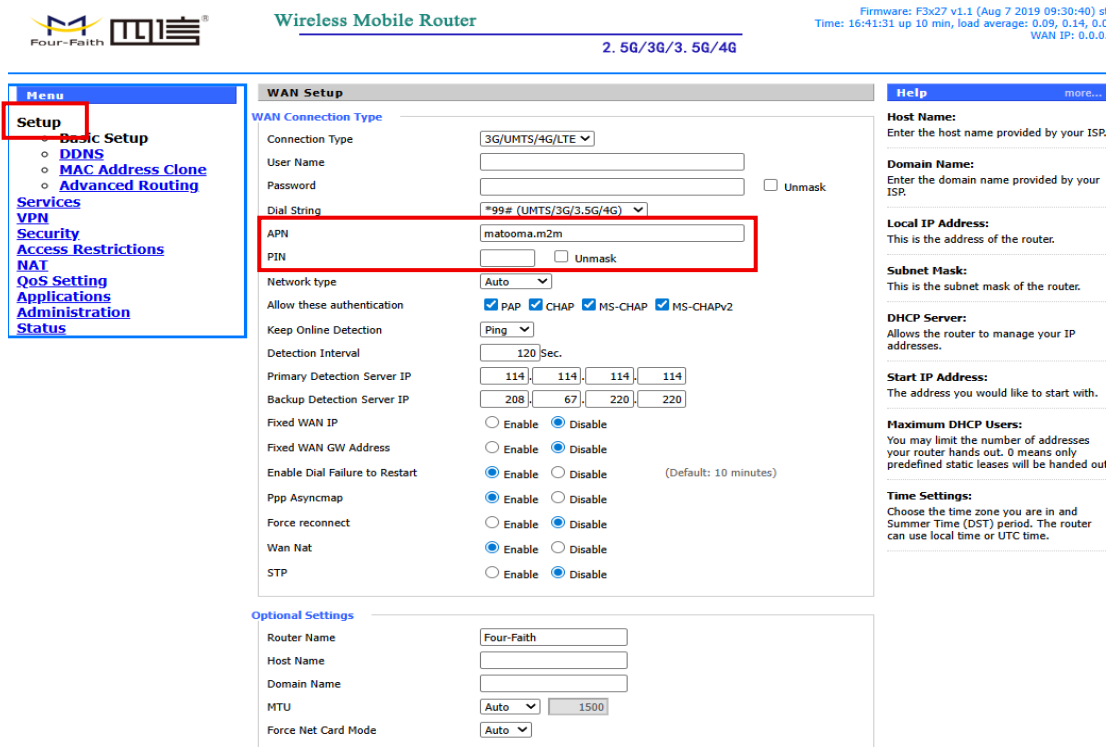

Wireless Mobile Router
2. 5G/3G/3. 5G/4G

Firmware: F3x27 v1.1 (Aug 7 2019 09:30:40) s
Time: 16:41:31 up 10 min, load average: 0.09, 0.14, 0.0
WAN IP: 0.0.0

Menu
Setup
Basic Setup
DDNS
MAC Address Clone
Advanced Routing
Services
VPN
Security
Access Restrictions
NAT
QoS Setting
Applications
Administration
Status

WAN Setup
WAN Connection Type
Connection Type: 3G/UMTS/4G/LTE
User Name:
Password:
Dial String: *99# (UMTS/3G/3.5G/4G)
APN: matooma.m2m
PIN:
Network type: Auto
Allow these authentication: ☒ PAP ☒ CHAP ☒ MS-CHAP ☒ MS-CHAPv2
Keep Online Detection: Ping
Detection Interval: 120 Sec.
Primary Detection Server IP: 114 114 114 114
Backup Detection Server IP: 208 67 220 220
Fixed WAN IP: ☐ Enable ☒ Disable
Fixed WAN GW Address: ☐ Enable ☒ Disable
Enable Dial Failure to Restart: ☒ Enable ☐ Disable (Default: 10 minutes)
Ppp Asyncmap: ☒ Enable ☐ Disable
Force reconnect: ☐ Enable ☒ Disable
Wan Nat: ☒ Enable ☐ Disable
STP: ☐ Enable ☒ Disable

Optional Settings
Router Name: Four-Faith
Host Name:
Domain Name:
MTU: Auto 1500
Force Net Card Mode: Auto

Help
Host Name: Enter the host name provided by your ISP.
Domain Name: Enter the domain name provided by your ISP.
Local IP Address: This is the address of the router.
Subnet Mask: This is the subnet mask of the router.
DHCP Server: Allows the router to manage your IP addresses.
Start IP Address: The address you would like to start with.
Maximum DHCP Users: You may limit the number of addresses your router hands out. 0 means only predefined static leases will be handed out.
Time Settings: Choose the time zone you are in and Summer Time (DST) period. The router can use local time or UTC time.

4. Save and Apply Settings

- Click **Save / Apply**
- Wait for the modem to reconnect

5. Verify Connection

- Check network status

Important Notes

- Incorrect APN settings will prevent internet access
- A reboot may be required after configuration
- Ensure the SIM card is active before configuration

4. Setup via LOGIMATIQ Software


This section describes the configuration of the modem using the LOGIMATIQ software tool.

Overview

The LOGIMATIQ software allows automatic configuration of the modem, including APN settings, without manual access to the router interface.

Procedure


1. **Connect to the Machine**
 - Ensure the machine is powered on
2. **Launch LOGIMATIQ Tool**
 - Open the LOGIMATIQ configuration software

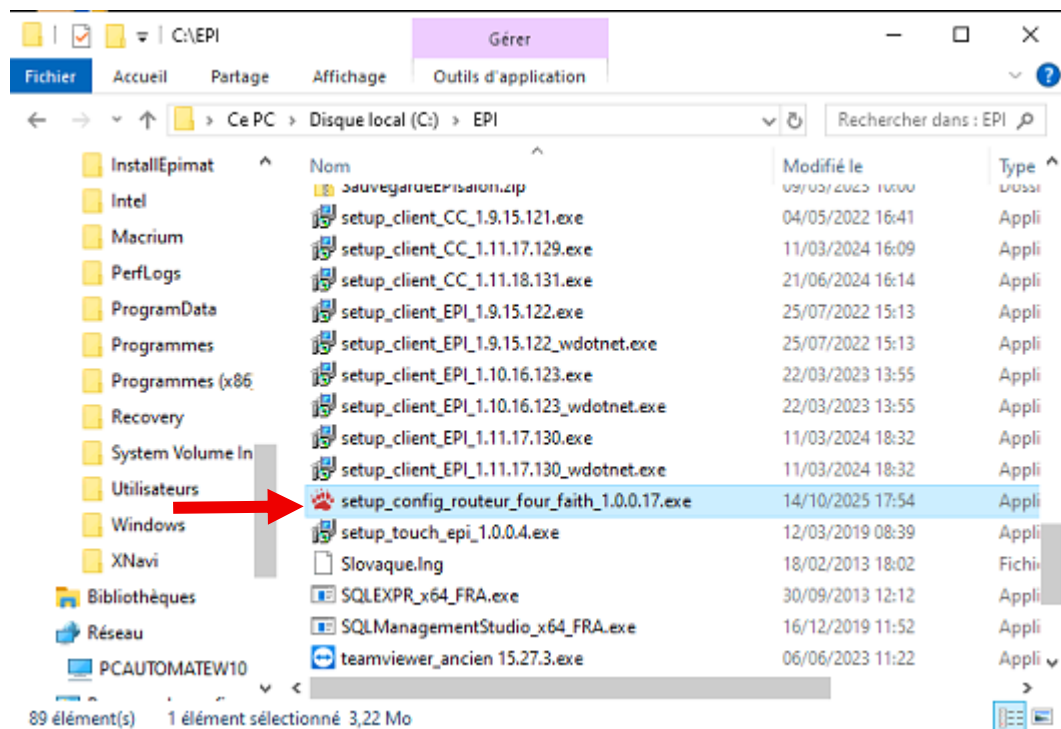




3. Run Automatic Setup



- Start the automatic configuration process



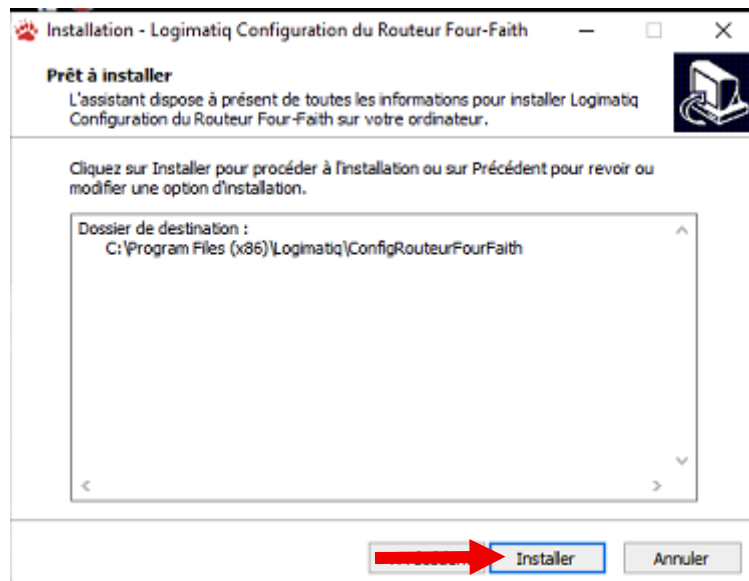

Accès à Internet

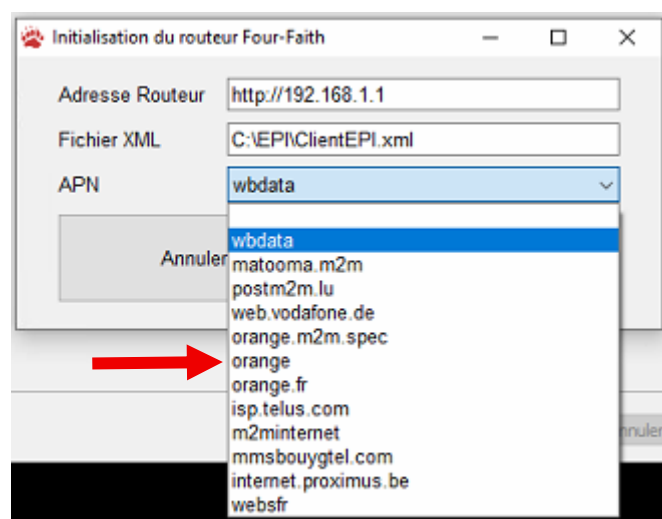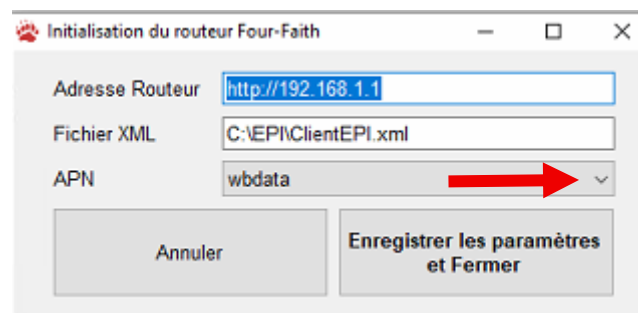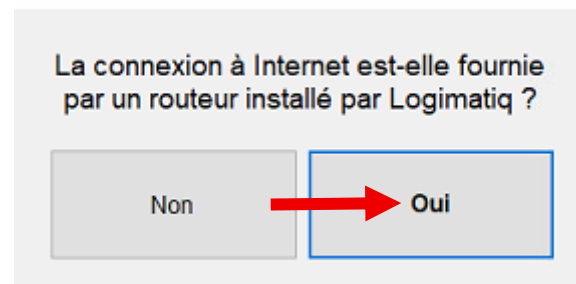

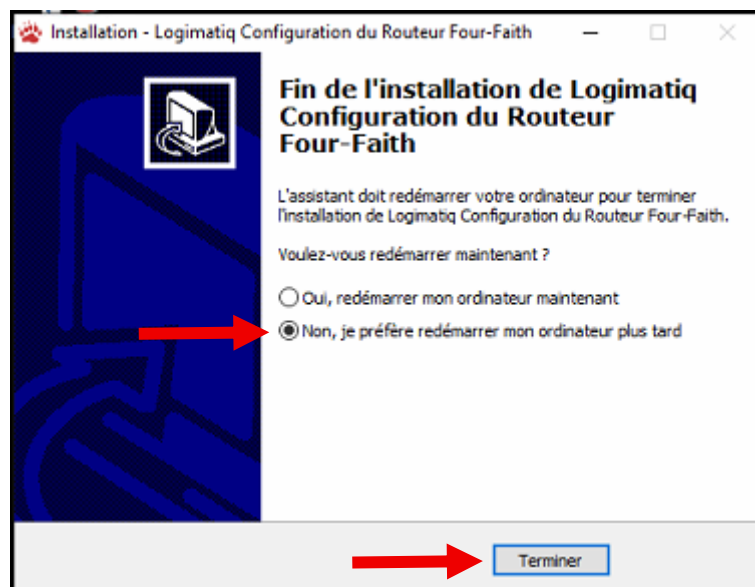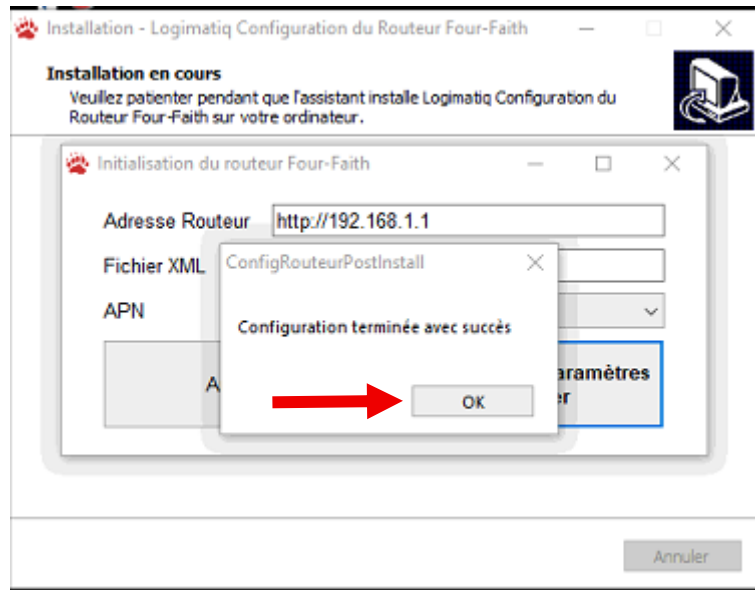

- The software will apply the required APN settings automatically

4. Validate Configuration

- Confirm that the modem connects to the network
- Check that data communication is operational

Automatic Configuration Feature

The system includes an automatic recovery function:



- If the modem **loses its APN configuration** or **cannot reconnect to the network**,
- The system will automatically **reapply the configuration** using predefined settings.

These settings are stored in a configuration file:

- **config.ini**

Important Notes

- This feature ensures **continuous connectivity without manual intervention**
- In some cases, it may **restrict certain network communications** (e.g., APIs or external services), similar to a firewall behavior

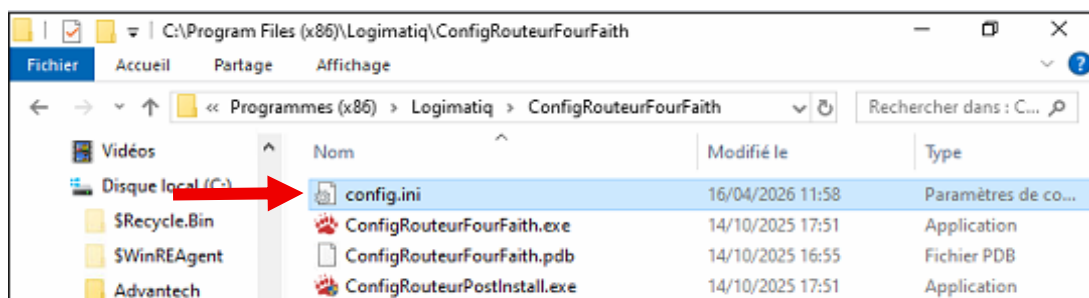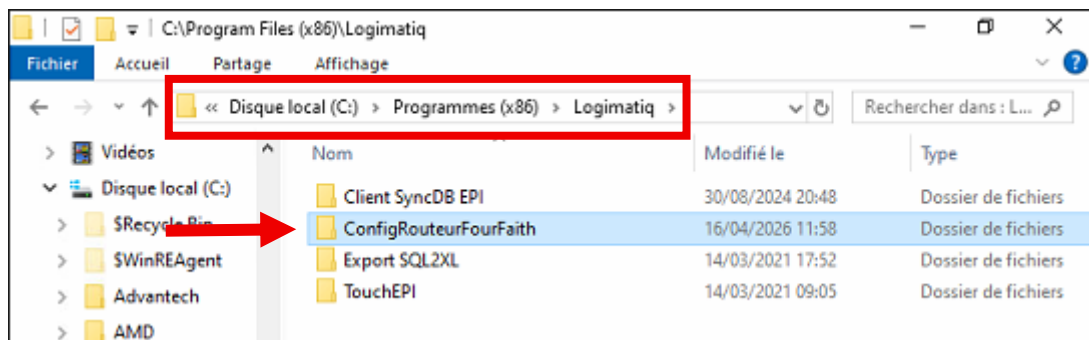

5. Verification and Troubleshooting

Verification

After configuration, check the modem status using the LED indicators on the **LTE & WCDMA Cellular Router F3827** front panel.



LED Indicators Description

- **ETH (Ethernet) – Blinking Blue**
Indicates data communication between the modem and the machine (PC).
→ Must be **blinking**
- **Online – Solid Blue**
Indicates that the router is connected to the mobile network (internet access).
→ Must be **ON (steady)**
- **Signal LEDs (Bars in the center)**
Indicate signal strength and data activity.
→ More LEDs ON = better signal quality
- **SIM – Blue LED**
Indicates that the SIM card is correctly inserted and detected.
→ Must be **ON**
- **SYS – Blinking**
Indicates normal system operation.
→ Must be **blinking continuously**
- **PWR – Power LED (Blue)**
Indicates that the device is powered correctly.
→ Must be **ON (steady)**

Quick Validation Checklist

- ETH blinking → Communication with machine OK
- Online ON → Internet connection OK
- Signal LEDs active → Network signal OK
- SIM ON → SIM detected
- SYS blinking → System operating normally
- PWR ON → Power supply OK