Manualslib.com - The Global Manuals Library

COESIA FLEXLINK X85X ASSEMBLY MANUAL

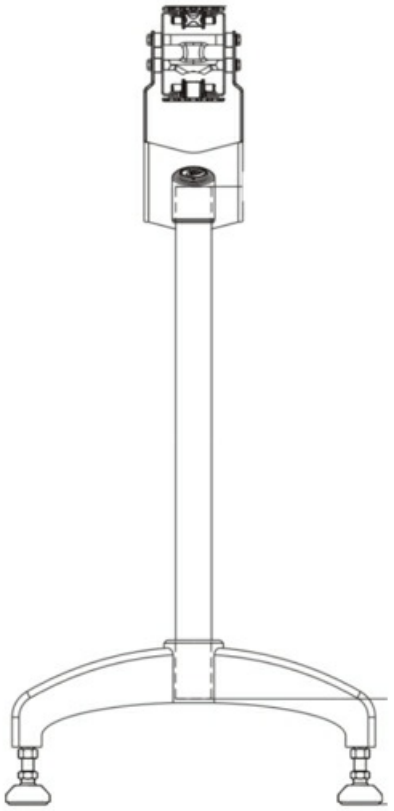


Table of Contents

Table of Contents
Safety
System information
Important safety conditions
Introduction
Assembly information
Scope
Audience
Prerequisites
Hints and tips

Reference symbols
Support assembly
Support systems assembly
Polyamide foot, 2-point
Polyamide foot, 3-point
Beam support bracket
Beam support bracket, straight beam
Beam support bracket, drive unit
Beam support bracket, wheel bend
Beam support bracket, plain bends
Conveyor assembly
Drill fixture
Nut, stainless steel
Beam spacer kit
Drip catcher kit
Beam section for chain installation
Idler end unit
Protective cover for idler end units
End drive unit, direct drive
Guide wheel kit
End drive unit, guided chain no slip clutch
Bridge
X-bend
Side transfer
Slack protection kit
Wheel bend
Vertical bend
Plain bend
Assembly Slide Rail

Mounting slide rail
Mounting slide rails
Joining slide rail ends
Fixing slide rails
Changing support rail for plain bends
Mounting Conveyor Chain
Mounting chain using a beam section
Mounting chain on end drive unit
Assembly Guide Rail
Mounting guide rails
Mounting guide rails bracket, wide
Mounting guide rails bracket, high and low
Connecting guide rails
Other ManualsLib Projects



CONVEYOR SYSTEM X85X

Assembly manual

FLEXLINK®

a coesia company

1	Safety	7
1.1	System information	7
1.2	Important safety conditions	7
2	Introduction	9
2.1	Assembly information	9
2.2	Scope	9
2.3	Audience	9
2.4	Prerequisites	9
2.5	Hints and tips	9
2.6	Reference symbols	10
3	Support assembly	11
3.1	Support systems assembly	13
3.2	Polyamide foot, 2-point	15
3.3	Polyamide foot, 3-point	17
3.4	Beam support bracket,	19
3.5	Beam support bracket, straight beam	21
3.6	Beam support bracket, drive unit	25
3.7	Beam support bracket, wheel bend	29
3.8	Beam support bracket, plain bends	33
4	Conveyor assembly	35
4.1	Drill fixture	37
4.2	Nut, stainless steel	41
4.3	Beam spacer kit	43
4.4	Drip catcher kit	45
4.5	Beam section for chain installation	47
4.6	Idler end unit	49
4.7	Protective cover for idler end units	51
4.8	End drive unit, direct drive	53
4.9	Guide wheel kit	57

4.10	End drive unit, guided chain no slip clutch	59
4.11	Bridge	63
4.12	X-bend	65
4.13	Side transfer	69
4.14	Slack protection kit	73
4.15	Wheel bend	75
4.16	Vertical bend	77
4.17	Plain bend	79
5	Assembly Slide Rail	81
5.1	Mounting slide rail	83
5.2	Mounting slide rails	85
5.3	Joining slide rail ends	87
5.4	Fixing slide rails	89
5.5	Changing support rail for plain bends	91
6	Mounting Conveyor Chain	95
6.1	Mounting chain using a beam section	97
6.2	Mounting chain on end drive unit	101
7	Assembly Guide Rail	105
7.1	Mounting guide rails	107
7.2	Mounting guide rails bracket, wide	109
7.3	Mounting guide rails bracket, high and low	113
7.4	Connecting guide rails	117

© Flexlink AB 2015

All Rights Reserved

No part of this program and manual may be used, reproduced, stored or transmitted in any form or by any means without the written permission of FlexLink AB. The contents of this manual are for informational use only. All information and specifications contained in this document have been carefully checked to the best efforts of FlexLink AB, and are believed to be true and accurate as of time of publishing. However, due to continued efforts in product development FlexLink AB reserves the right to modify products and its manuals without notice.

FlexLink AB assumes no responsibility or liability on any errors or inaccuracies in this program or documentation. Any kind of material damages or other indirect consequences resulting from any FlexLink AB´s product part, documentation discrepancies and errors or non-anticipated program behavior are limited to the value of appropriate products purchased from FlexLink AB. The products are delivered to the customer at the 'as is' state and revision level they are on the moment of purchasing, and are declared in detail in the license agreements between FlexLink AB and user. User accepts and is obliged to follow the guidelines stated in the separate license agreement needed in using any parts of this product package.

This page is intentionally left blank

1 Safety

The conveyor system has been designed in such a way, that it can be used and maintained in a safe way. This holds for the application, the circumstances and the instructions described in the manual. Any person working with or on this machine, should study this manual and follow the instructions. It is the responsibility of the employer to make sure that the employees are familiar with, and follows these instructions.

The company or country in which the machine is used may require extra safety measures. This particularly applies to the working conditions. This manual does not describe how these extra safety measures are to be complied with. In case of doubt, consult your government or safety officer!

1.1 System information

The project number and/or general drawing number shall always be specified when communicating with FlexLink with respect to the machine.

1.2 Important safety conditions

At the moment that the machine is going to be operated by a user, the following safety conditions must be met:

- Ensure that no unauthorized personnel have access to the machine, and surrounding area by, for example, screening off the machine using a fence.
- Only persons who have read and understood the operating instructions are allowed to operate, maintain and clean the machine.
- Do not reach into the machine while it is running or on. Even if the machine is not running, it can be 'on', which means start operating automatically.
- Safety provisions, such as machine guards, emergency stops and proximity detectors shall not be removed or deactivated while the machine is running.
- Provide good ambient lighting to enable the operator to work well and orderly with the machine.

General

- Incorrect use of the equipment can cause personal injury.
- Do not stand or climb on the equipment.
- Do not wear loose clothing or other articles that can get caught in the machine.
- Follow the instructions in this user manual when transporting the machine. FlexLink must approve all modifications or changes to this machine.
- Only use recommended spare parts.
- Only authorised personnel may maintain electrical control panels.
- FlexLink is not responsible for damage if service on the equipment is not performed in accordance with this assembly manual.

Maintenance and Service technicians

Service technicians must have:

- Sufficient knowledge for reading technical information
- Ability to comprehend technical drawings
- Basic knowledge of mechanics
- Sufficient knowledge in the use of hand tools
- Skilled (EN *ISO* 12100:2010)

Electricians

Electricians must have:


- Experience from similar installations
- Sufficient knowledge to work from drawings and wiring diagrams
- Knowledge of local safety regulations for electrical power and automation
- Skilled (EN *ISO* 12100:2010)
- To avoid risks, only experienced personnel with technical knowledge and experience may perform repair work on the machine's electronics components.

Operators

To correctly use the equipment, operators must have appropriate training and/or experience.

2 Introduction

2.1 Assembly information

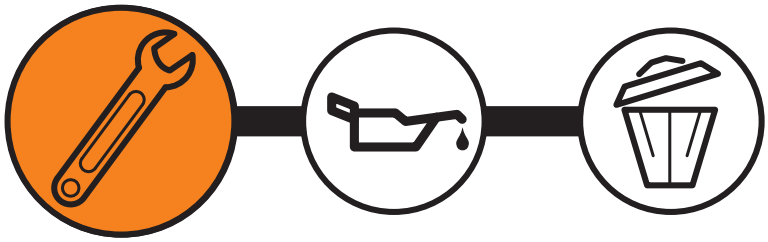

Assembly Maintenance Disposal

2.2 Scope

This information is part of an information collection describing the implementation of the *X85X, system* like assembling of hardware, software installation, verifying safety equipment etc.

2.3 Audience

This information is mainly written for application engineers and installation personnel involved in the installation. The contents may also be of use for training purposes.

It is assumed that the application engineers implementing the FlexLink conveyor system have attended the FlexLink Basic training course.

2.4 Prerequisites

Relevant tools for each step are described in the respective sections.


2.5 Hints and tips


Hints to help the assembling is marked with the symbol:



2.6 Reference symbols

In most cases of assembling the drive units in chapter 4, Conveyor assembly, the slide rail and chain needs to be installed before the assembly can be completed. Therefor the underlying symbols will be used to refer the reader to the chapters concerning mounting of slide rail and chain, instead of showing the steps repeatedly.

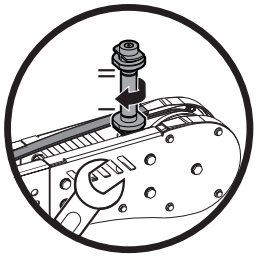1 

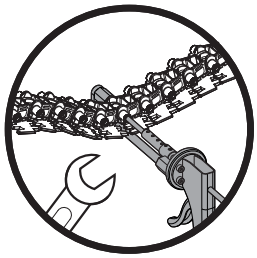2 


Symbol n°1 refer to chapter 5, Assembly Slide Rail, while n°2 refer to chapter 6, Mounting conveyor chain.




3 Support assembly

3.1 Support systems assembly

Most conveyor support designs are based on vertical support beams combined, if necessary, with horizontal support beams. The conveyor must be supported at regular intervals not exceeding 3 000 mm, and always place a support as close to the drive unit as possible.



3.1.1 Beam cutting length

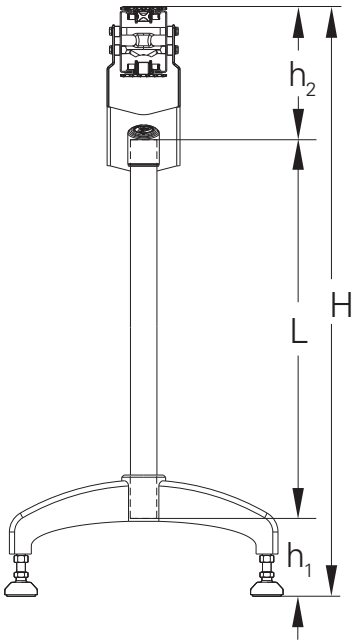


$$L = H - h_1 - h_2$$

The support profile length L required to obtain a specific conveyor height H depends on the conveyor size, foot type and beam support bracket. In this case, CSX beam support brackets are used.


In the formula H represents the height from the floor to the top of a standard plain chain. Most support combinations permit height adjustments, both at the foot, and at the beam support brackets.

3.2 Polyamide foot, 2-point

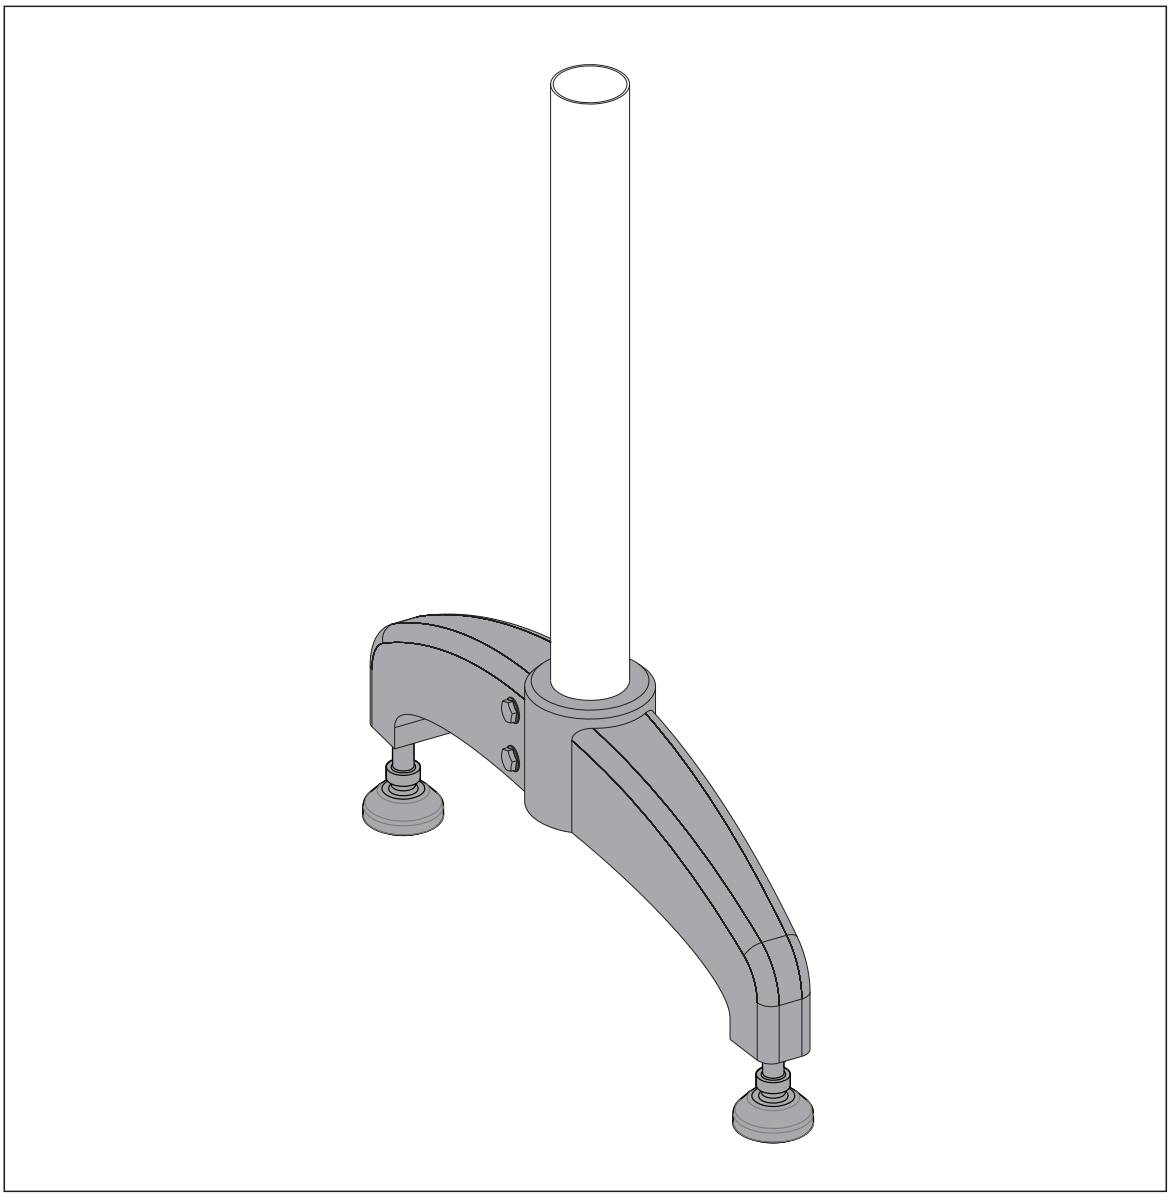





1

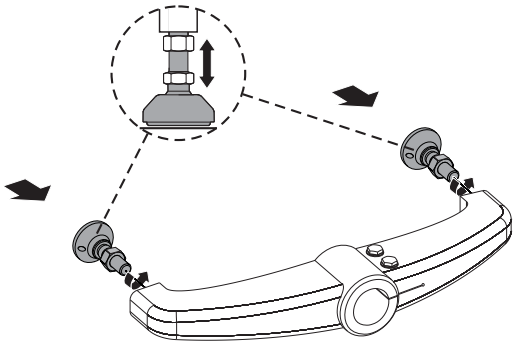


2

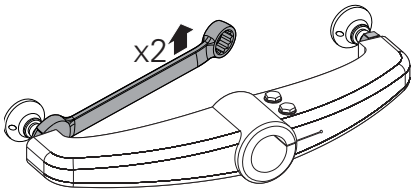


3

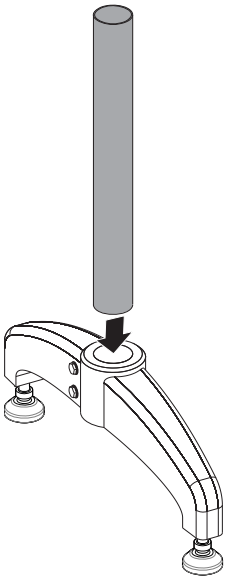

4

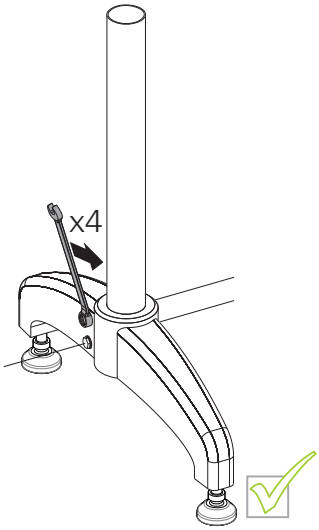


3.3 Polyamide foot, 3-point, XCFG 48 T

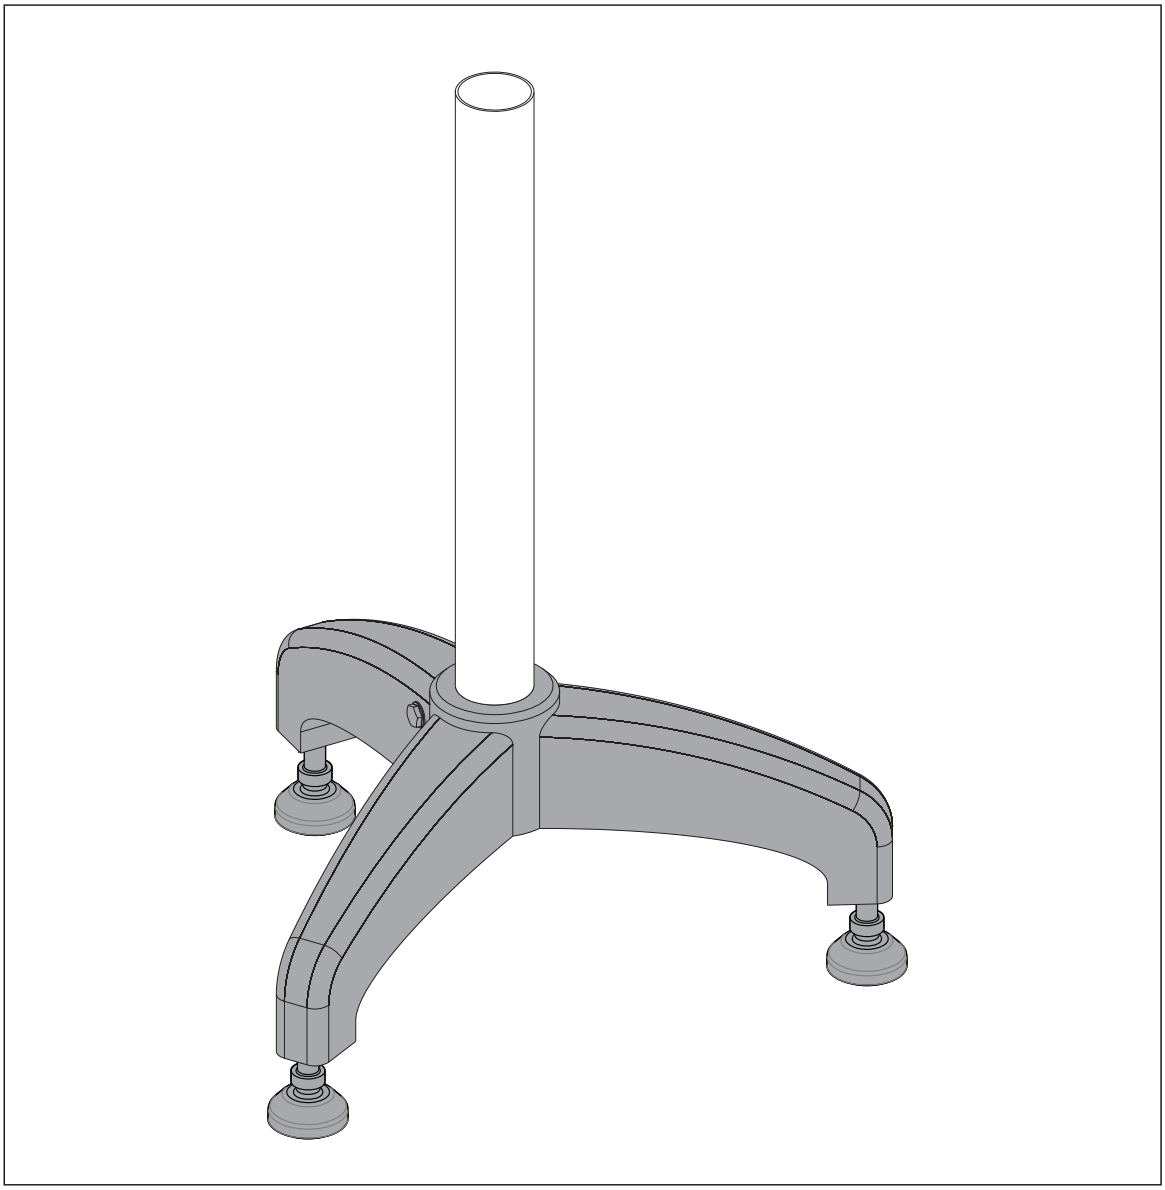





1

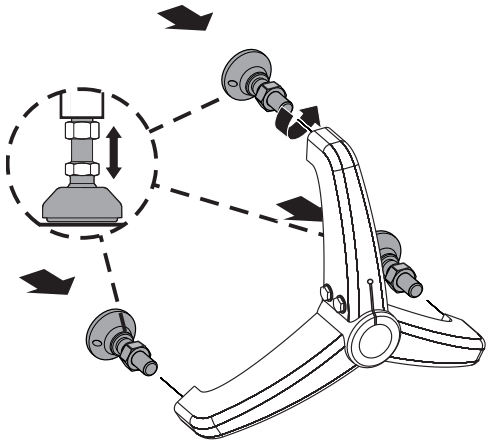


2

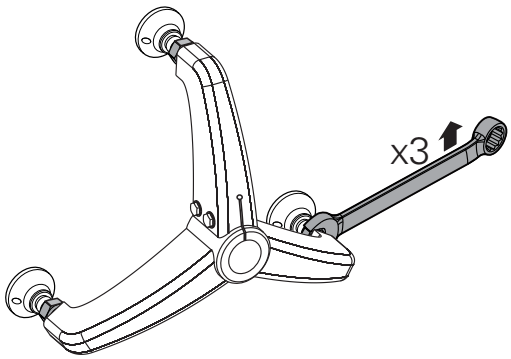


3

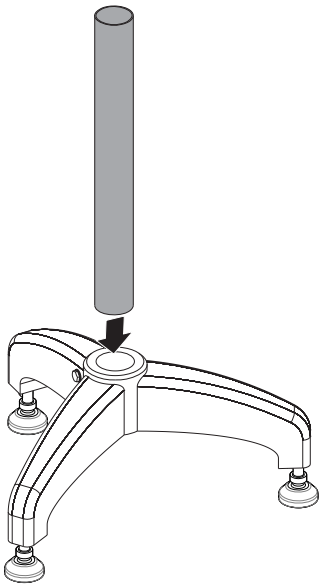

4

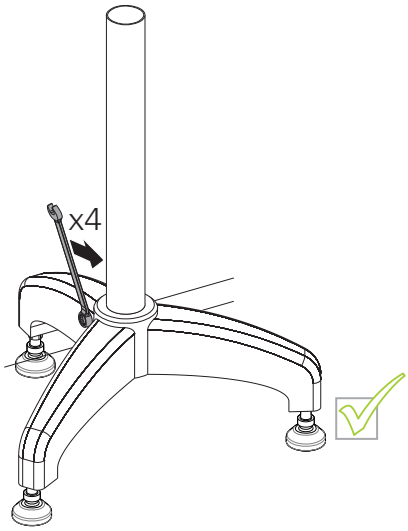


3.4 Beam support bracket, XBCSX 48

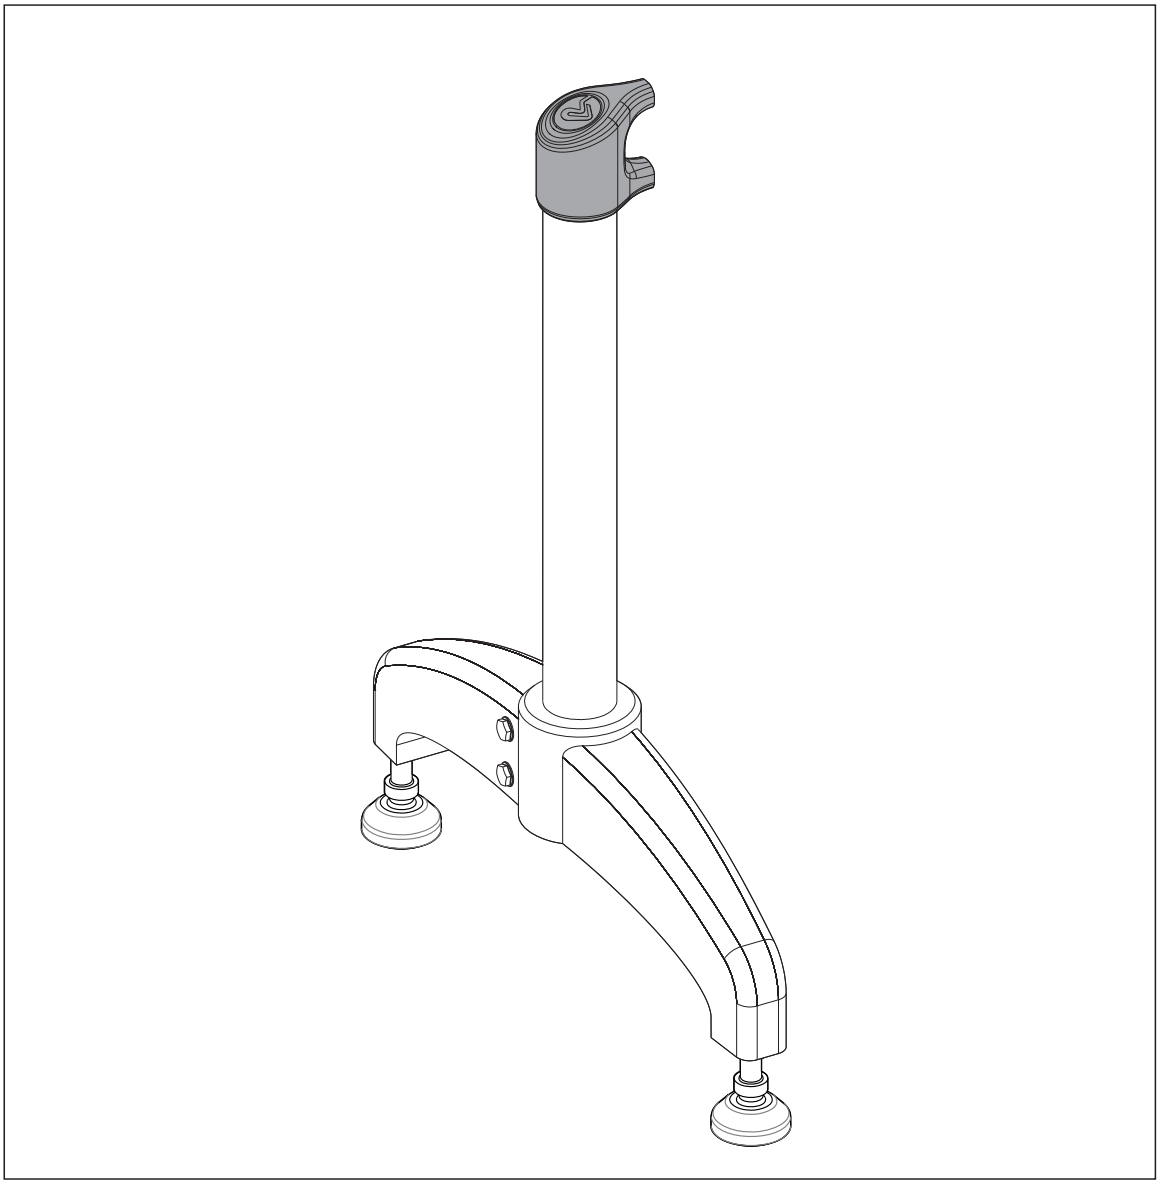





1

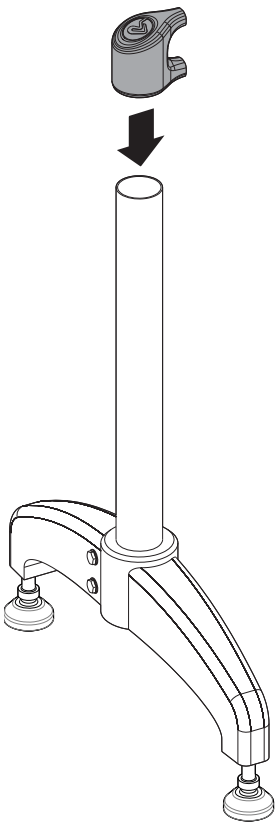


2

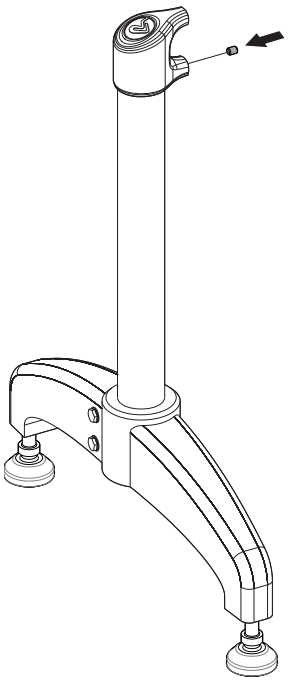

3

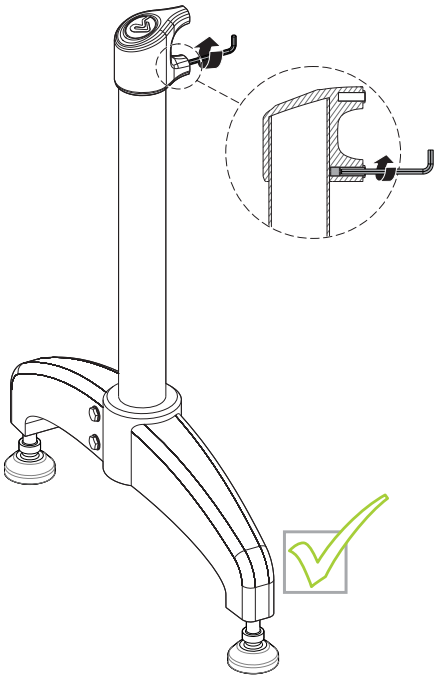


3.5 Beam support bracket, straight beam

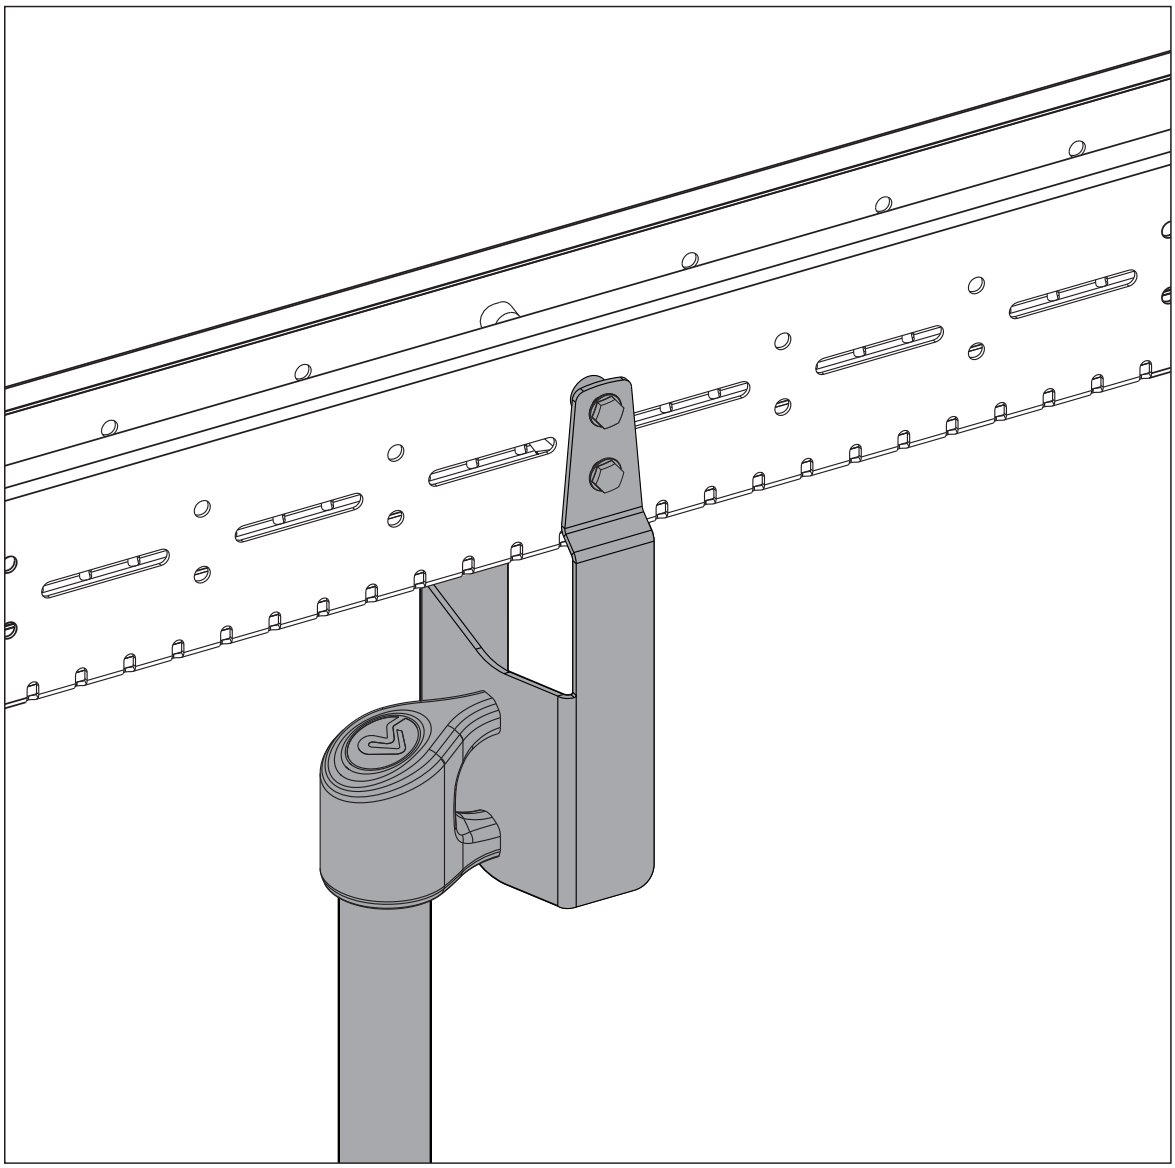





1

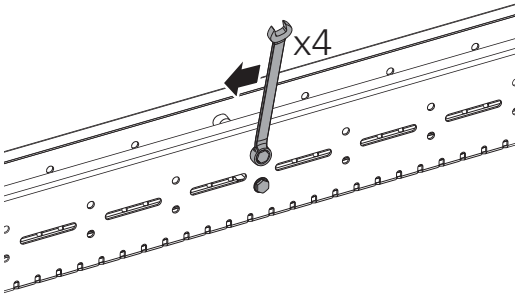


2

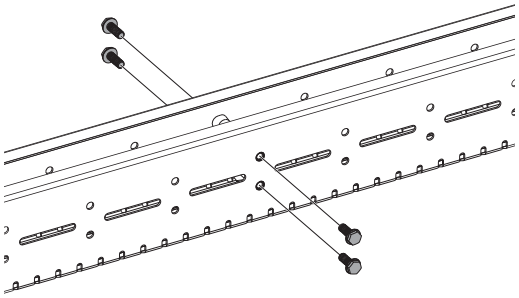


3

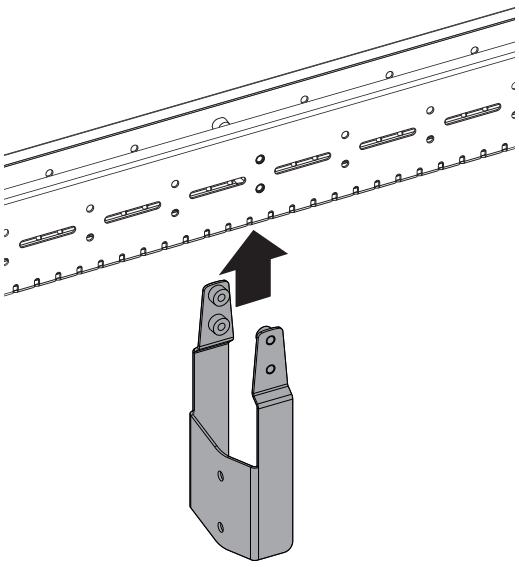


4

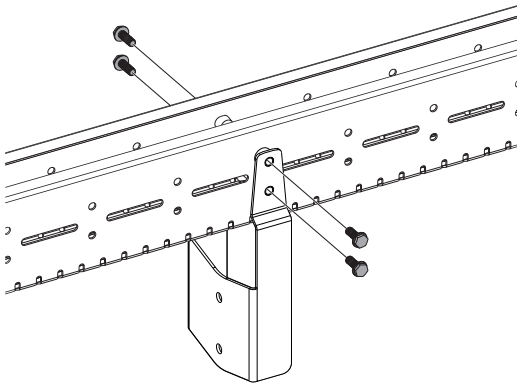


5

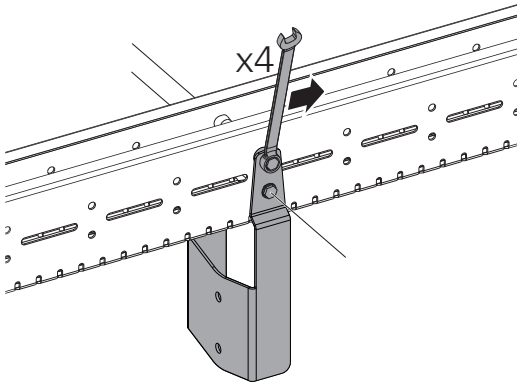


6

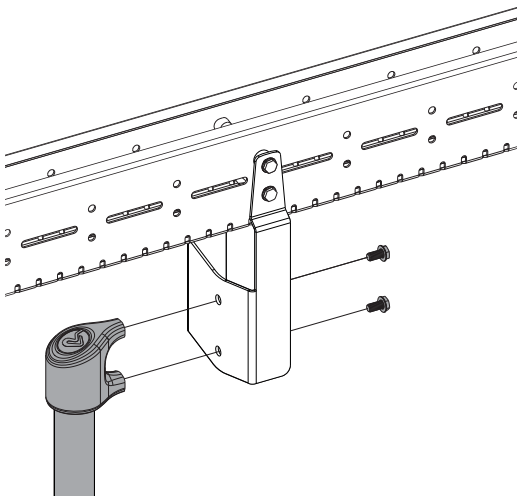


7

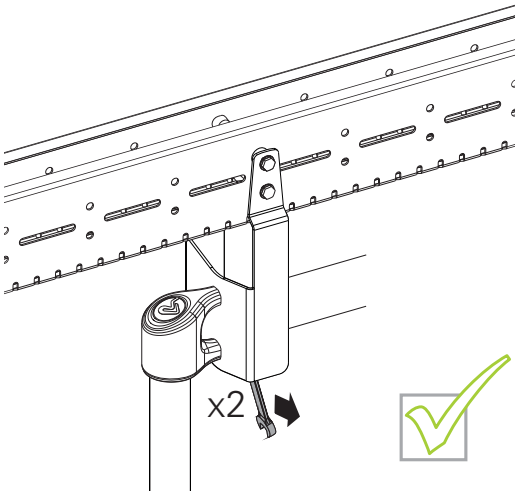


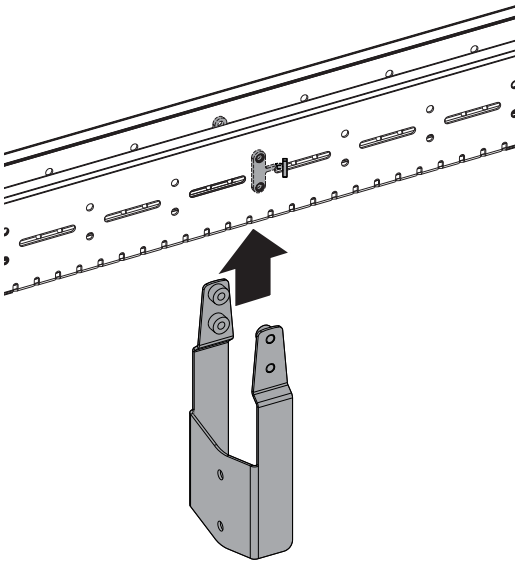


This page is intentionally left blank

3.6 Beam support bracket, drive unit, 5114999

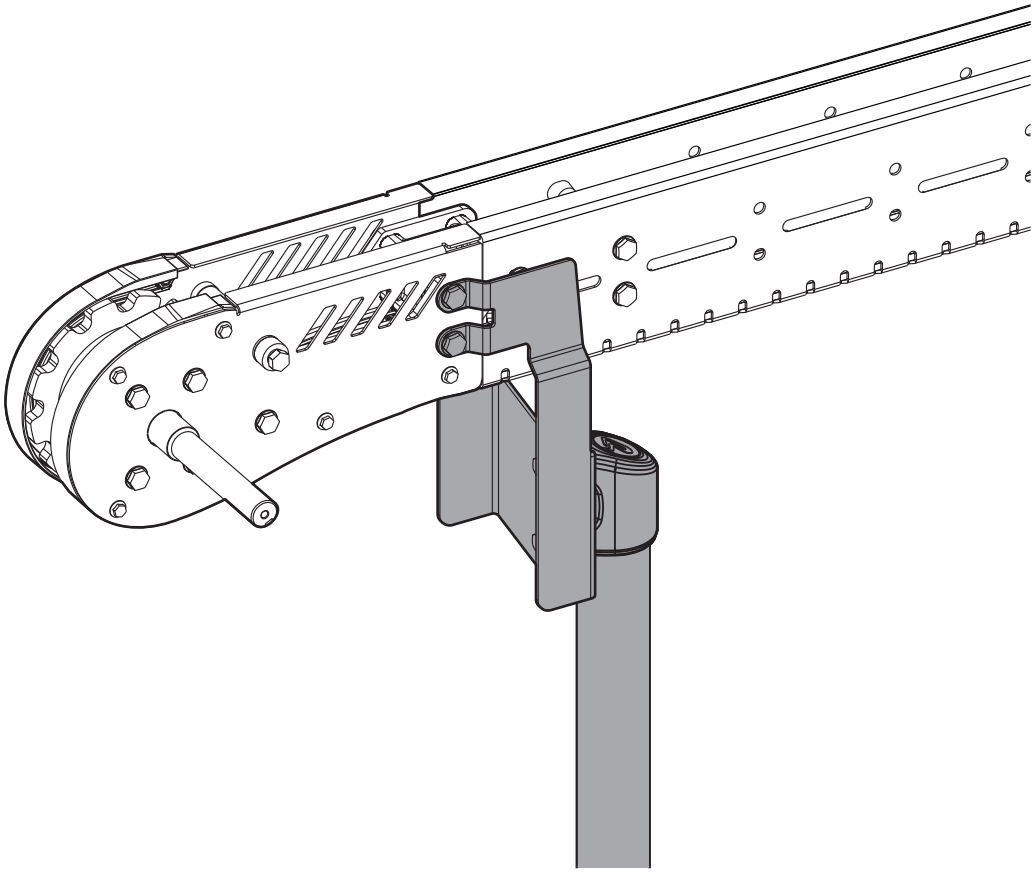


13 mm			
			


1

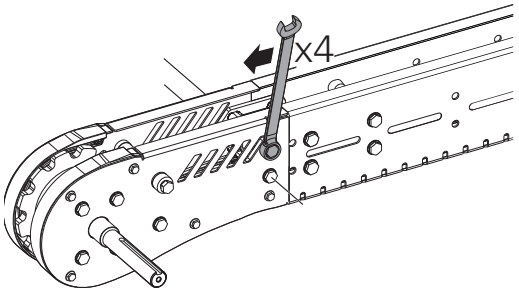


2

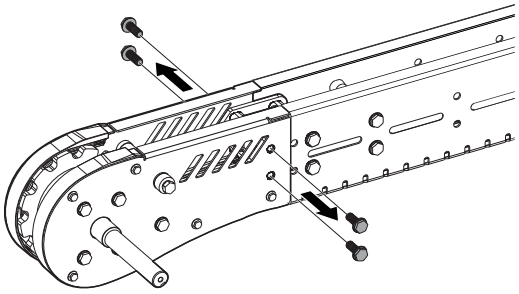


3

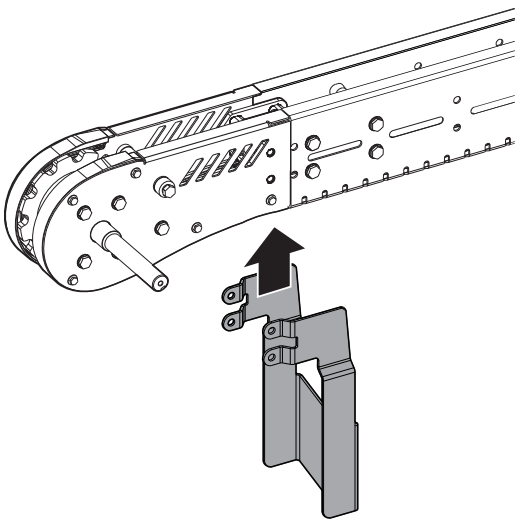


4

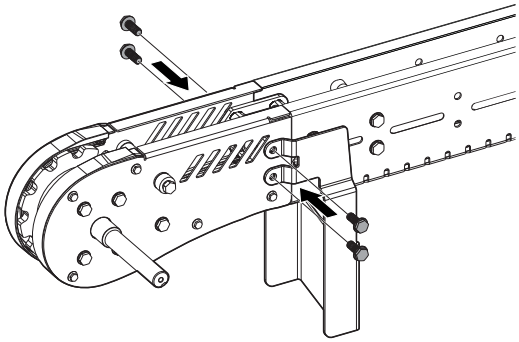


5

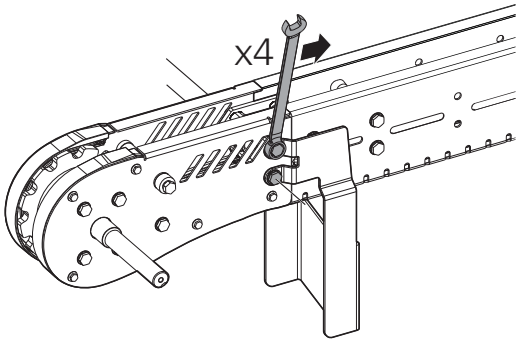

6

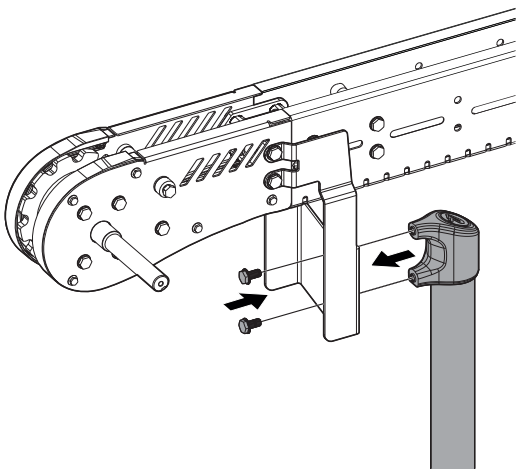



6

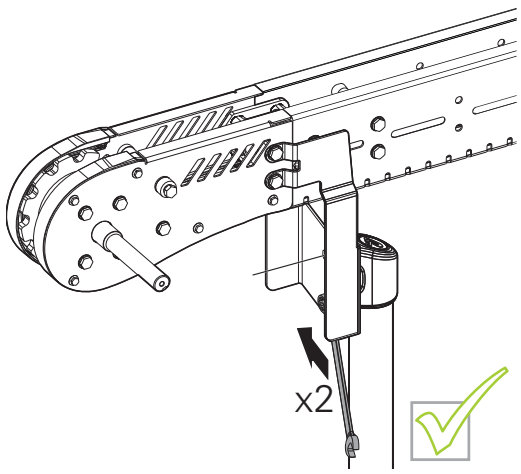


This page is intentionally left blank

3.7 Beam support bracket, wheel bend, 5115171

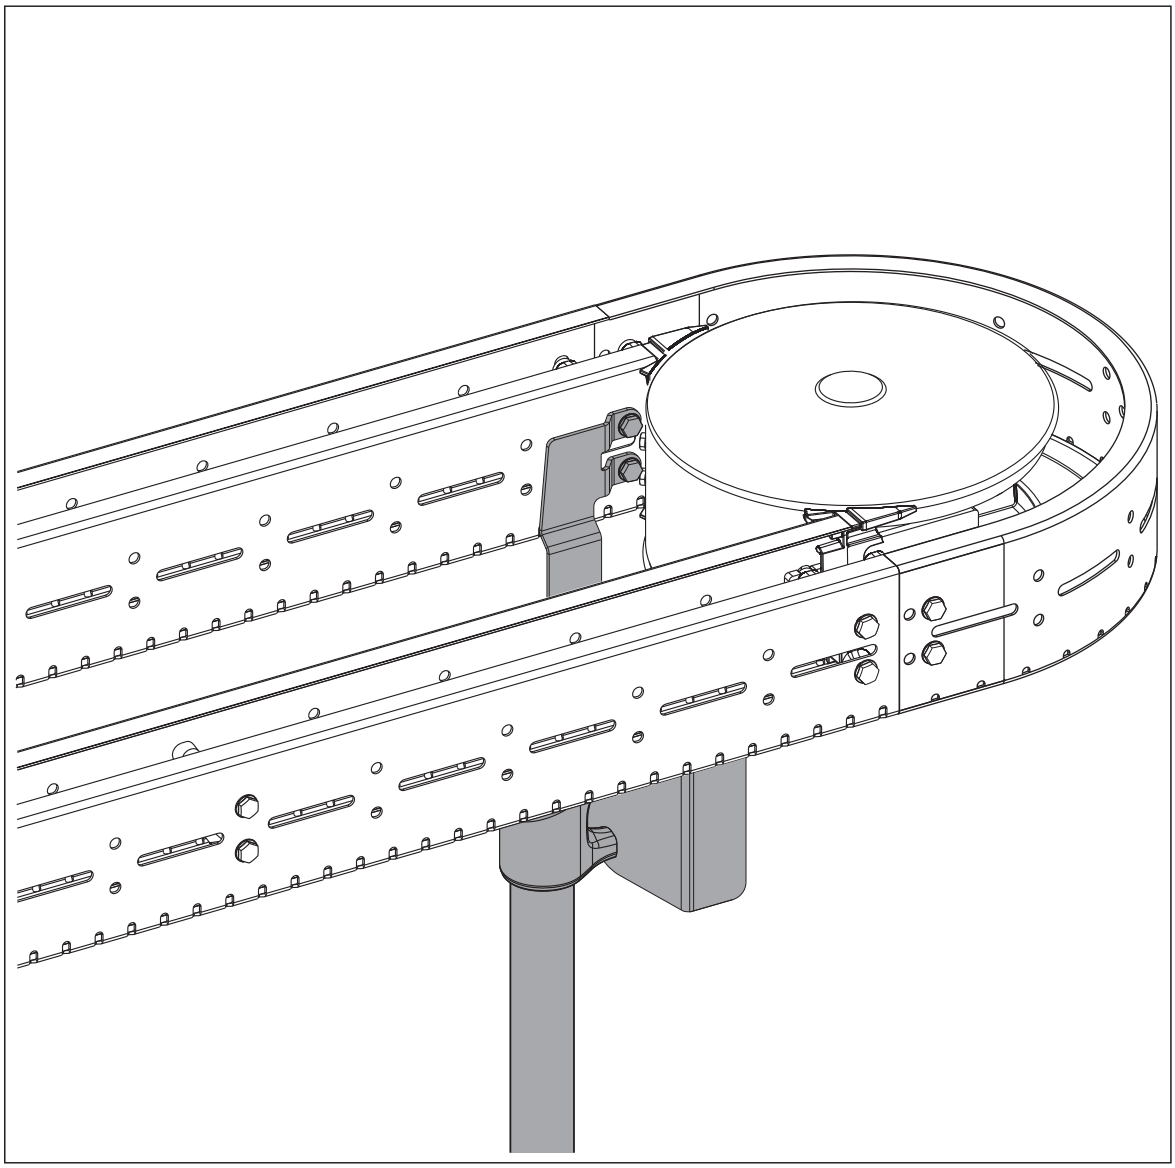


13 mm 			


1

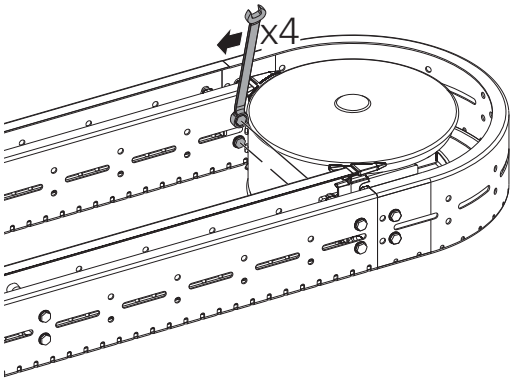


2

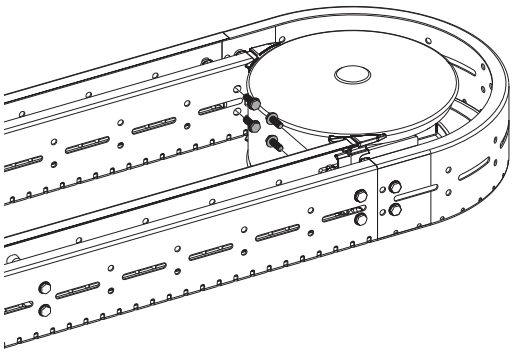


3

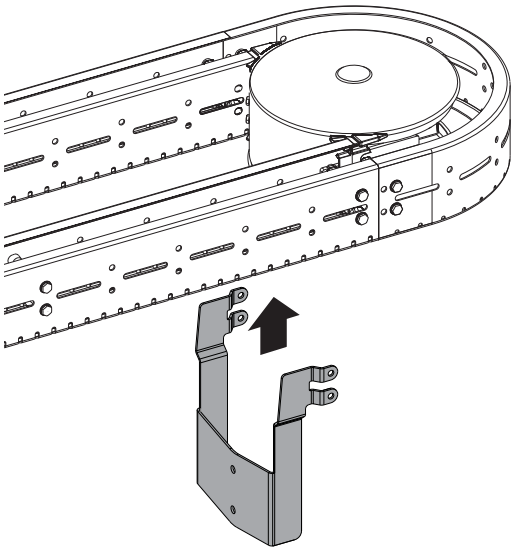


4

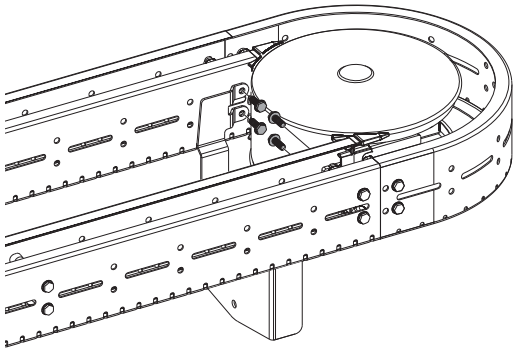


5

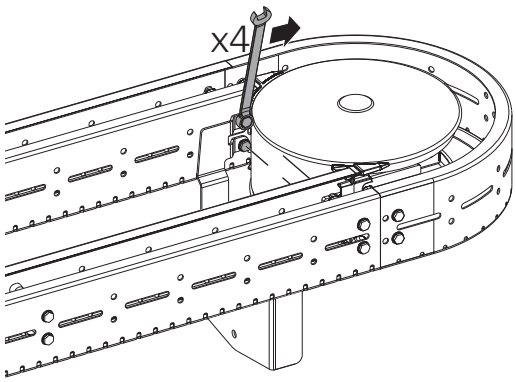

6

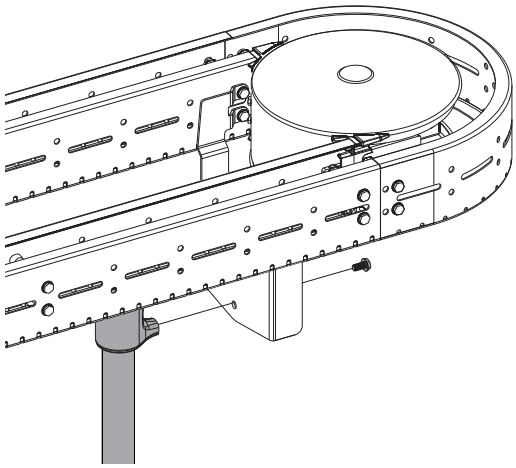


7

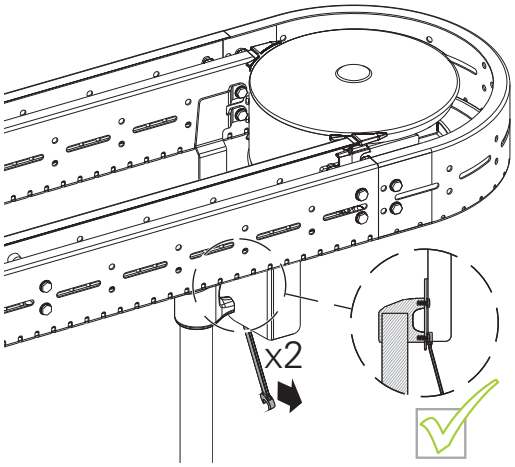


This page is intentionally left blank

3.8 Beam support bracket, plain bends, 5115162

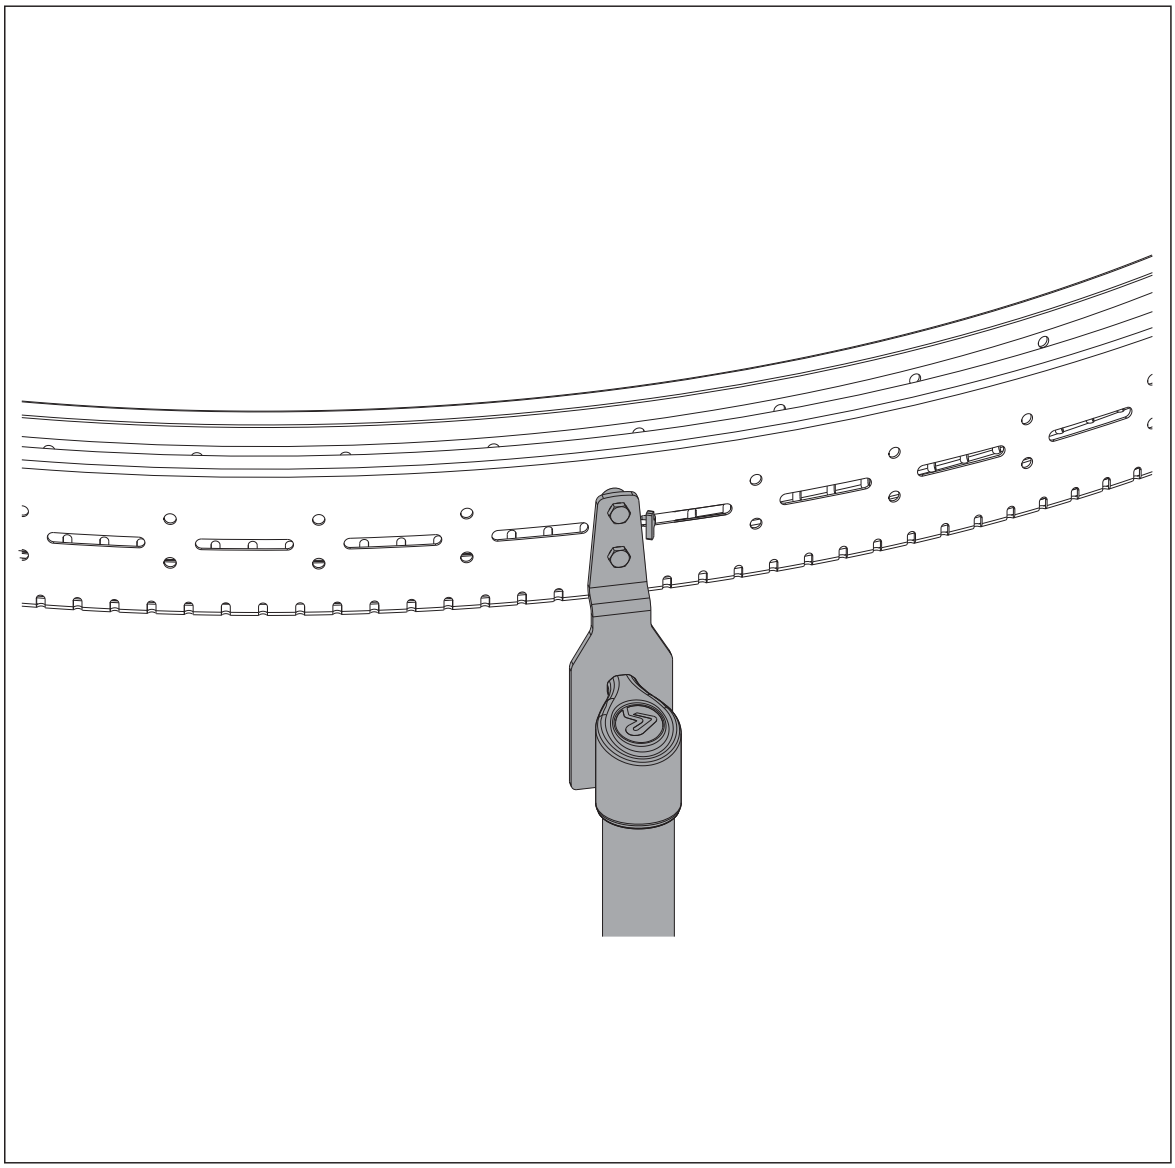





1

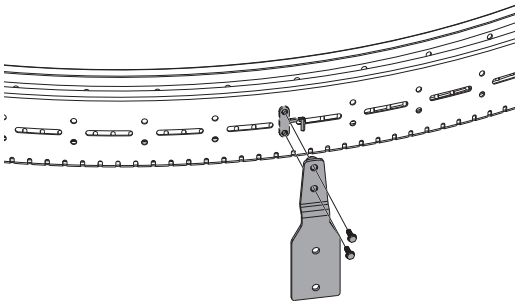


2

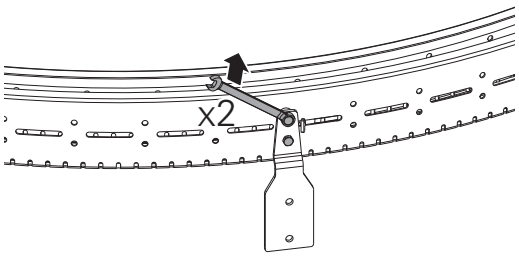

3

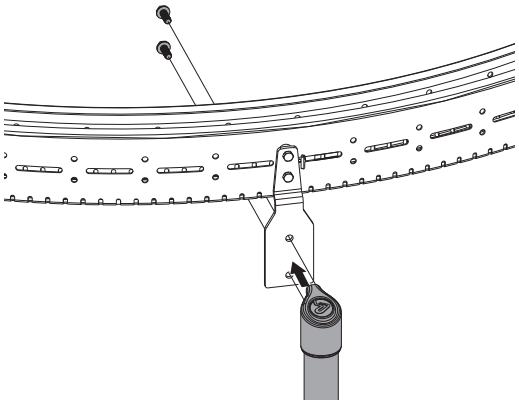



4

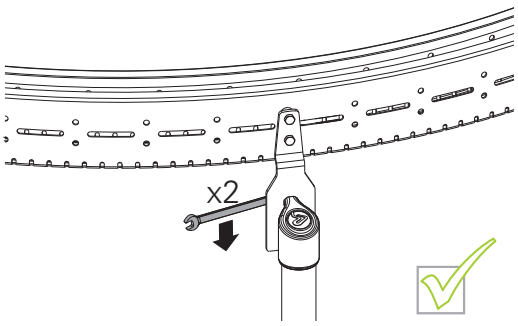


4 Conveyor assembly

4.1 Drill fixture, 5114621

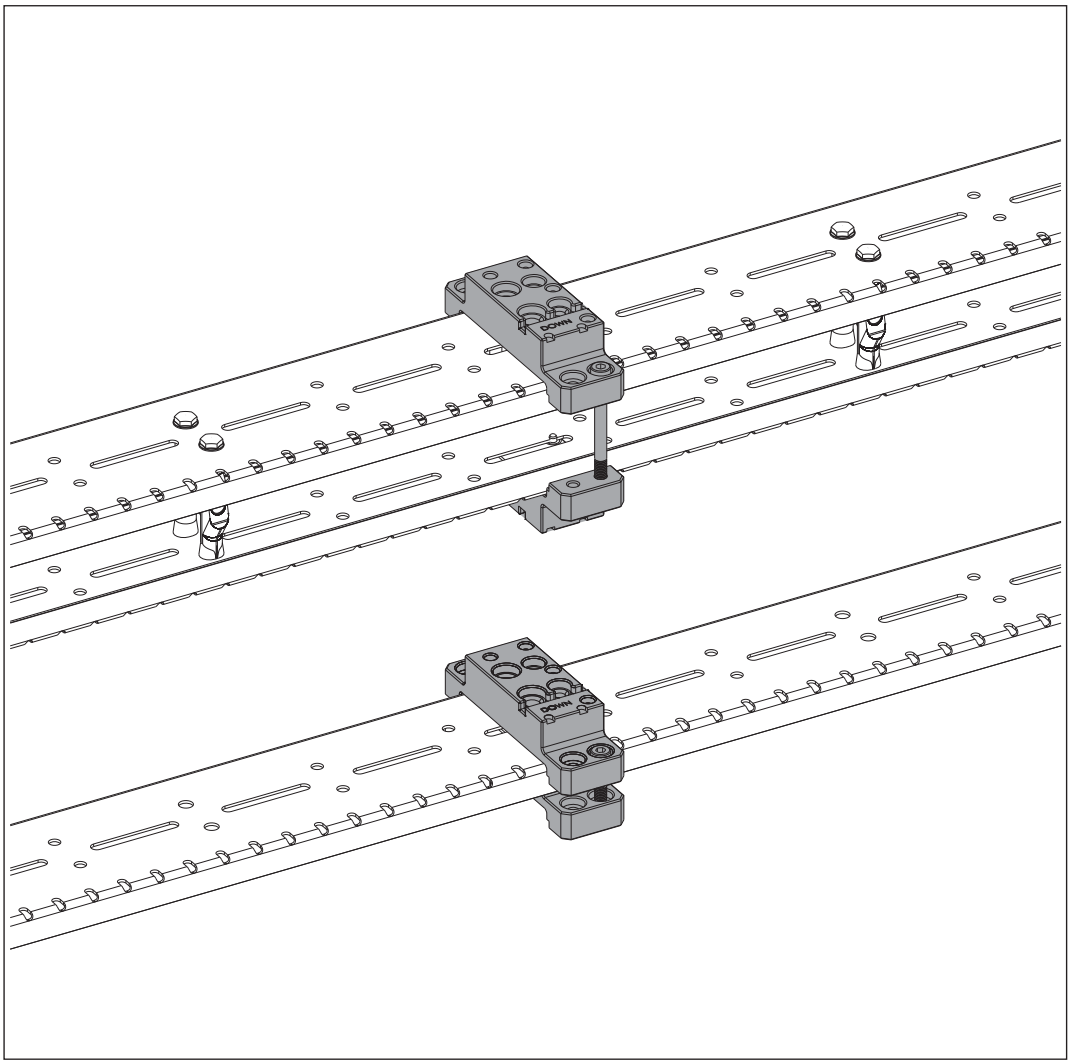


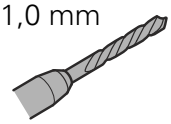4,2 mm 8,3 mm 11,0 mm 			


1a

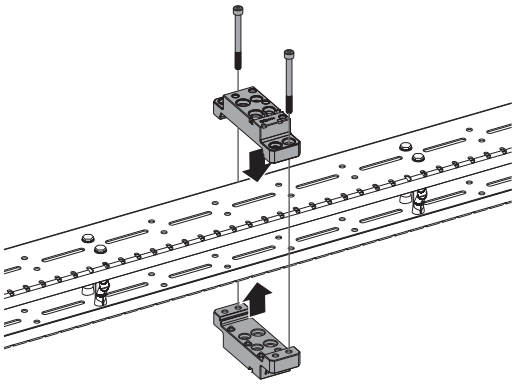


2a

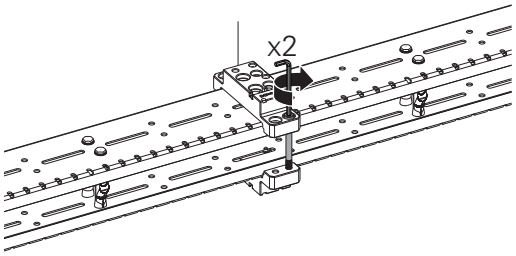


3a

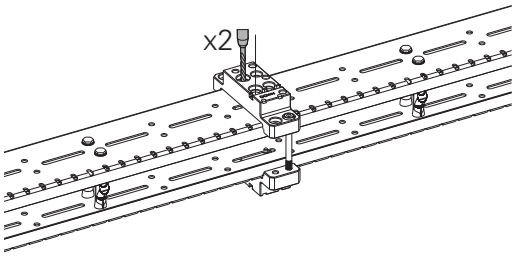


4a

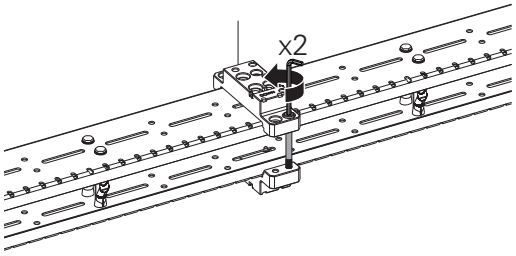


5a

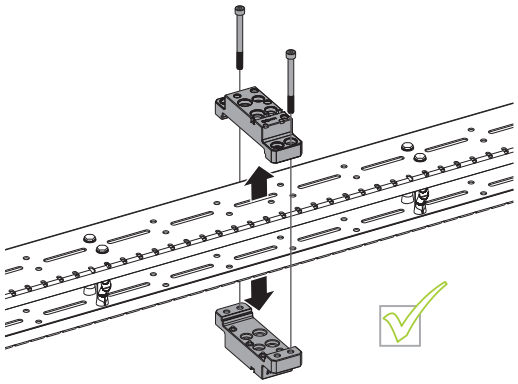


1b

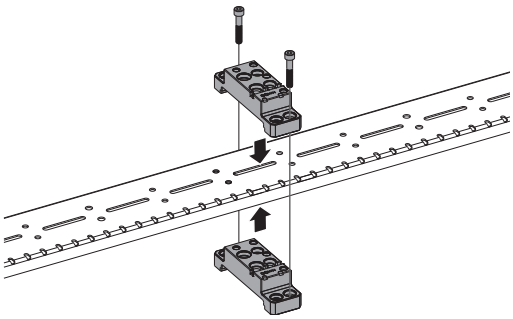


2b

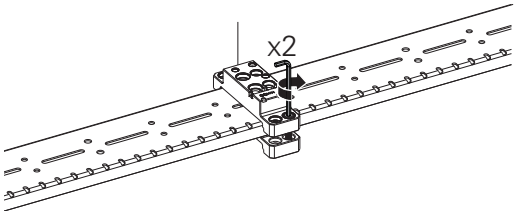


3b

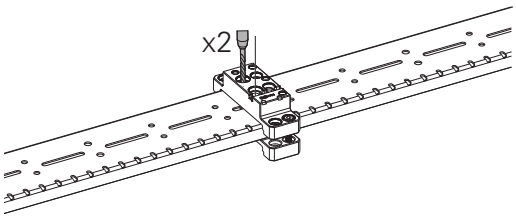

4b

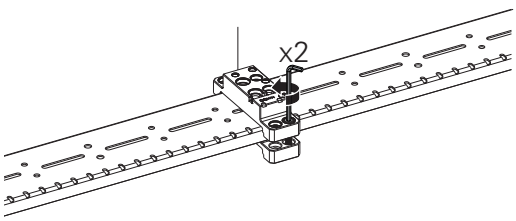



5b

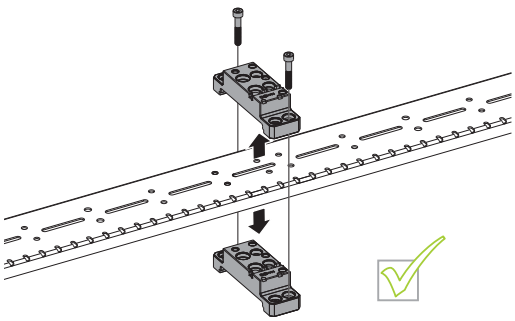



This page is intentionally left blank


4.2 Nut, stainless steel, 5113998/5114181

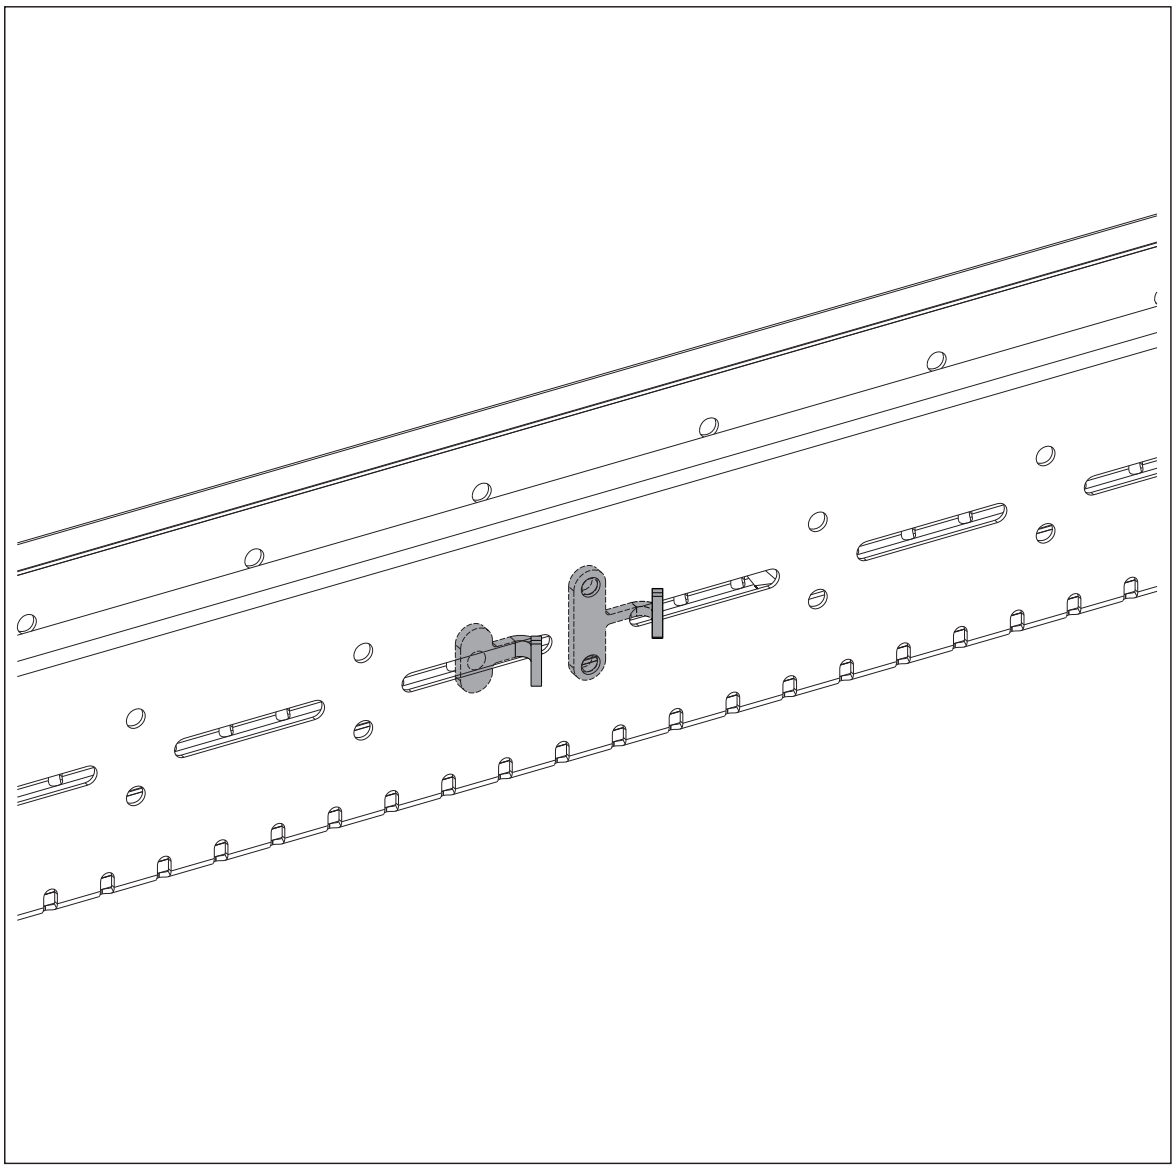

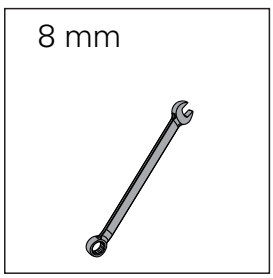










1

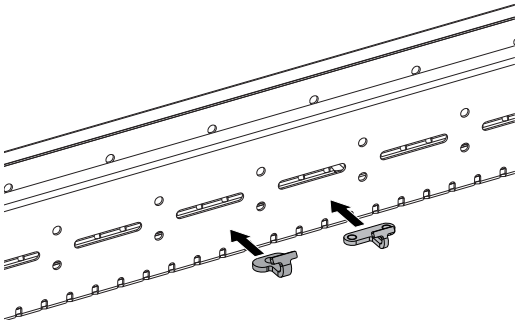


2

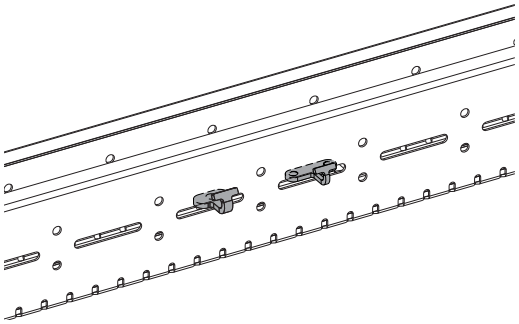


3

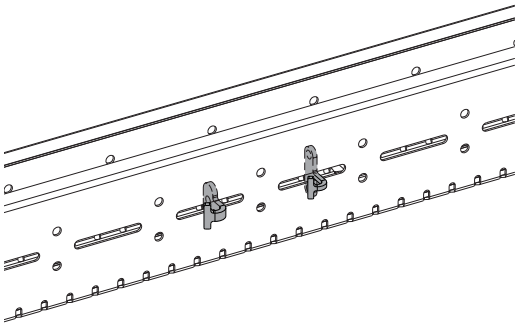


4

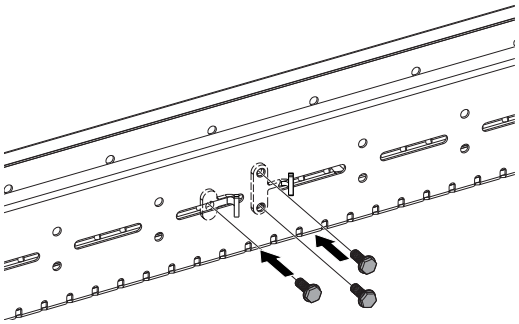

5

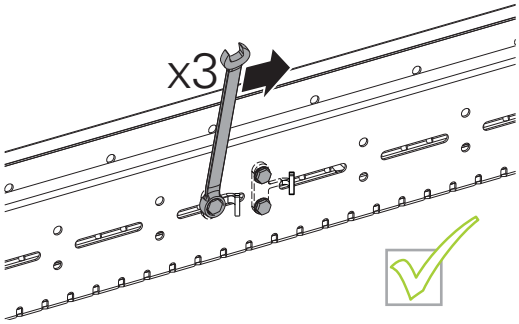


4.3 Beam spacer kit, XBCEX A85

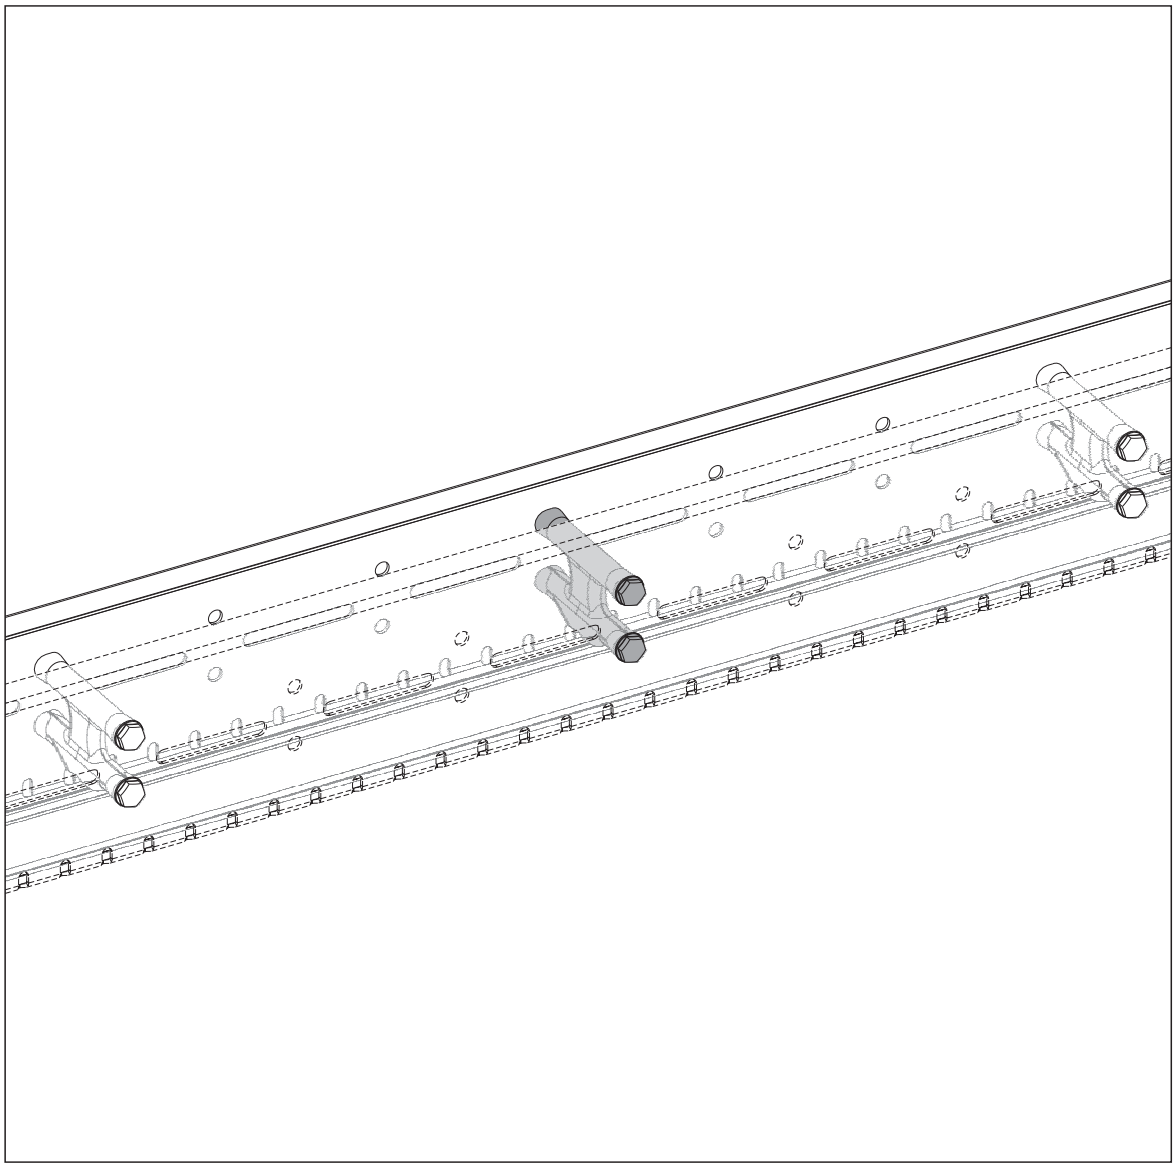





1

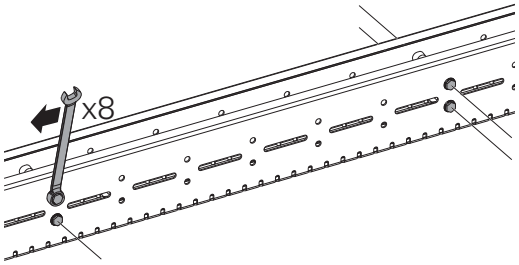


2

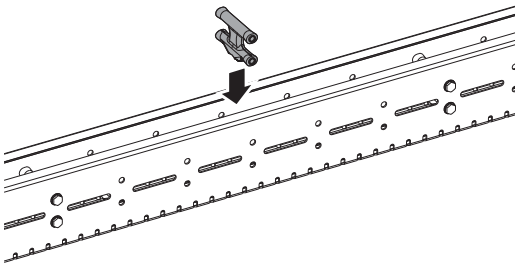


3

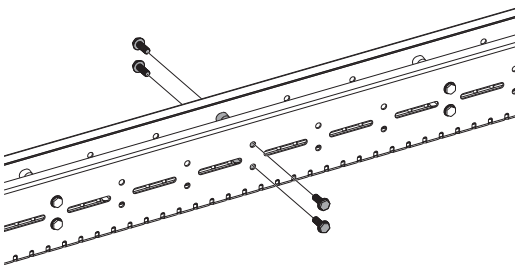

4

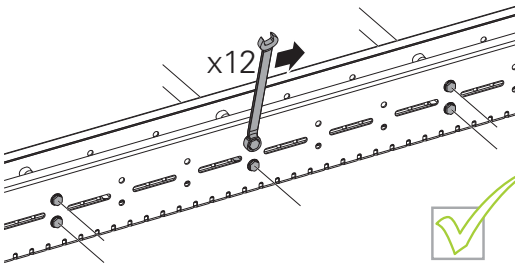


4.4 Drip catcher kit, 5114763

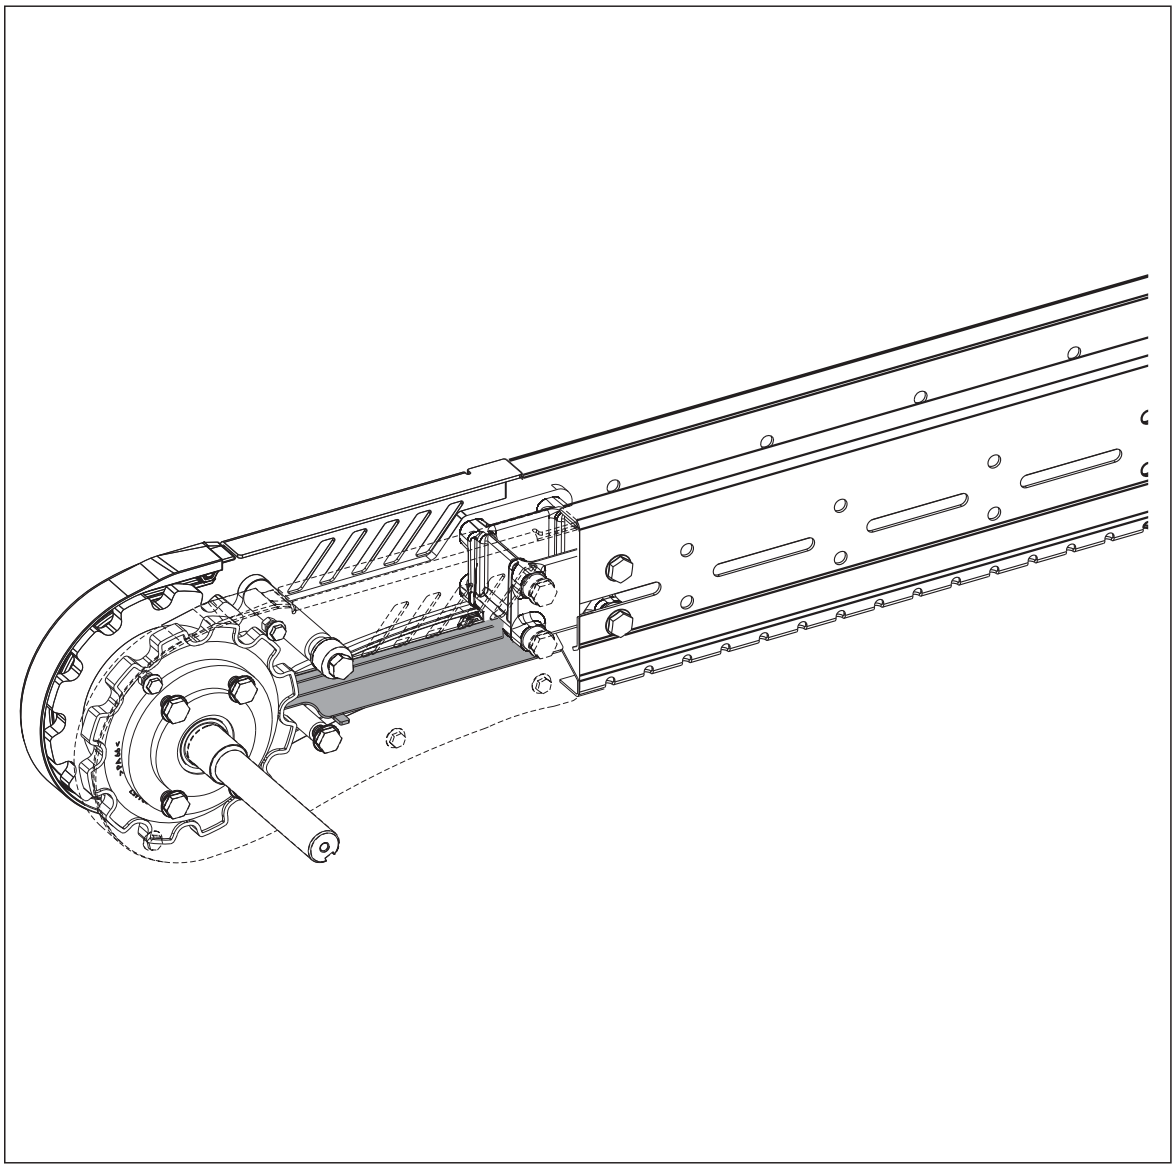





1

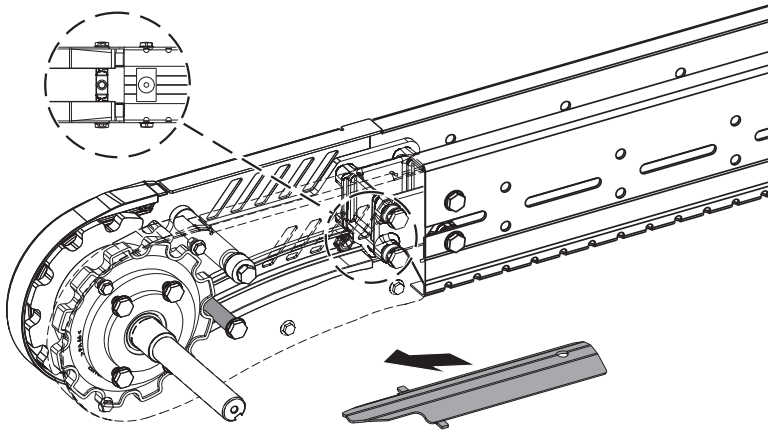


2

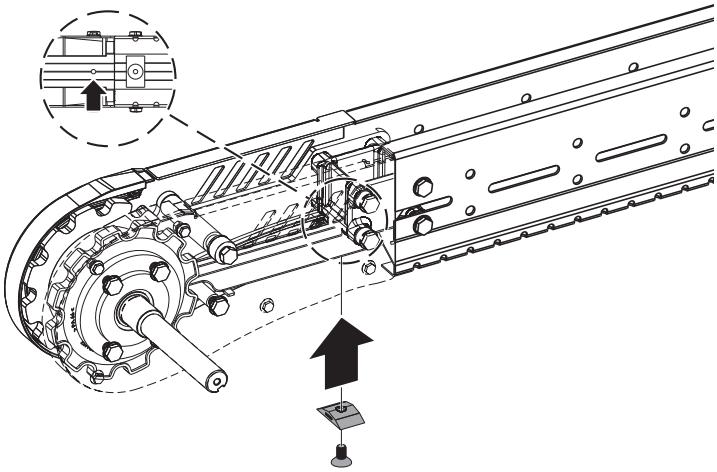

3

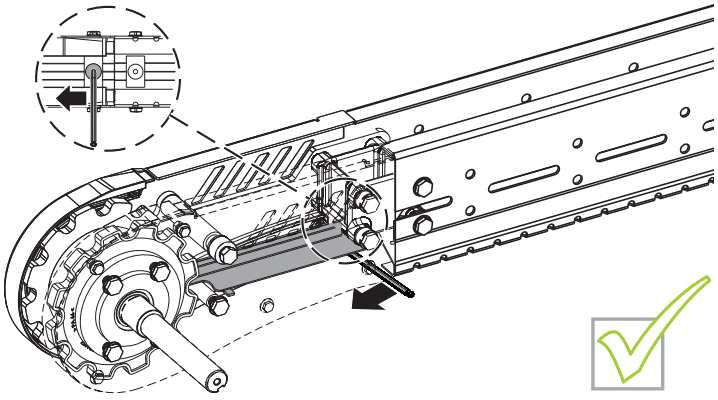


4.5 Beam section for chain installation, XBCCX 300A85

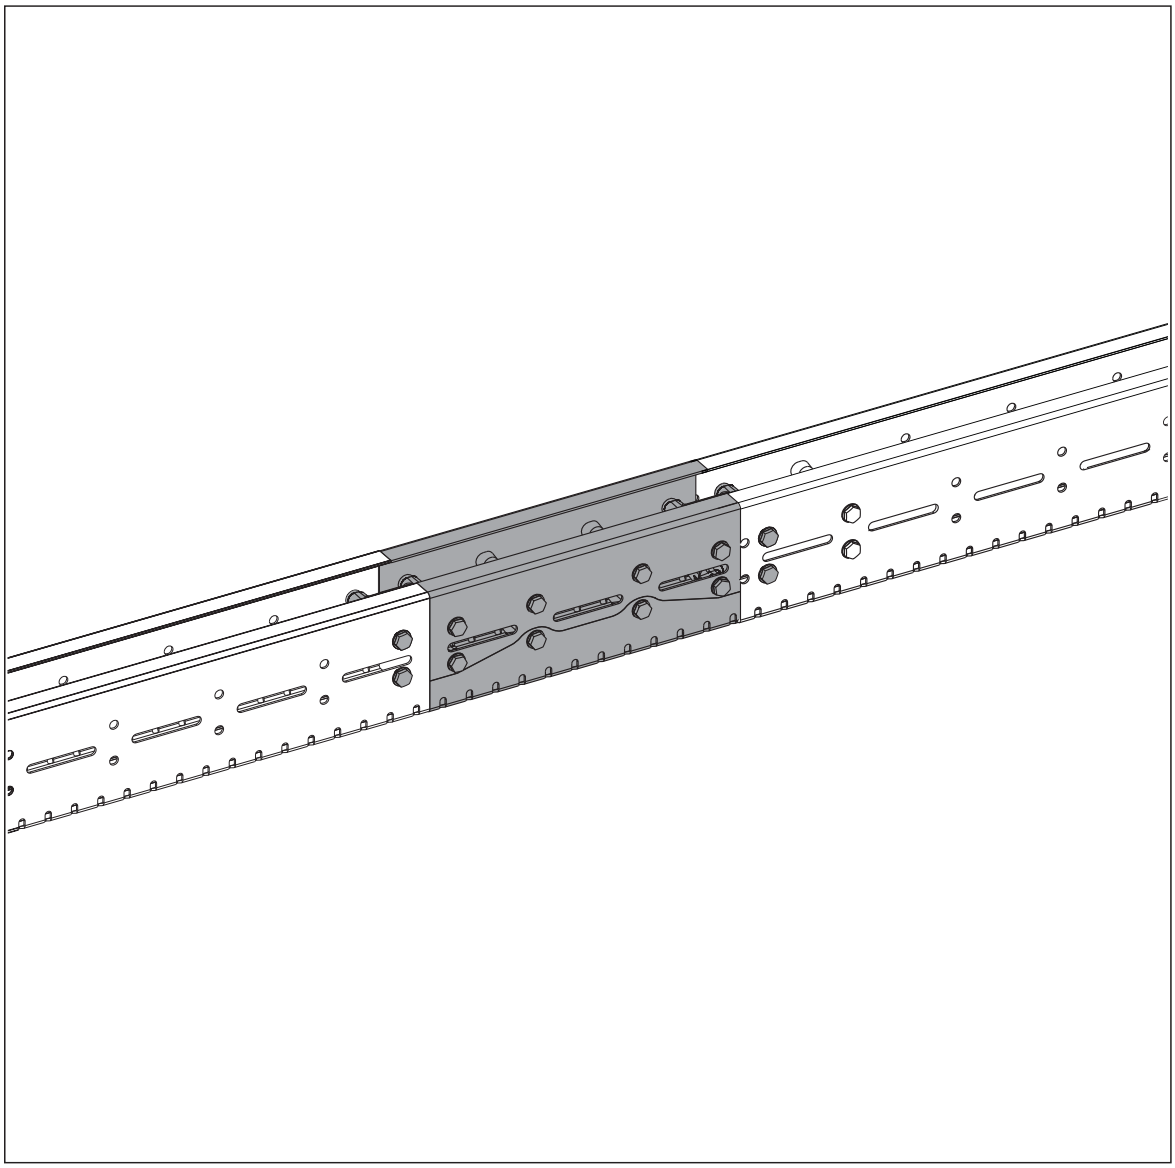





1

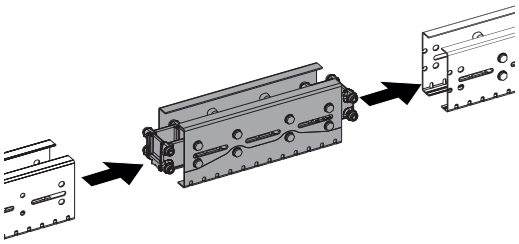


2

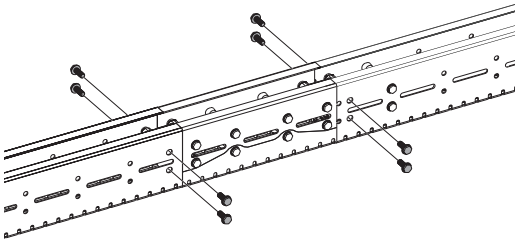

3

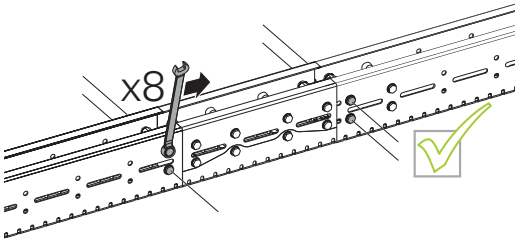


4.6 Idler end unit, XBEJX A85/XBEJX A85 S

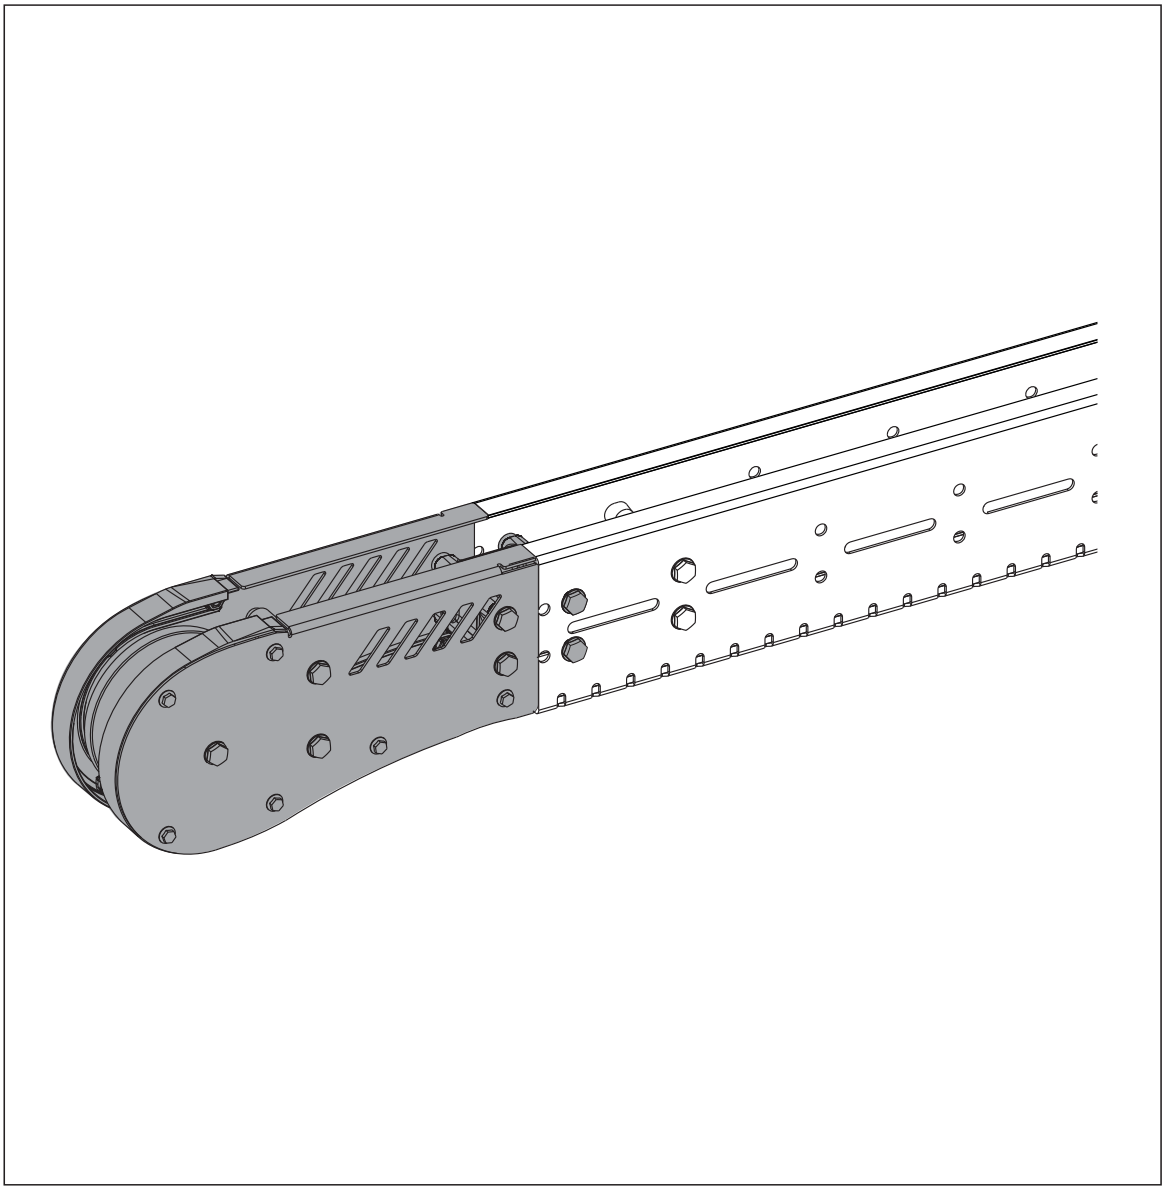





1

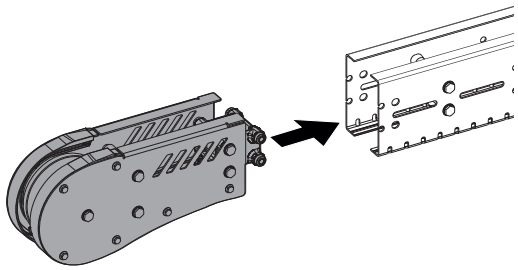


2

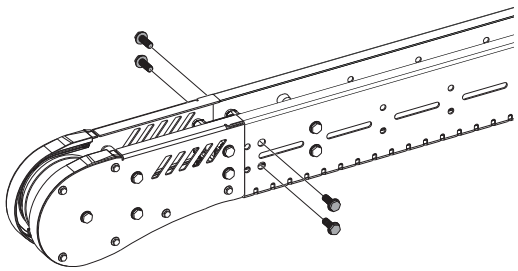


3

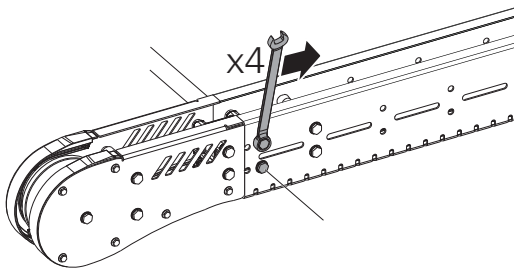


4

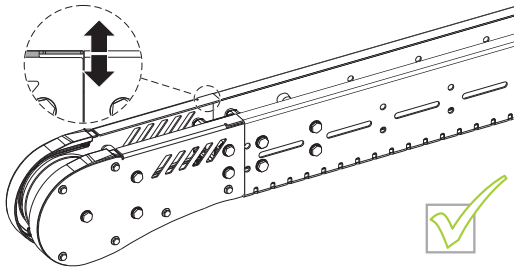


4.7 Protective cover for idler end units, XBSJX A85/XBSJX A85 S

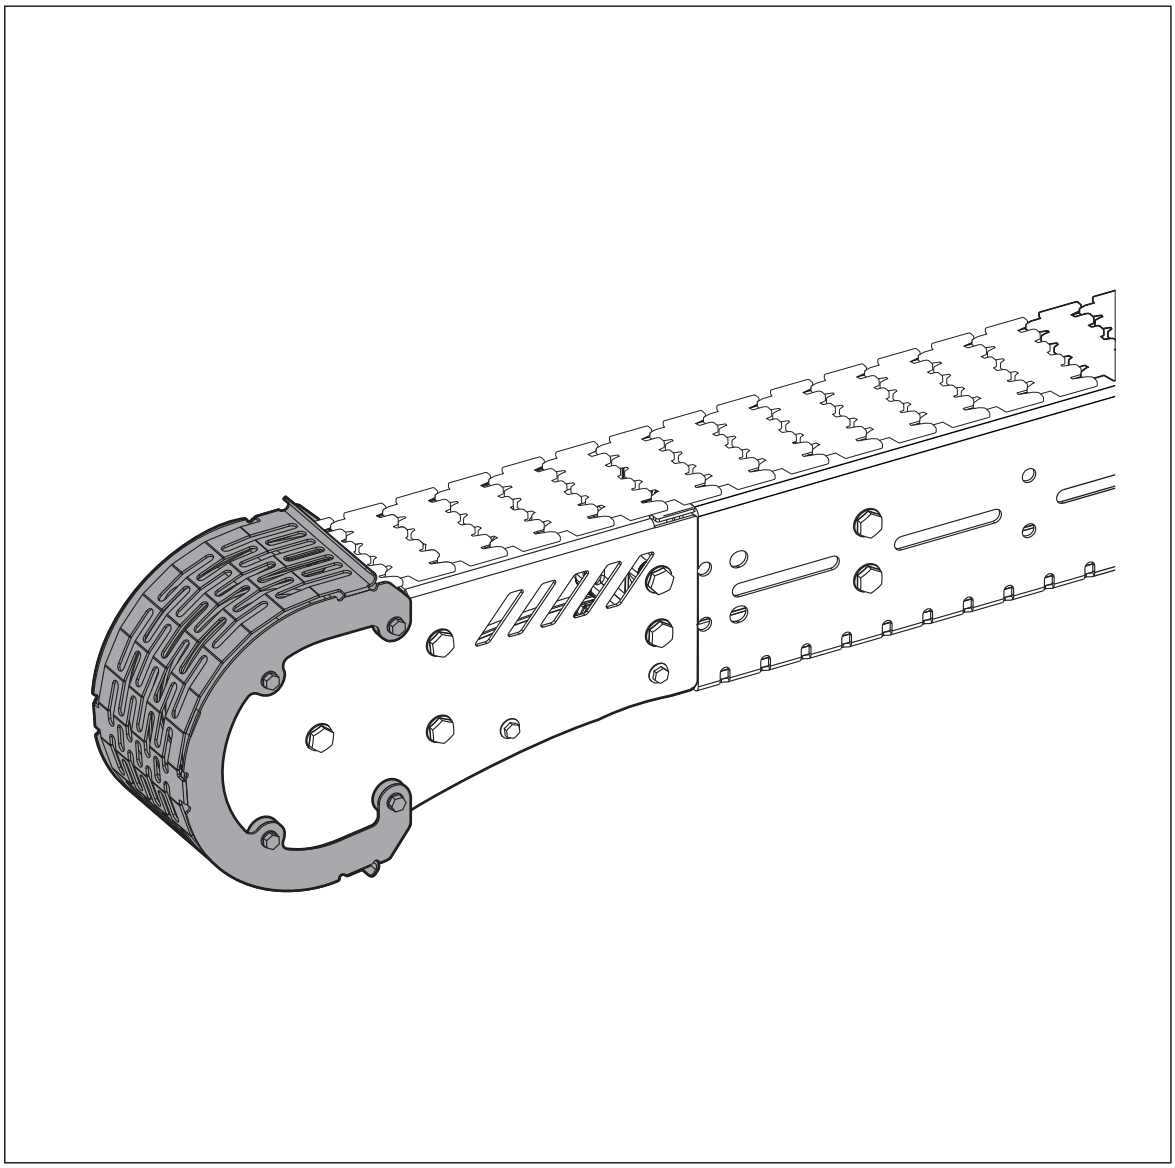


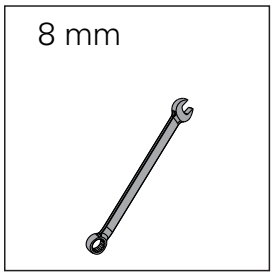


1

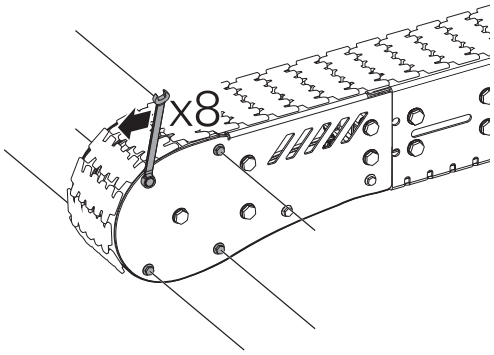


2

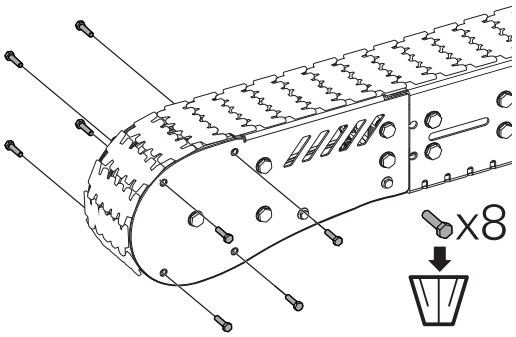


3

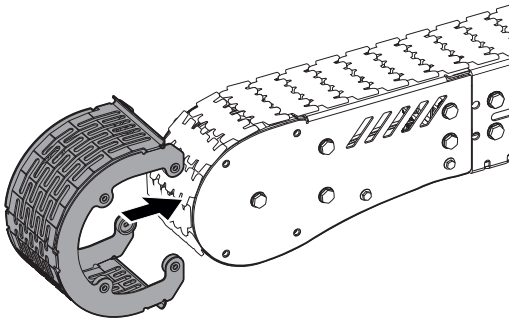


4

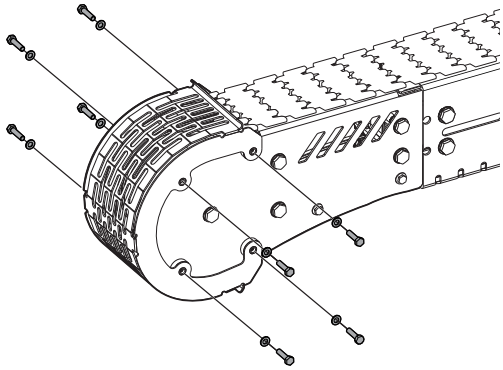


5

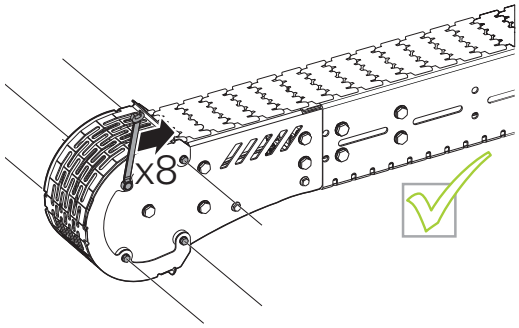

4.8 End drive unit, direct drive, XBEBX 0A85HN_P

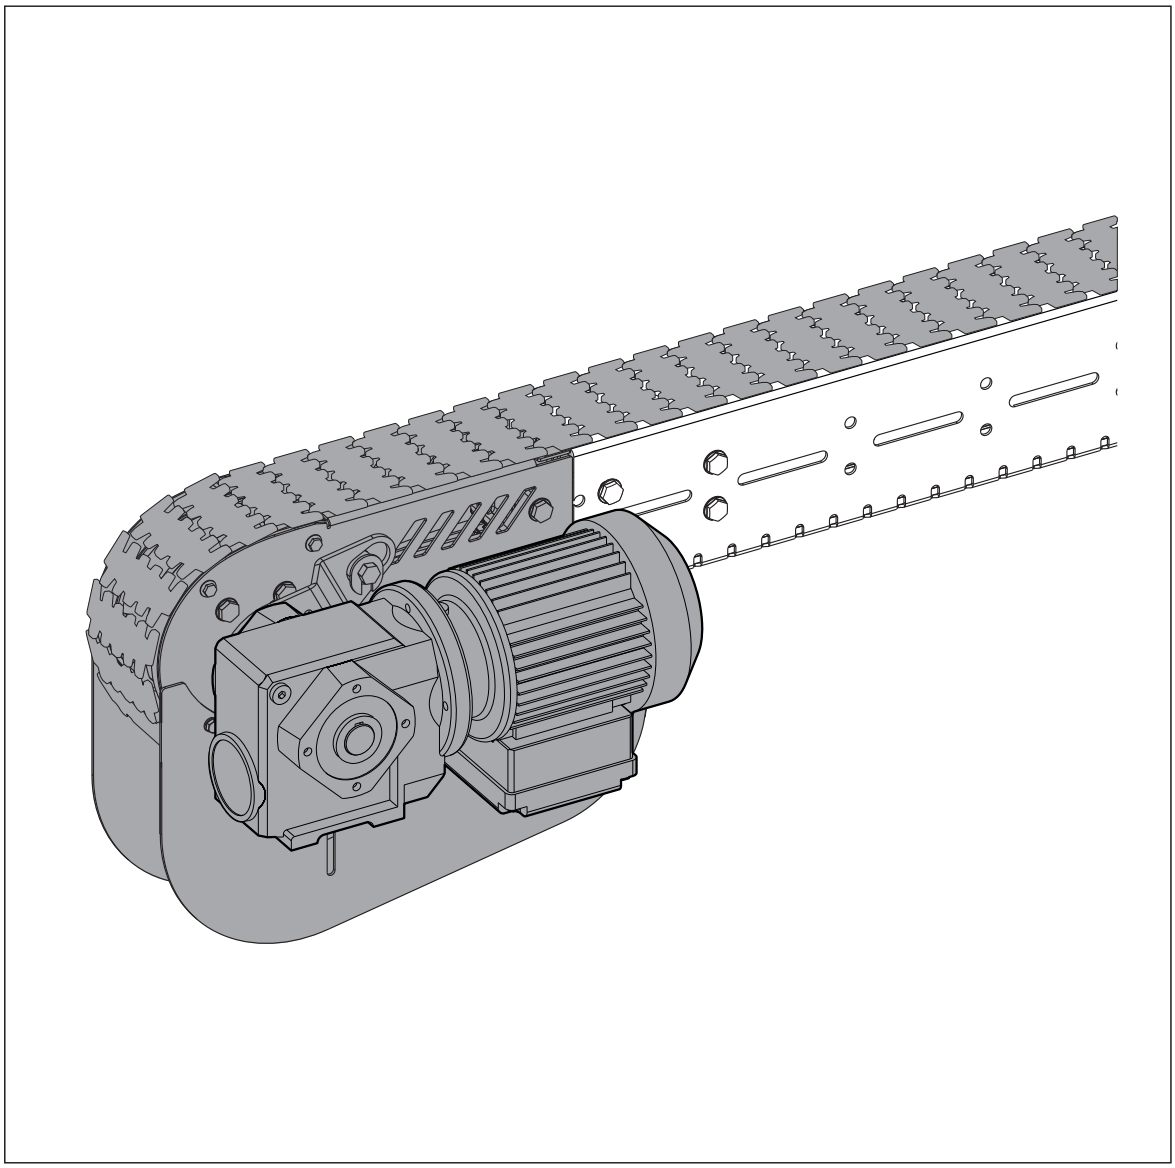


8 mm
10 mm
13 mm




NOCO-Fluid
or similar




Snap ring plier




10 mm




1

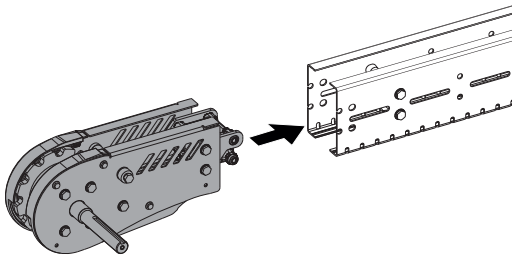


2

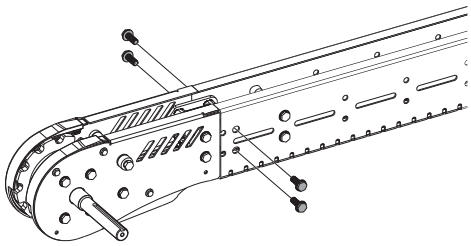


3

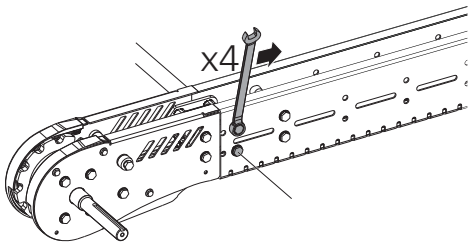


4

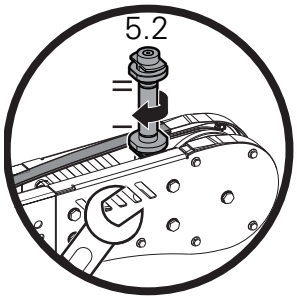


5

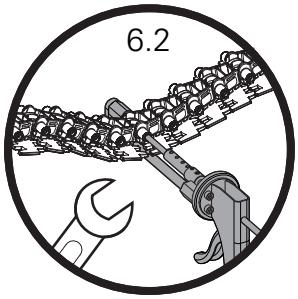


6

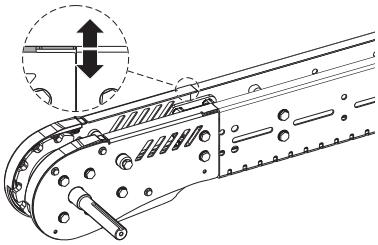


7

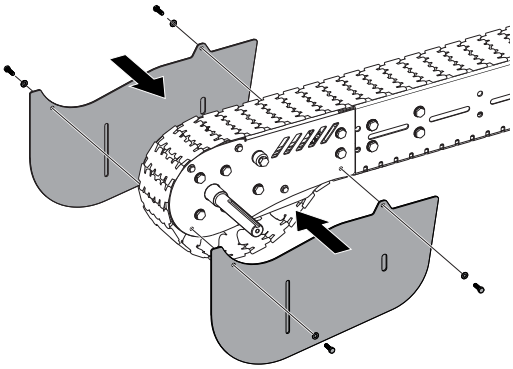


8

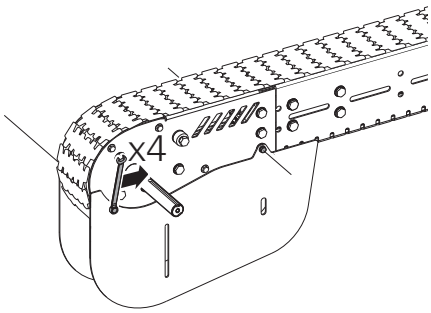


9

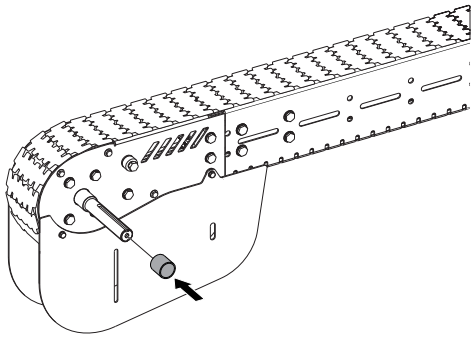


10

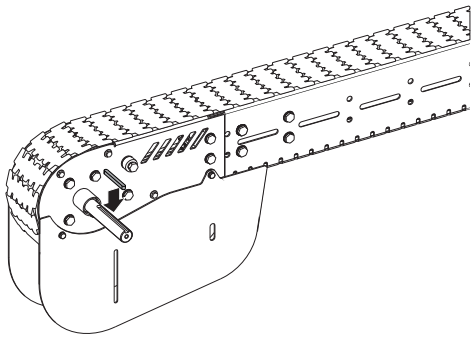


11

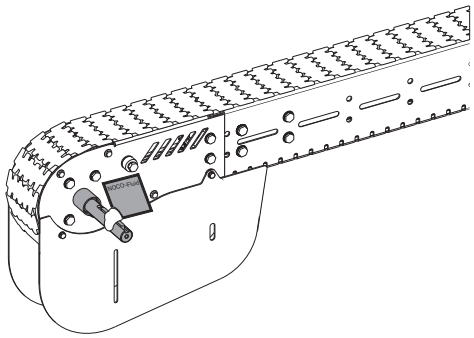


12

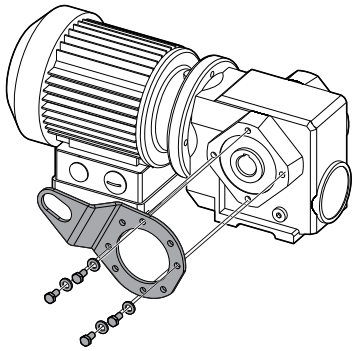


13

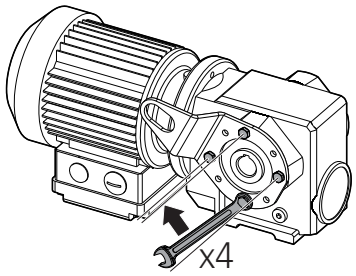


14

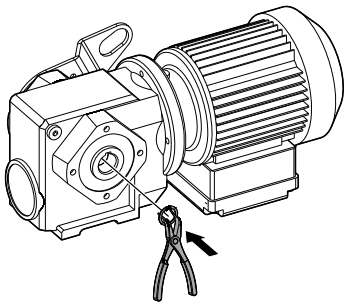


15

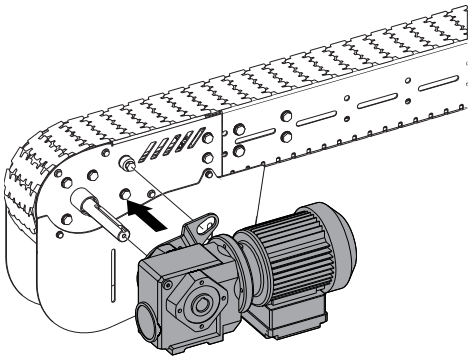


16

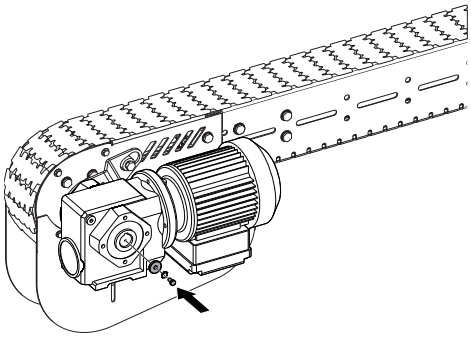


17

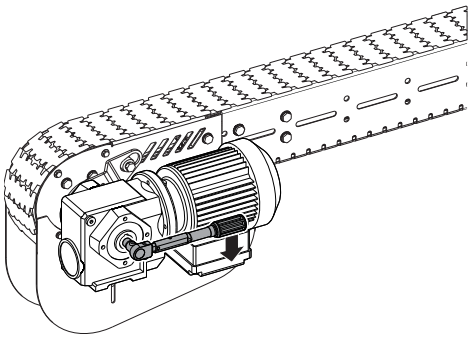


18

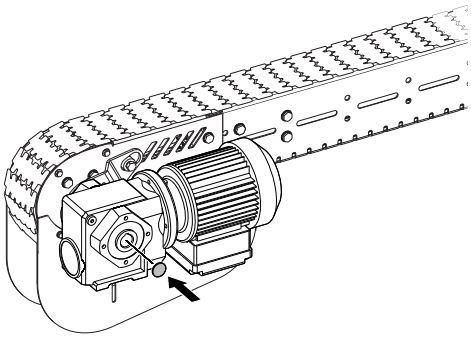


19

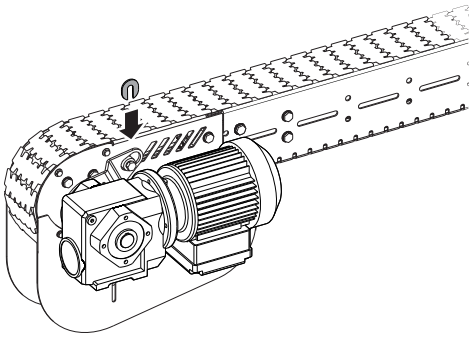


20

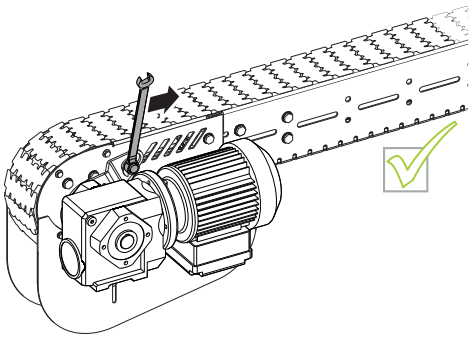



4.9 Guide wheel kit, 5055635

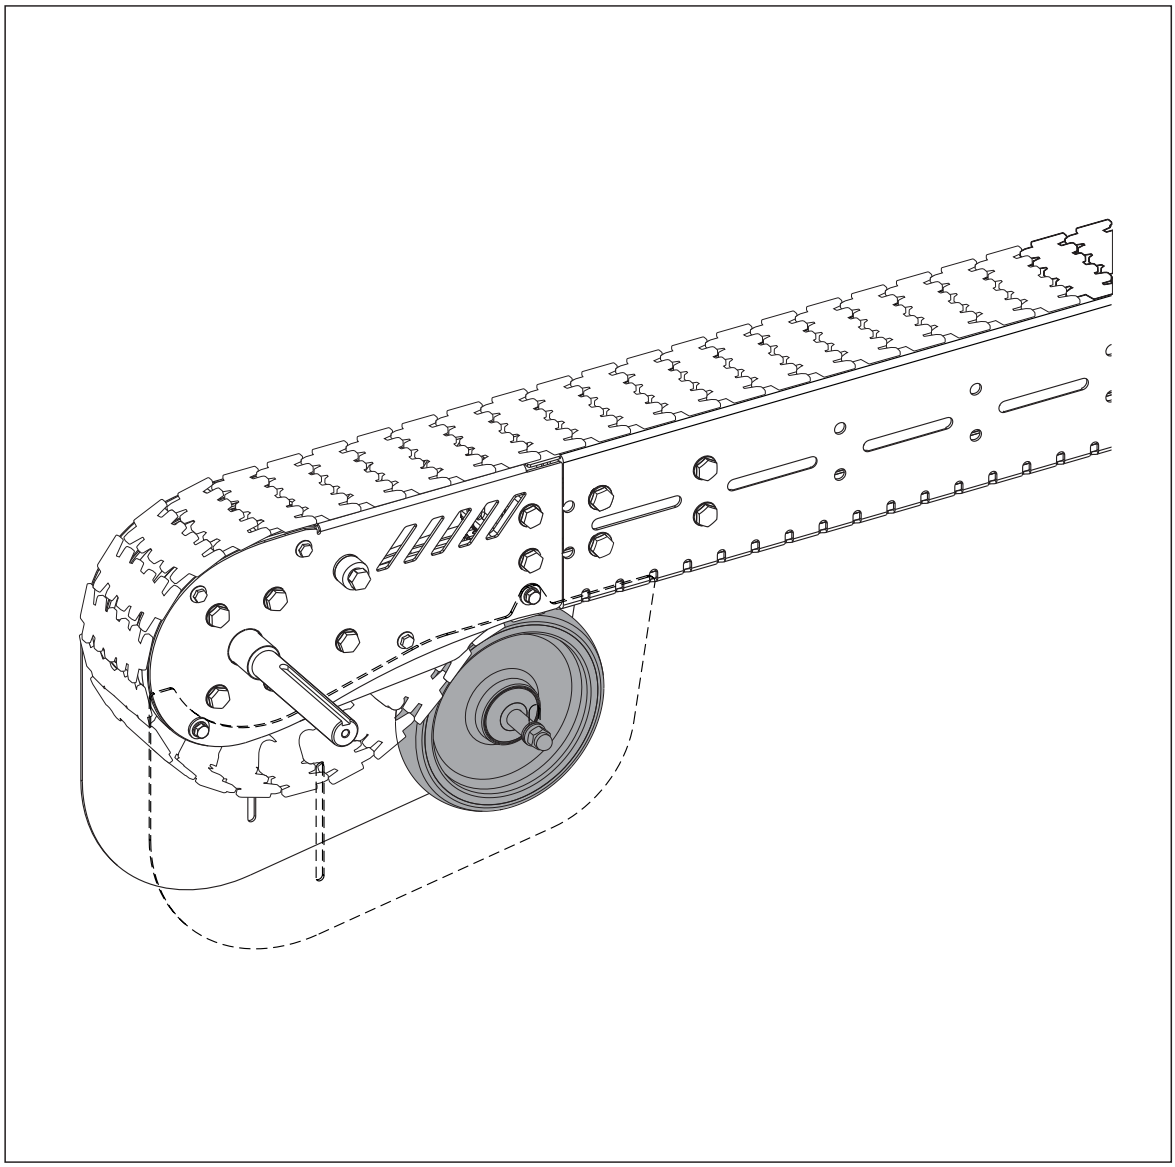

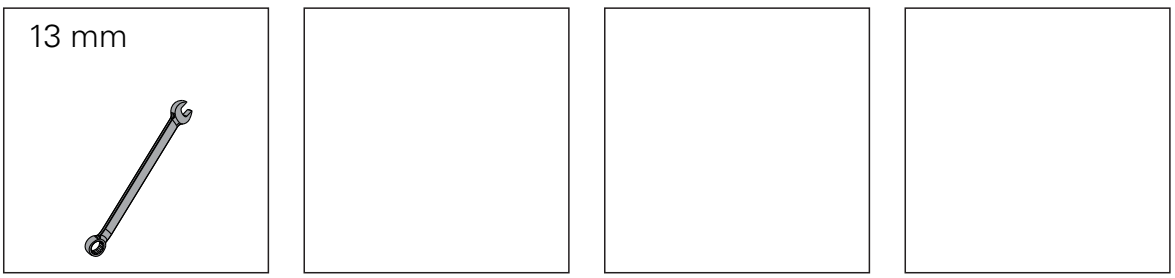


1

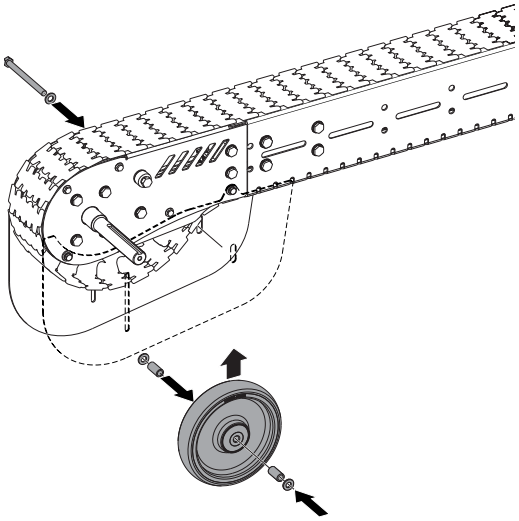


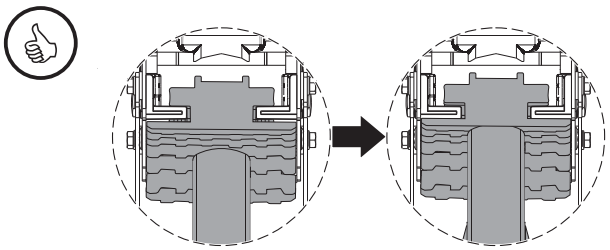


2

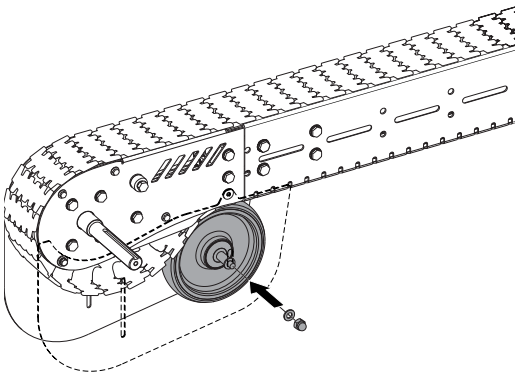


4

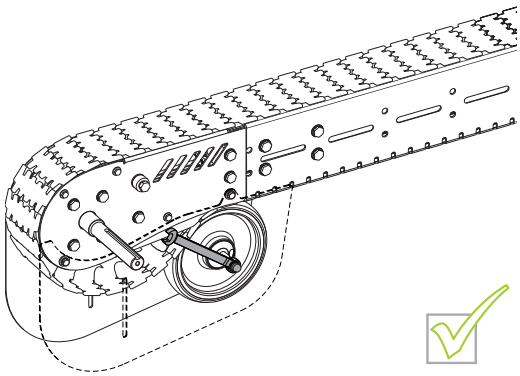


3

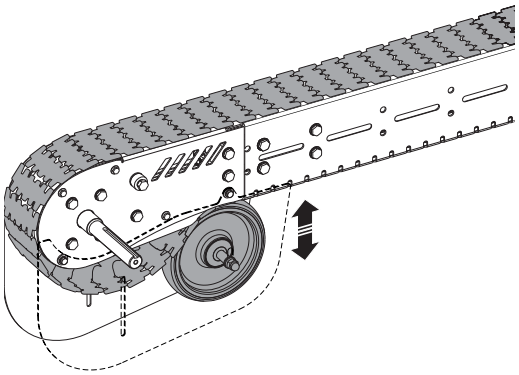

4.10 End drive unit, guided chain, no slip clutch, XBEBX 0A85HN_GP

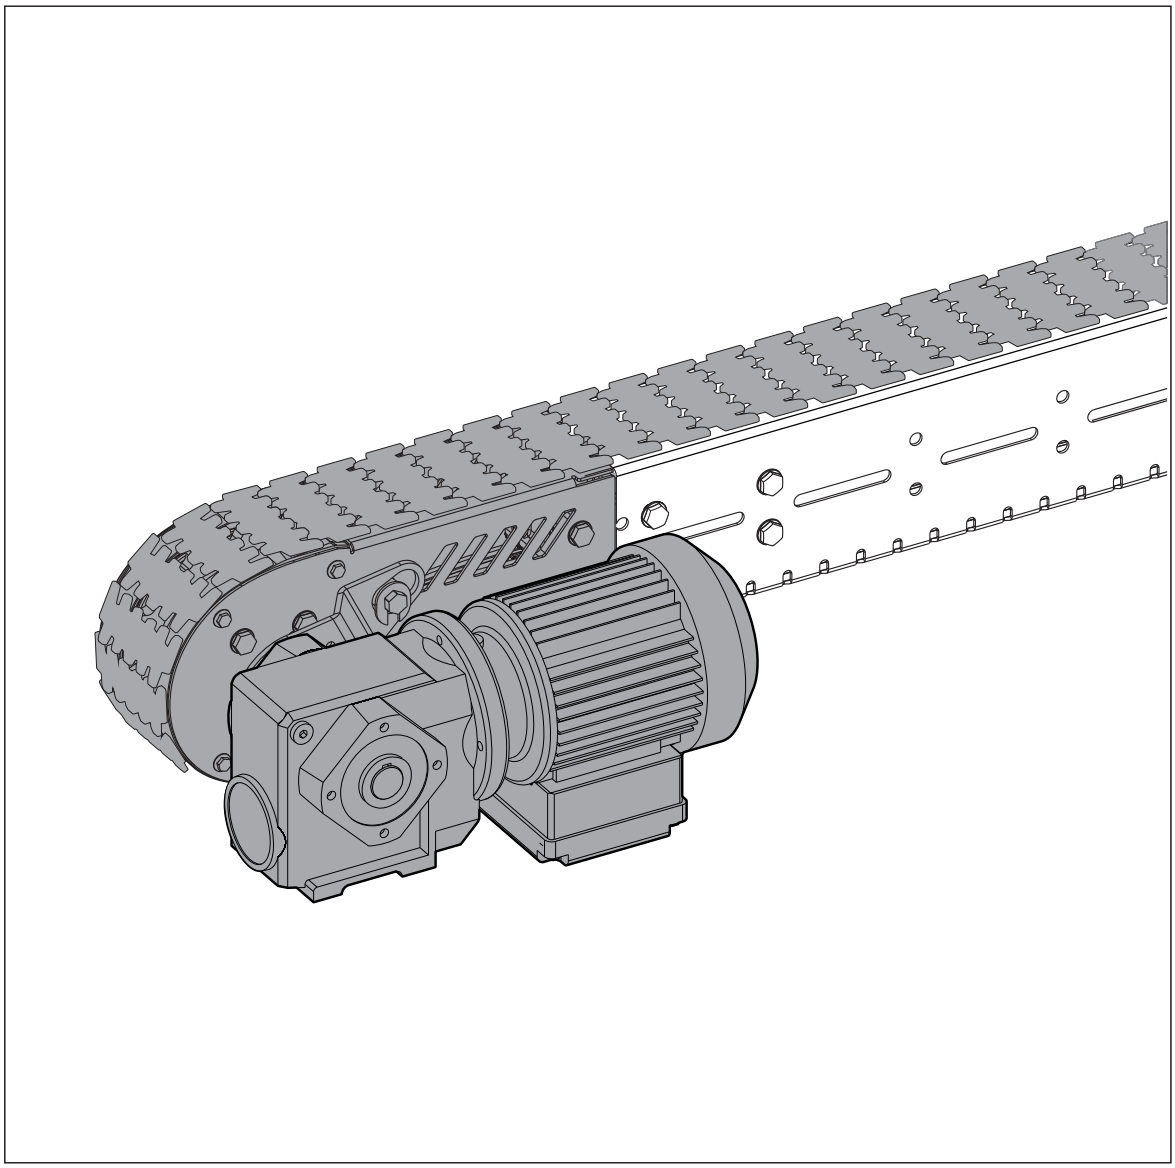


10 mm
13 mm




NOCO-Fluid
or similar




Snap ring plier




10 mm




1

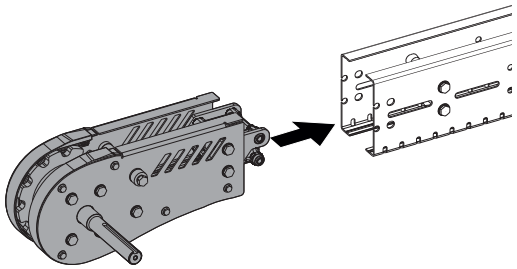


2

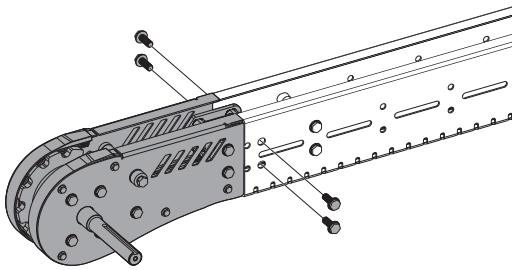


3

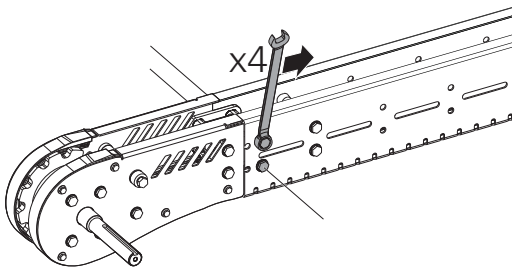


4

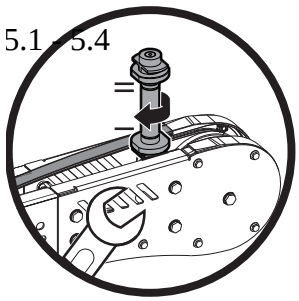


5

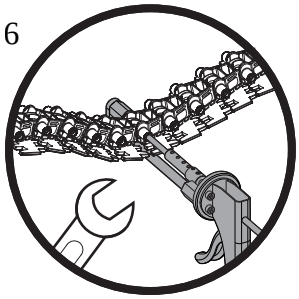


6

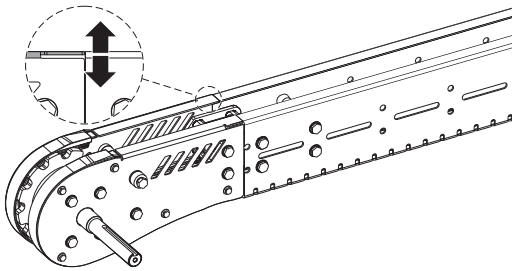


7

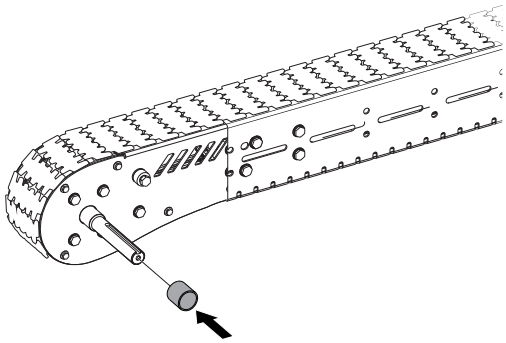


8

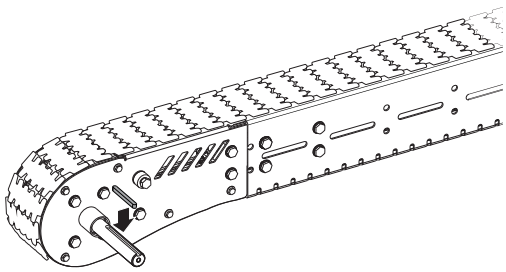


9

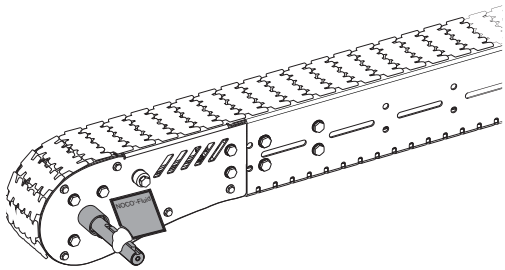


10

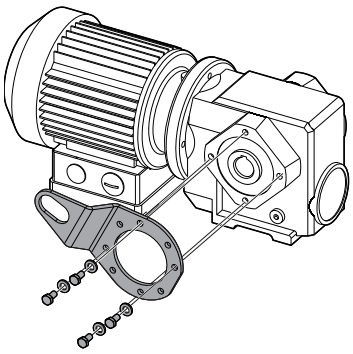


11

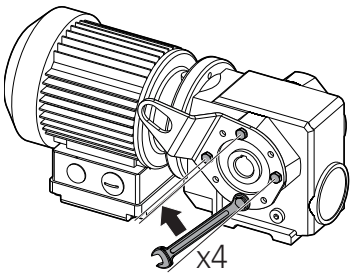


12

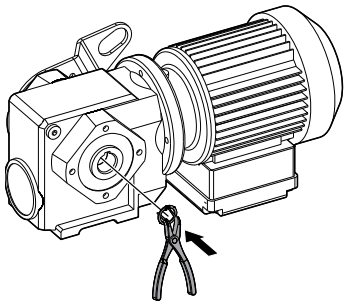


13

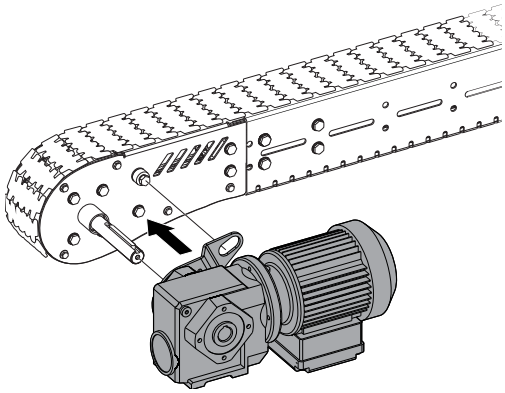


14

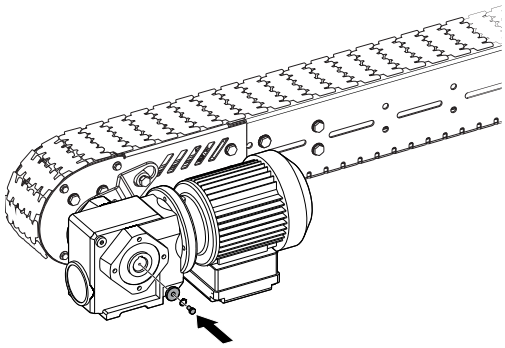


15

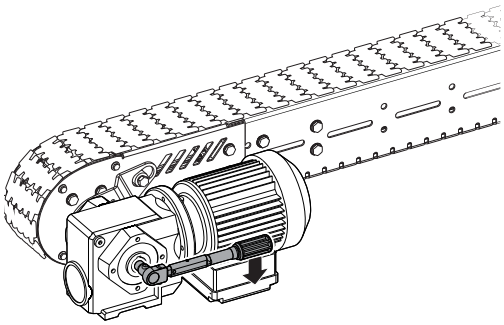


16

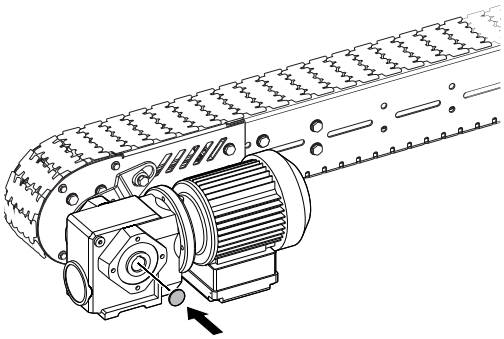


17

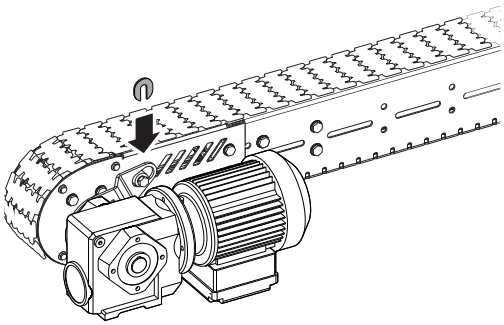

18

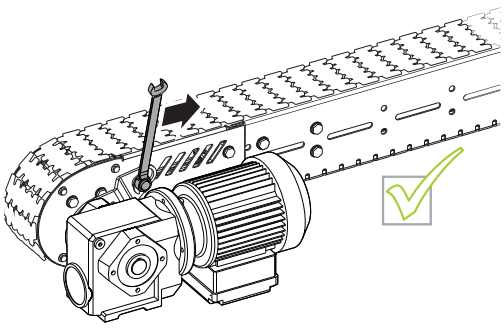


4.11 Bridge, 5115194/5115195

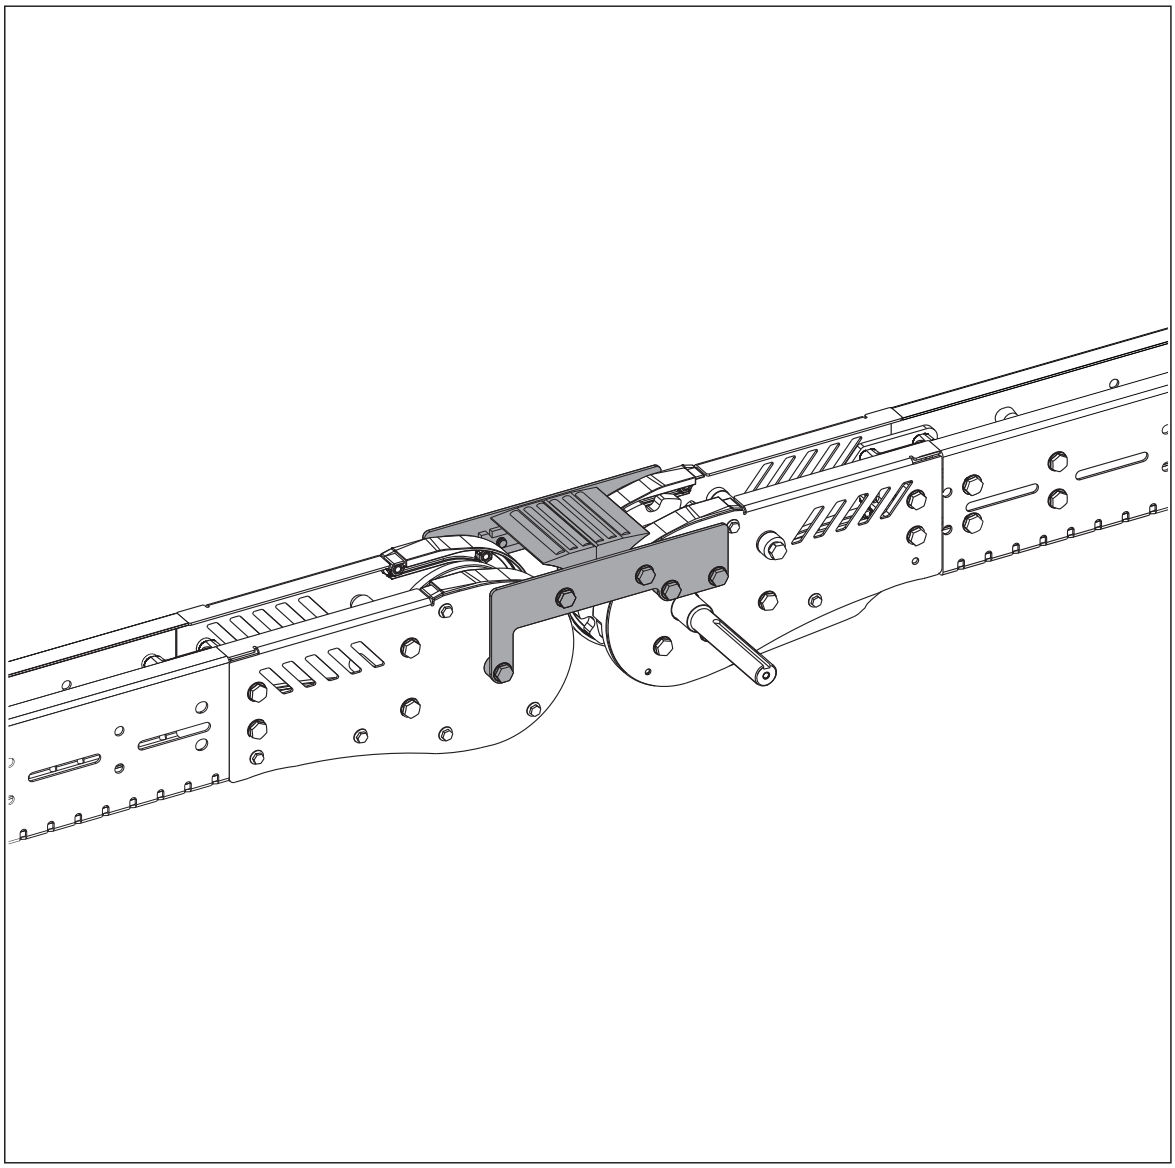





1

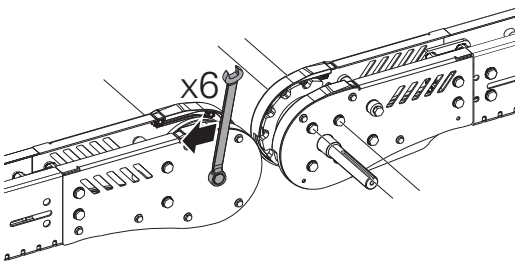


2

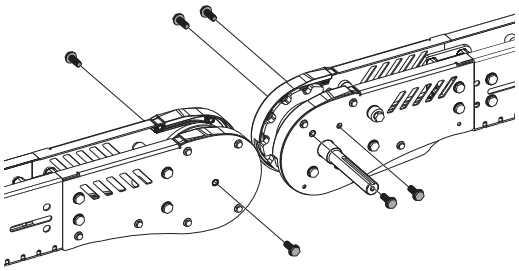


3

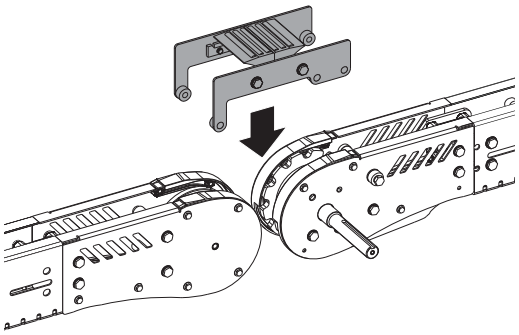


4

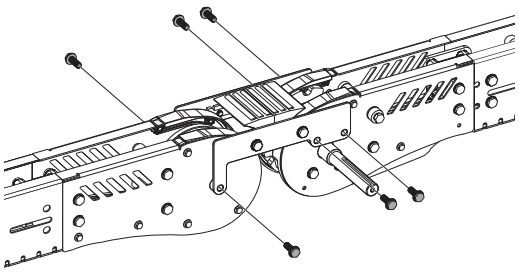


5

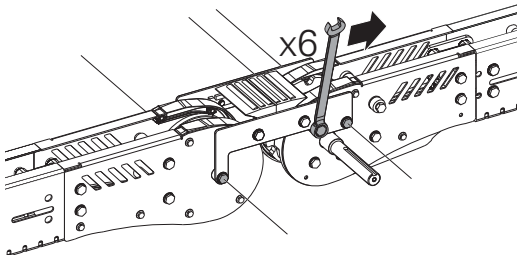


6

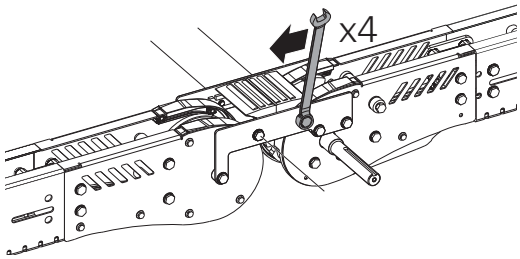


7

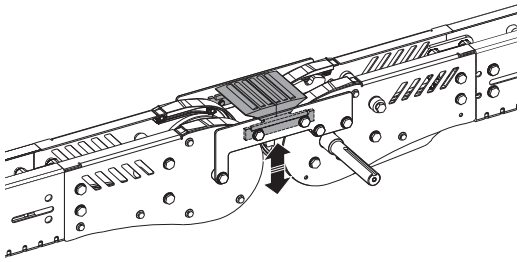



8

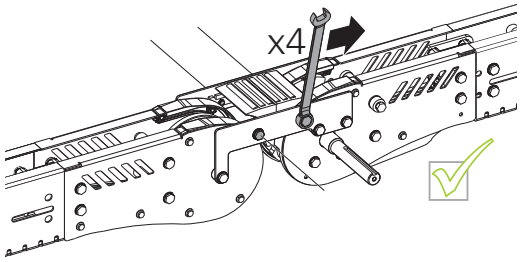


4.12 X-bend, XBCXX 85 D_

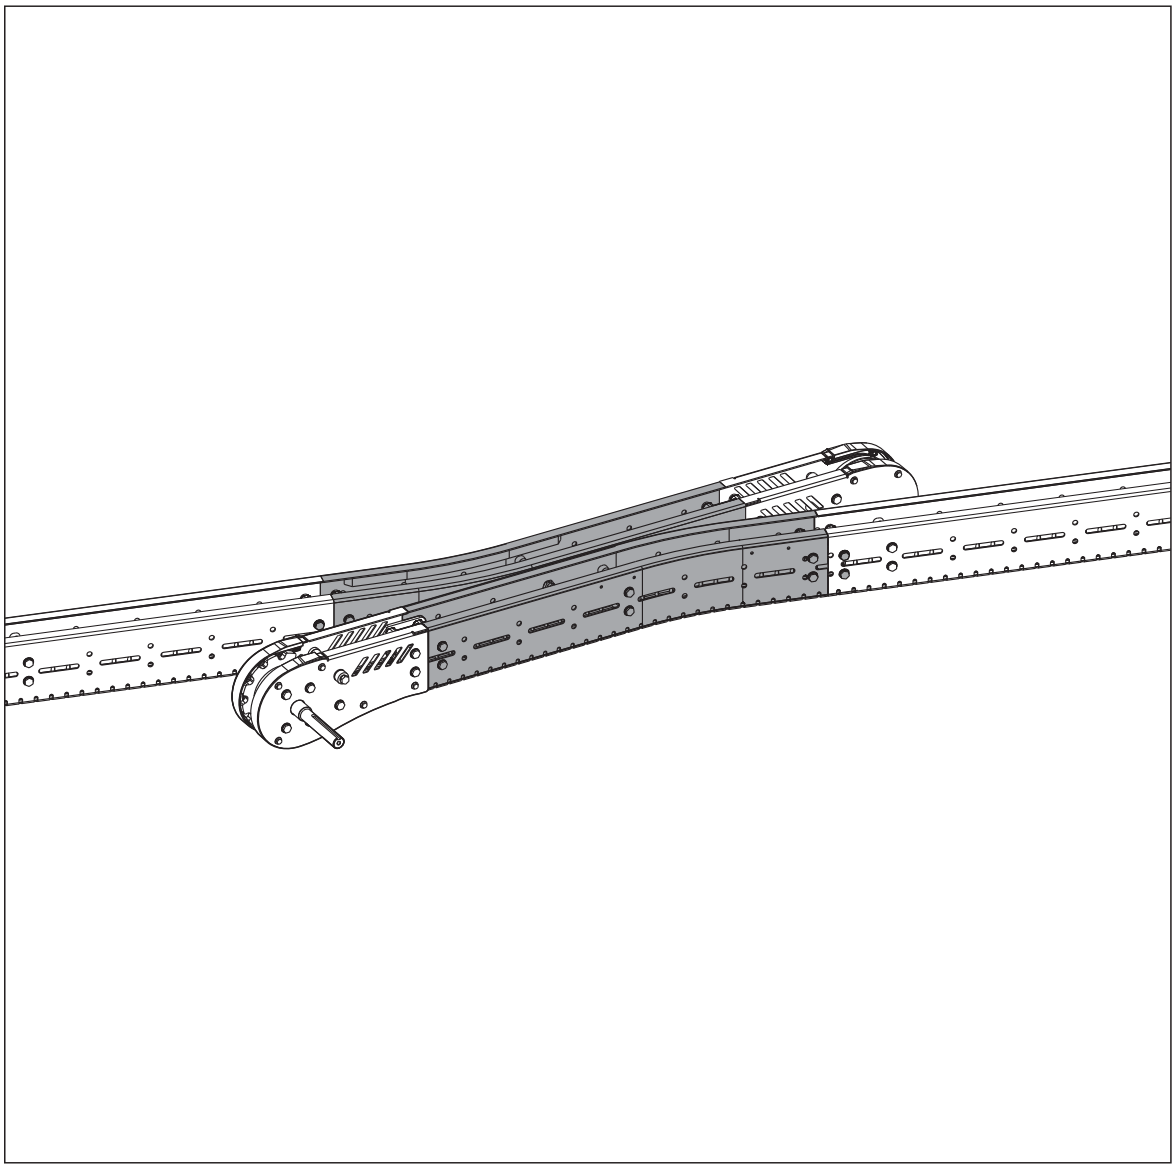


13 mm 			

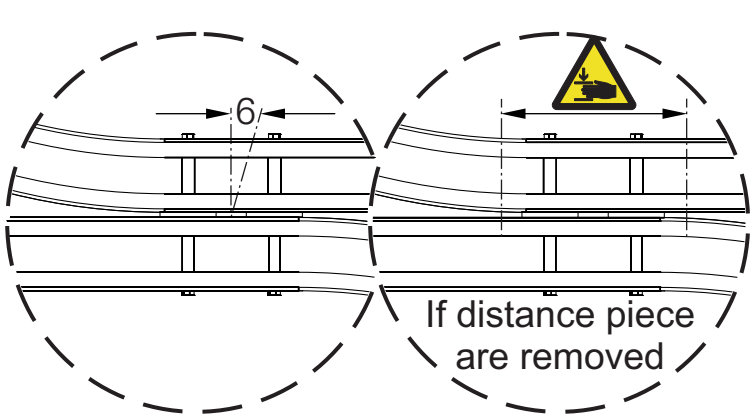


1

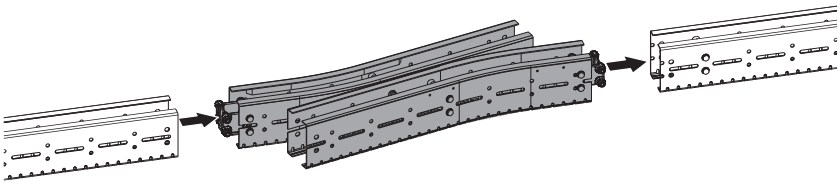


2

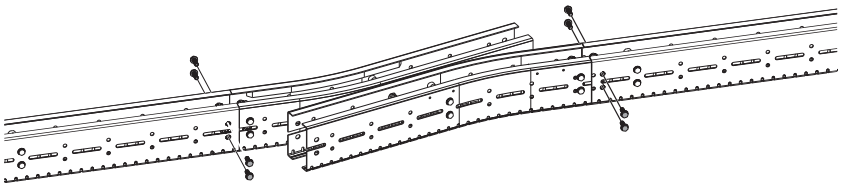


3

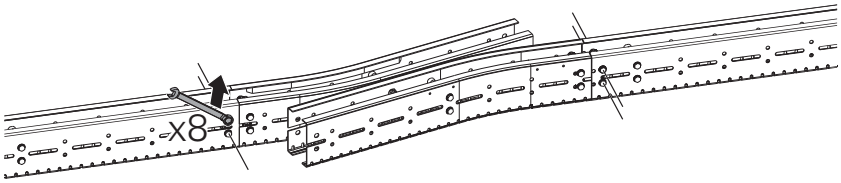


4

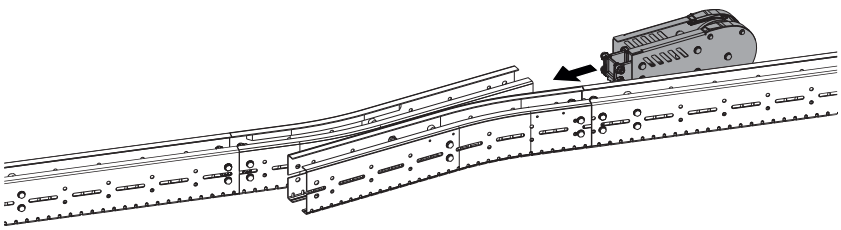


5

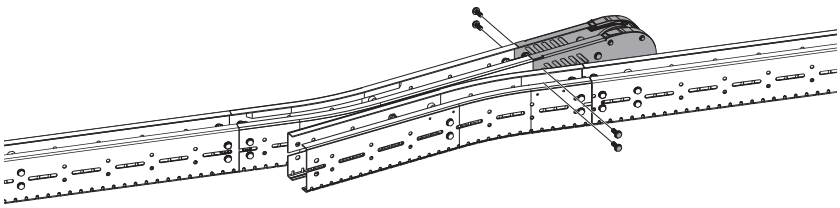


6

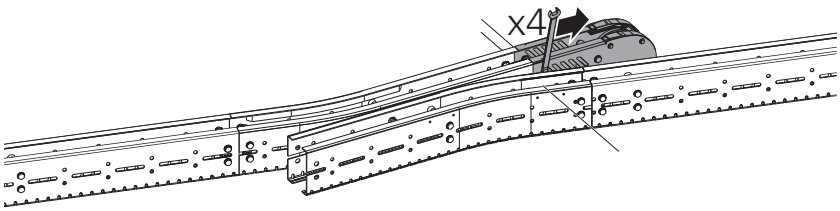


7

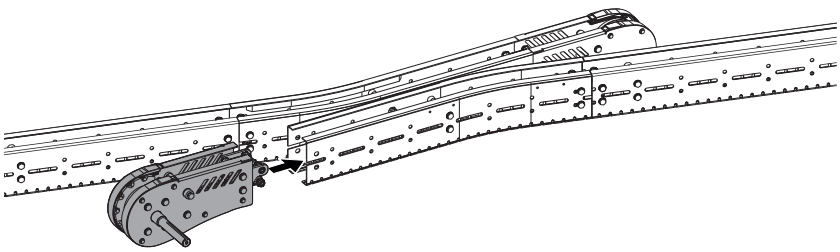

8

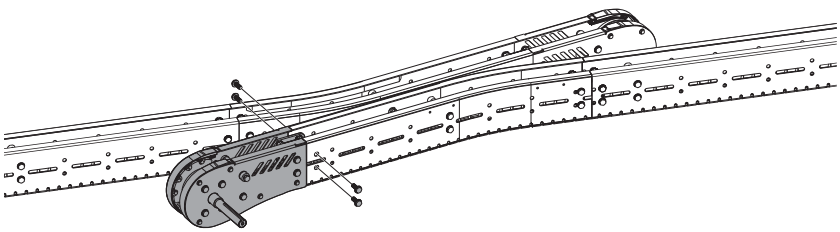


9

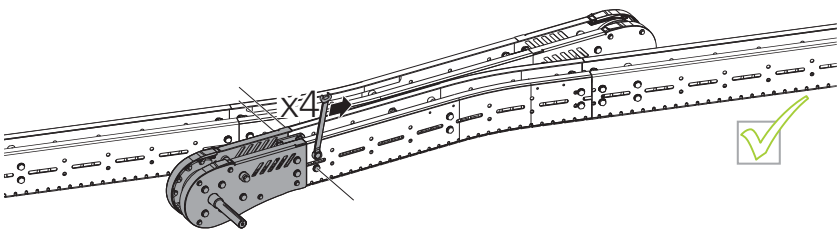


This page is intentionally left blank

4.13 Side transfer, XBCPX 85 _

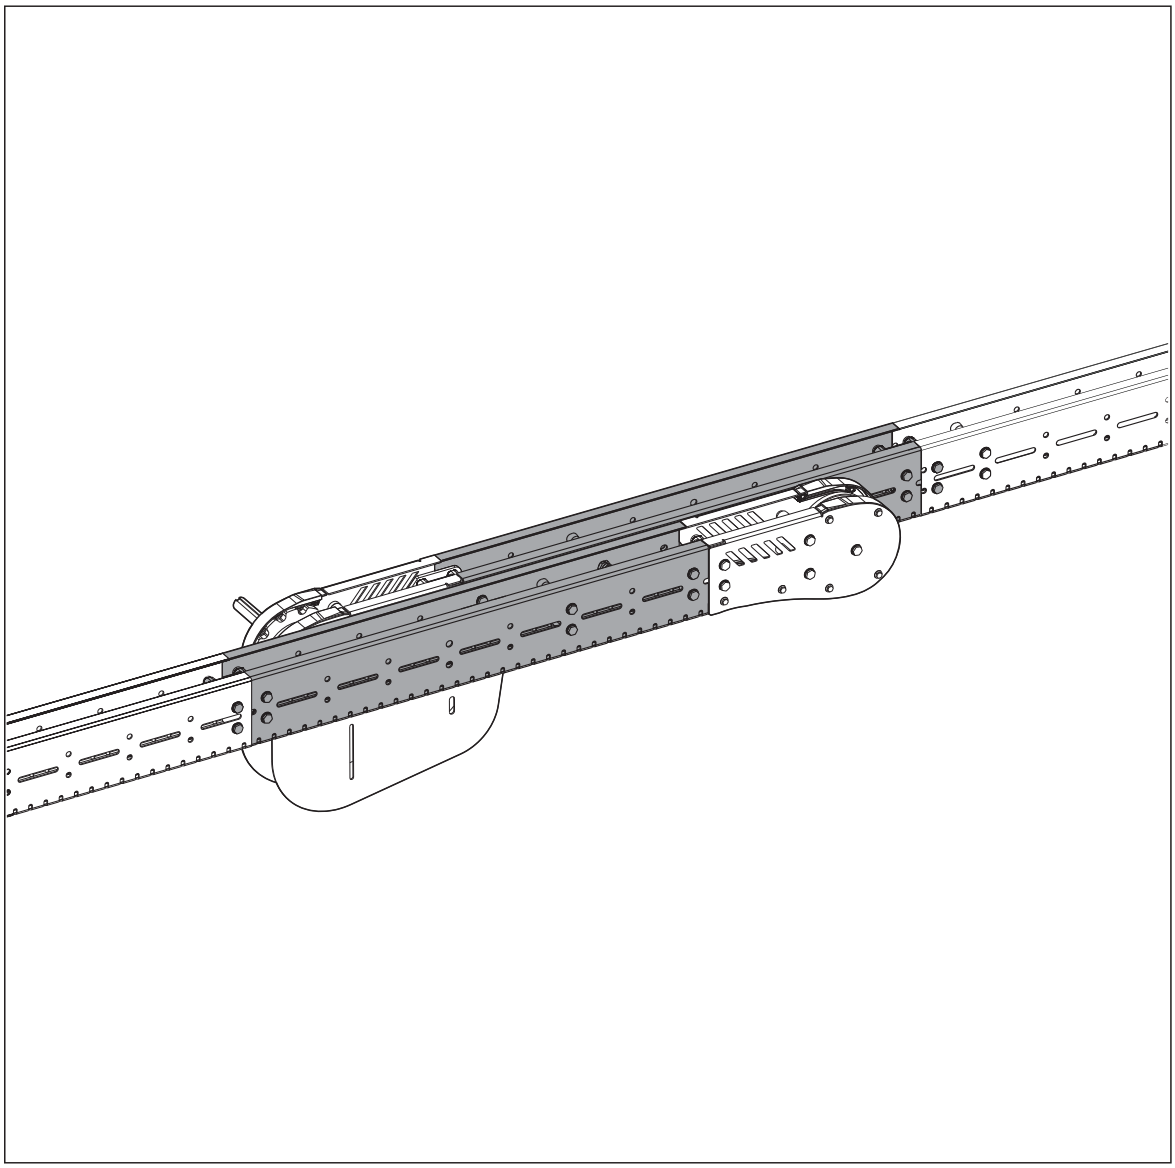





1

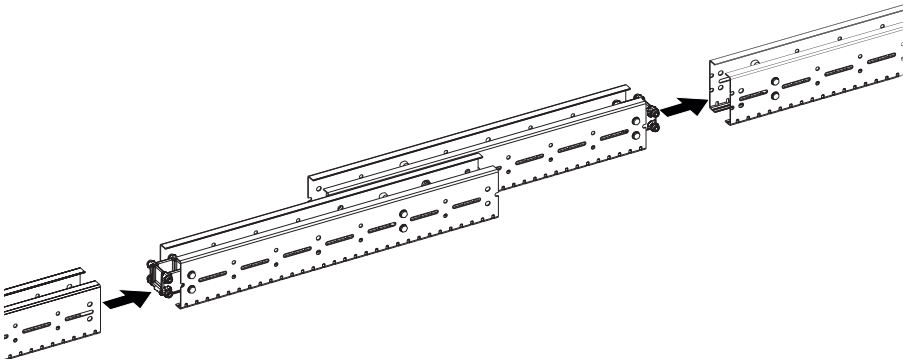



2

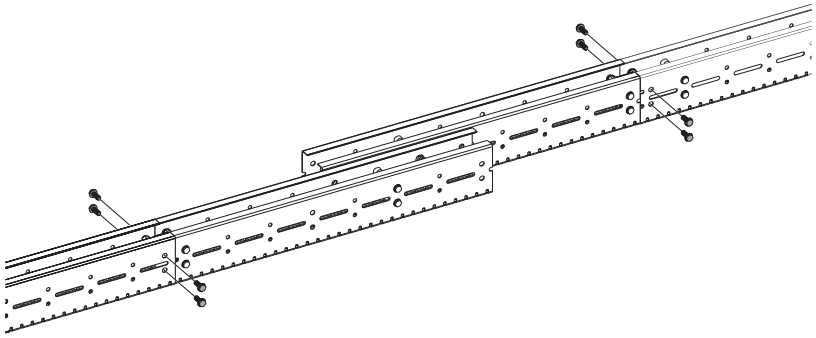


3

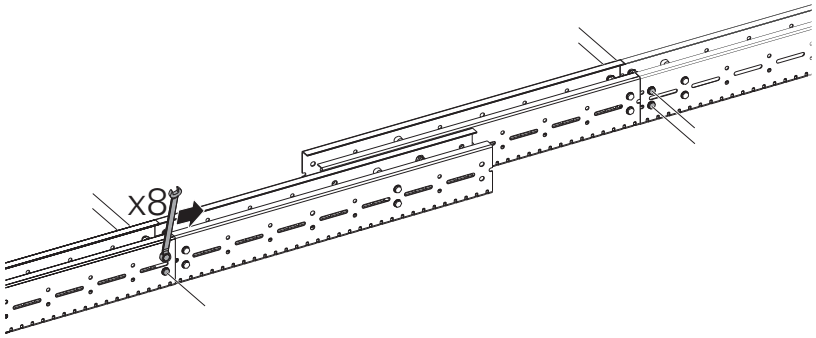
x8

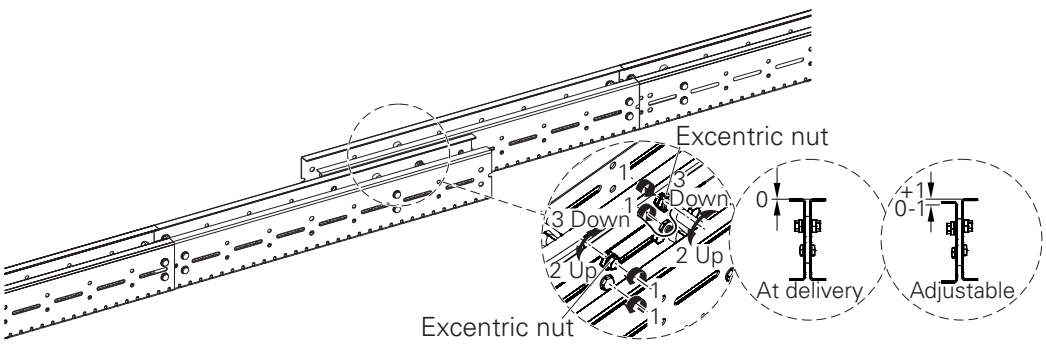

Excentric nut
3 Down
2 Up
Excentric nut
0
At delivery
+1
0-1
Adjustable

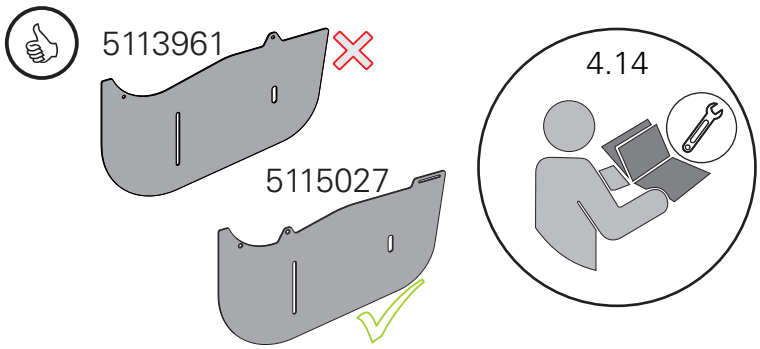


4

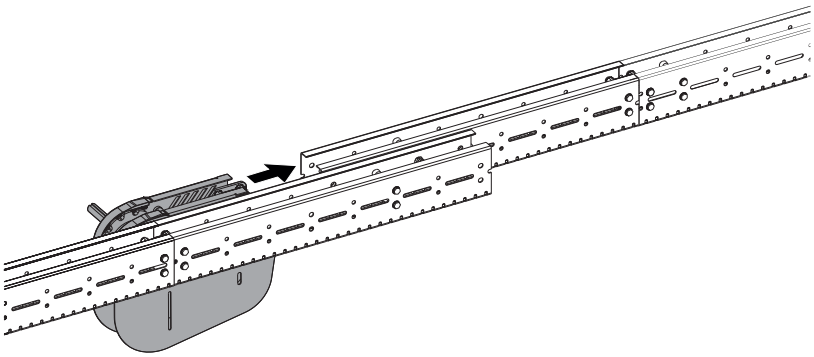


5

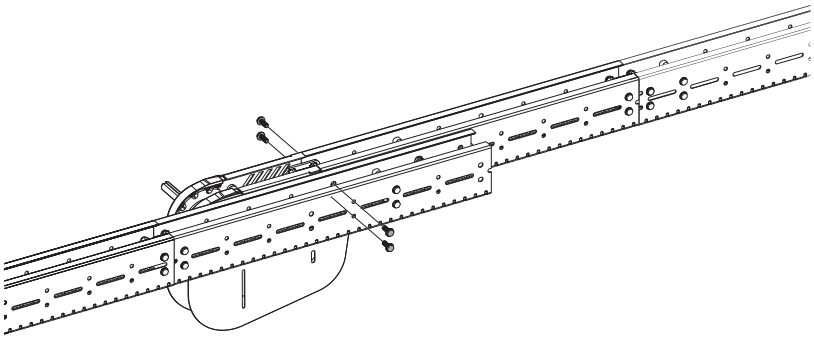


6

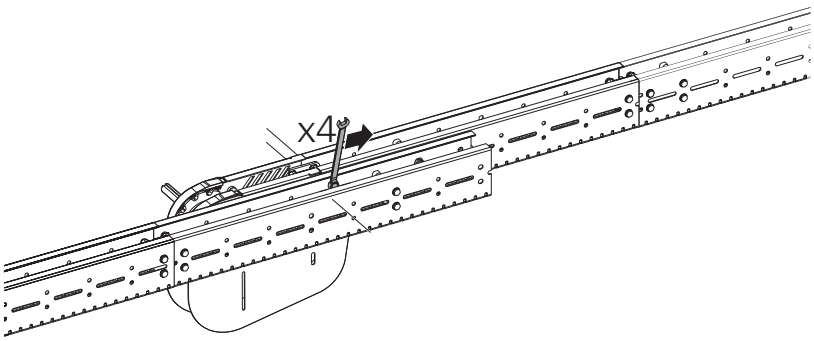


7

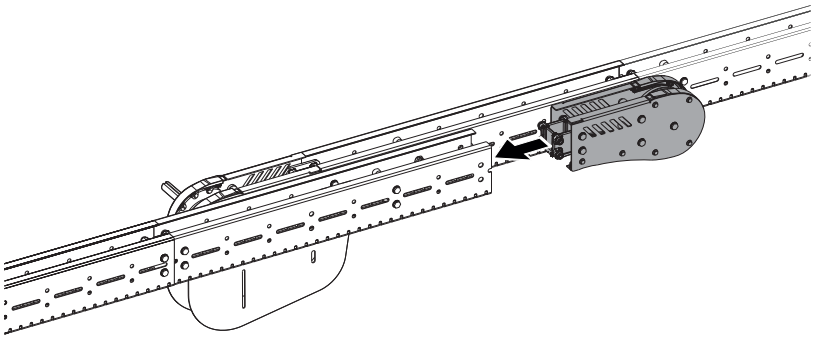


8

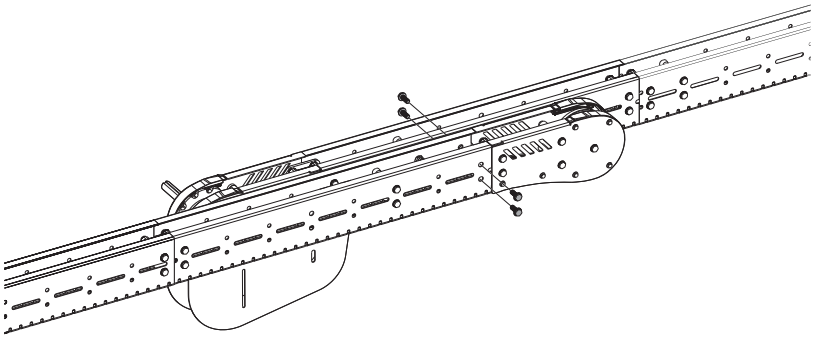


9

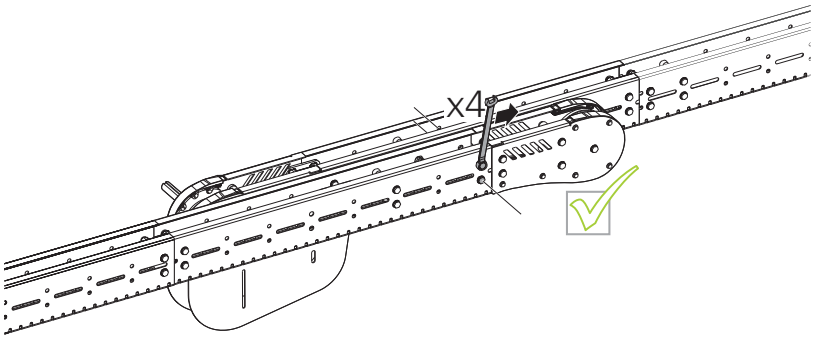


4.14 Slack protection kit, 5115027

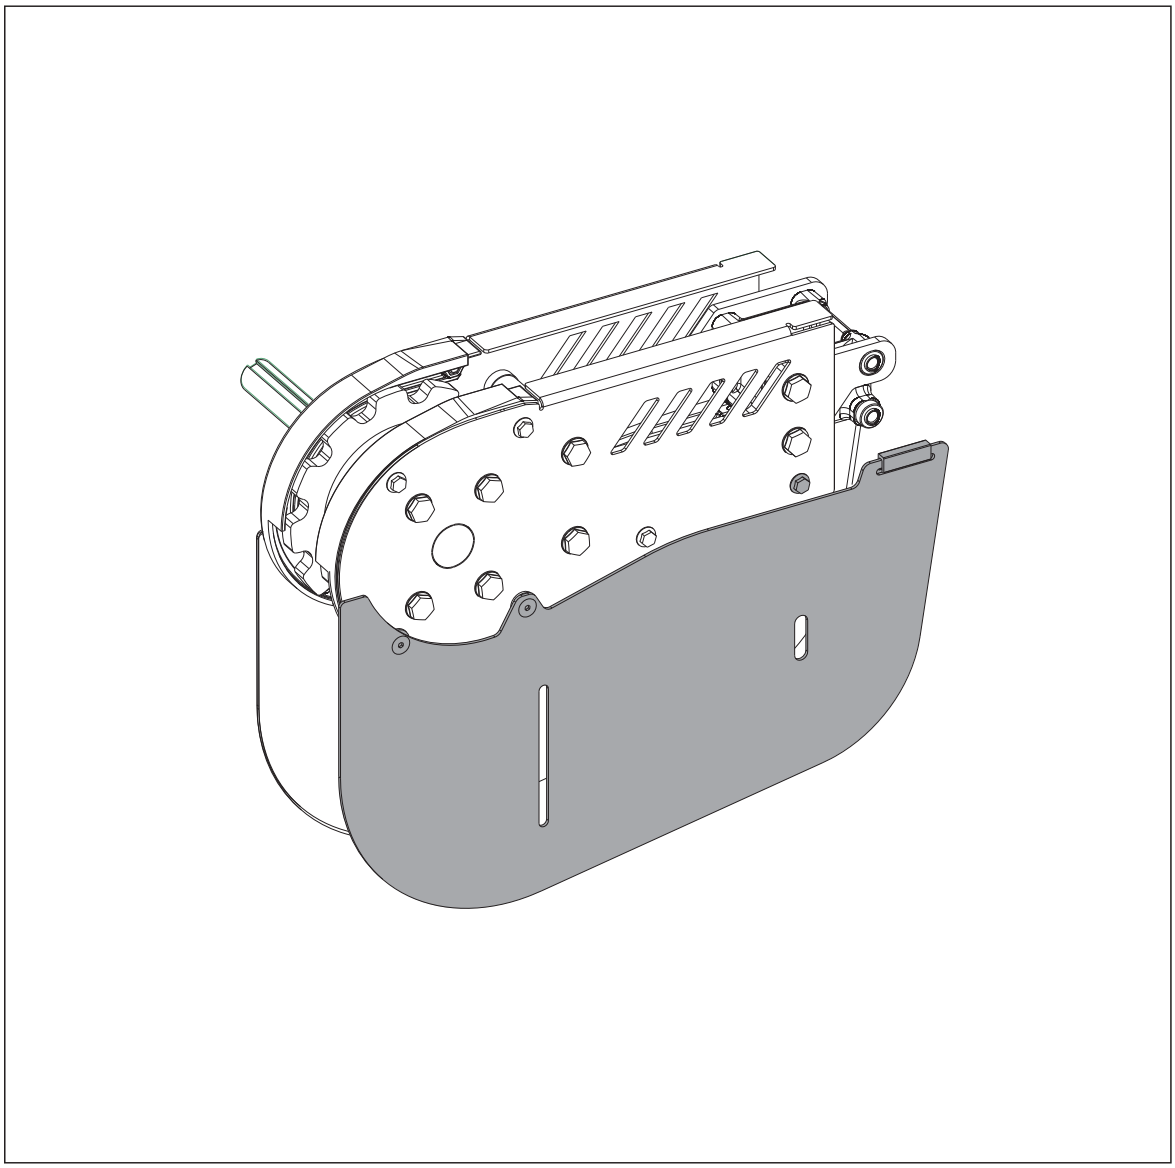




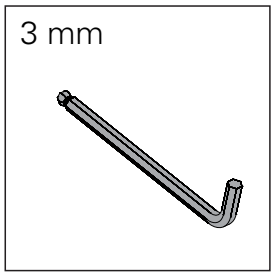


1

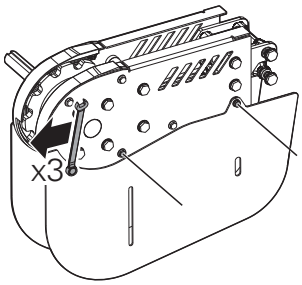


2

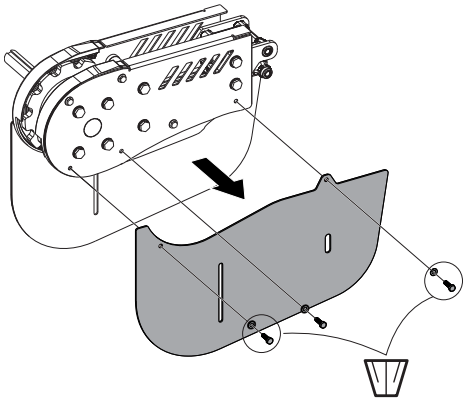


3

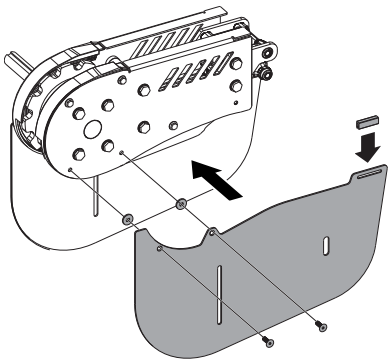


4

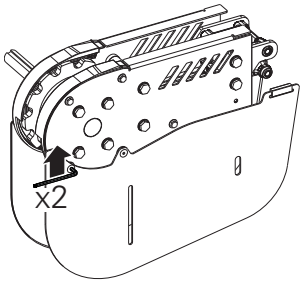


5

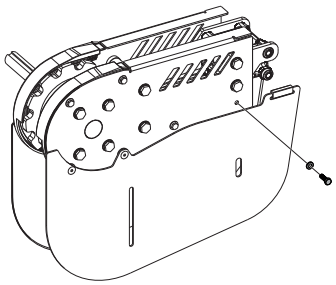

6

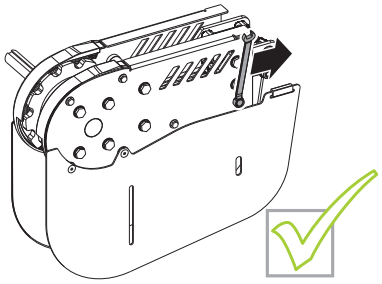


4.15 Wheel bend, XBBHX A85

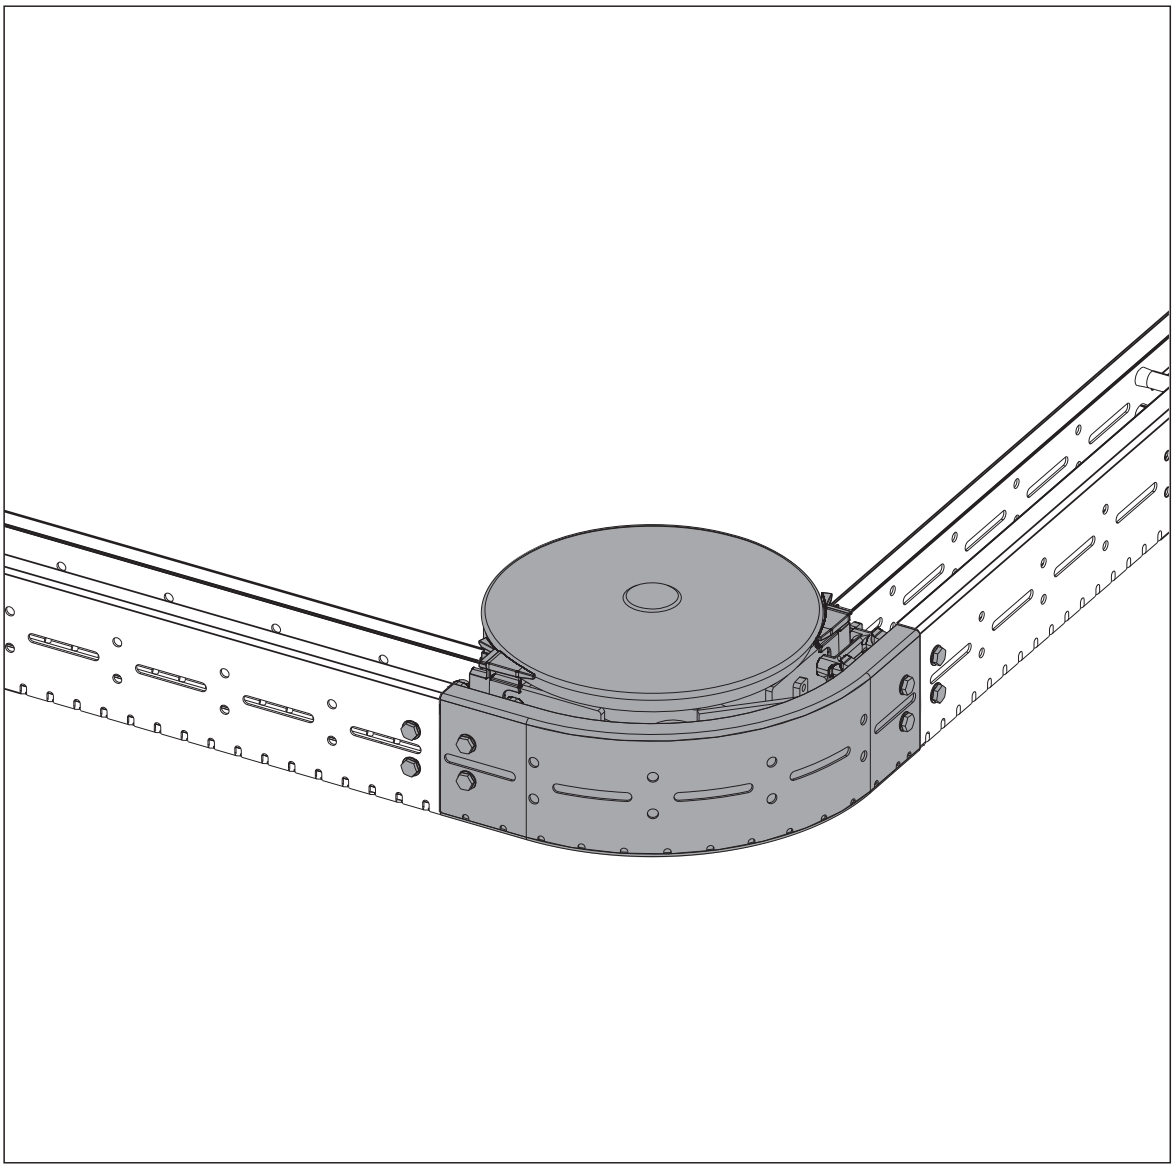





1

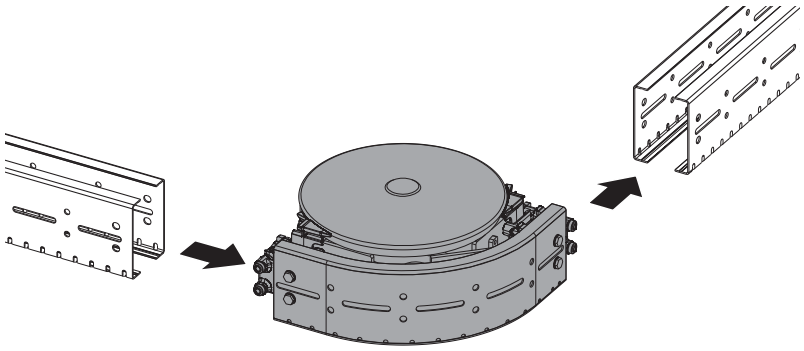


2

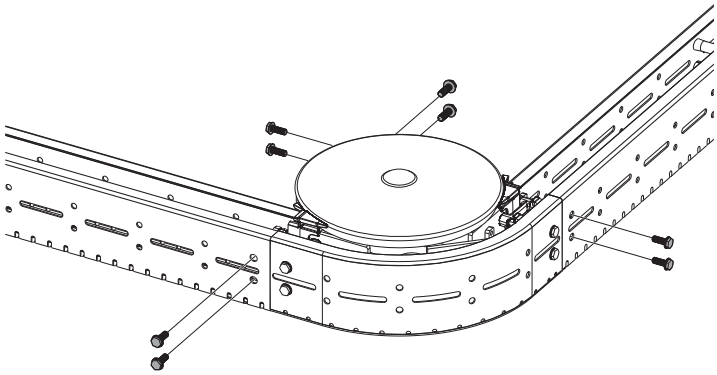

3

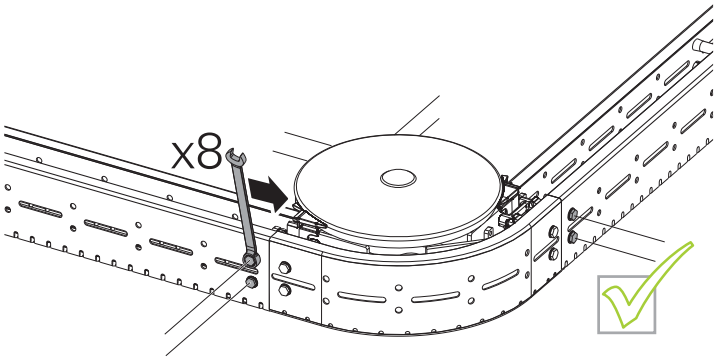


4.16 Vertical bend, XBBVX A85

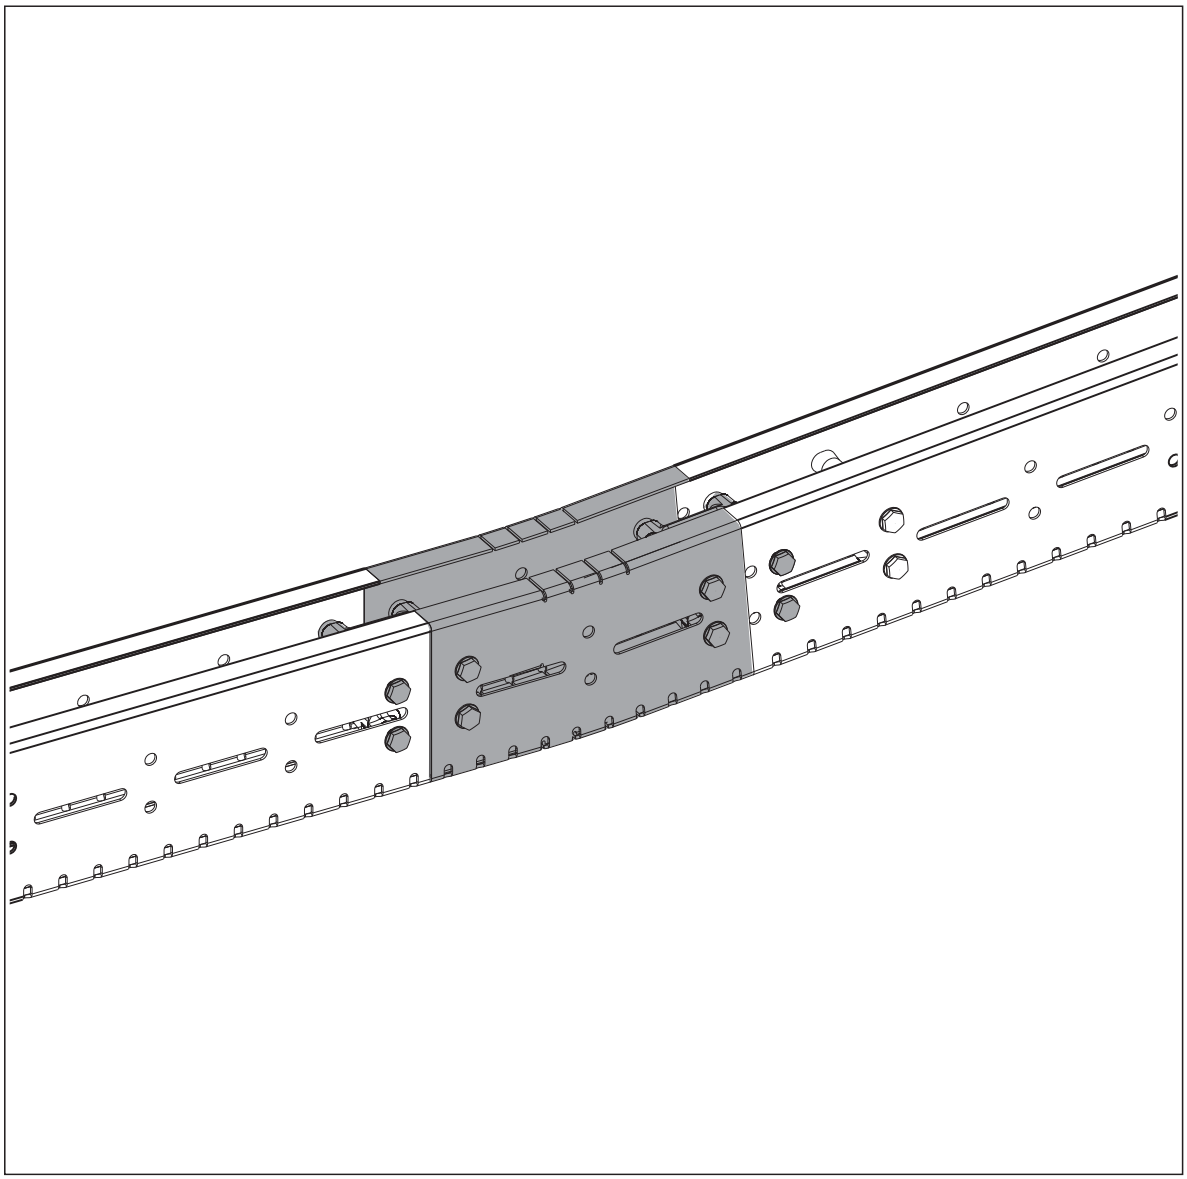





1a

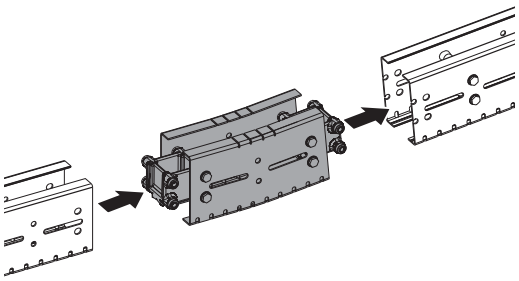


1b

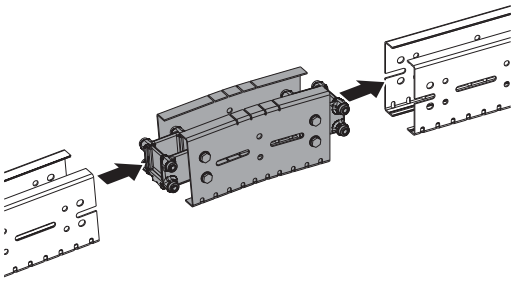


2a

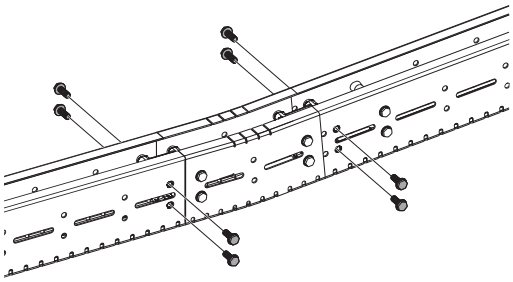


2b

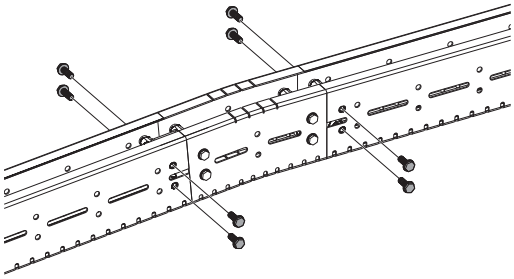


3a

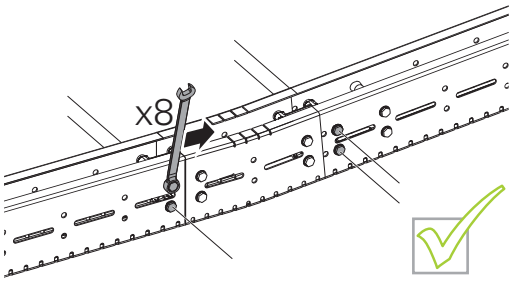

3b

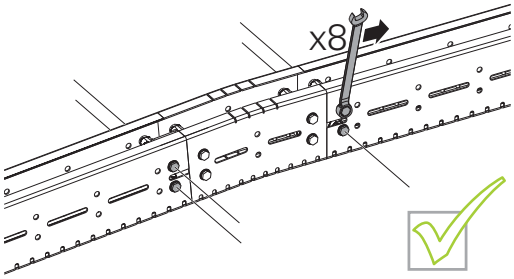


4.17 Plain bend, XBBPX A85

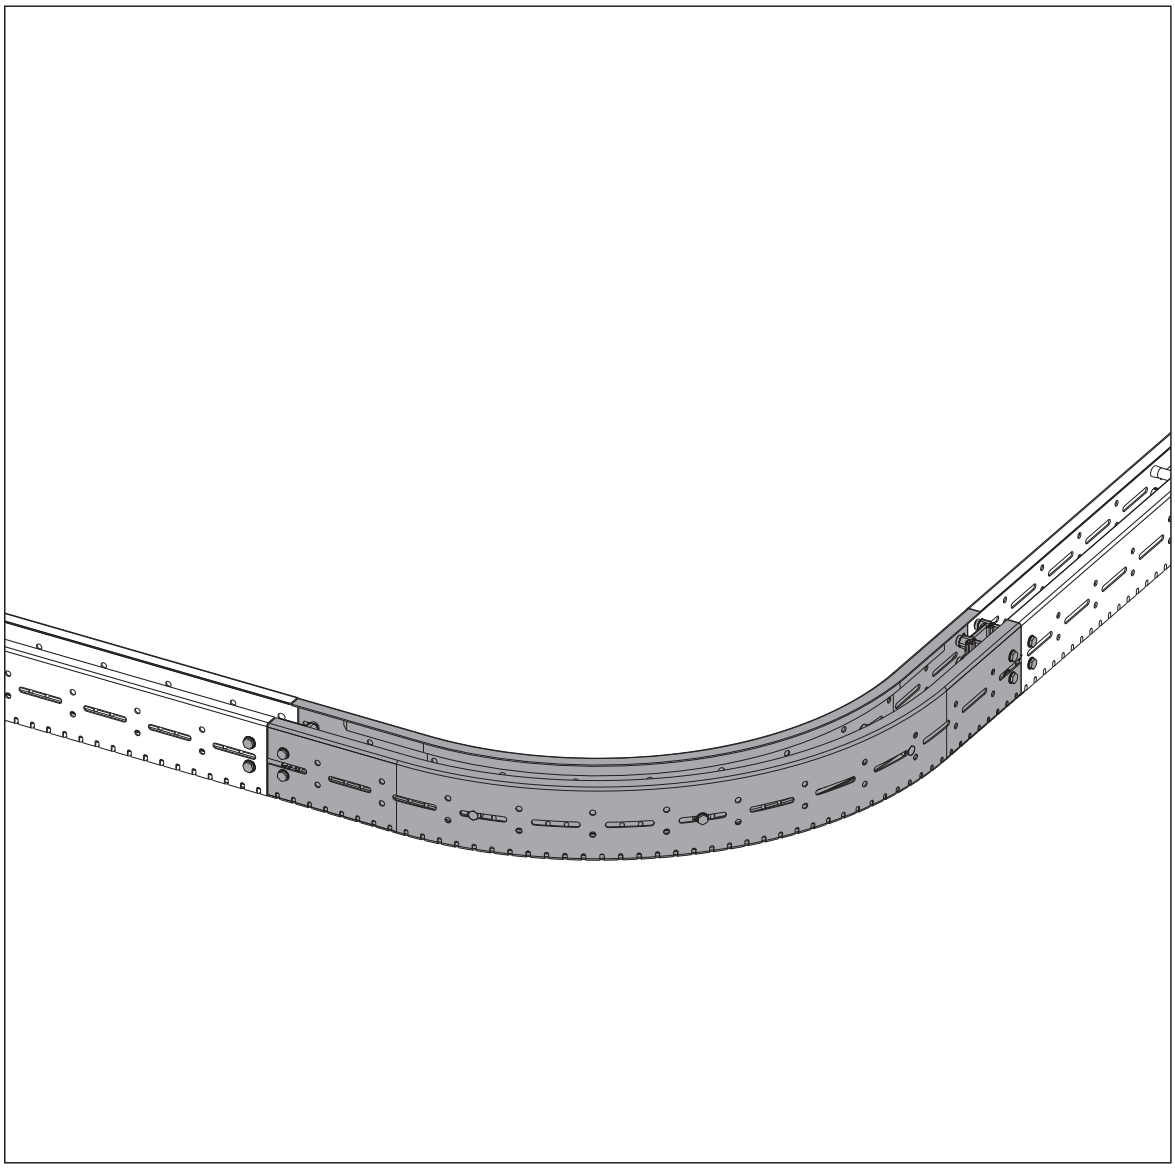




1

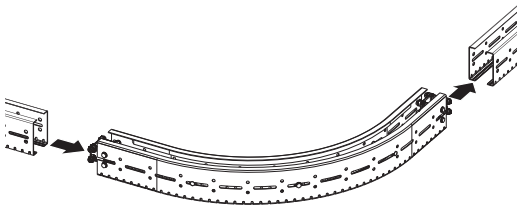

2

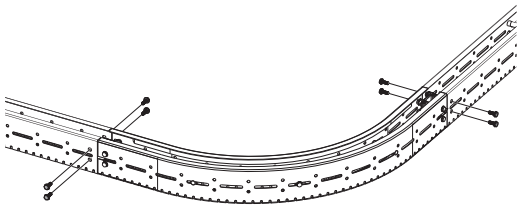

3






5 Assembly Slide Rail

5.1 Mounting slide rail


Slide rails are available in two profile designs:

1. Narrow

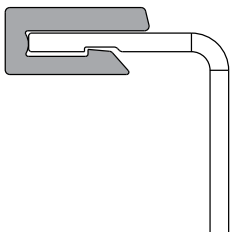


2. Wide

Not suitable in bends

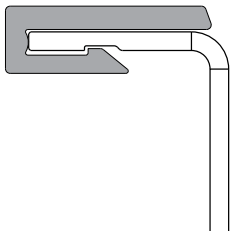


The guides are used as shown below:

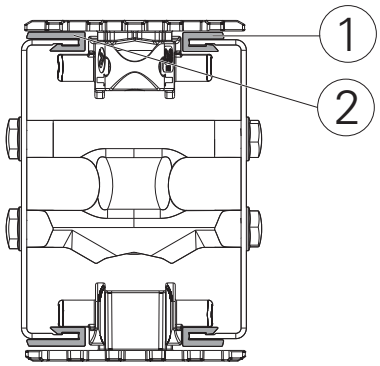


Note: It is recommended to avoid splicing as much as possible


This page is intentionally left blank

5.2 Mounting slide rails

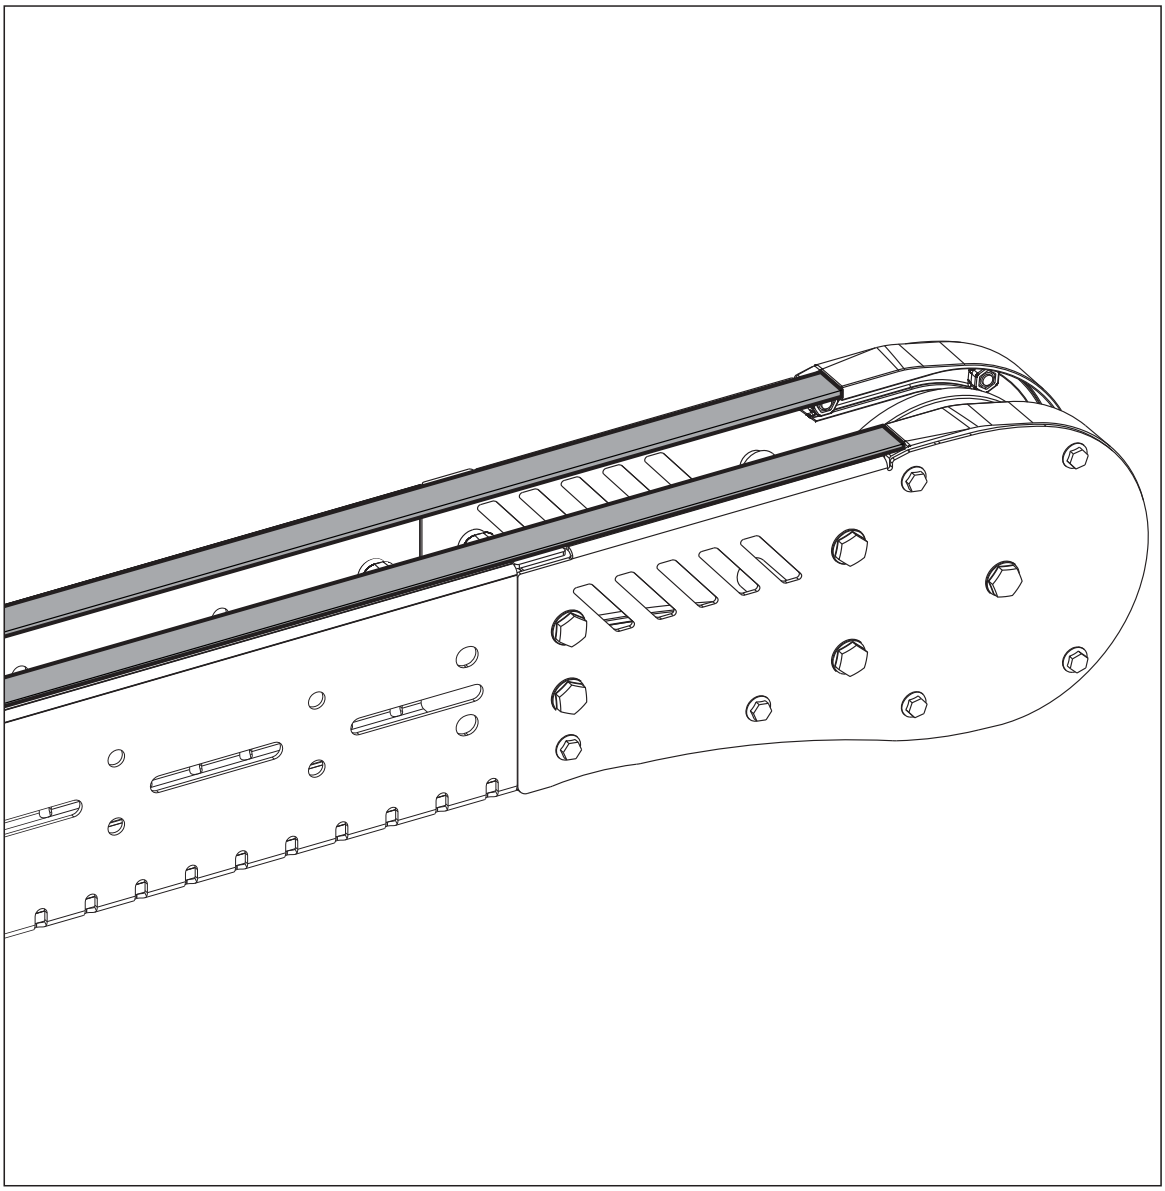


Mounting tool			
			


1

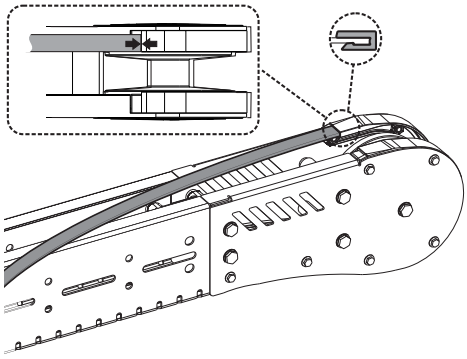


2

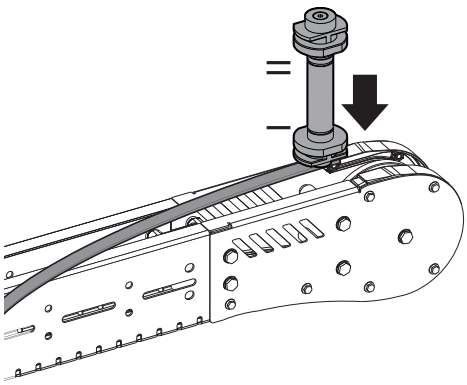


3

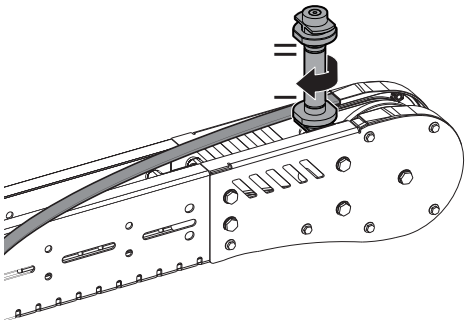


4

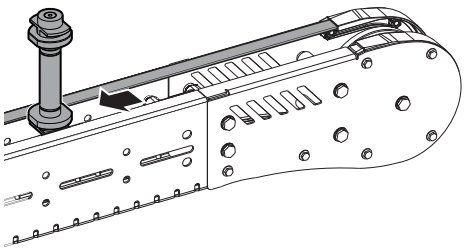


5

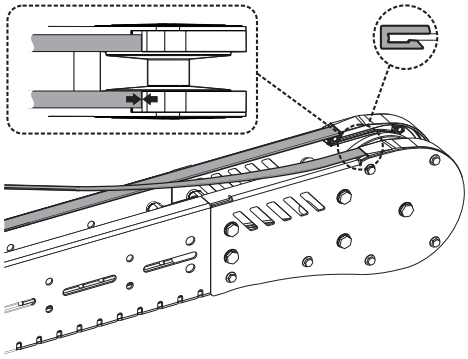


6

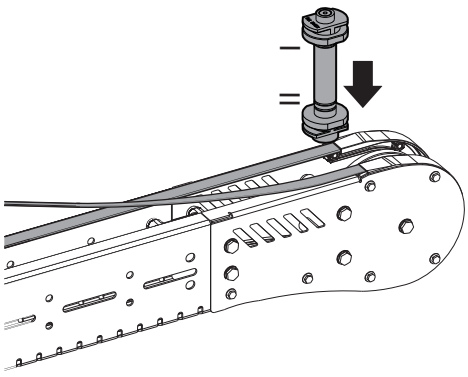


7

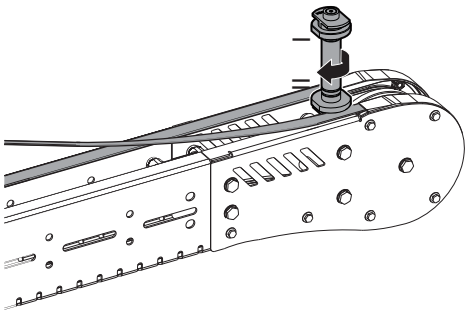


8

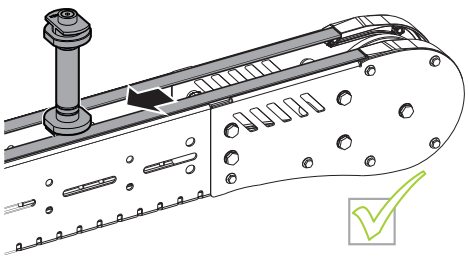


5.3 Joining slide rail ends

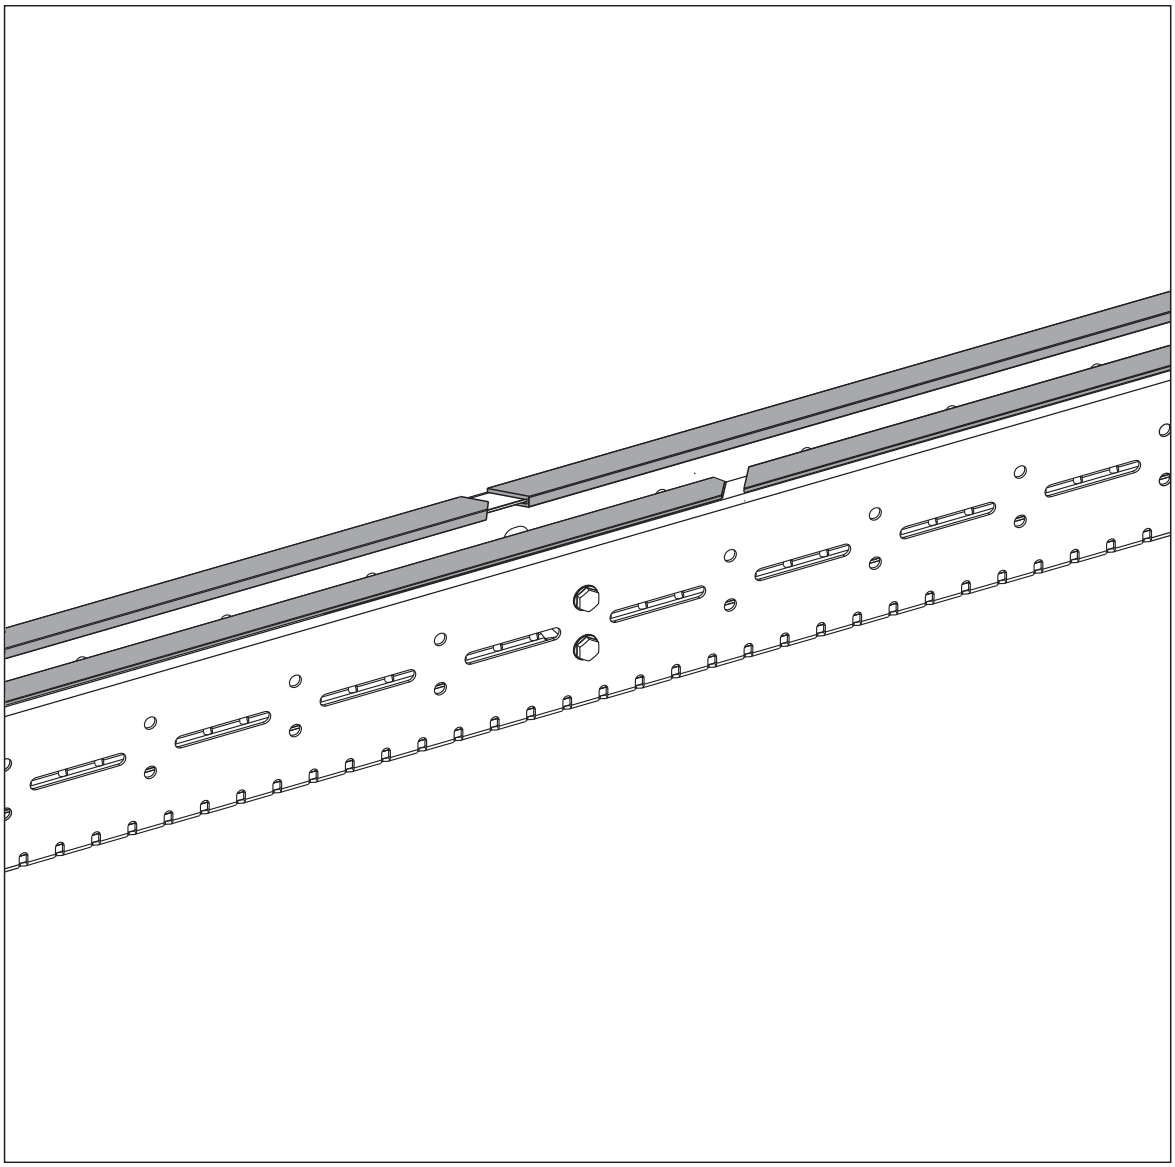


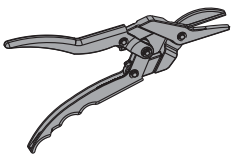Cutting Pliers			
			


1

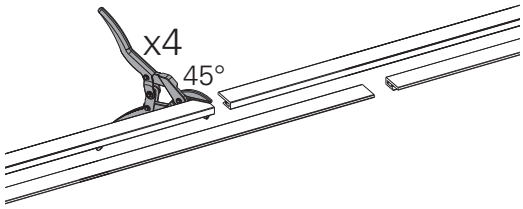


2

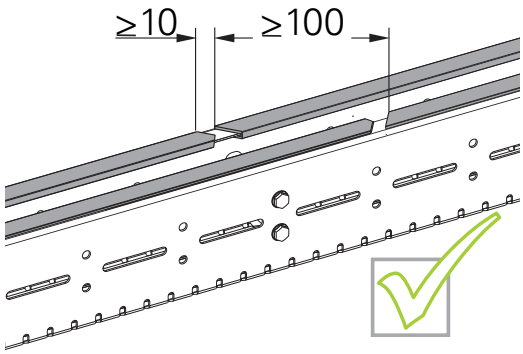




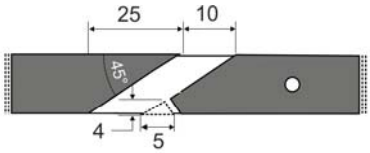


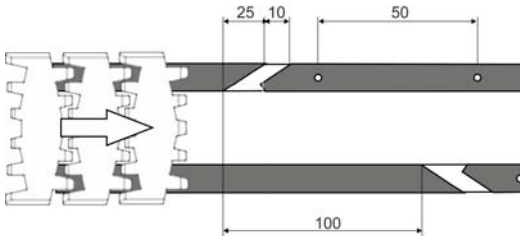

5.4 Fixing slide rails

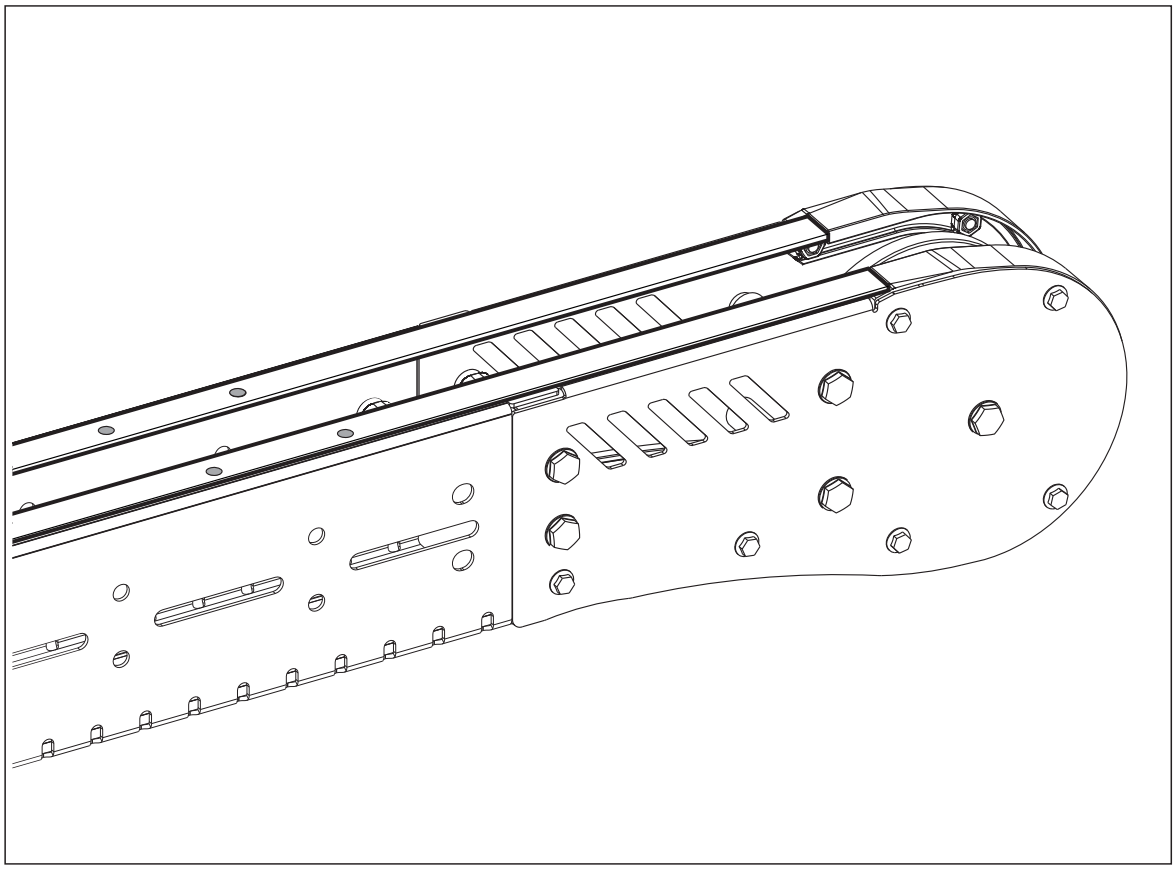


Drill fixture




3920500

4,2 mm

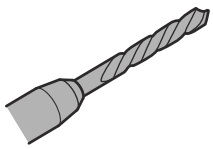

Counter sinker 4,2 mm




Stainless steel rivets




XLAHX 4x7

Rivet crimping clamp




3923005


1

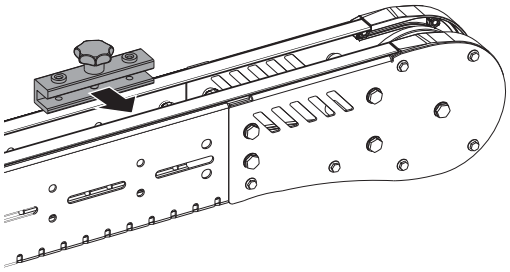


2

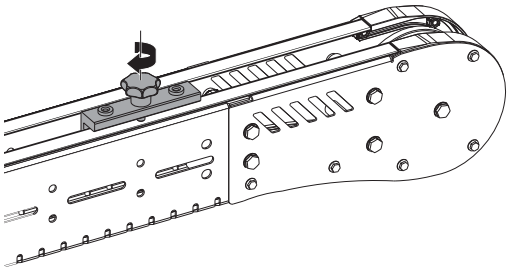


3

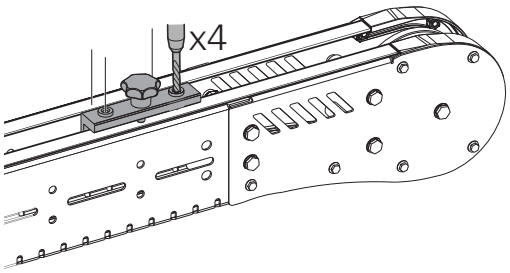


4

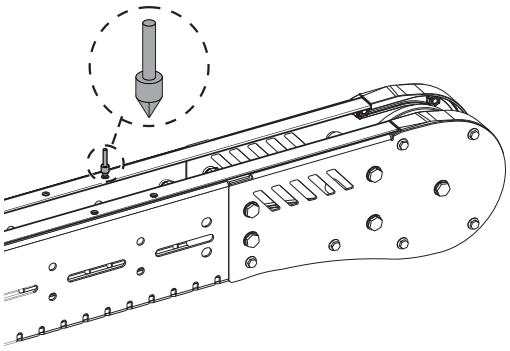


5

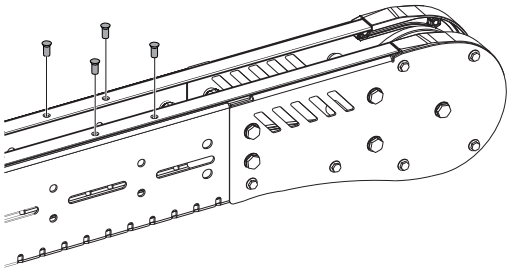


6

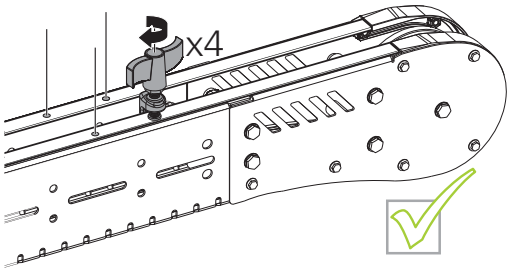



5.5 Changing support rail for plain bends

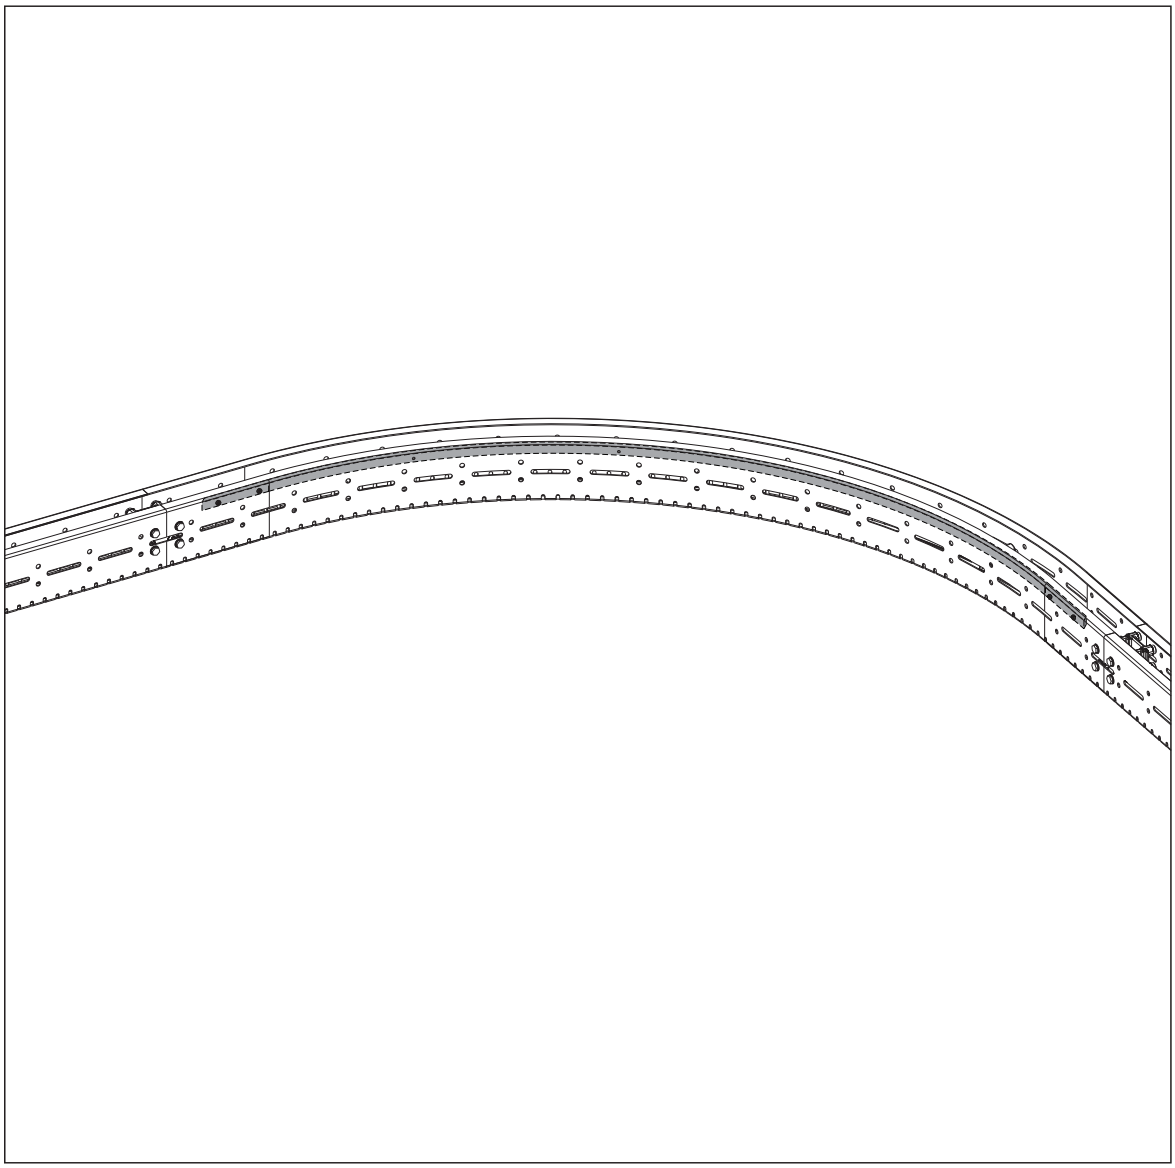




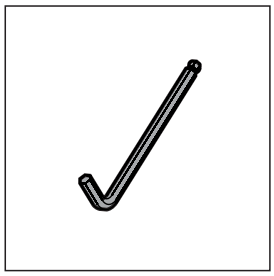







1

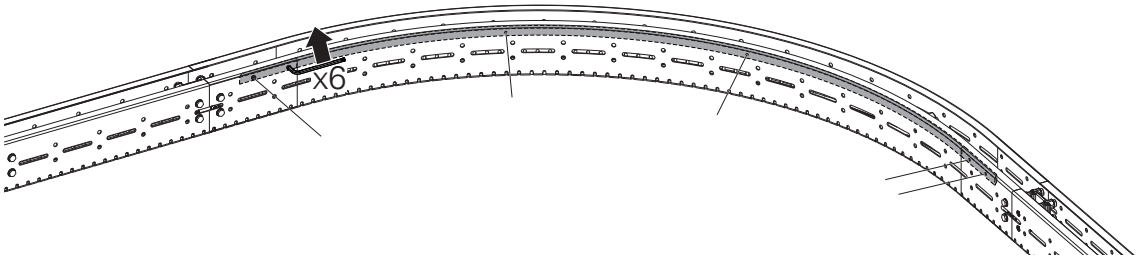


2

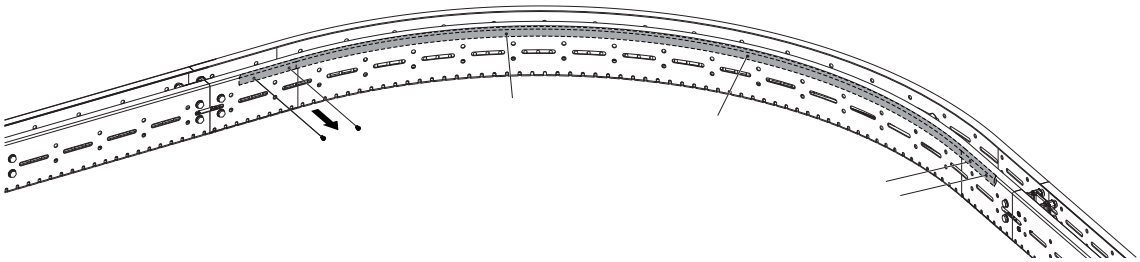


3

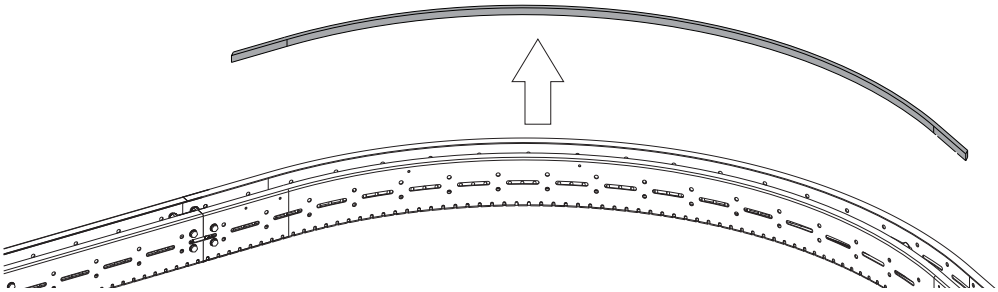


4

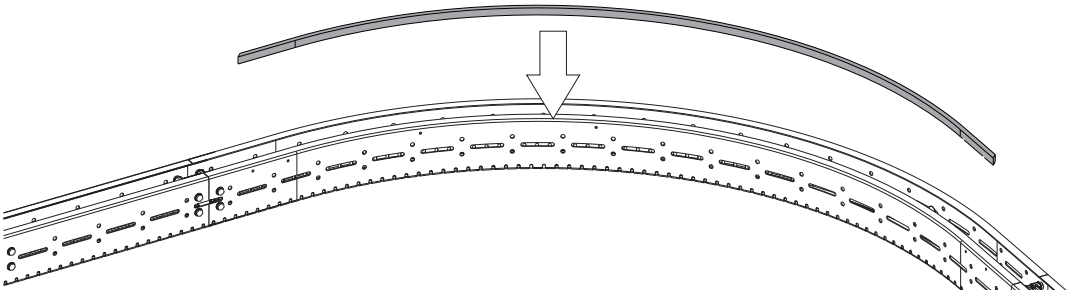

5

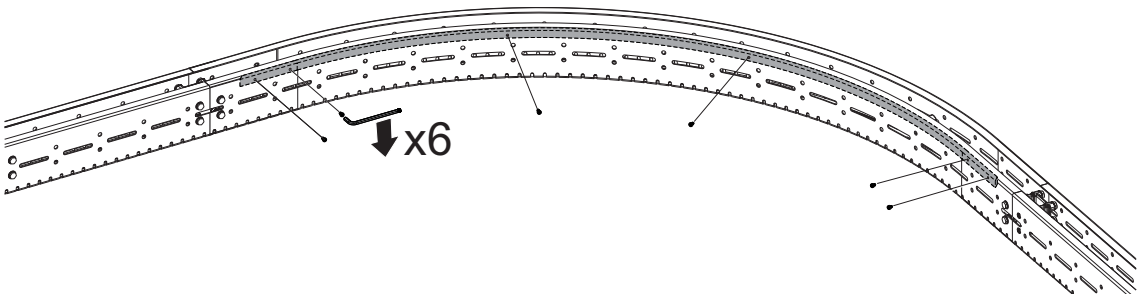


6


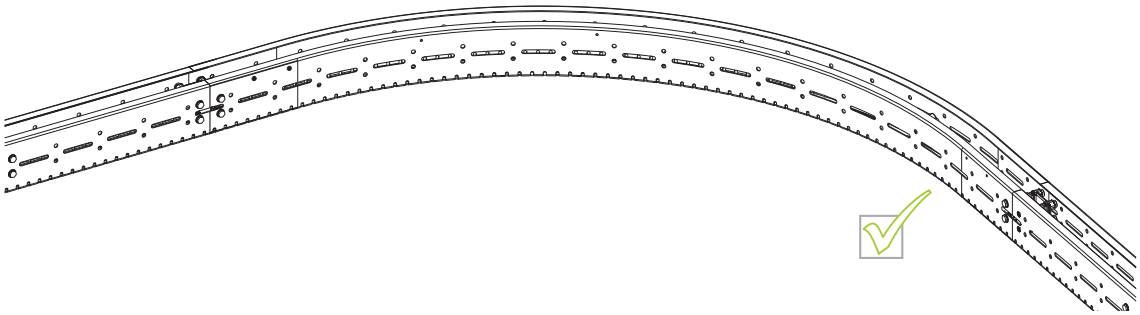


This page is intentionally left blank


6 Mounting Conveyor Chain

6.1 Mounting chain using a beam section

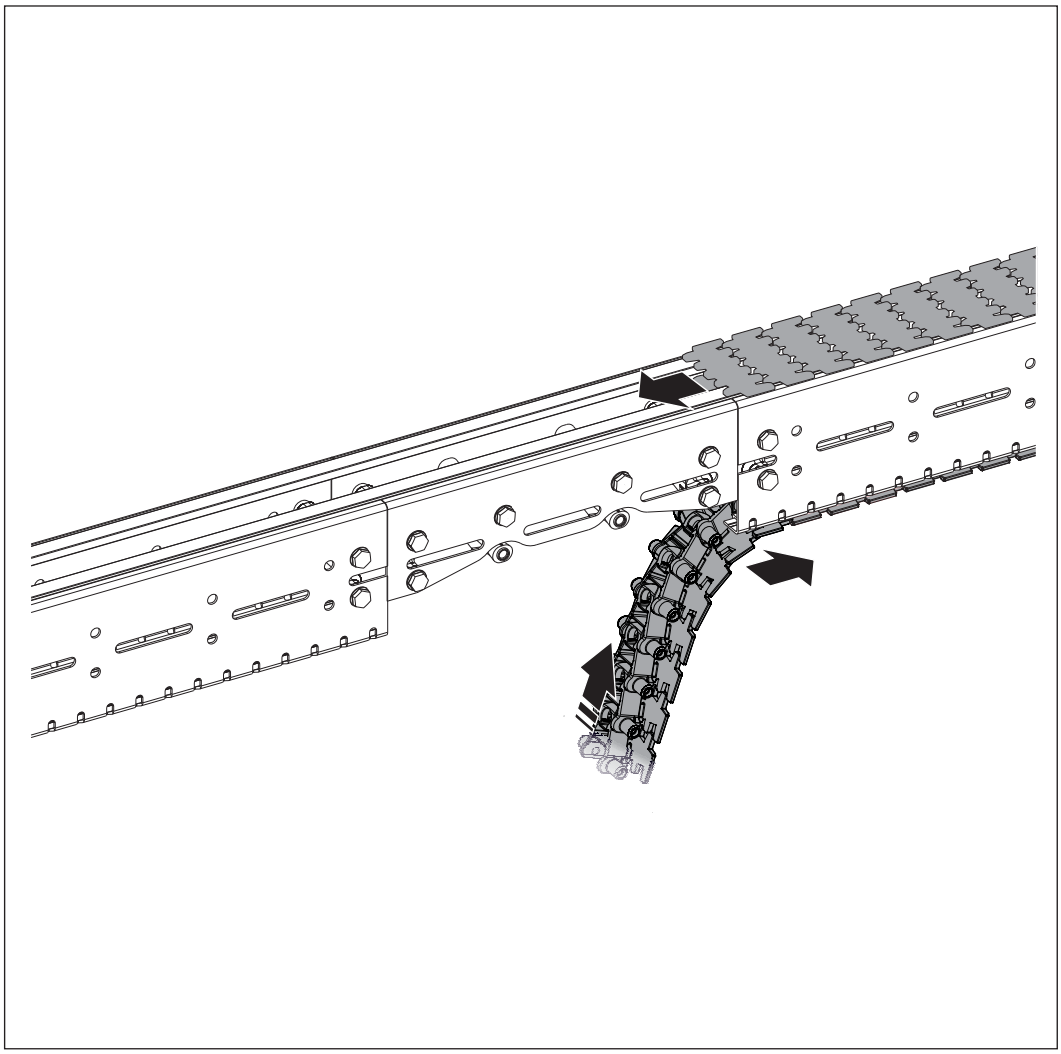


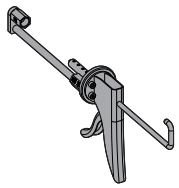13 mm	Pin insert tool		
	 XBMJ 6P		


1

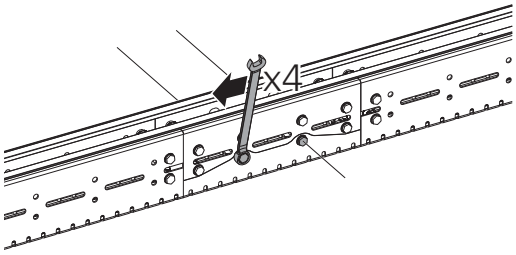


2

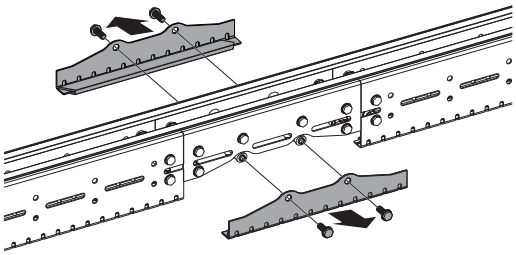


3

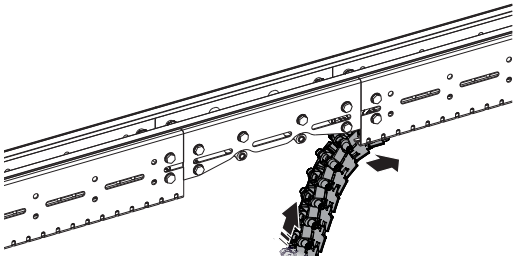


4

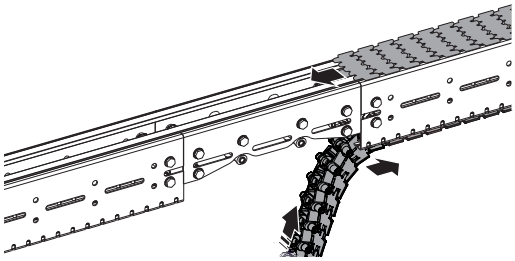


5

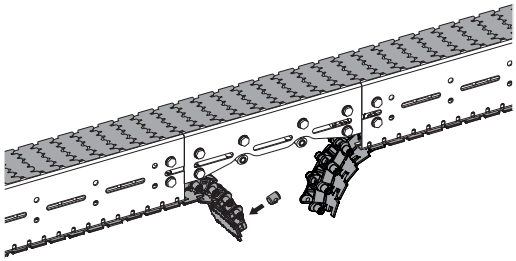


6

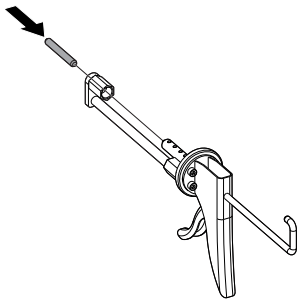


7

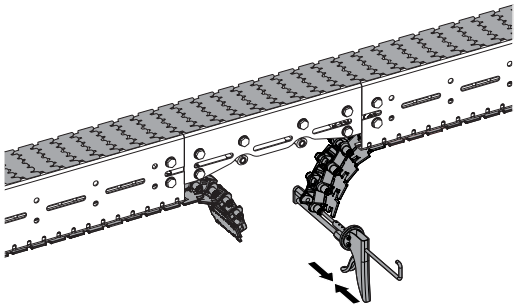


8

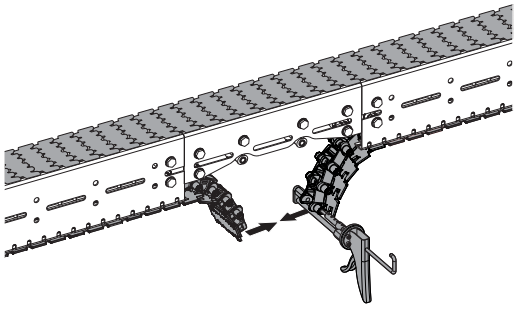


9

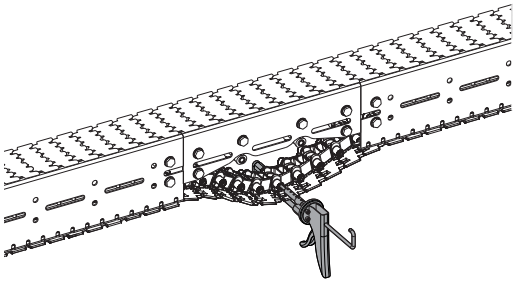

10

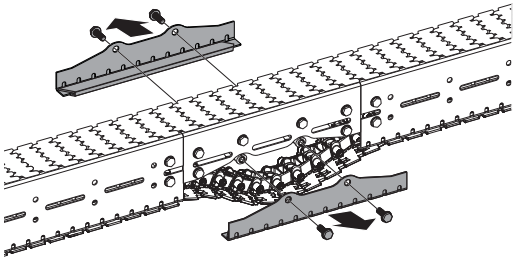



11

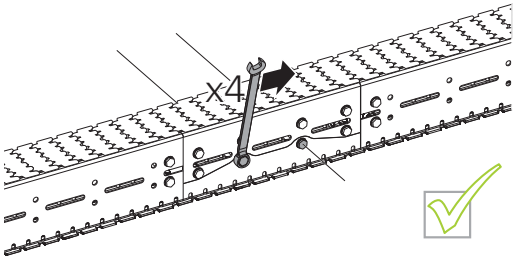


This page is intentionally left blank

6.2 Mounting chain on end drive unit

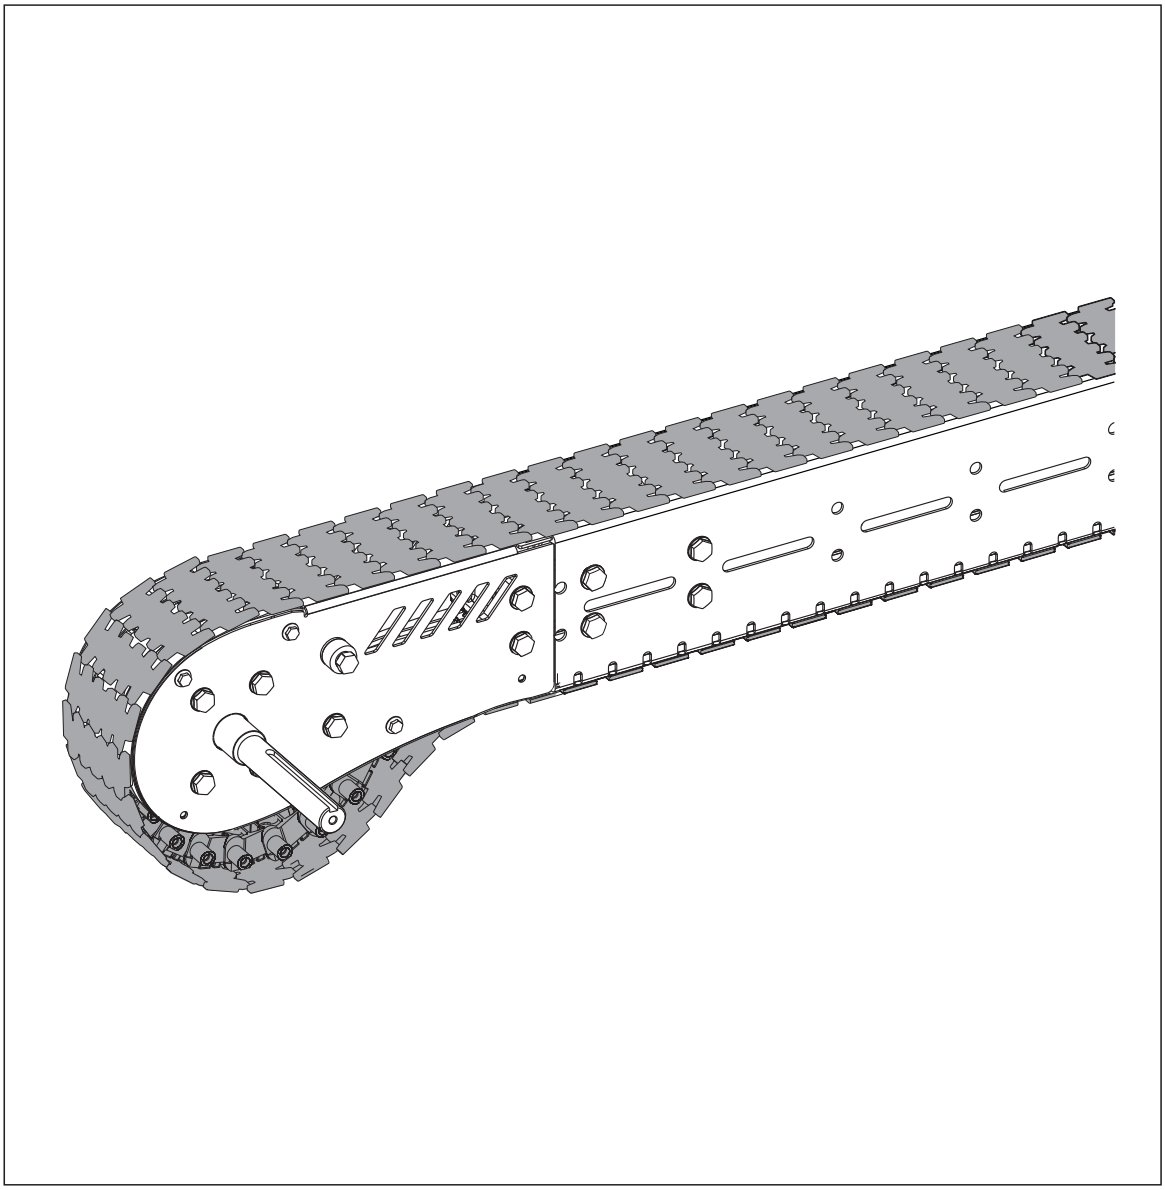


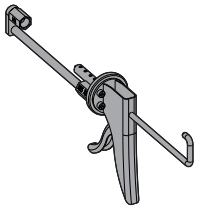Pin insert tool			
 XBMJ 6P			


1

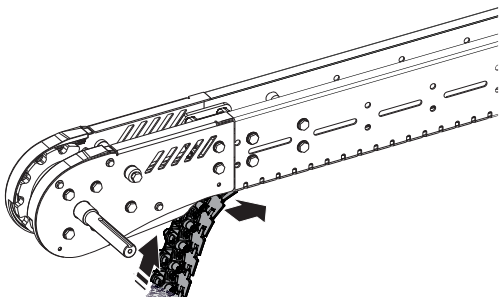


2

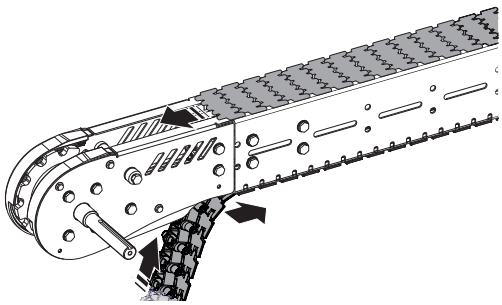


3

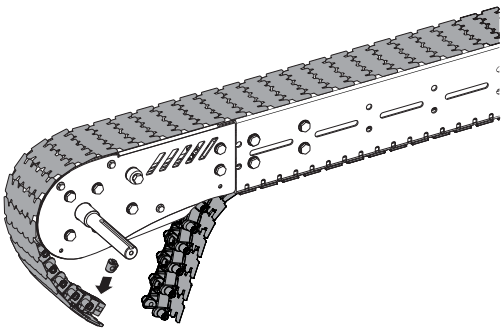


4

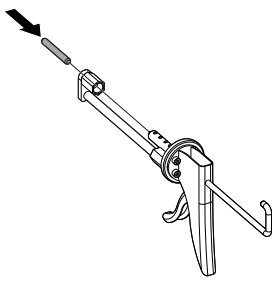


5

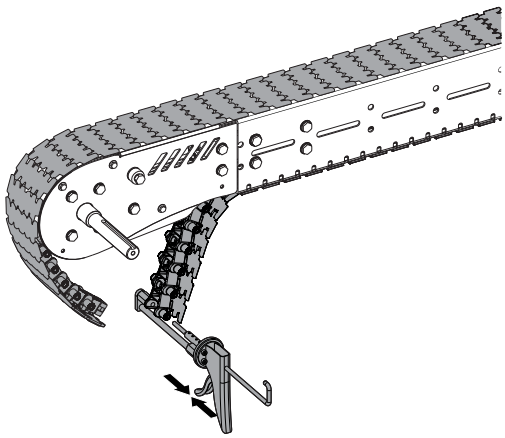


6

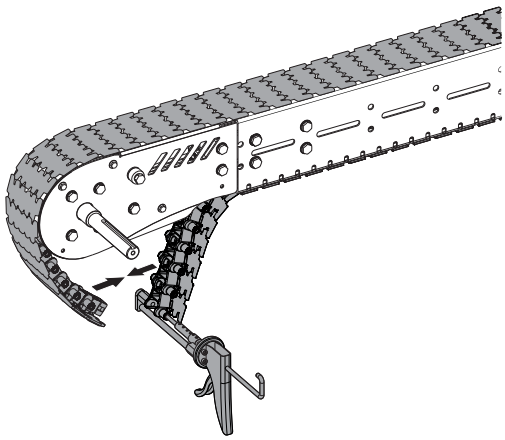

7

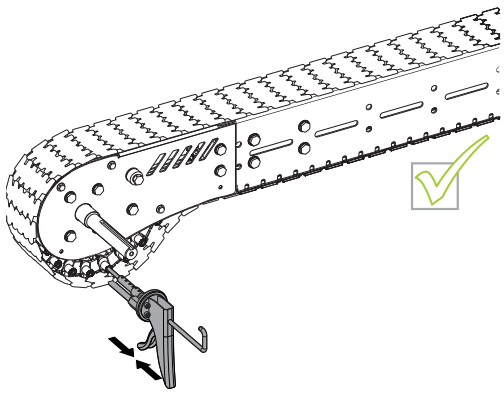

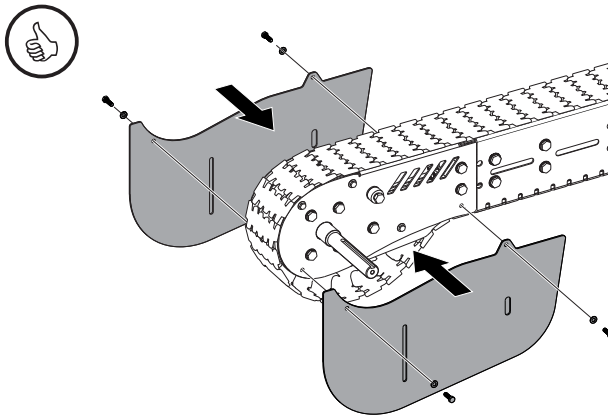



7 Assembly Guide Rail

7.1 Mounting guide rails

Guide rails are supported by guide rail brackets attached to the sides of the conveyor beam.

Brackets should be placed approximately 300 to 1500 mm apart depending on guide rail type, type of product and if there is accumulation or not. If brackets are spaced at greater distances than 1500 mm, there is a possibility that guide rails will become deformed due to excessive force.


7.1.1 Distance between brackets

The distance between guide rail brackets depends on the side forces to be expected, and the guide rail type and material. In buffer conveyors with side forces, much shorter distances between brackets are required than non-buffering applications. The distance should be somewhere between 300 mm and 1500 mm.

7.1.2 Effective track width


The effective track width is calculated as in figure below.


$$W = WB + W1 + W2 - 2C$$

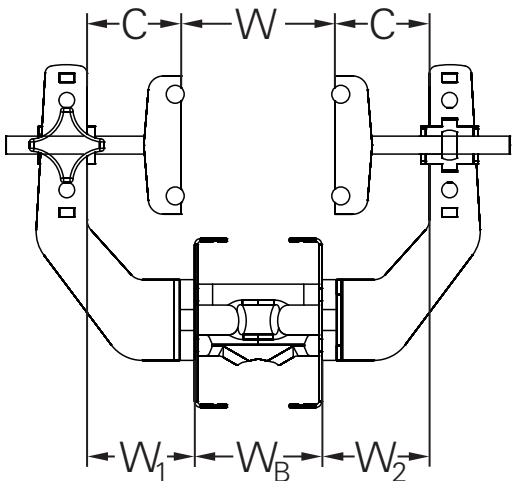


This page is intentionally left blank

7.2 Mounting guide rails bracket, wide

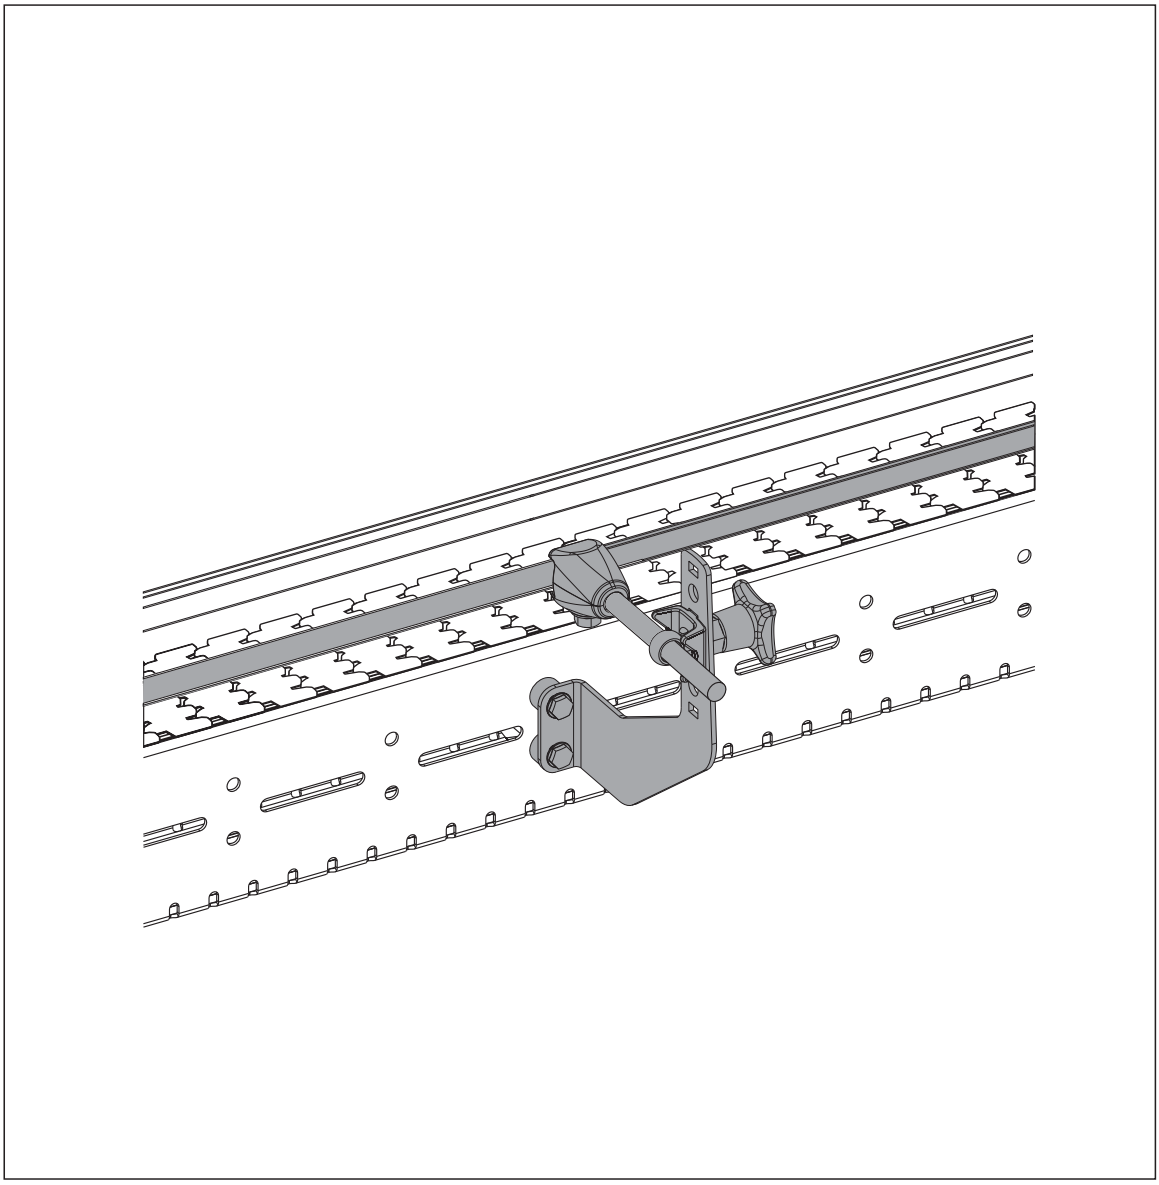


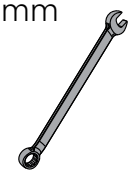10 mm 13 mm 			


1

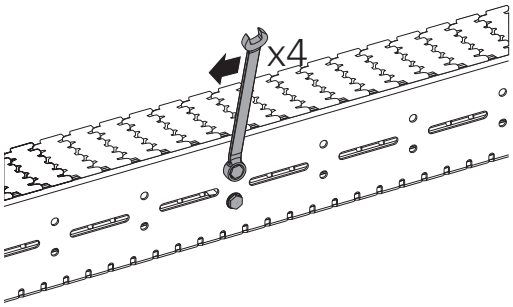


2

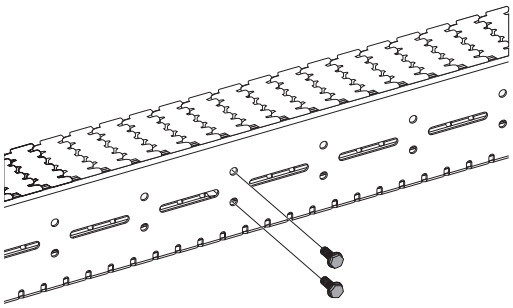


3

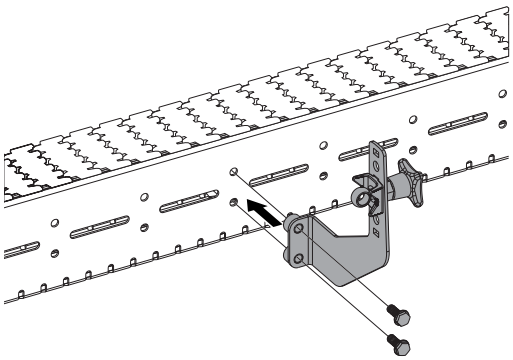


4

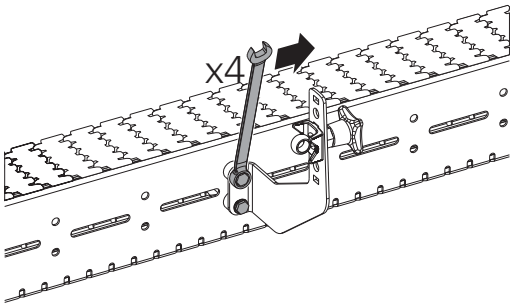


5

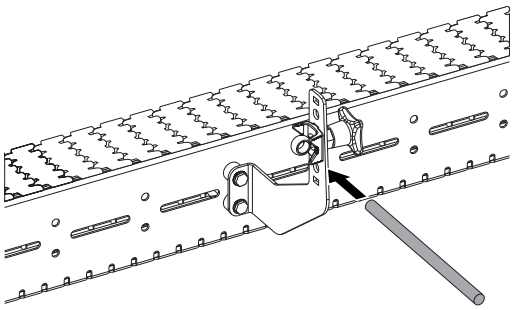


6

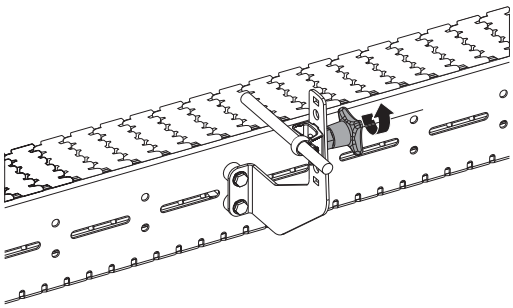


7

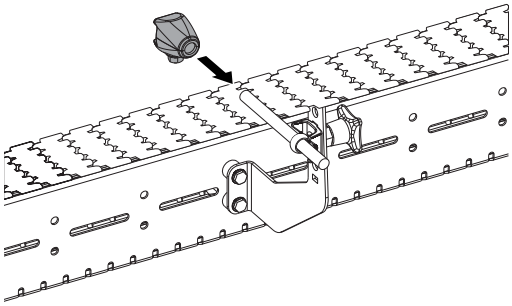


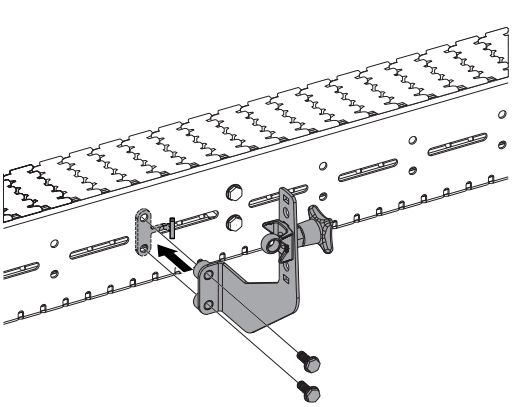

8

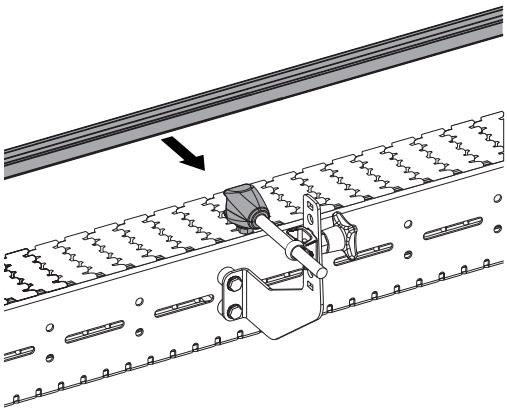



9

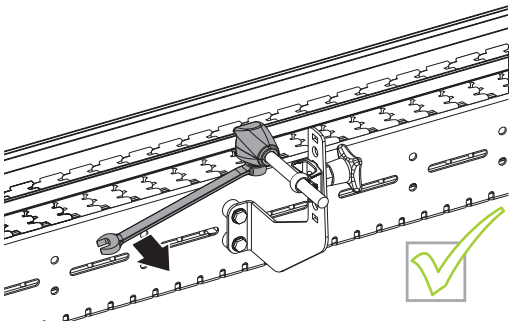


This page is intentionally left blank

7.3 Mounting guide rails bracket, high and low

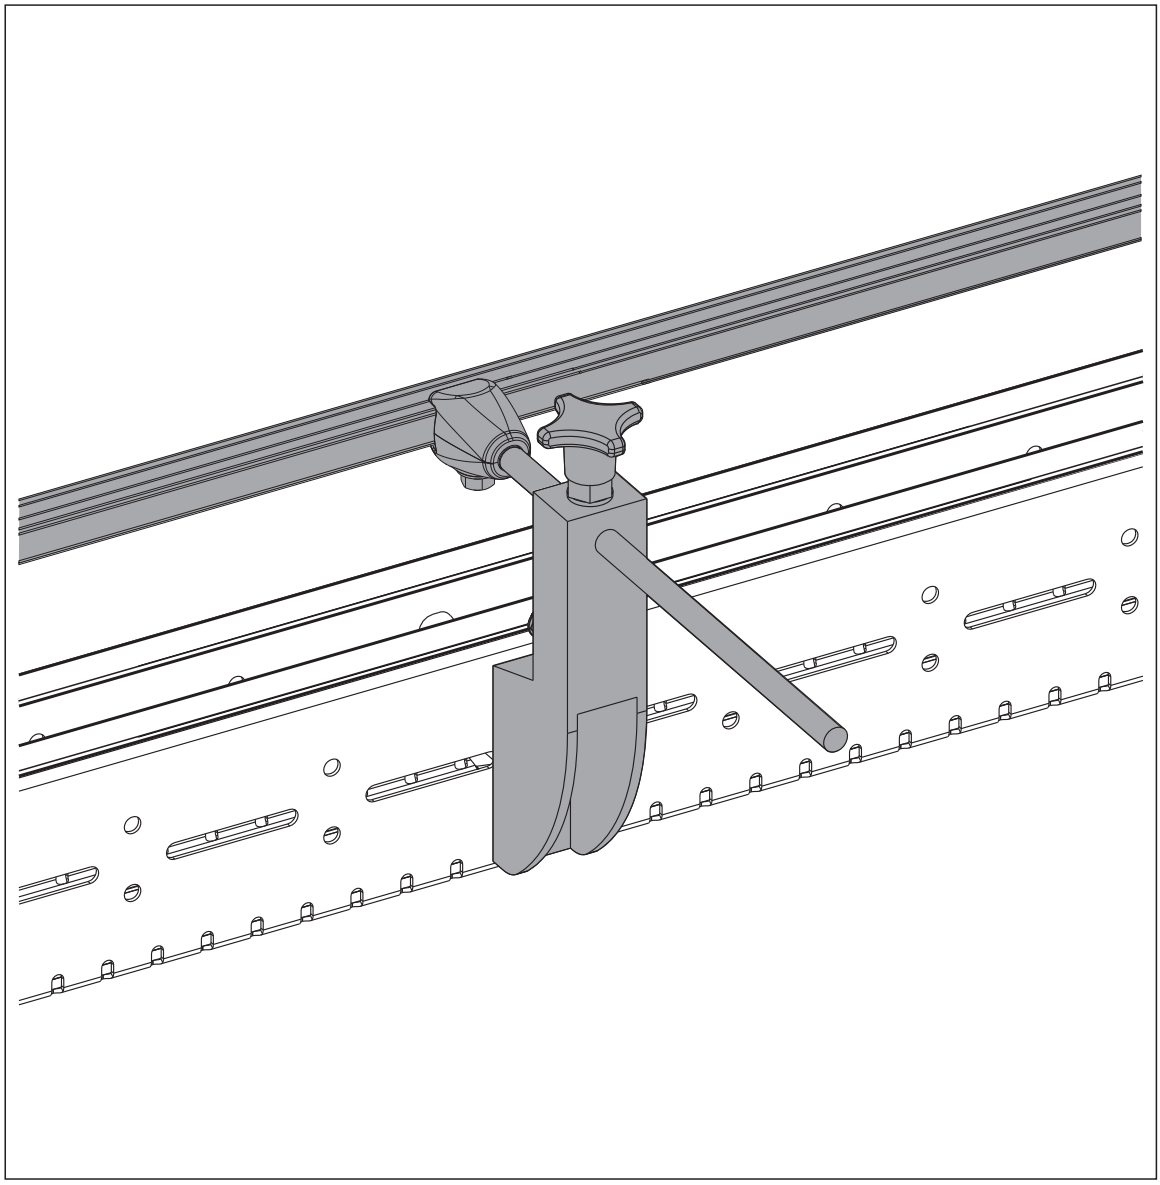


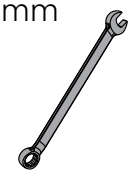10 mm 13 mm 			


1

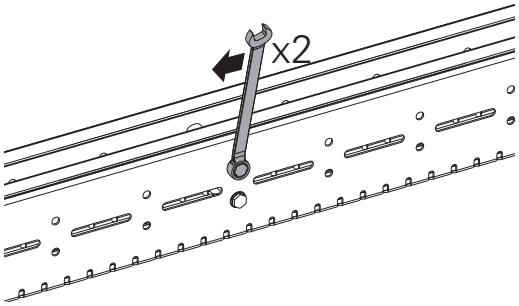


2

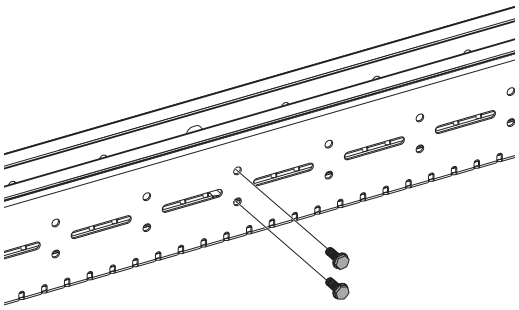


3

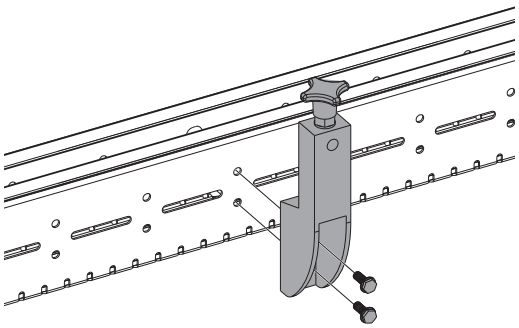


4

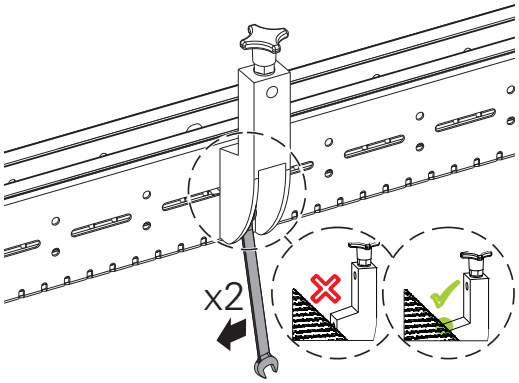


5

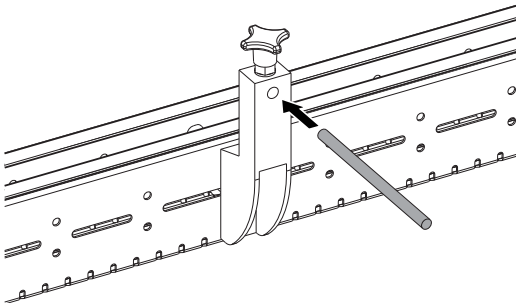


6

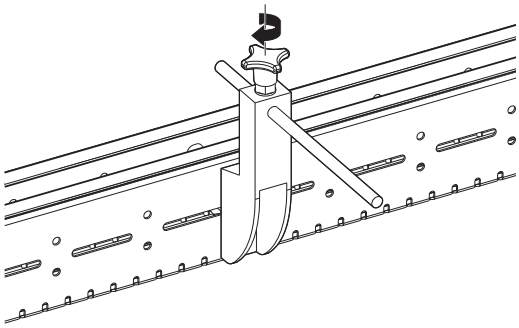


7

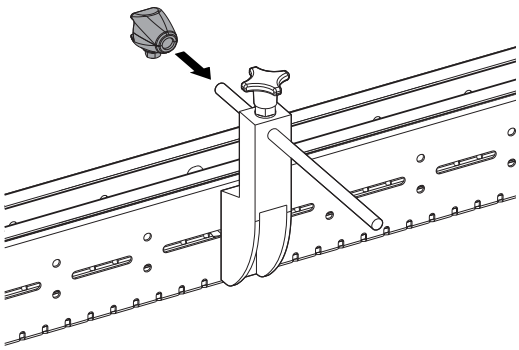

8

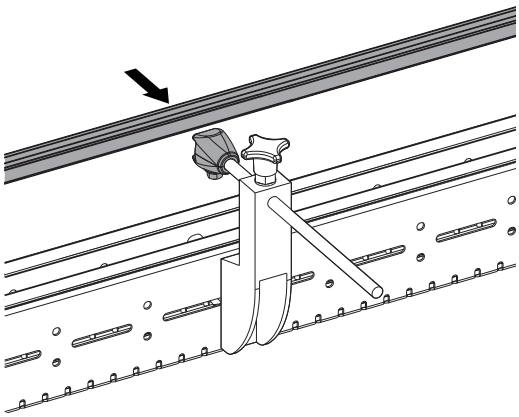


9

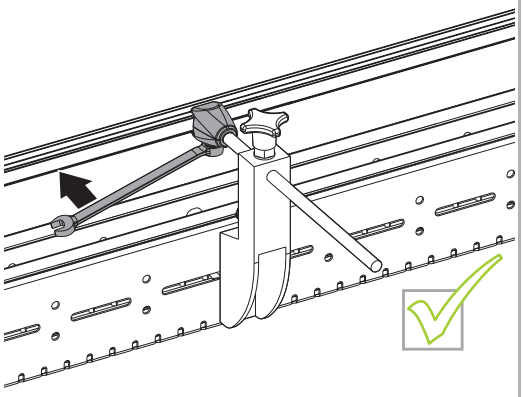


This page is intentionally left blank


7.4 Connecting guide rails

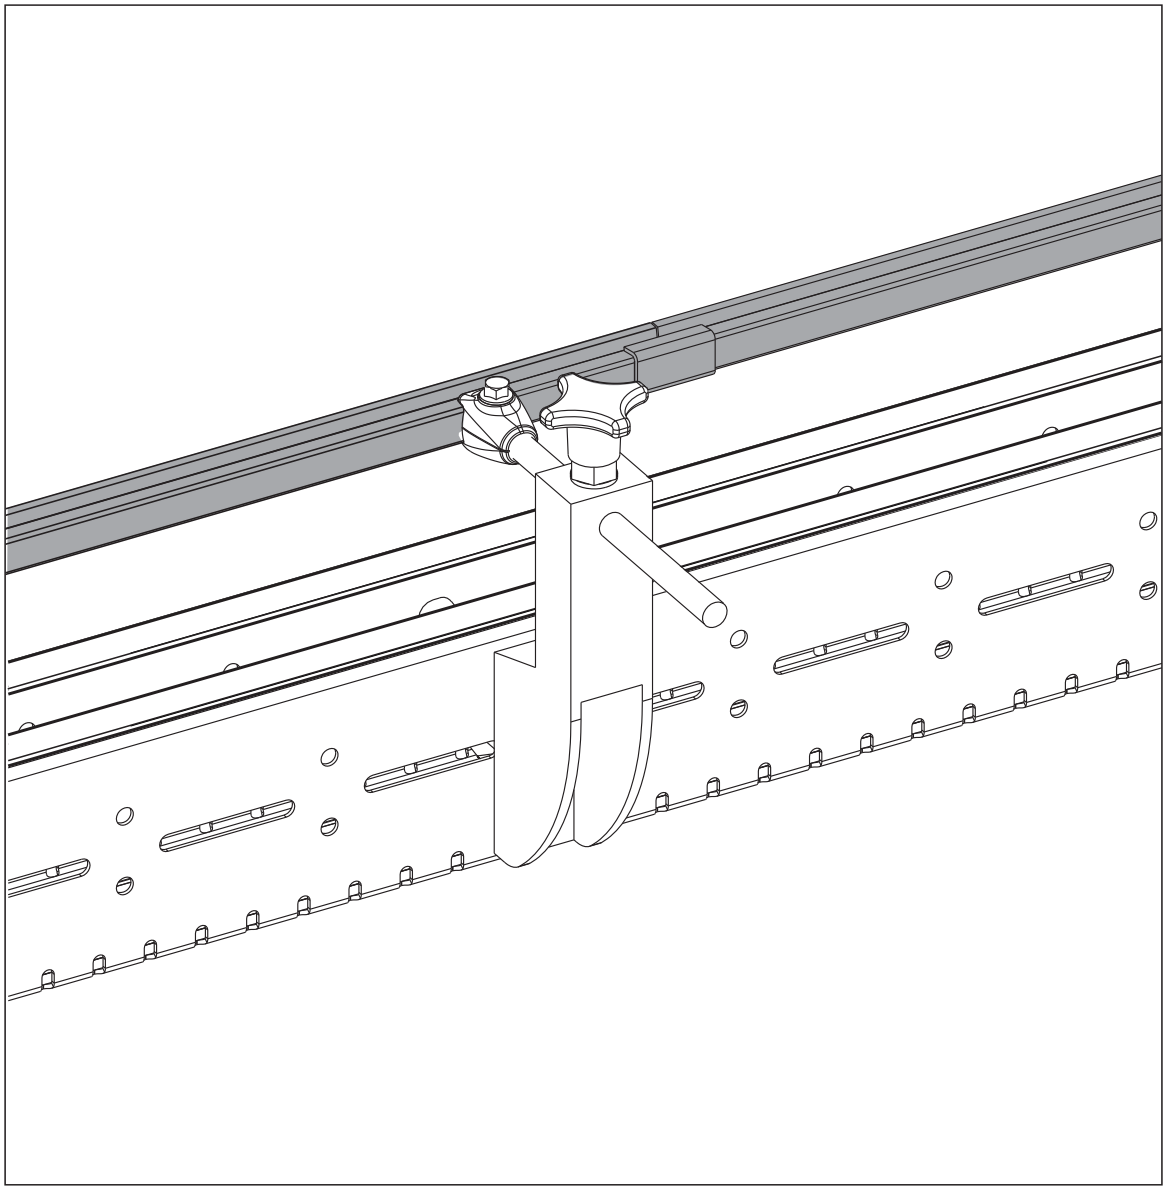


Pliers

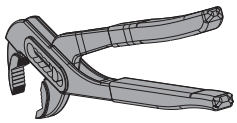


1

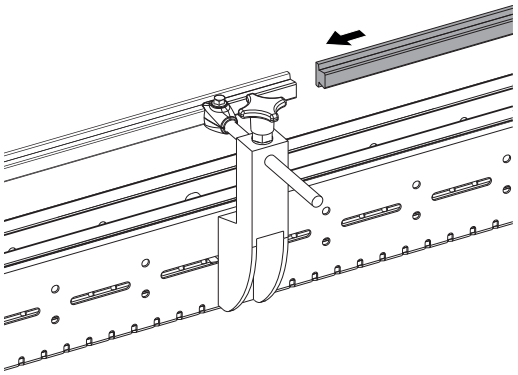

2

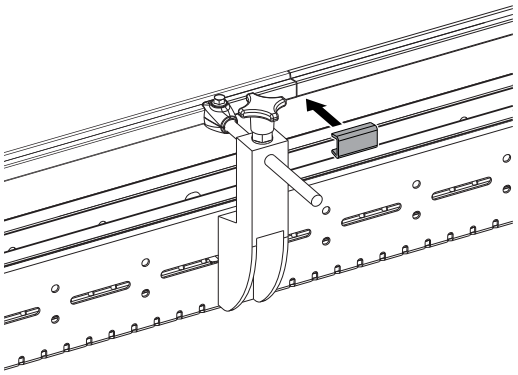

3

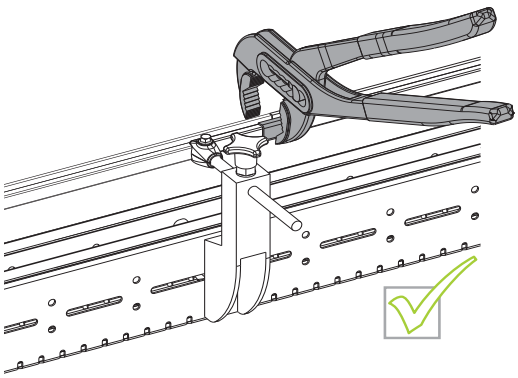

info@flexlink.com
flexlink.com

5866EN-1 ©FlexLink 2015

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages