

Volume 1: Layout Editing


Overview 1-1 L-Edit: An Integrated Circuit Layout Tool 1-2 Cells and Instances: The Basic Building Blocks 1-2 Hierarchy 1-3 Design Rules 1-4 Floorplans 1-4 File Formats 1-5 **Memory Limits 1-5** Hard Copy 1-6 Variable Grid 1-6 **Error Recovery 1-6** L-Edit Modules 1-6 **Documentation Conventions 1-8** Special Fonts 1-8 Menu Commands and Dialog Titles 1-9 Special Keys 1-10 Online User Guide Conventions 1-12 Acrobat Reader Toolbar Tips 1-12

Getting Started

Launching L-Edit 1-15

Setup Files 1-15

Command-Line Arguments 1-16

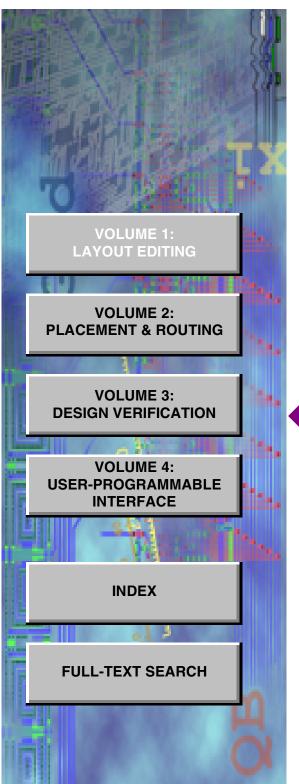

Volume 1: Layout Editing

(continued)

User Interface 1-18

Title Bar and Menu Bar 1-20

Arranging Windows 1-21

Getting Help 1-22

Toolbars 1-26

Standard Toolbar 1-28

Editing Toolbar 1-30

Drawing Toolbar 1-31

Verification Toolbar 1-34

Place and Route Toolbar 1-35

Layer Palette 1-36

Status Bars 1-39

Status Bar 1-40

Mouse Button Bar 1-42

Locator 1-42


Layout Area 1-44

Coordinate System 1-44

Command Line Interface 1-45

Working with Files

Files 1-47

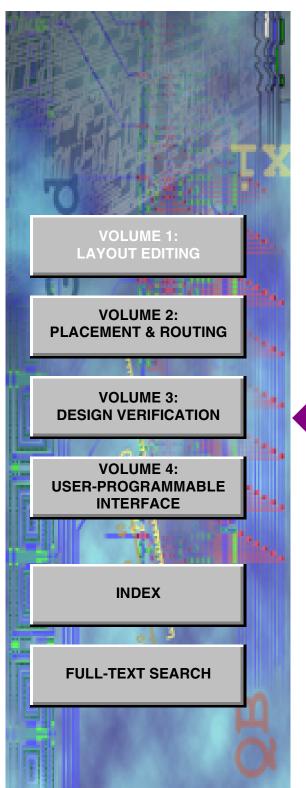


Volume 1: Layout Editing

(continued)

Creating Files 1-48 Opening Files 1-50 Closing Files 1-54 Saving Files 1-55 TDB File Format 1-57 **Printing 1-58** Print Setup 1-62 Print Preview 1-66 File Information 1-68 **Properties 1-70** Property Types 1-71 Viewing and Editing Properties 1-71 Adding Properties 1-76 Deleting Properties 1-77 Renaming Properties 1-77 Deleting Values 1-78 Editing Values 1-78 Organizing Properties in a Hierarchy 1-79 **Exiting L-Edit 1-80**


L-Edit Setup

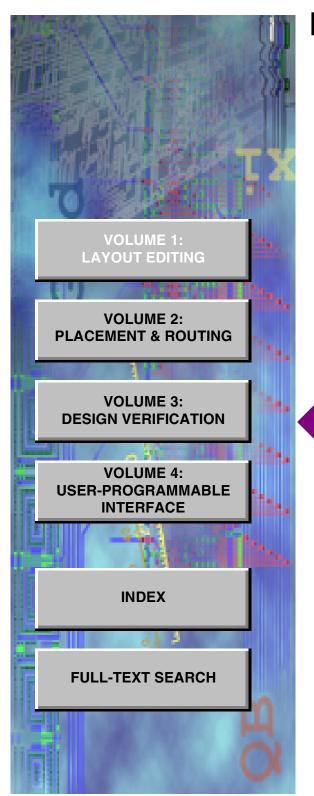

Volume 1: Layout Editing

(continued)

Replacing the Setup 1-82 Merging Layer Setups 1-87 **Exporting the Setup 1-88 TTX File Format 1-90** Syntax 1-90 Interpretation 1-98 Layer 1-98 Special Layers 1-100 Drawing 1-101 Palette 1-102 Technology 1-104 Generated Layers 1-104 Design Rules 1-105 Grid 1-105 Selection 1-106 **Color Parameters 1-107 Application Parameters 1-111** Configuration Files 1-113 Workgroup and User Configuration Files 1-114 General 1-115 Setting Zoom/Selection Box Size 1-117 **Keyboard Customization 1-119**

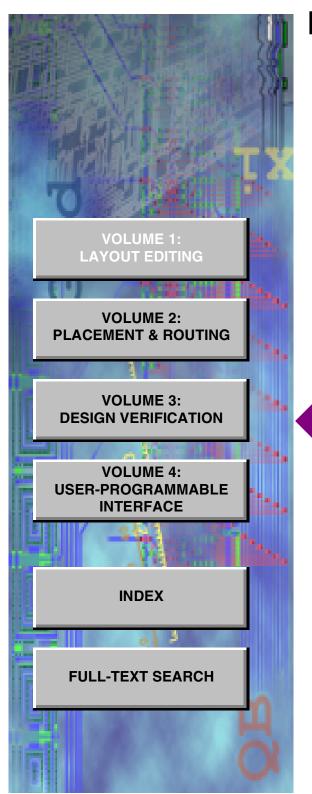

Volume 1: Layout Editing

(continued)

Warnings 1-122

UPI 1-123

Rendering 1-125

Advanced Performance Settings 1-128

Design Setup 1-130

Internal Units and Technology Units 1-130

Rescaling by Redefining Technology Units 1-131

Adapting the Design for DRC 1-133

Technology Parameters 1-134

Grid Parameters 1-138

Selection Parameters 1-141

Selection and Deselection Ranges 1-143

Drawing Parameters 1-145

Curve Approximation Parameters 1-148

Cross Reference File Designation 1-151

Layer Setup 1-155

To Add a New Layer: 1-157


Options for Defining Layers 1-157

General Layer Parameters 1-158

Derivation Layer Parameters 1-160

Rendering Layer Parameters 1-161

Mode 1-165

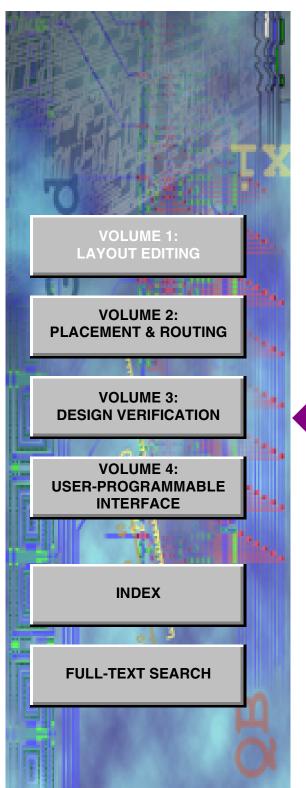

Volume 1: Layout Editing

(continued)

Pass 1-172

Pattern 1-172

Color 1-173

Outline Style 1-175

Wire Styles 1-176

End Styles and Join Styles 1-178

Wire Style Defaults 1-181

Special Layers 1-182

Importing and Exporting Files

Importing Files 1-185

CIF Import Options 1-188

GDSII Import Options 1-189

GDSII Data Type 1-190

Exporting Files 1-191

CIF Export Options 1-194


GDSII Export Options 1-195

GDSII Export Restrictions 1-197

CIF Files 1-199

Symbols 1-199

Calls (Instances) 1-201

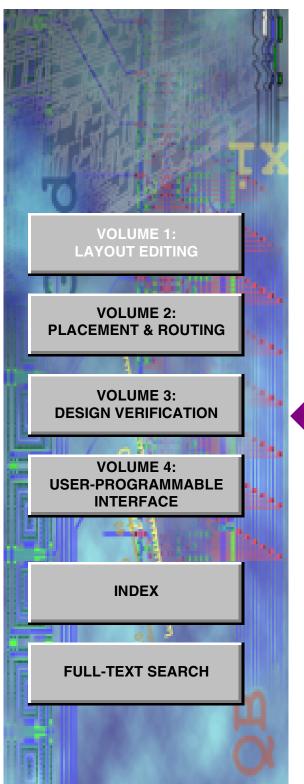

Volume 1: Layout Editing

(continued)


Geometric Primitives 1-202
Layers 1-205
Fabrication Cell 1-206
Restrictions 1-207
Extensions 1-207
Wires 1-209
Scaling 1-210
GDSII Files 1-211
GDSII Date Formats 1-213
GDSII Shape Definition 1-21

GDSII Shape Definition 1-214 GDSII Data Type 1-215 Assigning Data Types 1-215 Wires 1-217 Ports 1-219

Viewing the Layout

Displaying Layout Interface Elements 1-222 Showing and Hiding Objects 1-224 Showing and Hiding Layers 1-230 Viewing Layout Hierarchy 1-238

Instance Insides 1-239

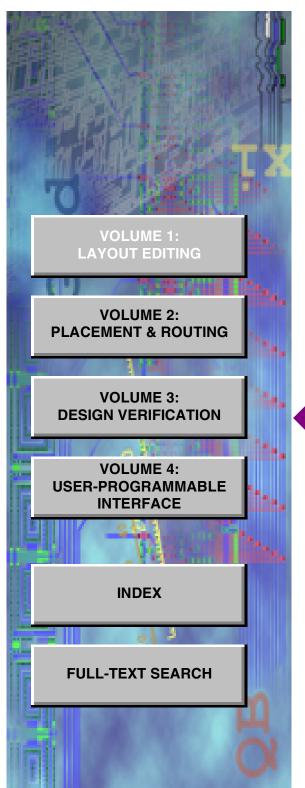

Volume 1: Layout Editing

(continued)

Displaying Instance Insides While Drawing and Editing 1-241 Refreshing the Screen 1-241

Zooming and Panning 1-242

Zooming 1-242

Zooming While Editing In-Place 1-243

Panning 1-244

Zooming and Panning with the Mouse 1-245

Mouse Wheel Functions 1-247

Auto-Panning 1-247

Moving to Specified Coordinates 1-248

Exchanging Views 1-248

Drawing and Editing Objects

1-249

Object Types 1-250

Selecting Layers and Drawing Tools 1-252

Drawing Tools 1-253


Display Modes 1-253

Drawing Objects 1-255

Boxes 1-255

Circles 1-256

Pie Wedges 1-256

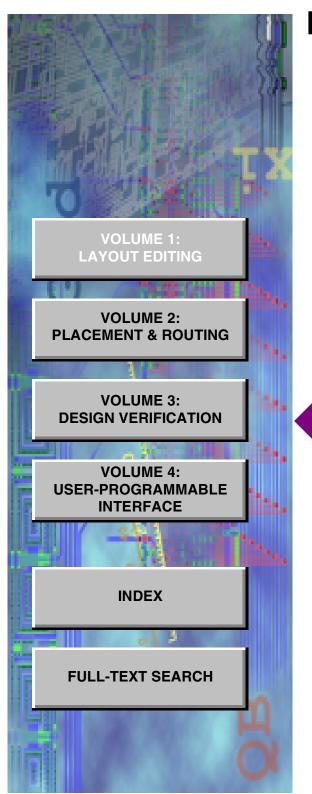

Volume 1: Layout Editing

(continued)

Tori 1-257

Polygons and Wires 1-257

Self-Intersecting and Ambiguous Fill Polygons 1-258

Self-Intersecting Polygons 1-260

Ambiguous Fill Polygons 1-261

Winding Number 1-263

Curves 1-264

Ports 1-268

Rulers 1-269

Graphical Editing 1-270

Drawing in Outline Mode 1-270

Resizing and Reshaping 1-270

Pie Wedges and Tori 1-271

Stretch Editing 1-272

Adding Vertices 1-272

Adding Wire Sections 1-272

Slicing 1-273


Merging 1-274

Nibbling 1-274

Approximating and Straightening Curves 1-276

Textual Editing 1-277

Multiple Object Editing 1-279

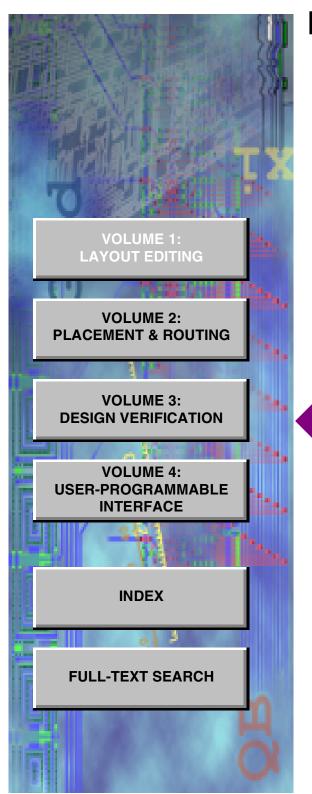

Volume 1: Layout Editing

(continued)

Boxes 1-281

Corners 1-282

Bottom Left Corner and Dimensions 1-284

Center and Dimensions 1-286

Polygons 1-288

Curve Height 1-289

Wires 1-290

Circles 1-292

Pie Wedges 1-294

Sweep Angle 1-295

Tori 1-296

Ports 1-298

Rulers 1-301

Instances 1-304

Command Line Editing 1-308

Opening the Command Window 1-308

Using the Command Window 1-309


Syntax 1-311

Coordinate Entry Options 1-312

Command Completion Using the Mouse 1-313

Reference Point Location 1-314

Special Characters 1-315

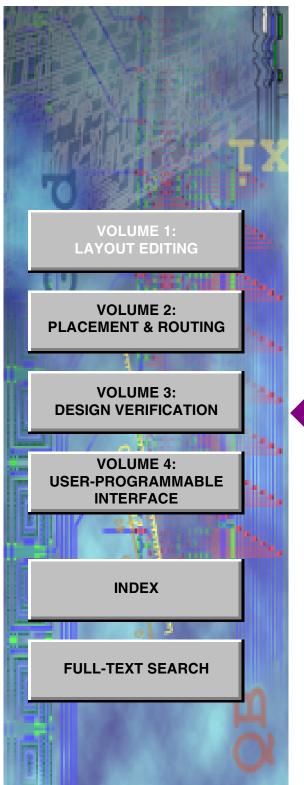

Volume 1: Layout Editing

(continued)

Keyboard Shortcuts 1-316 Command Reference 1-316

!! 1-316

↓, ↑ 1-317

<Esc> 1-317

Array 1-317

Box 1-320

Copy 1-321

Goto 1-322

Instance 1-322

Layer 1-324

Move 1-324

Path 1-326

Paste 1-327

Polygon 1-328


Run 1-329

Text 1-330

Width 1-331

Command Scripting 1-331

Working with Objects

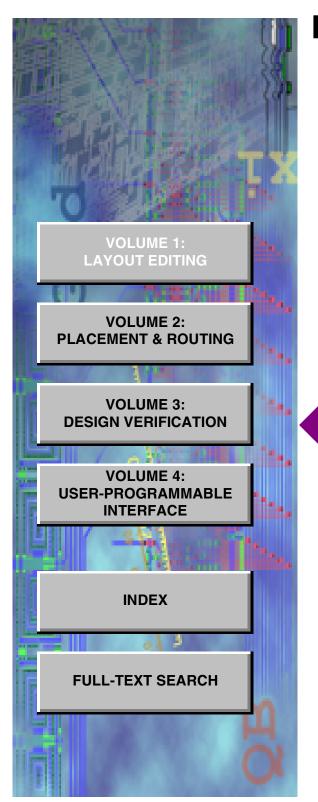

Volume 1: Layout Editing

(continued)

Selecting Objects 1-334

Explicit Selection 1-335

Implicit Selection 1-339

Extend Selection 1-340

Cycle Selection 1-340

Edge Selection 1-340

Universal Selection 1-346

Deselecting Objects 1-347

Explicit Deselection 1-347

Implicit Deselection 1-347

Hidden Deselection 1-348

Universal Deselection 1-348

Finding Objects 1-349

Find Next/Find Previous 1-351

Grouping and Ungrouping Objects 1-353

Reversing Group and Ungroup Operations 1-355

Moving Objects 1-356


Graphical Repositioning 1-356

Incremental Repositioning 1-358

Numerical Repositioning 1-359

Reorienting 1-360

Copying and Duplicating Objects 1-362

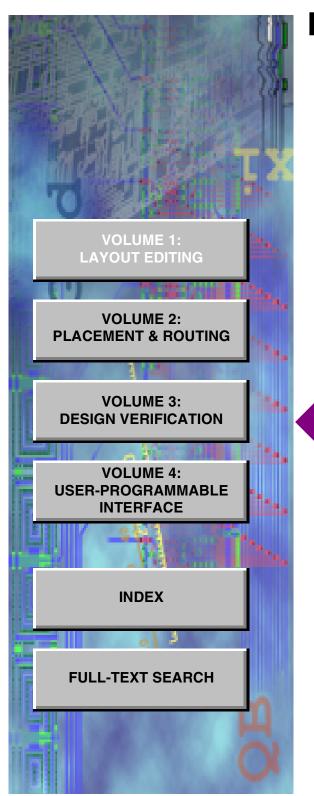

Volume 1: Layout Editing

(continued)

Repeated Copying of Objects 1-363
Copying to the Clipboard 1-363

Pasting Objects 1-364
Paste to Cursor Feature 1-365

Deleting Objects 1-366
Undoing Operations 1-367
Redo 1-368

Working with Cells

Creating Cells 1-371
Opening Cells 1-373
Reverting Cells 1-375
Renaming Cells 1-376
Copying Cells 1-378
Deleting Cells 1-384
Design Navigator 1-386
Display Modes 1-388


splay Modes 1-388

Top down - all cells 1-388

Bottom up - all cells 1-389

Top down - non-instanced 1-391

By date modified 1-392

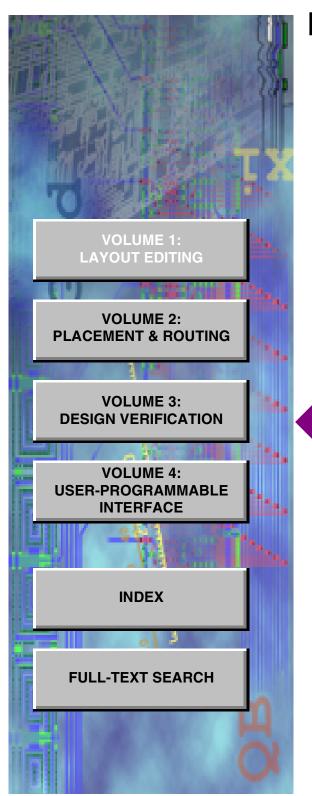

Volume 1: Layout Editing

(continued)

Copy Display to Text View 1-392 Performing Operations on Cells 1-393

erforming Operations on Cells 1-393
Hierarchical Lock/Unlock 1-395

Copying and Instancing 1-397

Printing 1-398

XrefCells 1-399

Examining XrefCells 1-401

Changing the Referenced Cell 1-406

Updating XrefCells 1-407

Unlinking XrefCells 1-409

Redirecting XrefCells 1-410

Dependent Cells 1-410

Deleting XrefCells 1-413

Cell Information 1-414


Cell Information for XrefCells 1-416

Cell State Symbols 1-417

Specifying the Fabrication Cell 1-419

Instancing Cells

Design Hierarchy 1-422 Creating Instances 1-424

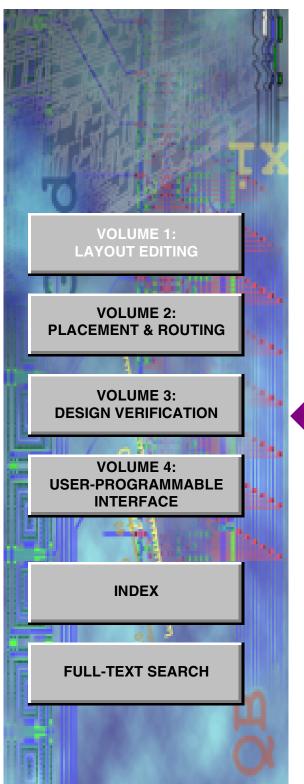

Volume 1: Layout Editing

(continued)

Aligning Instances by Abut Ports 1-428

Creating Arrays 1-429

Editing Instances 1-431

Editing In-Place 1-432

Textual Editing 1-433

Flattening Instances and Arrays 1-434

Generating Layers

Introduction to Generated Layers 1-436

Derivation Steps 1-437

Enable Derivation 1-438

Drawn Layers 1-440

Defining Boolean Layer Derivations 1-441

Boolean Operations in Generated Layers 1-444

AND 1-444

OR 1-445


NOT 1-445

Grow 1-446

Order of Operations 1-447

Defining Select Layer Derivations 1-450

Select Operations in Generated Layers 1-452

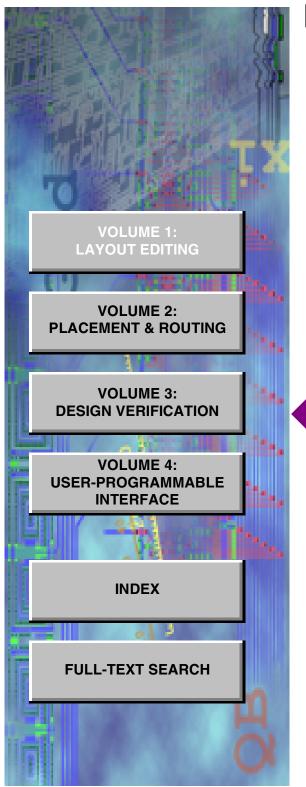

Volume 1: Layout Editing

(continued)

Inside 1-453

Outside 1-455

Hole 1-457

Cut 1-458

Touch 1-460

Enclose 1-462

Overlap 1-462

Vertex 1-462

Defining Area Layer Derivations 1-463

Defining Density Layer Derivations 1-466

Creating Generated Layers 1-469

Working with Generated Layers 1-473

Showing, Hiding, and Locking Generated Layers 1-473

Removing Generated Layers 1-474

Automatic Layer Generation with DRC and Extract 1-475


Working with 45° Objects 1-476

Layer Generation 1-476

Wires 1-478

Cross-Section Viewer

Implementation 1-482

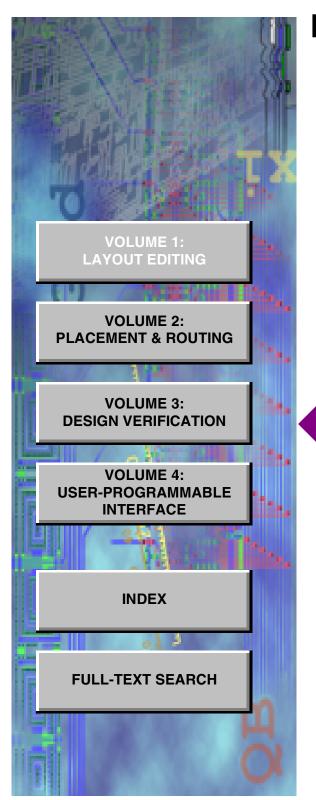

Volume 1: Layout Editing

(continued)

Grow/Deposit 1-483

Etch 1-483

Implant/Diffuse 1-484

Operation 1-486

Display 1-489

Single-Step Display 1-490

Process Definition Files 1-492

Syntax 1-492

Example 1-494

Default Command Shortcuts

File Menu 1-498

Edit Menu 1-500

View Menu 1-502

Draw Menu 1-506

Cell Menu 1-508


Setup Menu 1-509

Tools Menu 1-510

Window Menu 1-511

Help Menu 1-512

Off-Menu Commands 1-513

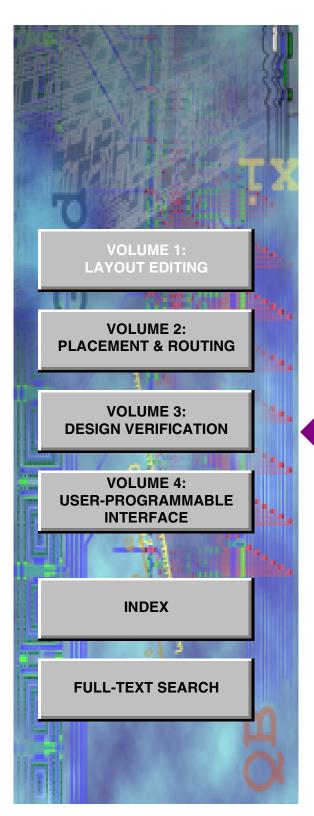

Volume 1: Layout Editing

UPILIB	-
Index	I-
Credits	C-