
# Device


One column per connected Airstick. Columns appear on their own when a stick starts sending.

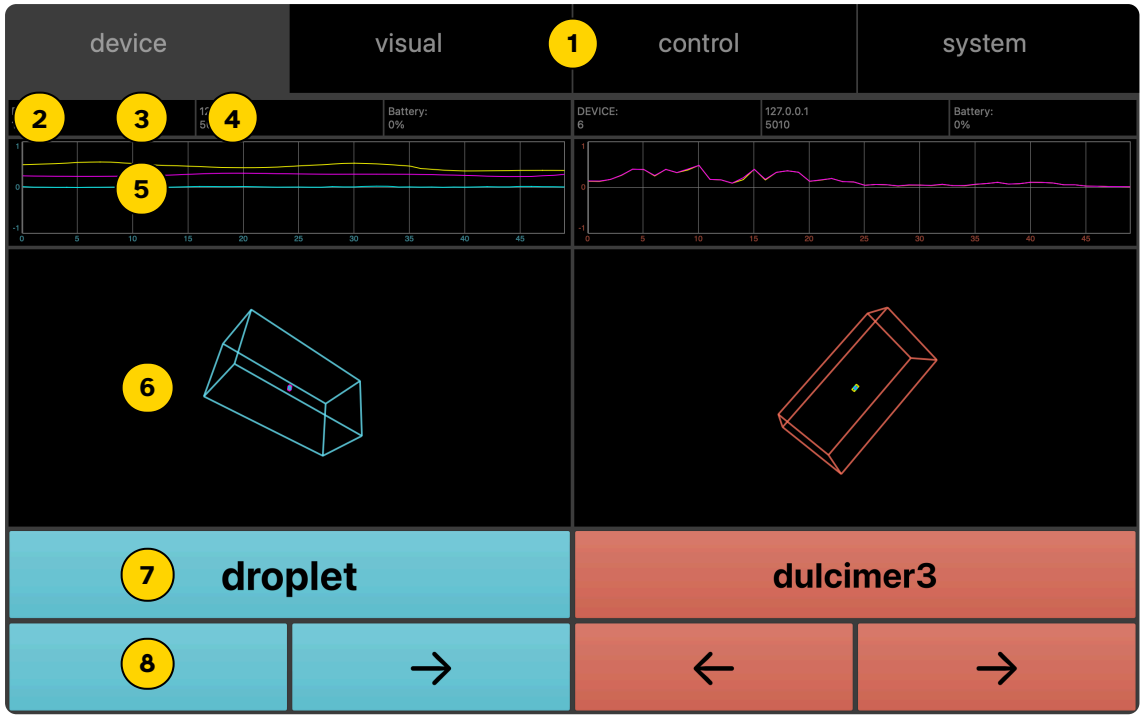


1. **Tabs**
   Switch between the four pages: device, visual, control and system.
2. **Device number**
   Which Airstick this column is.
3. **Network**
   The IP address and port the stick's data is arriving from.
4. **Battery**
   Charge reported by the stick.
5. **Plotter**
   Live trace of the signals the loaded personality chooses to show. Goes flat while the device is muted.
6. **3D view**
   The stick's orientation. The box turns with the stick; the small yellow, magenta and cyan bars show acceleration. Tap to calibrate.
7. **Personality**
   The loaded personality, in the device's colour. Tap to mute or unmute; it greys out when muted.
8. **Previous / next**
   Load the previous or next personality in this kit's roster.

# Visual

The visuals the personalities draw.

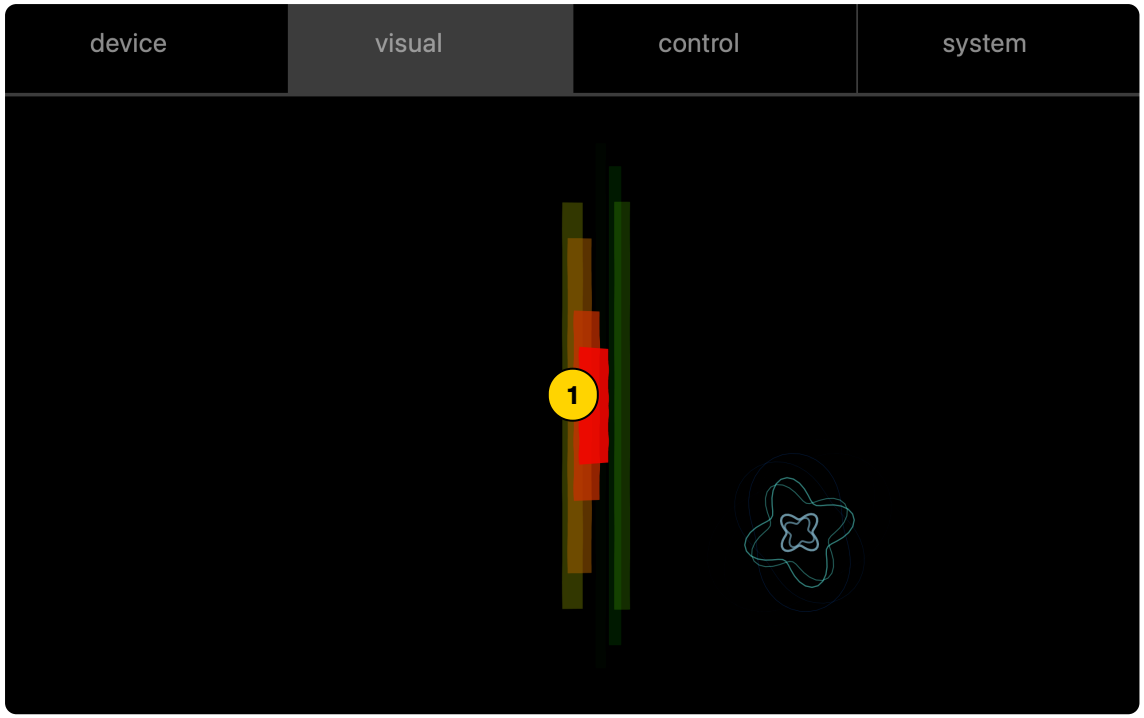



**1 Visual surface**

All devices drawn on one canvas (Overlay) or one canvas each (Grid); switch on the system page. When the visuals are on a second screen this reads "visuals on HDMI".

# Control

Per-device settings. Moves here are shared with the web app and MIDI, and are remembered between sessions.

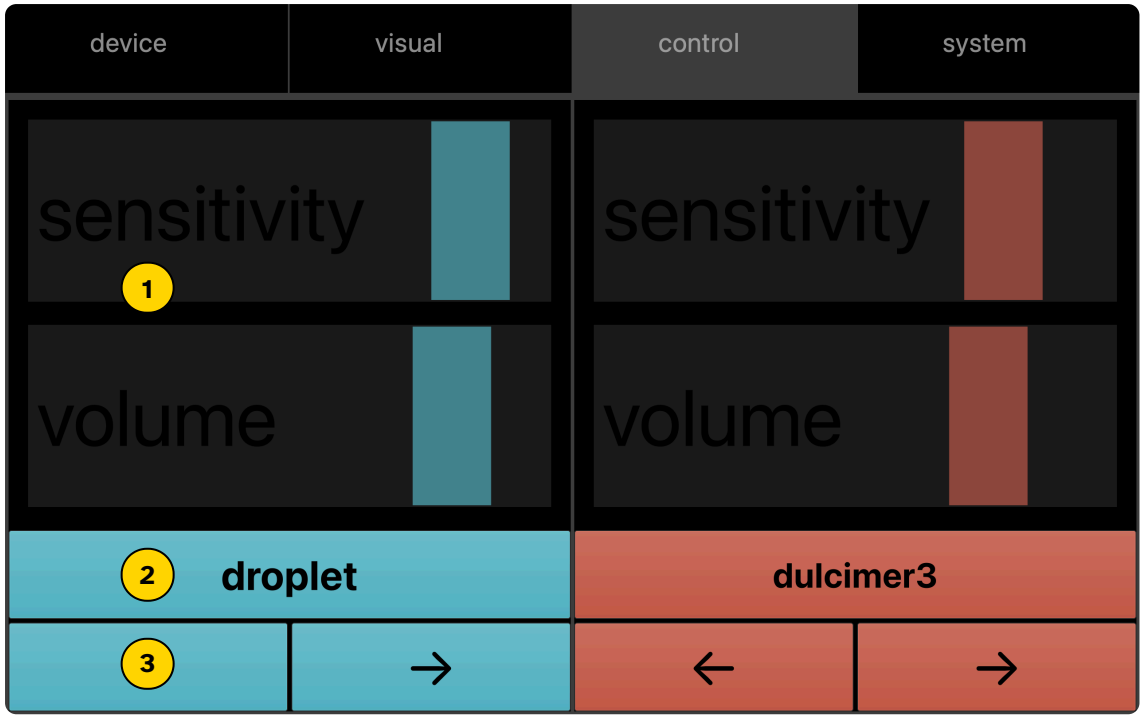



1 **Sliders**
Drag across to set each parameter: volume, sensitivity and any the personality adds. Some personalities show their own controls here instead.

2 **Personality**
Same as on the device page: tap to mute or unmute.

3 **Previous / next**
Same as on the device page.

# System

Health of the kit, and the buttons that act on the whole system.

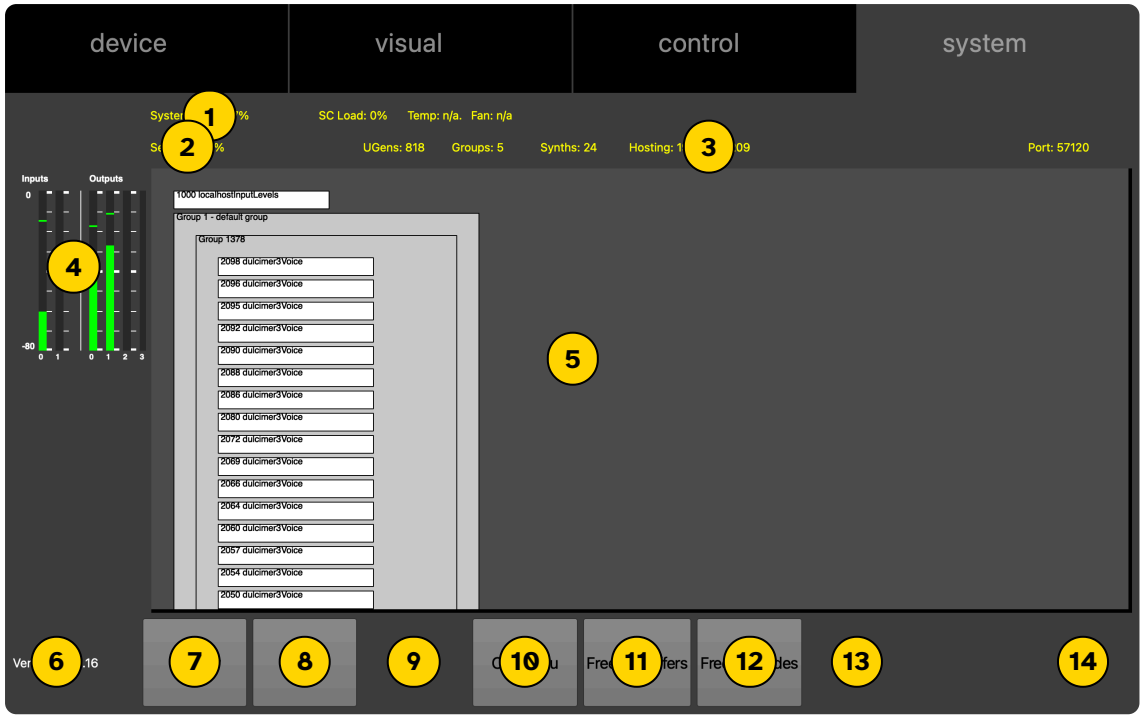


1. **Load**
   System Load is CPU use across the Pi; SC Load is AirKit's share. Temp and Fan are the Pi's temperature and fan state.

2. **Audio server**
   Audio engine CPU, and how many UGens, groups and synths are running.

3. **Hosting / Port**
   This kit's IP address and port: what the web app and Airsticks should point at.

4. **Meters**
   Input and output levels.

5. **Node tree**
   What is currently running on the audio server.

6. **Version**
   The installed AirKit version.

7. **Overlay / Grid**
   Visuals as one shared canvas, or one canvas per device.

8. **Panel / HDMI**
   Show the visuals on this panel or on a second screen. Pressing HDMI checks for a screen; with none plugged in it snaps back to Panel.

9. **Network** Pi only
   Restarts the Pi's networking. Try this if sticks or the web app lose connection.

10. **OSC Thru**
    Forward the incoming Airstick data to another computer (set in the kit's machine file).

11. **Free All buffers**
    Unload every sample from memory.

12. **Free All Nodes**
    Stop every sound immediately.

13. **QUIT** Pi only
    Quit AirKit.

14. **TURN OFF** Pi only
    Shut the Pi down. Wait for the screen to go dark before unplugging.