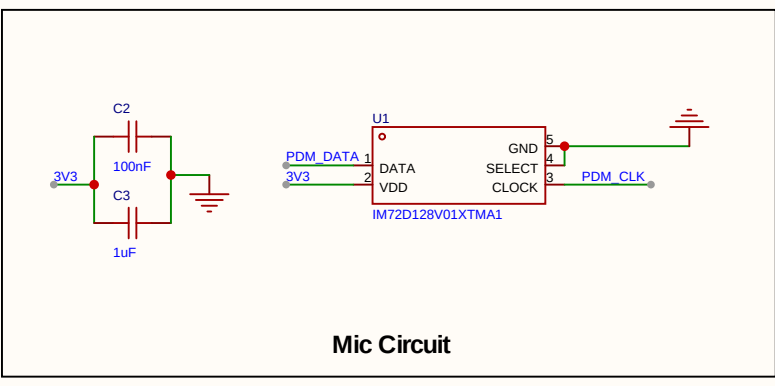
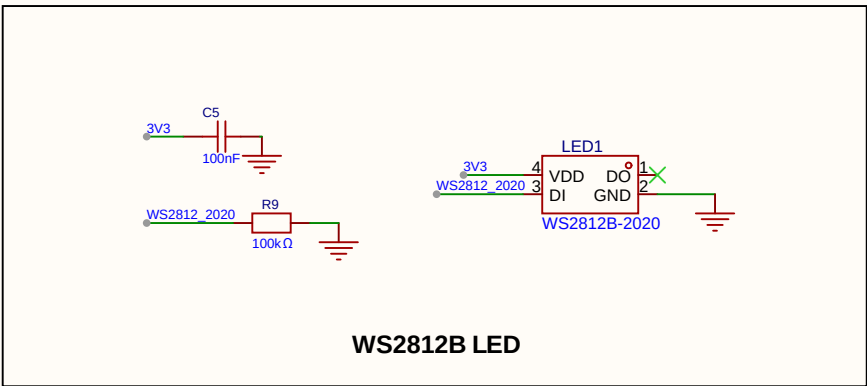
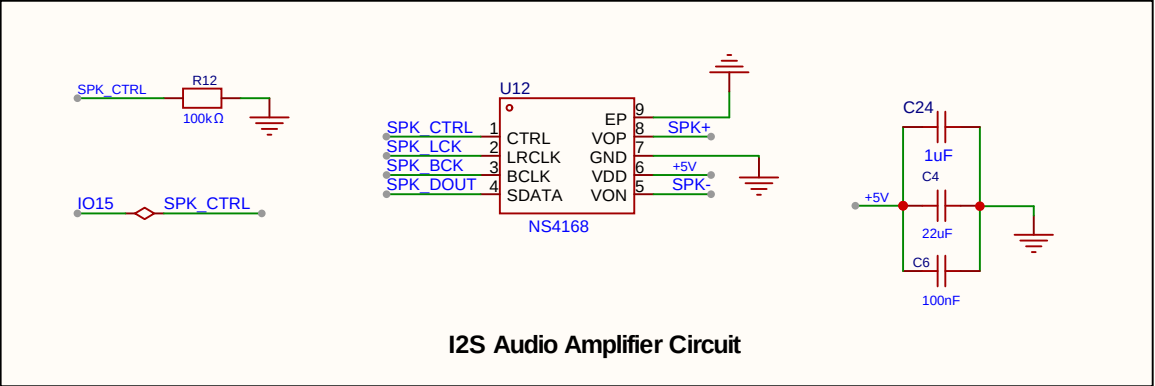
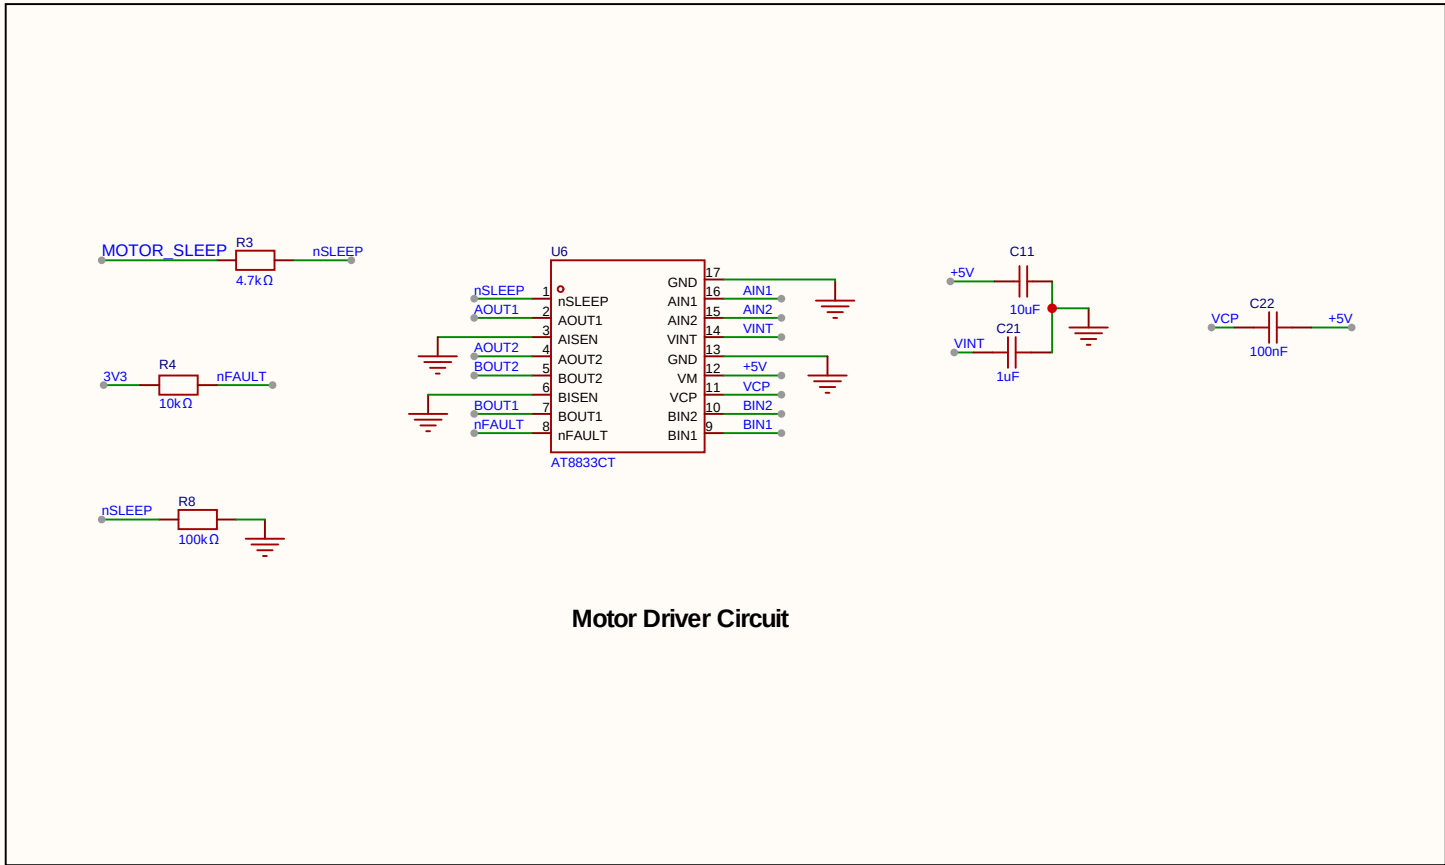
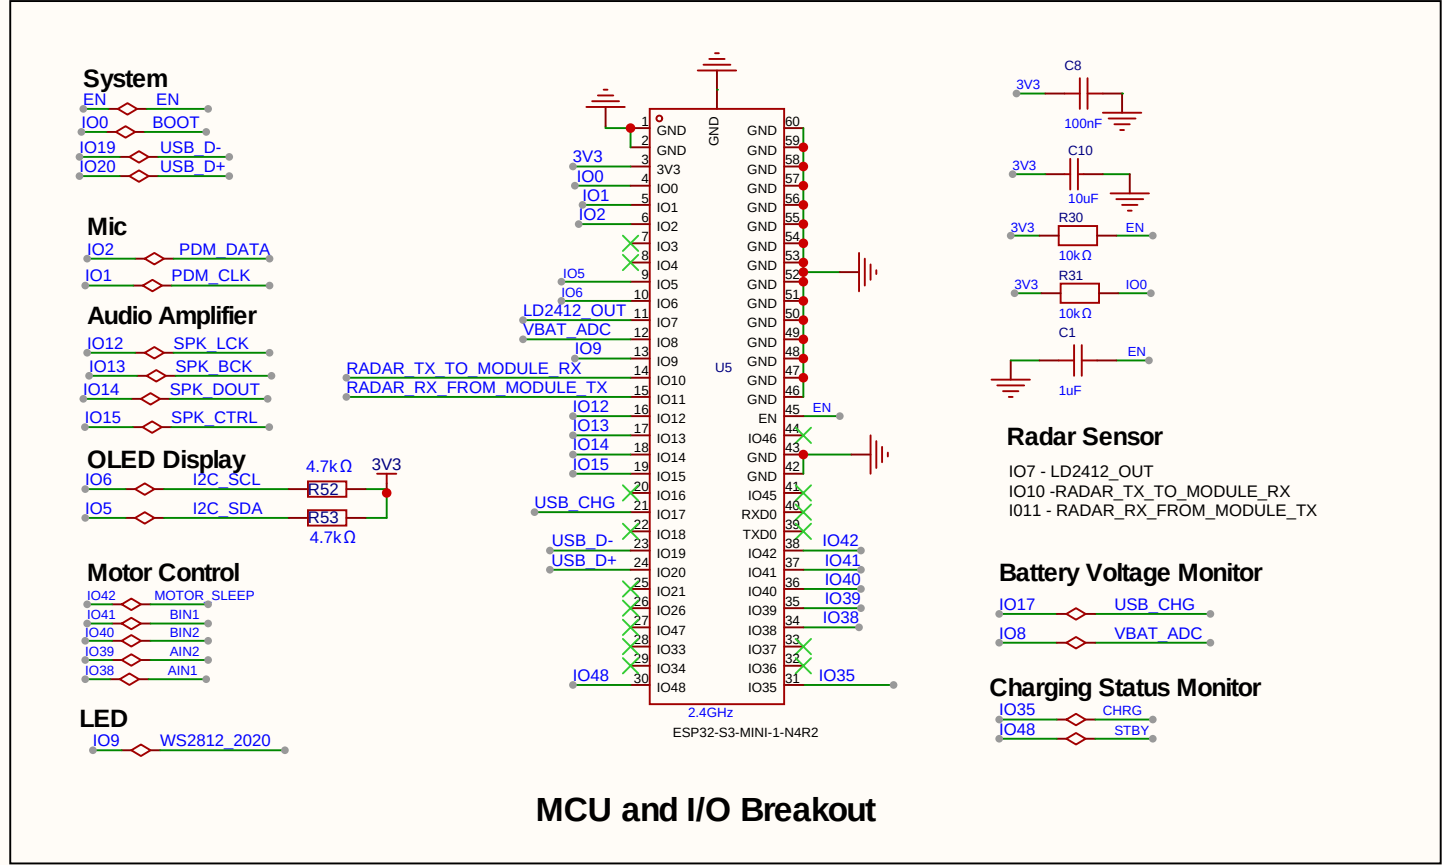


Assembly Note:

All external interfaces are provided as solder pads only.

Pin headers are not populated by default.

The battery wire-to-board connector is the only connector fitted in the standard assembly.

原理图	TongDou Main Control			创建日期	2026-07-11
				更新日期	2026-07-11
板子	TongDou Main PCB			图页	P1_Main_Control
绘制	Wang	tongdou-pcb-v8			
审阅					
		版本	尺寸	页	1 共 2
		V8.0	A4	TongDou	