

Dashboard for microsquirt installation guide

7" Dashboard – Developed by Alfredo Di Matteo


Summary

[Wiring the dashboard.....](#)[1](#)

[Enabling dashboard communication in Tunerstudio.....](#)[3](#)


Wiring the dashboard

Locate the connection header on the backside and plug the 2pin connector and usb typeC as per following image:

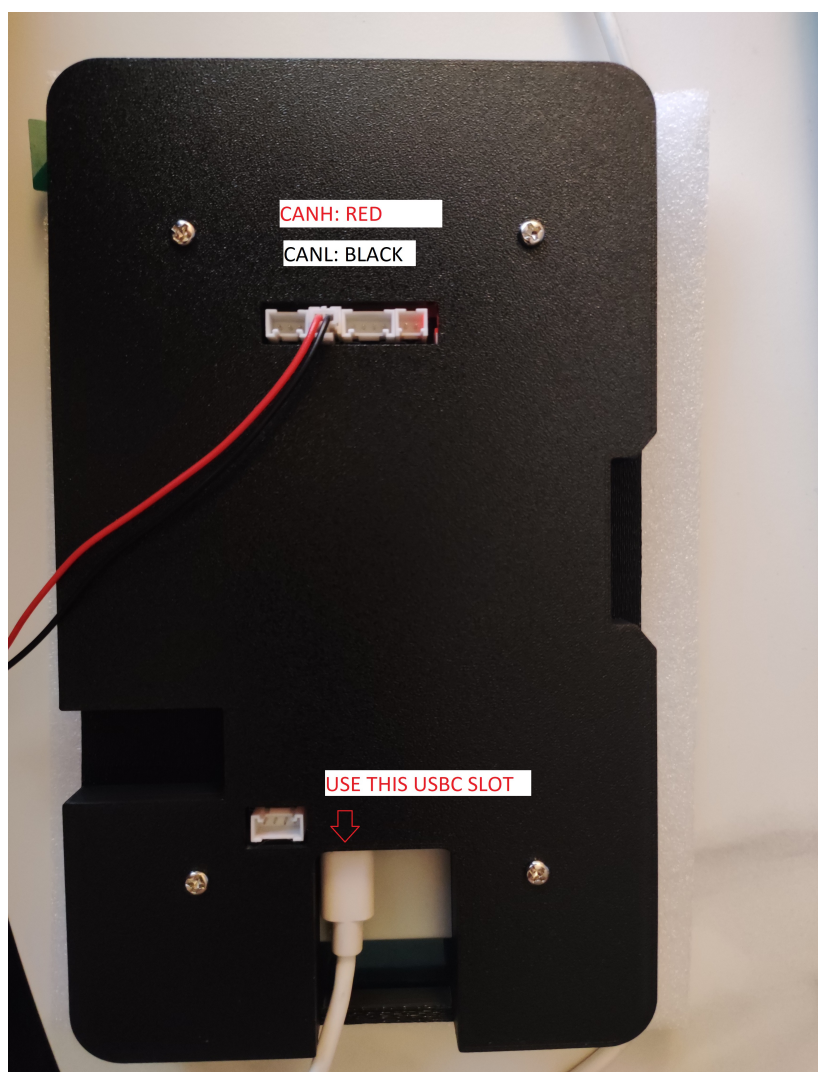

The other side of the USB Cable contains a voltage stepdown module, so you can wire it directly to the car.

If requested, I can provide it directly with the soldered wires and fuse.

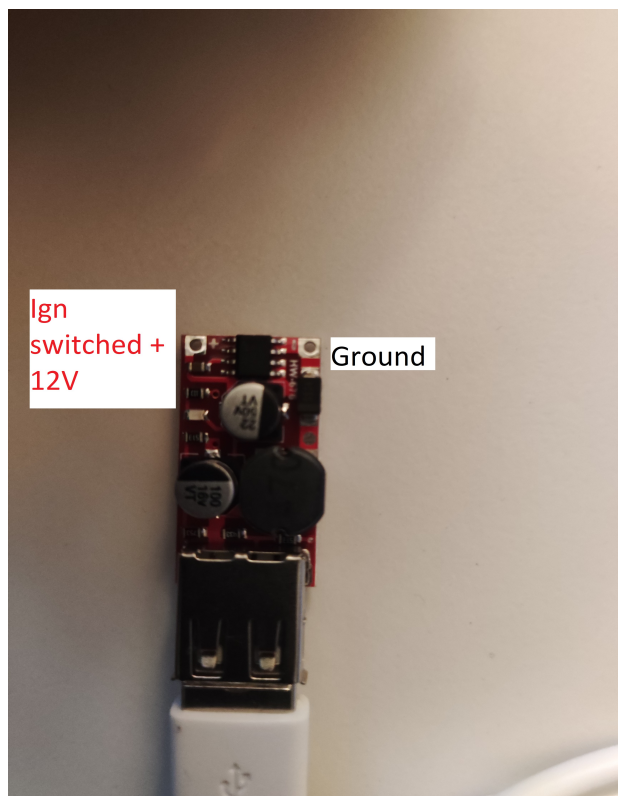

Please note: use a ****5A fuse**** on the ignition-switched 12V supply. The stepdown operates with a supply voltage range of ****7V to 36V**

NOTE: The ignition power source must be clean and stable: it should not be interrupted during engine start. Typically, the car radio ignition-switched source remains powered during cranking, but please verify this with a multimeter.



CAN L and CAN H needs to be wired directly to the ECU: Usually in the wiring looms available on the market you already have 2 wires having CAN Low and CAN High written on it. If that's the case, just wire them as specified:

Dashboard CANL to Microsquirt CANL

Dashboard CANH to Microsquirt CANH

Usually that's all needed to know to wire it. If you can't locate the CANL and CANH on your loom, please read next paragraph. After dashboard is wired, check "Enabling Dashboard in Tunerstudio" below in this guide.

Detailed PINOUT connection for those who don't have a wiring loom with CANH and CANL wires already present:

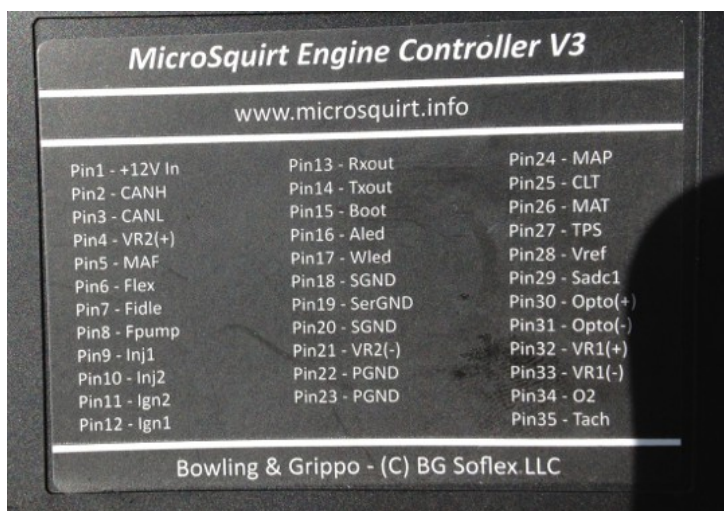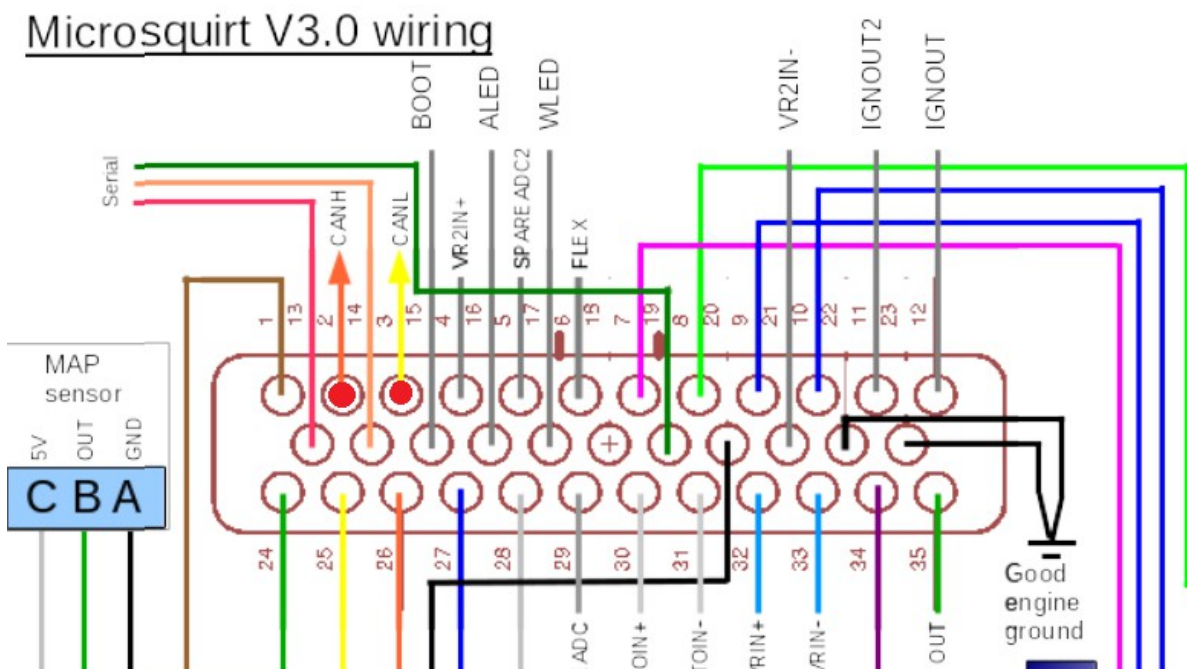



Dashbord CANL pin black wire to be connected to Microsquirt Pin3 CANL.

Dashbord CANH red wire to be connected to Microsquirt Pin2 CANH.



Enabling dashboard communication in Tunerstudio

Open your car project and navigate to CANBUS/Testmode on top right



Open CAN Parameters and set it as below picture, **BURN** before closing the window to make the changes effective.

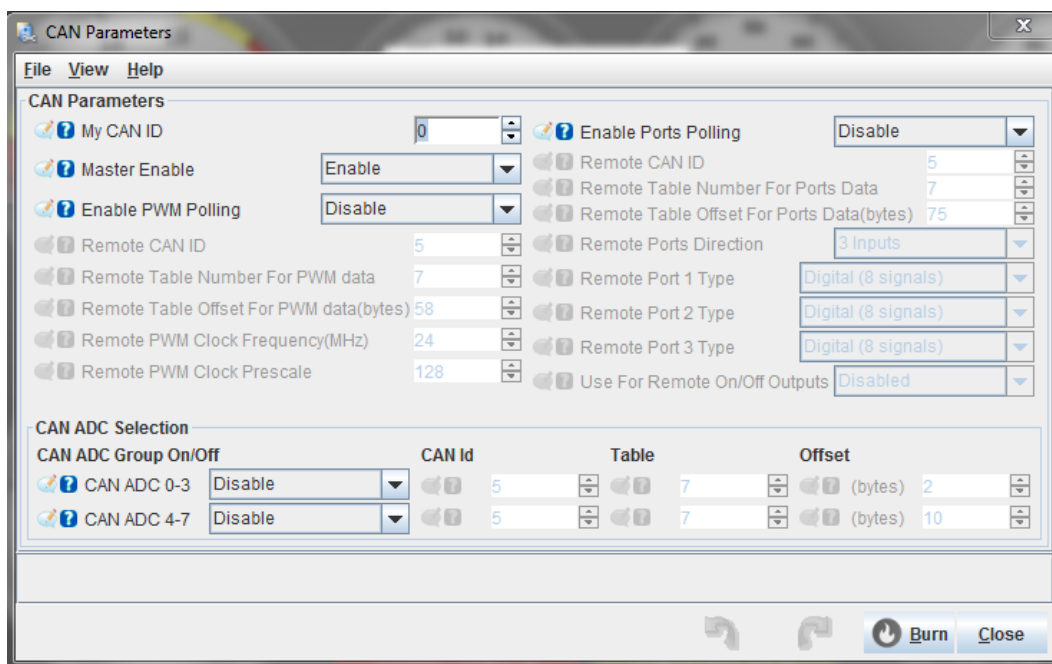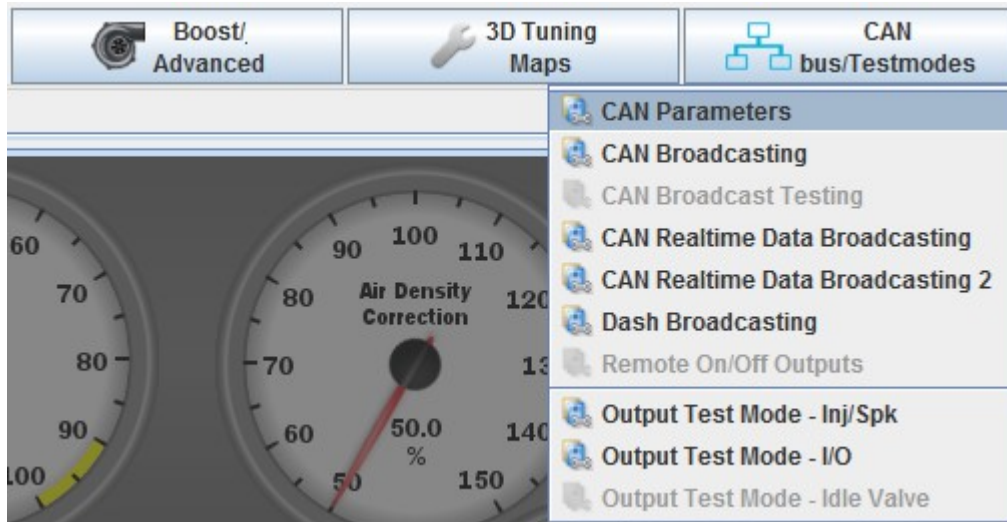



Now navigate to CAN Broadcasting and make sure it's disabled. Don't forget to click on **BURN** if you needed to change it to OFF; if it was already OFF, BURN Button is grayed out and you can just close the window.

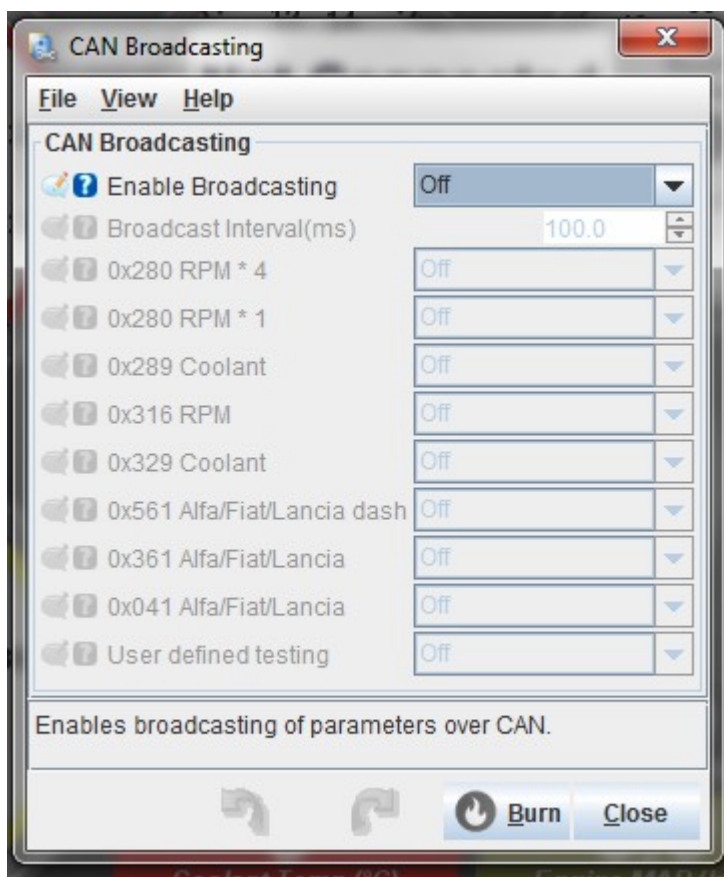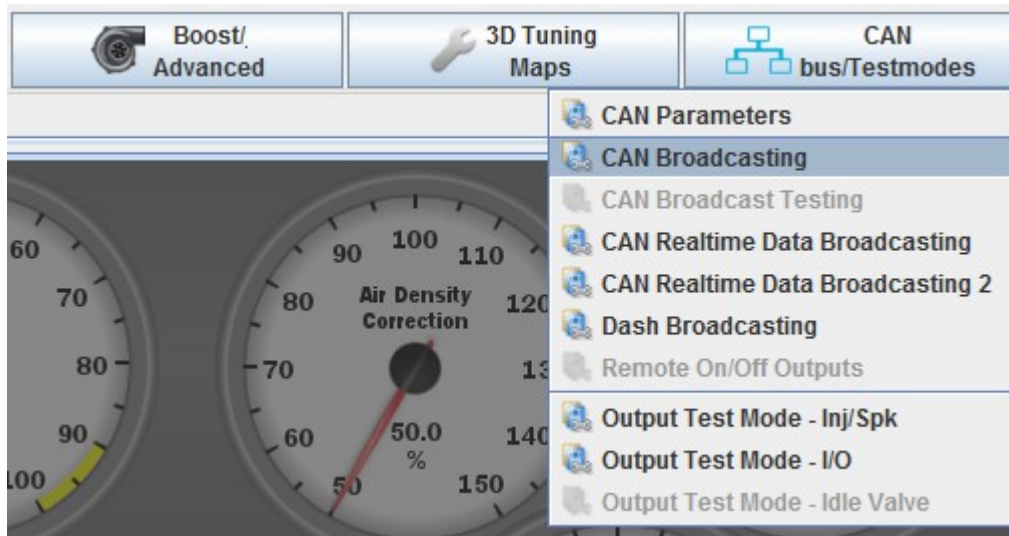

Now Navigate to CAN Realtime Data Broadcasting and set following configuration, **BURN** before closing the window to make the changes effective.

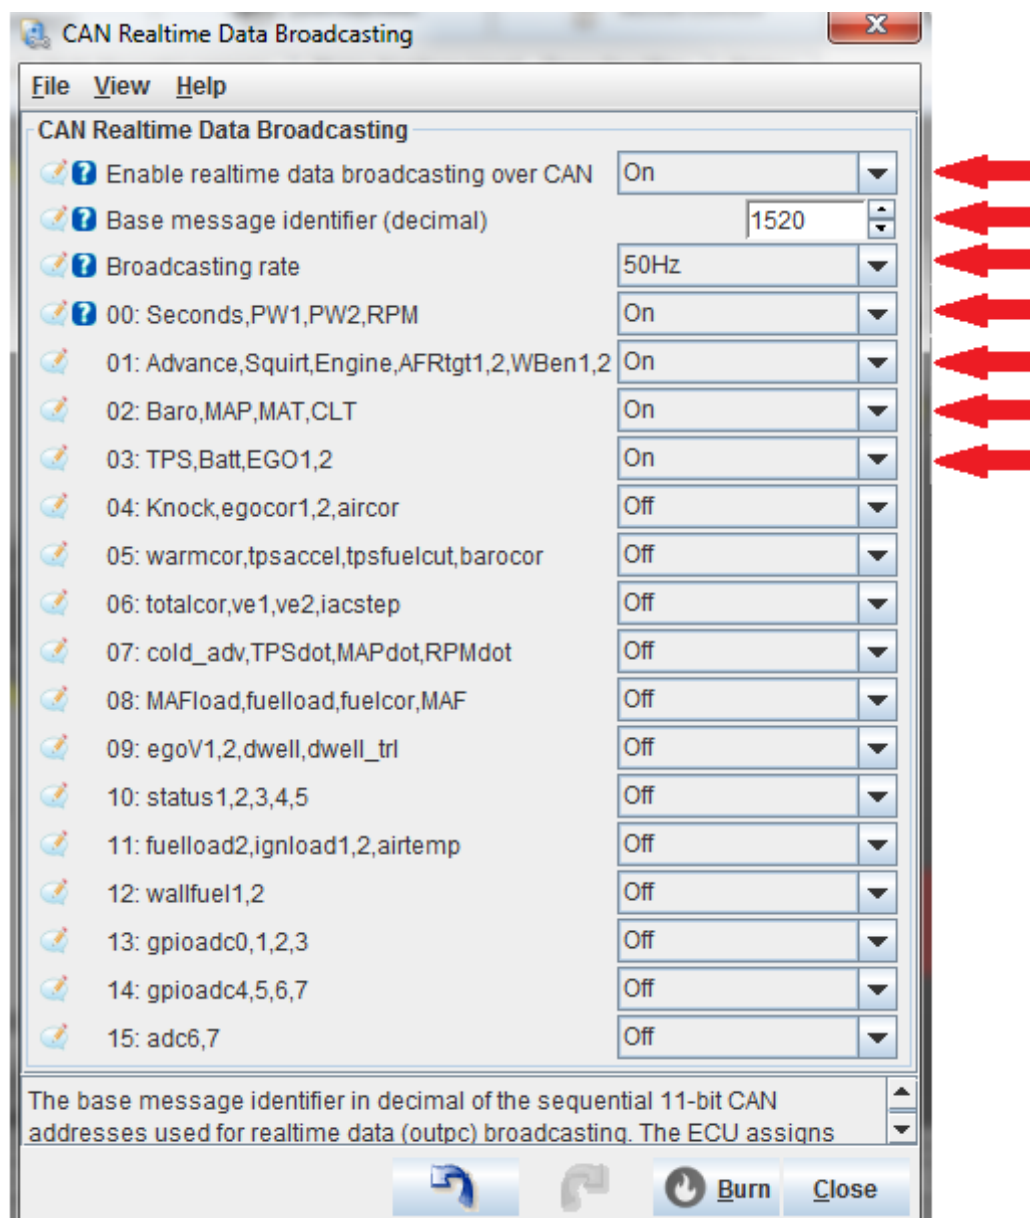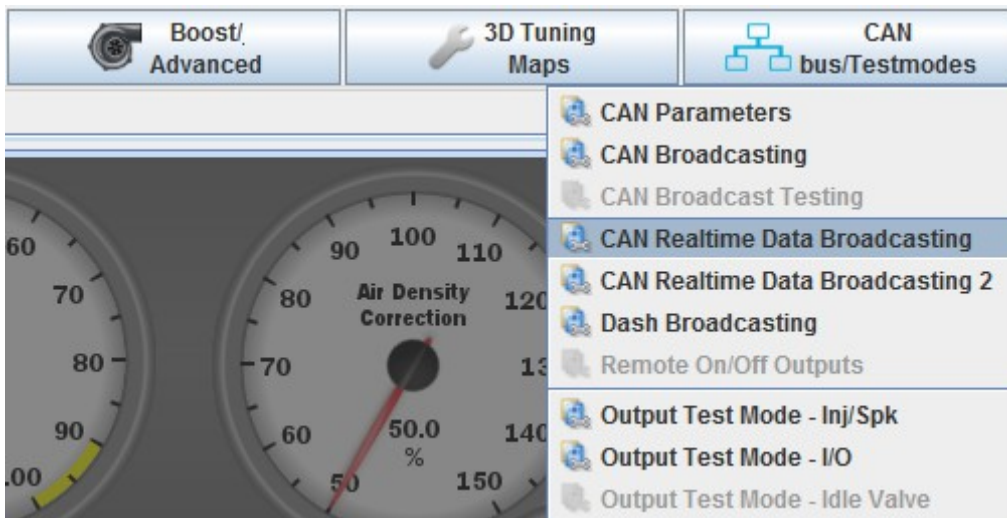

Now navigate to Dash Broadcasting and make sure it's disabled. Don't forget to click on **BURN** if you needed to change it to OFF; if it was already OFF, BURN Button is grayed out and you can just close the window.

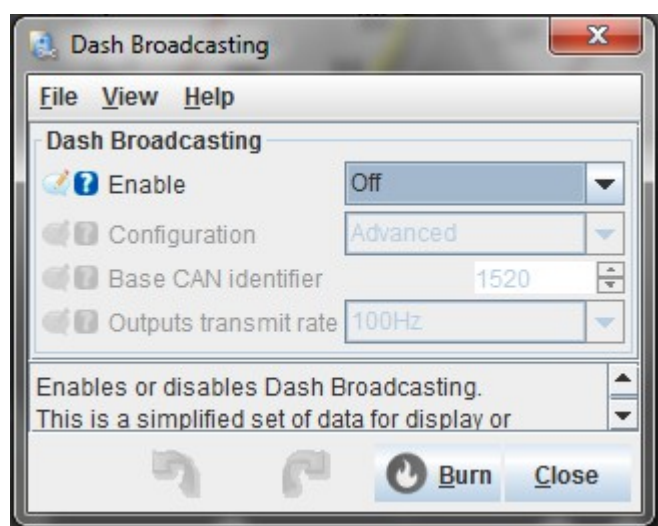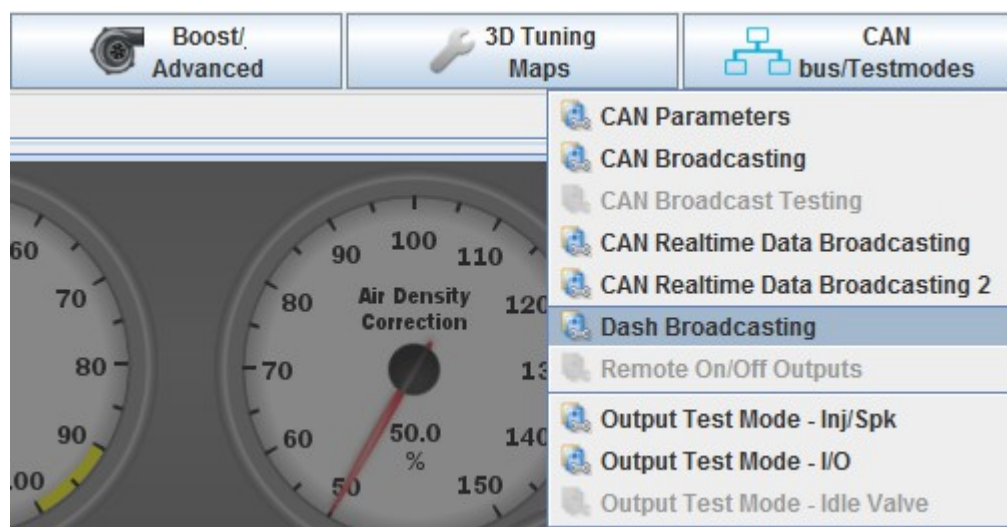

Please turn ignition OFF and ON to reset the ECU. Now everything should work :)