


How to flash the bin:

Visit: <https://esptool.spacehuhn.com/>

Select your device. If it doesn't connect, pull your device in boot mode:

hold boot button, hold now reset button, keep for 2 seconds then release reset, wait 1 second and also release boot.

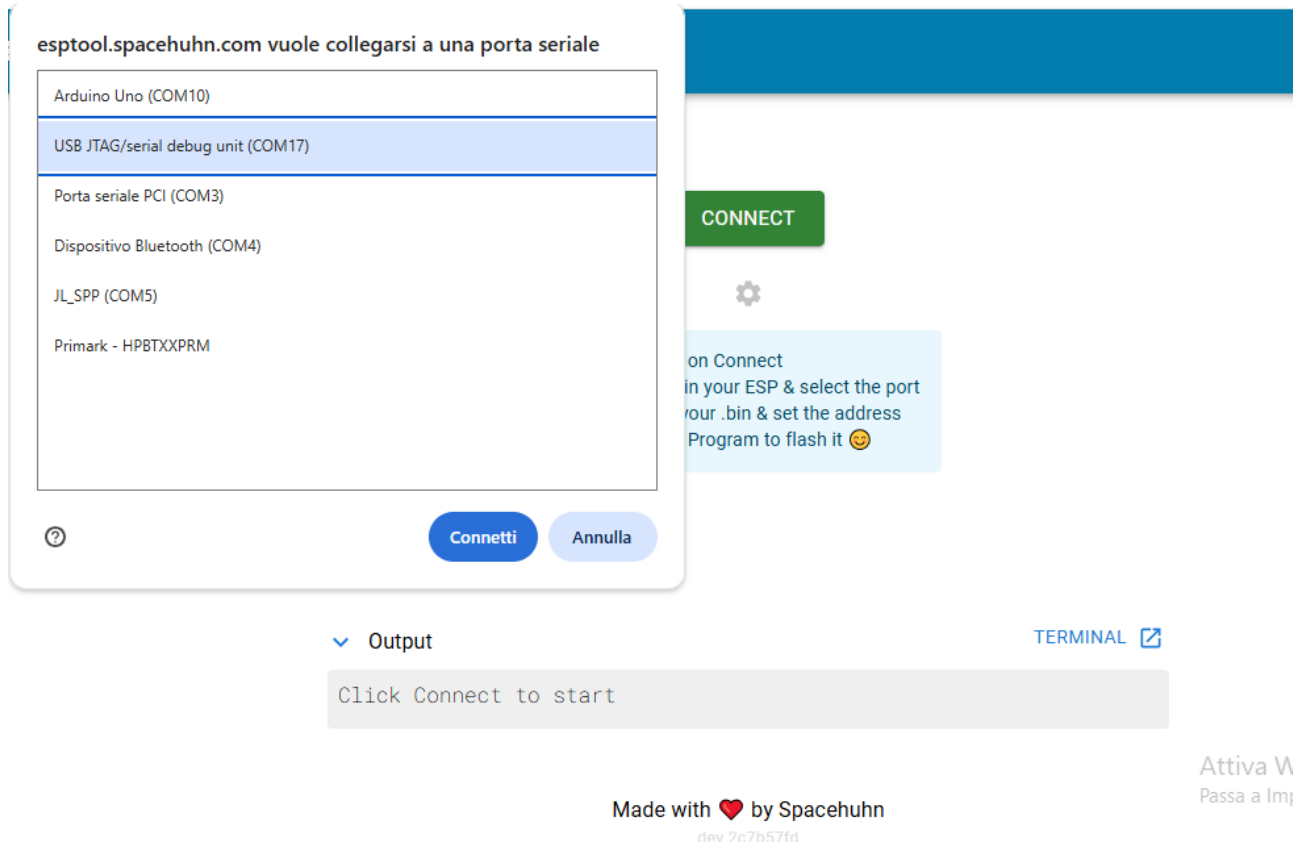

Now Select your bin and write 0X0000 as a starting address. Then click on program and wait. After flashing, just reset your device and start the connection with your ECU.

