Kom i gang med Garge

www.garge.no

Oppsett


1 Opprett konto og logg inn
Gå til www.garge.no og trykk «**Create account**». Du trenger et aktivt abonnement for å legge til sensorer.

2 Hent en pairing code
Trykk «**+ Add device**» i «**My Devices**» og deretter «**Get pairing code**». På mobil står det bare «+». Koden har seks tegn og gjelder i 15 minutter. La siden stå åpen.

3 Slå på sensoren
Garge Sensor: koble til USB-C-strøm.
Garge Voltmeter: koble til SAE-kontakten på 12 V-batteriet.
Det blå lyset blinker raskt når sensoren er klar. Hvis ikke, eller hvis sensoren er satt opp fra før, trykk på Restart-knappen og slipp den. Hold så BOOT-knappen inne med en gang, til lyset blinker raskt. Det kan ta over 5 sekunder. Hvis det ikke blinker raskt, prøv igjen.

4 Koble sensoren til Wi-Fi
Koble mobilen til «Garge ...» i Wi-Fi-innstillingene, for eksempel «Garge a1b2c3d4e5f6».
Oppsettsiden åpner seg. Hvis ikke, gå til **192.168.4.1** i nettleseren.
Velg Wi-Fi-nettverket ditt, skriv inn **passordet** og **pairing code**, og trykk **«Connect»**.


5 Gi sensoren et navn
Gå tilbake til «**My Devices**». Sensoren dukker opp automatisk innen et par minutter. Last siden på nytt hvis den ikke dukker opp. Gi den et navn, for eksempel «MC-batteri».

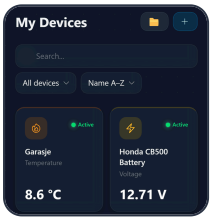

Steg 2. «+» i «My Devices» på mobil.



Steg 2. Pairing code vises her.

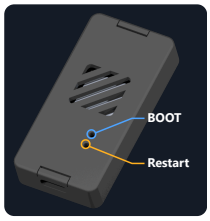

Steg 3. Knappene på sensoren.



Steg 4. Oppsettsiden på mobilen.

Tips og feilsøking

Bytte Wi-Fi-nettverk
Trykk på Restart-knappen og slipp den. Hold så BOOT-knappen inne med en gang, til lyset blinker raskt. Det kan ta over 5 sekunder. Koble mobilen til «Garge ...», trykk **«Change Wi-Fi»**, velg det nye nettverket og trykk **«Connect»**.

Sensoren dukker ikke opp
Sensoren støtter bare Wi-Fi på 2,4 GHz. Skjulte nettverk vises ikke i listen. Hvis passordet kan være feil, følg «Bytte Wi-Fi-nettverk», og skriv inn passordet og en ny pairing code.

Pairing code har gått ut
Hvis du ser **«This pairing code has expired.»**, trykk **«Get new code»**. Den gamle koden slutter da å virke.

Få varsel når sensoren er frakoblet
Gå til **«Profile» > «Notifications»**. Slå på **«Offline alerts on this device»** og velg antall timer under **«Alert after»**.

Dele sensoren
Gå til **«Profile» > «Manage sensors» > «Share»**. Skriv inn e-postadressen til en annen Garge-bruker. Velg **«Read»** hvis den andre brukeren bare skal se målingene, eller **«Edit»** hvis den andre brukeren også skal få automatiseringer for stikkontaktene denne sensoren har funnet. Deling gjelder per oppføring, og en Garge Sensor har to, temperatur og luftfuktighet.

Gi sensoren nytt navn
Trykk på sensoren i **«My Devices»**, og trykk deretter på blyanten ved navnet.

Selge eller gi bort sensoren
Gå til **«Profile» > «Manage sensors»** og trykk **«Remove from account»** på alle oppføringene for sensoren. Blir én stående, får den nye eieren bare deler av sensoren, og du beholder tilgang til resten. Den nye eieren følger oppsettet fra steg 1, trykker **«Change Wi-Fi»** på **«Pair device»** og ser ikke målingene dine.

Garge Voltmeter reagerer ikke
Voltmeteret sover mellom målingene og reagerer da ikke på BOOT-knappen. Trykk på Restart-knappen for å vekke det.

Det blå lyset

Raskt (1 s på, 1 s av)
Oppsettmodus. Varer i opptil 30 minutter.

Garge Sensor: sakte (5 s på, 5 s av)
I drift. Lyset blinker slik også når Wi-Fi er nede.

Garge Voltmeter: kort blink
Våkner, blinker, sender en måling og sover.

Getting started with Garge

www.garge.no

Setup

1 Create an account and sign in

Go to www.garge.no and tap **“Create account”**. You need an active subscription to add sensors.

2 Get a pairing code

Tap **“+ Add device”** in **“My Devices”**, then **“Get pairing code”**. On a phone the button only shows “+”. The code has six characters and lasts 15 minutes. Keep the page open.

3 Power on the sensor

Garge Sensor: plug in USB-C power.

Garge Voltmeter: connect it to the SAE plug on the 12 V battery.

The blue light blinks fast when the sensor is ready. If it does not, or if the sensor was set up before, press the Restart button and let go. Straight away, hold the BOOT button until the light blinks fast. This can take over 5 seconds. If it does not blink fast, try again.

4 Connect the sensor to Wi-Fi


Join “Garge …” in your phone's Wi-Fi settings, for example “Garge a1b2c3d4e5f6”.

The setup page opens. If it does not, go to **192.168.4.1** in your browser.

Choose your Wi-Fi network, enter its **password** and the **pairing code**, and tap **“Connect”**.

5 Name the sensor


Go back to **“My Devices”**. The sensor appears by itself within a couple of minutes. Reload the page if it does not appear. Give it a name, for example “MC battery”.

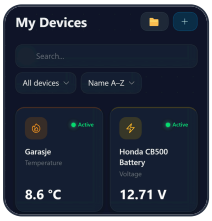

Step 2. “+” in “My Devices” on a phone.



Step 2. Your pairing code shows here.

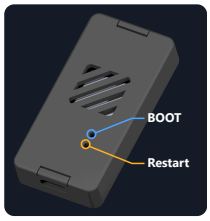

Step 3. The buttons on the sensor.



Step 4. The setup page on your phone.

Tips and troubleshooting

Change Wi-Fi network

Press the Restart button and let go. Straight away, hold the BOOT button until the light blinks fast. This can take over 5 seconds. Join “Garge …” on your phone, tap **“Change Wi-Fi”**, pick the new network and tap **“Connect”**.

Sensor does not show up

The sensor only supports 2.4 GHz Wi-Fi. Hidden networks are not listed. If the password may be wrong, follow “Change Wi-Fi network”, enter the password again and a new pairing code.

The pairing code expired

If you see **“This pairing code has expired.”**, tap **“Get new code”**. The old code stops working.

Get alerts when the sensor goes offline

Go to **“Profile”** > **“Notifications”**. Turn on **“Offline alerts on this device”** and set the hours under **“Alert after”**.

Share the sensor

Go to **“Profile”** > **“Manage sensors”** > **“Share”**. Enter another Garge user's email address. Pick **“Read”** if the other user should only see the readings, or **“Edit”** if the other user should also get automations for the sockets this sensor has found. Sharing is per entry, and a Garge Sensor has two, temperature and humidity.

Rename the sensor

Tap the sensor in **“My Devices”**, then tap the pencil next to its name.

Sell or give away the sensor

Go to **“Profile”** > **“Manage sensors”** and tap **“Remove from account”** on every entry for the sensor. If one stays, the new owner gets only part of the sensor and you keep access to the rest. The new owner follows setup from step 1, taps **“Change Wi-Fi”** on **“Pair device”** and does not see your readings.

Garge Voltmeter does not respond

The voltmeter sleeps between readings and ignores the BOOT button while asleep. Press the Restart button to wake it.

The blue light

Fast (1 s on, 1 s off)
Setup mode. Lasts up to 30 minutes.

Garge Sensor: slow (5 s on, 5 s off)
Running. The light also blinks like this while Wi-Fi is down.

Garge Voltmeter: short blink
Wakes, blinks, sends a reading and sleeps.