

High Performance TRANSMISSION Parts

Instructions


ALUMINUM POWERGLIDE

Pressure Regulator Valve

Part No.

28999-03

1 Pressure Regulator Valve

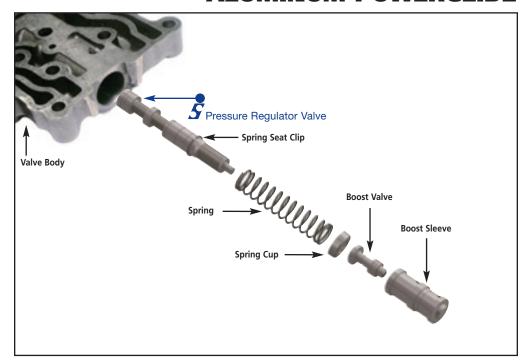

Disassembly Instructions:

- 1. Remove the OEM pressure regulator valve.
- 2. Remove the spring seat clip from the valve and retain.
- 3. Discard the OEM pressure regulator valve.

Installation / Assembly Steps:

- 1. Press the OEM spring seat clip onto the stem of the replacement pressure regulator valve.
- 2. Slide the replacement pressure regulator valve into the bottom of the valve body bore.
- 3. Return OEM spring, spring cup and boost valve assembly to the bore, and retain with the OEM retaining clip.

©2008 Sonnax Industries, Inc. 28999-03-IN 06-26-08