

350 & 350C

BOOST VALVE AND SLEEVE


HIGH PERFORMANCE TRANSMISSION PARTS

Part No. 35754-01K

1 Boost Valve Sleeve

1 Reverse & Modulator Boost Valve

1 Intermediate Boost Valve

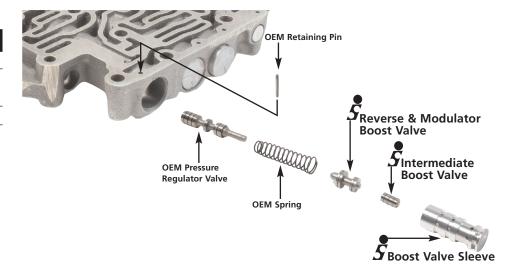

INSTRUCTIONS

- 1. Remove retaining pin holding boost valve and sleeve (do not discard retaining pin).
- 2. Discard the worn boost valve sleeve, reverse and modulator boost valve and the intermediate boost valve.
- 3. Lubricate all pieces of the replacement kit.
- 4. Carefully push the sleeve assembly into the valve body (only deep enough to install the retaining pin), open end toward the springs.
- 5. Install the retaining pin.