

High Performance TRANSMISSION Parts

Instructions

# Accumulator Piston Kit

### Part No.

## 22841-04K

1 Accumulator Piston


2 Teflon® Seals

2 D-ring Seals

#### Part No.

22841-04SK

Replacement Seal Kit

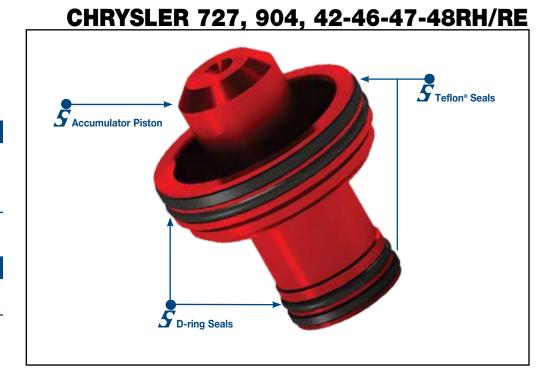

#### **Instructions:**

#### Installation

- 1. Remove OEM piston and discard
- 2. Clean and inspect the bore
- 3. Install Teflon® and D-rings per illustration

#### Reassembly

- 1. Lubricate seals
- 2. Install